 


Nero[®]

CYCLONIC HAND HELD VACUUM CLEANER

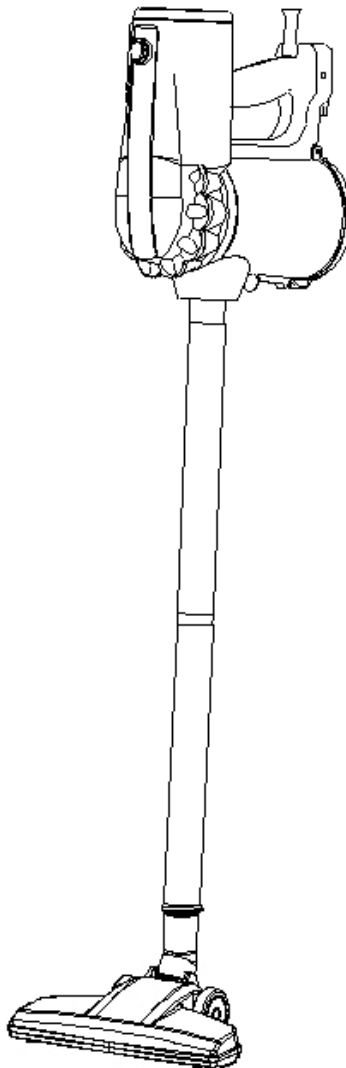


INSTRUCTION MANUAL

PRODUCT NO. : 360215

**Please read all of the information provided in this owner's manual
before operating the Nero cyclonic hand held machine.**

Images in this manual are for illustrative purposes only.

 **Due to constant improvements, we advise that changes to the design, material, specifications
and product configuration may occur at any time without notice.**

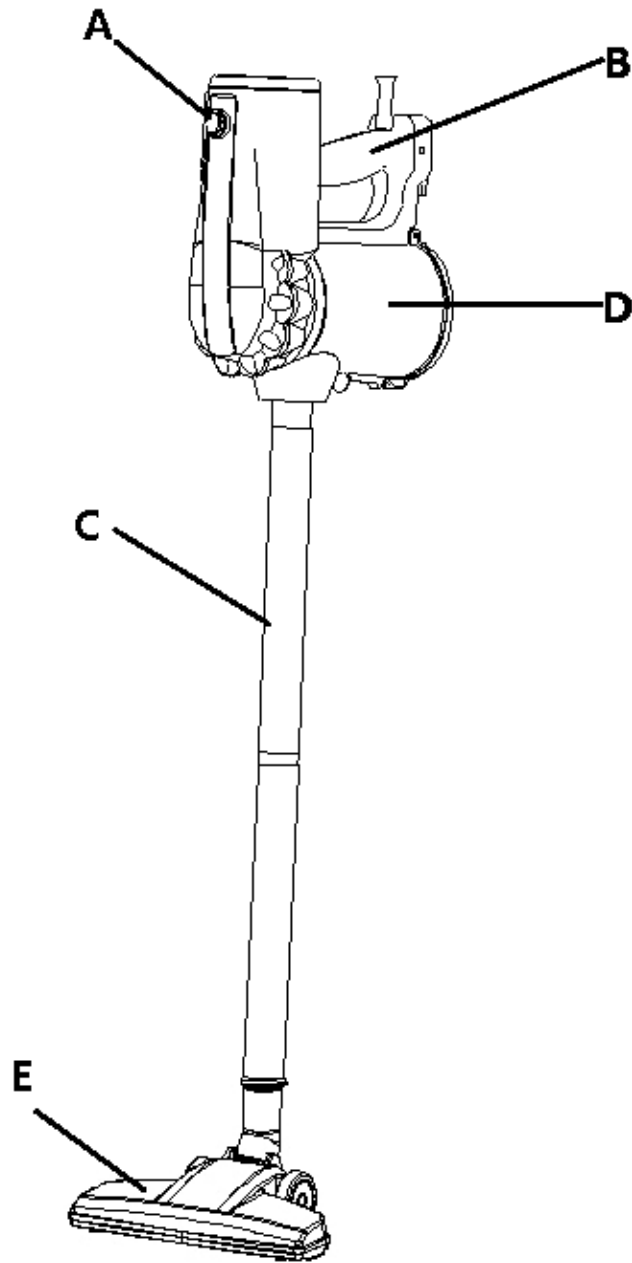

DESCRIPTION

 
A. On/Off Button
B. Handle
C. Tube

D. Dust compartment
E. Floor brush

IMPORTANT

1. Read this instruction booklet carefully.
2. Before using the appliance, check that the mains power voltage corresponds to the voltage shown on the rating plate.
3. The appliance should be connected to a correctly-earthed 10 power socket.
4. Always remove the plug from the power socket when the appliance is not in use and before carrying out any cleaning or maintenance operations.
5. Always remove the plug from the power socket before opening the appliance.
6. Never use methylated spirits or other solvents to clean the appliance.
7. Do not use the appliance to vacuum liquids.
8. Never leave the appliance unattended when it is switched on. Keep the appliance out of the reach of children or very elderly.
9. This appliances for domestic use only. Use as described in this instruction manual.
10. Do not switch the appliance on if it appears to be faulty in any way.
11. For repairs or accessories. Contact your dealer or an authorized Service Center.
12. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
13. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
14. Keep the appliance and its cord out of reach of children less than 8 years.
15. Do not remove the plug from the socket by pulling the cable or the appliance itself.
16. Do not use the appliance to vacuum lighted matches, cigarette ends and hot ash.
17. Do not use the appliance on wet surfaces.
18. Do not obstruct the air intake or outlet vent.
19. Do not use the appliance to vacuum needles, drawing pins or strings.

Do not remove the plug by pulling the cable or appliance itself.

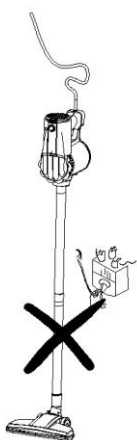


Do not use the appliance on wet surfaces.

Do not run the appliance over the power cable.




Do not use the appliance to vacuum up matches, cigarette ends or hot ash.

 Do not obstruct the air intake or outlet vent.

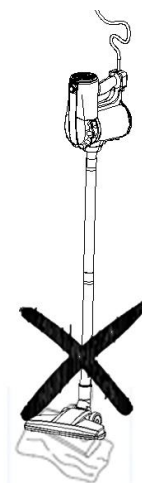

 
Do not use the appliance to vacuum needles, Drawing pins or Strings

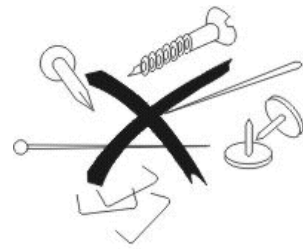

ASSEMBLING THE VACUUM CLEANER

Assembly before operation

 - 1、 Fitting the floor brush
Insert the brush into the body.

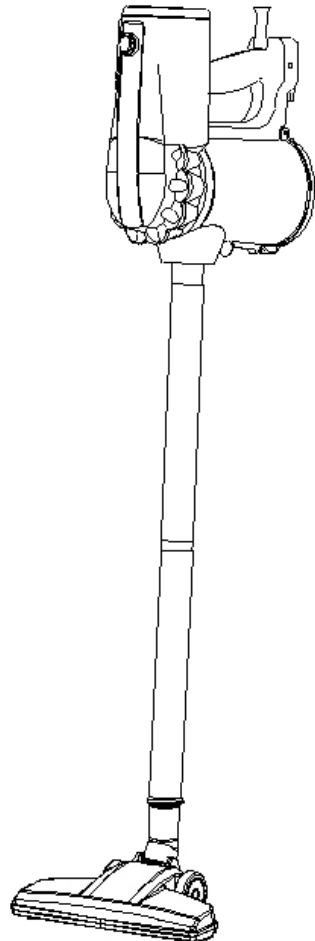

INSTRUCTION FOR USE

- 1, Unfold the electric cable, after rotating the cable winding holder 180 degree, the plug insert the electrical outlet which the same as the nameplate; press the switch button, the vacuum

cleaner will now begin working.

2. Adjust the degree between brush and body by rotating the handle.

3. Stop the vacuum by pressing the switch button, disconnect the plug from outlet, rotate the cable on the winding holder 180 degree to fix the cable.

 
Using the cleaning accessories

Clean the dust

1, Lift the cover and take out the dust cup.

2, Take out the foam form dust cup .


3. clean off the dust inside the dust cup.

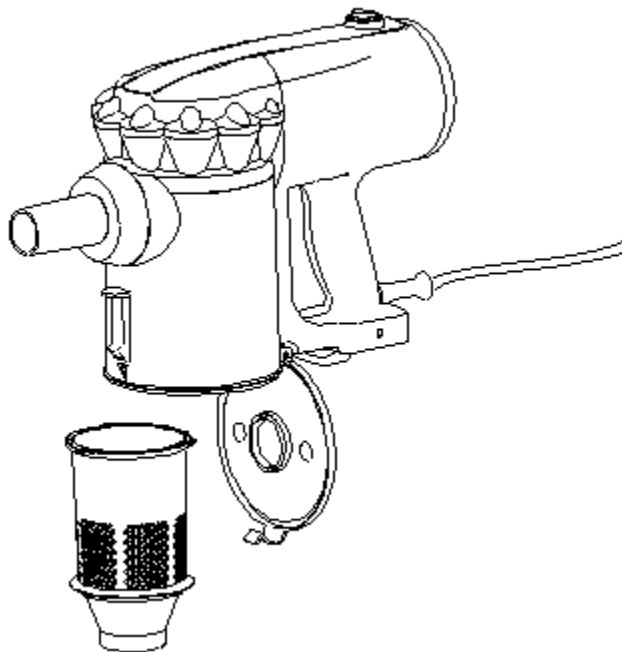

Clean the foam

1. Take out the foam when it looks dirty.

 
2. Clean it in the water and fully dry it naturally before next use.

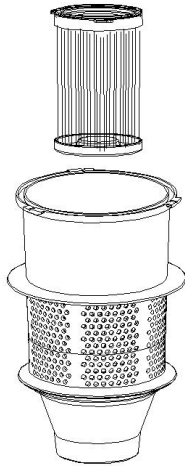

MAINTENANCE

1. Pull the plug out of the socket before cleaning!
2. Clean the appliance with a dry cloth.
3. Take out the intake or outlet filter when it gets dirty. Clean it in warm water without any detergent and put it back when it is completely dry.
4. If you don't want to use this appliance for a period of time, store it in dry and well ventilated place. Keep it away from reach of children.

 DISPOSAL

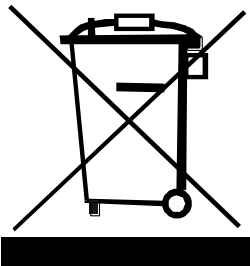

Environmental Protection

Waste electrical production should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Backed by the Nero 1 Year Warranty

Imported By:
R. Weatherdon & Co Pty Ltd

www.weatherdon.com.au

Made in China