



CLIP-ON DESK PLUS STORAGE DESK FAN BLACK Instruction Manual

Product Number: 74901601



WARNING To reduce the risk for fire, electric shock or personal injury

- Do not use this fan with any solid-state speed control device.
- Unplug the fan before cleaning or servicing.
- If you disassemble your fan, completely re-assemble before plugging into outlet.
- To reduce the risk of electric shock and injury to persons, do not use in window.

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

This fan is for residential use only. It is not intended for use in commercial or industrial settings.

Important instructions

Read and save these important safety instructions before using this fan, when using electrical appliances, basic safety precautions should always be followed including the following:

WARNING - To reduce the risk of fire or electrical shock, do not use this product with any solid state speed control device. To reduce the risk of fire or electric shock and injury to persons, do not use in a window.

- Use this fan only as described in this manual. Other uses not recommended may cause fire or electric shock.
- This product is intended for HOUSEHOLD USE ONLY and not for commercial, industrial or outside use. To protect against electrical shock, do not place fan in window, immerse unit, plug or cord in water, or spray with liquids.
- Unplug the fan from the outlet when not in use, when moving fan from one location to another and before cleaning.
- **Do not** operate the fan in the presence of explosive and/or flammable fumes.
- **Do not** place the fan or any parts near an open flame, cooking or other heating appliance.
- Avoid contact with moving fan parts.
- To disconnect, grip the plug and pull it from the wall outlet. Never yank the cord.
- The use of attachments is not recommended and may cause hazards.
- Always use on a dry, level surface.
- **Do not** operate if the fan housing is removed or damaged.
- **Do not** operate any fan with a damaged cord or plug.
- Discard fan or return to an authorized service facility for examination and/or repair.
- **Do not** run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances.
- Arrange cord away from traffic area and where it will not be tripped over.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Children being supervised not to play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

How to operate

1. Clip the fan to a flat structure that is between 1cm (0.40") and 4cm (1.58") or a pole 1.5cm (0.60") and 4cm (1.58"). Do not clip the fan to structures that have larger or lower widths as this may cause instability.
2. Making sure the speed control is at OFF position.
3. Plug the power cord into the socket.
4. To operate the fan, turn the rotary switch to the desired speed: OFF (0), LOW (1), HIGH (2).
5. To adjust the head angle, loosen the knob under the fan head. Tilt head to desired air flow position. Retighten knob.
6. Desk Option – To turn the fan into a desk fan, simply clip the fan into the Desk Piece to turn it into a Desk Fan.

Cleaning

1. Be sure your fan is in the OFF position.

2. Unplug the fan before cleaning.
3. To clean inlet and outlet ribs, use a common household vacuum.
4. **Do not** use water to clean these parts of the Fan.
5. **Do not** disassemble for cleaning.
6. **Do not** immerse the fan in water and never allow water to enter the Motor Housing.
7. **Do not** use gasoline, paint thinner or other chemicals to clean the fan.

Storage Instructions

Store the fan with these instructions in the original carton in a cool, dry place.

TROUBLE SHOOTING TIPS


If your Fan fails to operate, see below for a probable cause and solution.

- Be sure the power cord is plugged into a working electrical outlet.

If you have a problem that cannot be resolved by the step listed above, please return the fan to the place of the original purchase or see your warranty. Do not attempt to open the motor housing yourself; doing so may void your warranty and cause damage to the fan or personal injury.

Description of parts

1. Blade
2. Front grill
3. Rear grill
4. Carry handle
5. Motor
6. Rotary knob
7. Angle control knob
8. Clip
9. Desk Piece

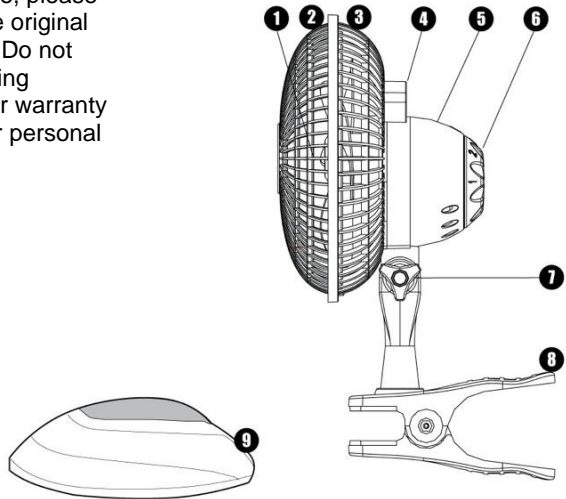

Technical Specifications

Product Number: 74901601

Power Supply: 220-240V~ 50Hz

Rated Power: 15W

Class II



Measurement standard for service value

Commission Regulation (EU) No 206/2012

IEC 60879:1986, EN 50564:2011

EN 60704-2-7:1998, EN 60704-1:2010

Backed by the Nero 1 Year Warranty

Imported by R. WEATHERDON & CO PTY LTD
Sydney, Australia

Nero is a registered trademark of
R. Weatherdon & Co Pty Ltd

Made in China

www.weatherdon.com.au