 


Oslo - MULTI CHANNEL (5) RADIO REMOTE SETTINGS

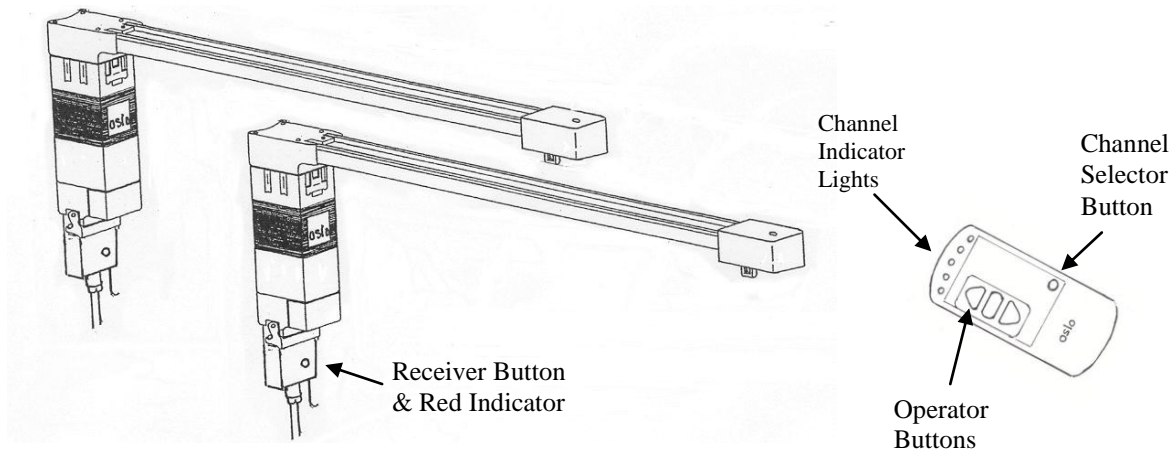





5 Channel
TRANSMITTER

Motor Plug
RECEIVER

Setting Channels



- 1) Press Channel Selector Button for desired Channel (1 – 5)
- 2) Press receiver button until red light flashes (for 9 seconds only)
- 3) Press upper operating button on the transmitter and the receiver red light will flash fast twice – Channel is now SET
- 4) To set other curtain track receivers repeat 1 to 3 and select the next channel - Up to 5 can be used.

NOTE: Group control (all 5 Channel indicator lights) is set automatically.

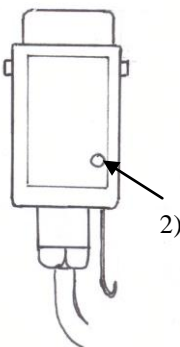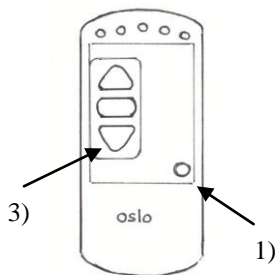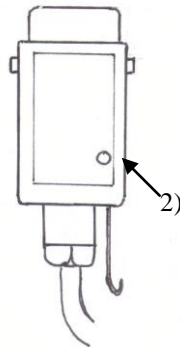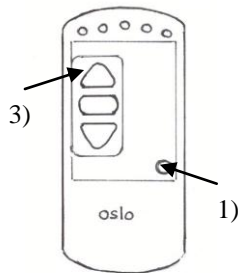

Reversing Direction of Track

- 1) Choose Channel that you want to Reverse.
- 2) Press Receiver button until Red light flashes.
- 3) Press lower operating button and the receiver red light will flash fast twice – Direct CHANGE complete

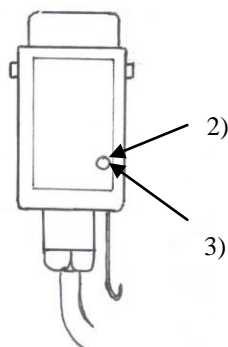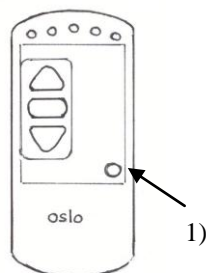

Cancelling A Channel Setting

- 1) Chose Channel that you want cancelled.
- 2) Press and hold receiver button until very quick flashes start. Stop Pressing.
- 3) Re-Press the receiver button again – Lights will stop flashing – CANCELLING COMPLETE