 
 



# Oslo – MULTI CHANNEL (6) RADIO REMOTE SETTINGS

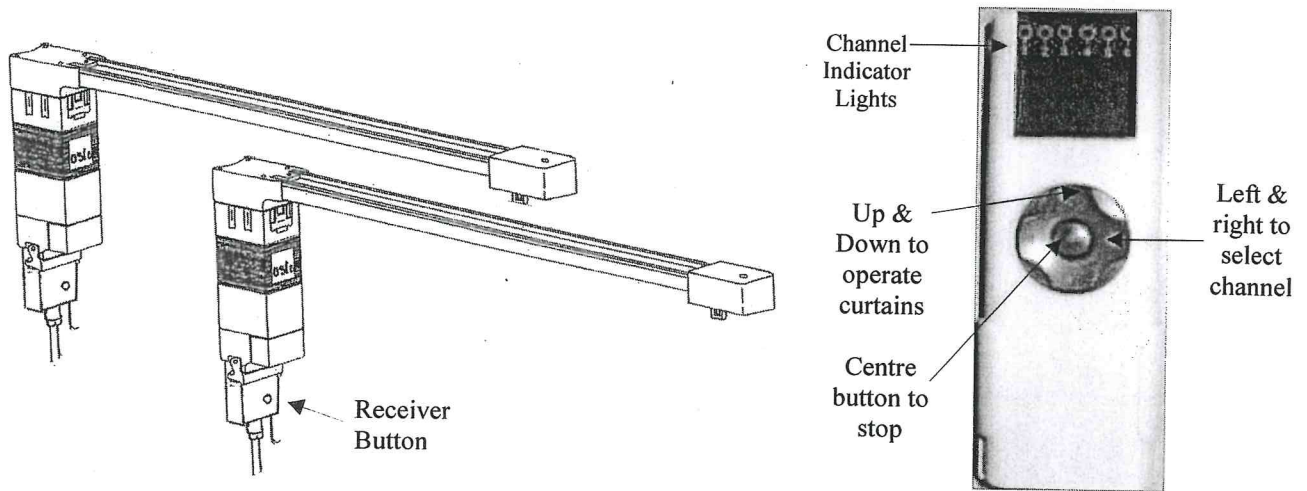

6 Channel  
TRANSMITTER

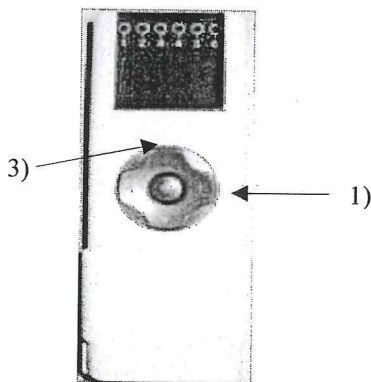


 
Motor Plug  
RECEIVER

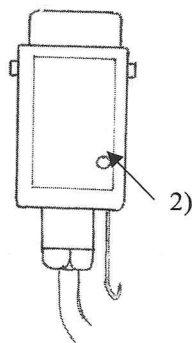

## Setting Channels


- 1) Press Channel Selector Button (side arrows) for desired Channel (1 – 6)
- 2) Press receiver button until red LED flashes
- 3) Press up arrow operating button on the transmitter and the receiver red LED will flash fast for two seconds – Channel is now SET
- 4) To set other curtain track receivers repeat 1 to 3 and select the next channel - Up to 6 can be used

**Note:** Group control (all 6 channel indicator lights) is set automatically

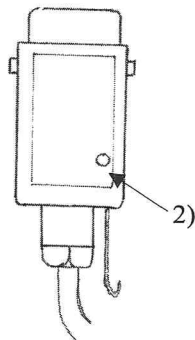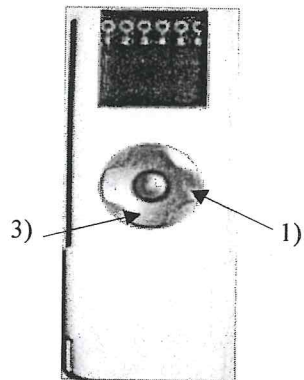

## Reversing Direction of Track

- 1) Choose Channel that you want to Reverse.
- 2) Press Receiver programming button until Red LED flashes.
- 3) While receiver LED is flashing Press the down arrow operating button and the receiver red LED will flash fast for two seconds – Direction CHANGE complete

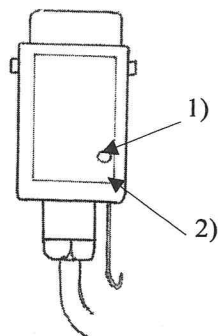

## Deprogramming

- 1) Press and hold the receiver programming button until the LED flashes continuously; release the button.
- 2) Press the programming button again whilst still flashing and the LED will go out, indicating the program is deleted.

### Transmitter in SPSM or SPLM mode.

SPSM = short press short motor move, long press long motor move

SPLM = short press long motor move until the limit switch triggered or the stop button is activated.

All transmitters are factory set to SPLM. This setting can be changed to SPSM by pressing the receiver programming button and while the LED is flashing press the centre "stop" button on the transmitter.