



Assembly Instructions

ANTRIM MESH TASK CHAIR

**SMANTRMBBL / SMANTRMBBK /
SMANTRMBRD / SMANTRMBPE / SMANTRMBYW**




This Chair has a load rating of 120kg


Important

Estimated Assembly Time: 30min


Assemble Item On A Clean Flat Surface

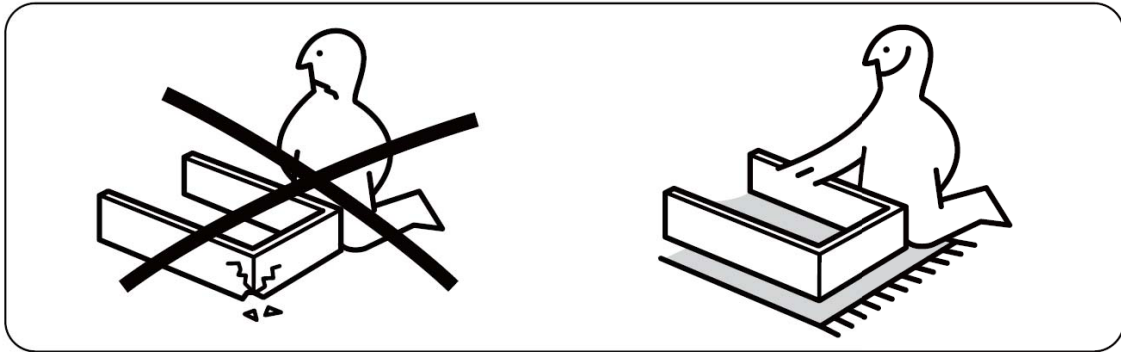

PART LIST

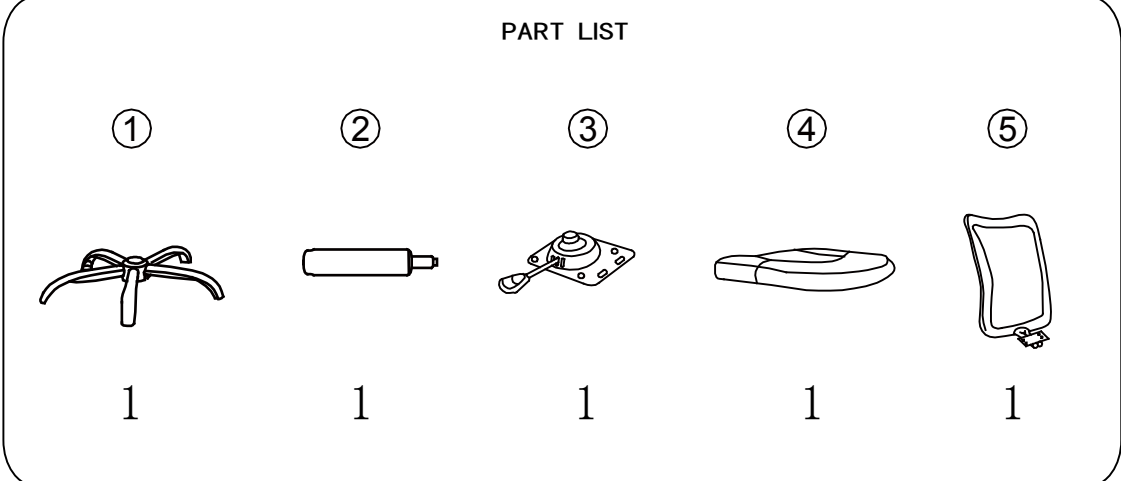


HARDWARE LIST

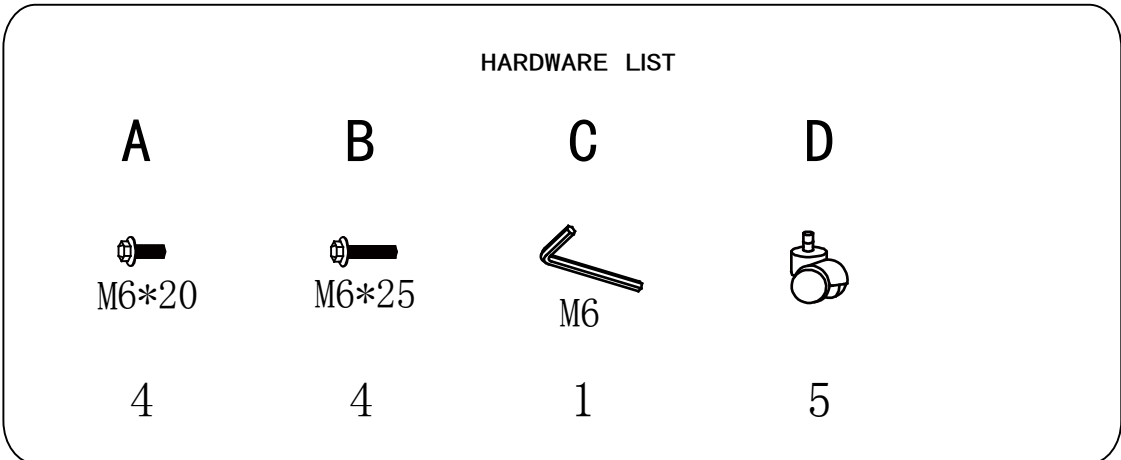


Please check you have all hardware components before assembling.
If you are missing any hardware components from the Hardware List please contact My Zone on
Tel: (03) 9310 3011 or Email: hardware@myzone.net.au
Please ensure you have the name of the item, store purchased from, hardware part required
and quantity.
Please retain your receipt to validate warranty. Enjoy your new purchase!


Step1

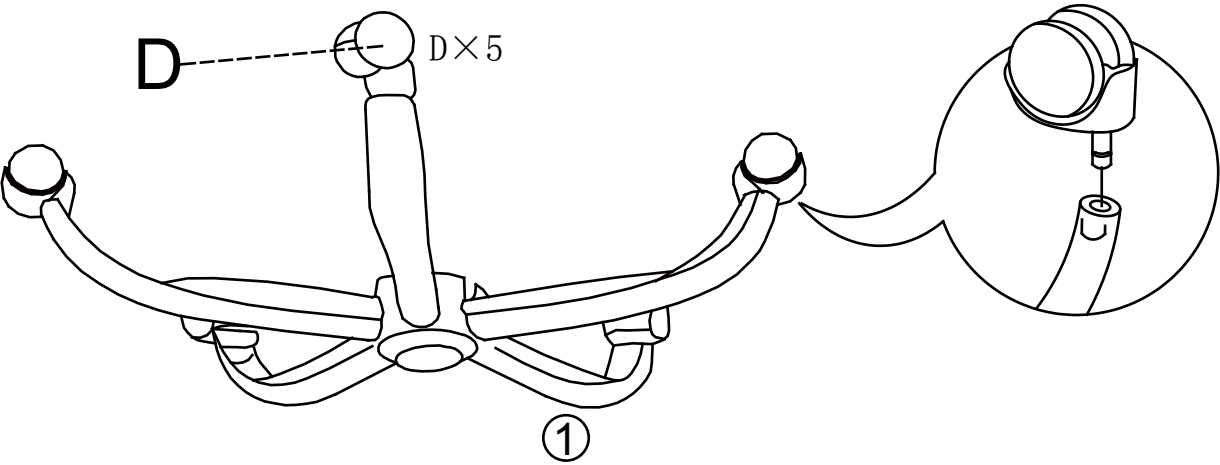


Step2

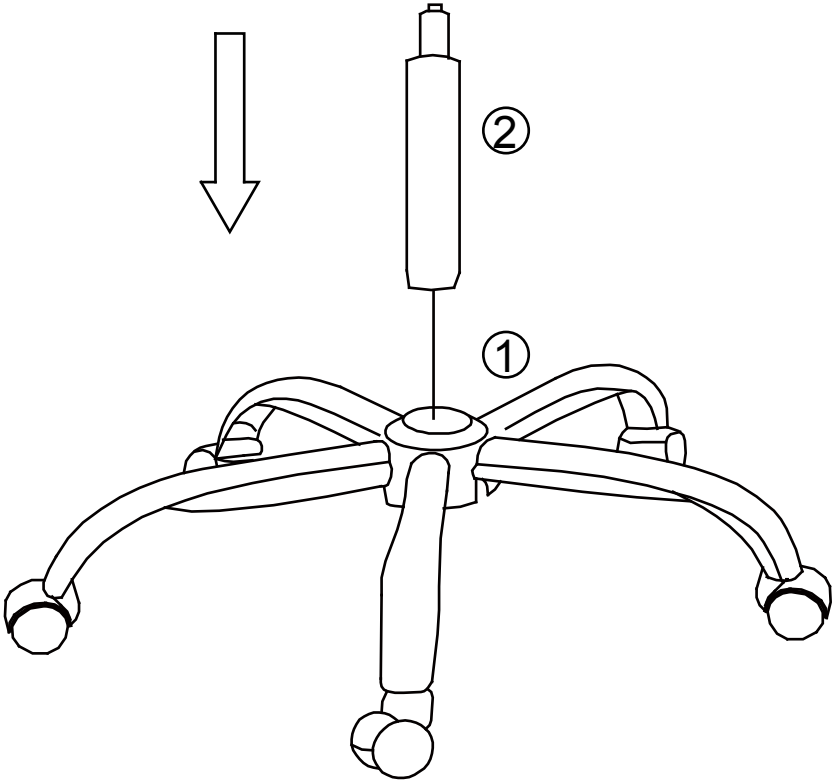


Step 3

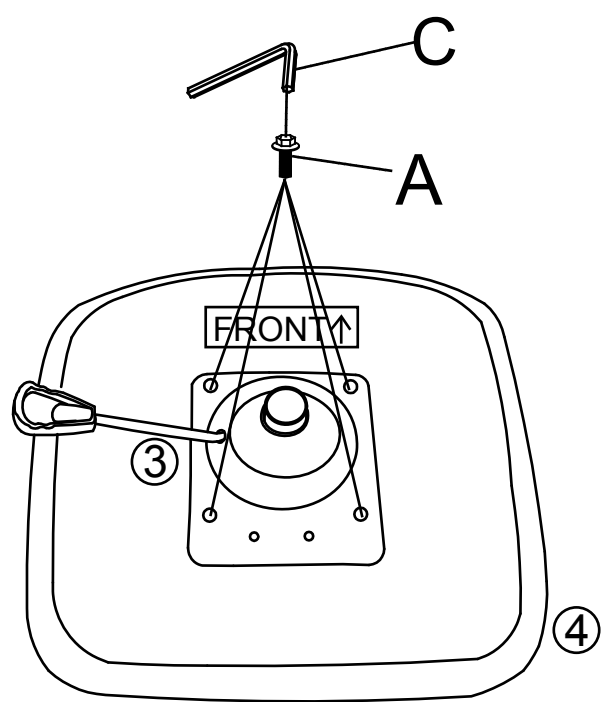


Step 4

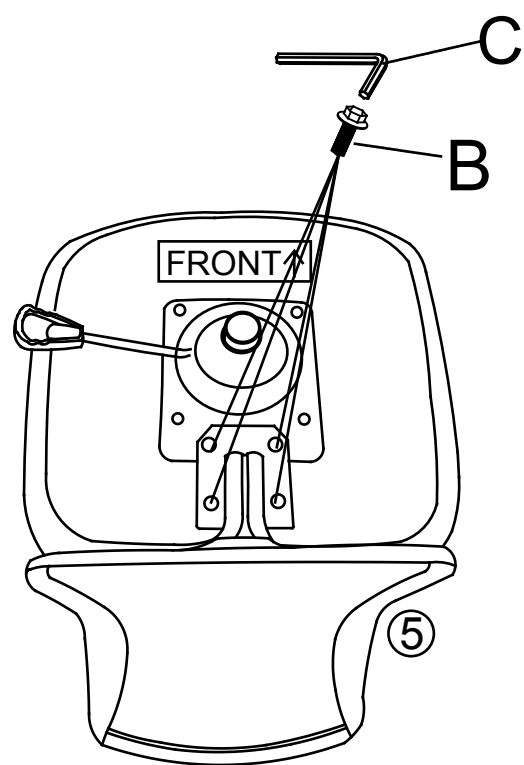

Step 5

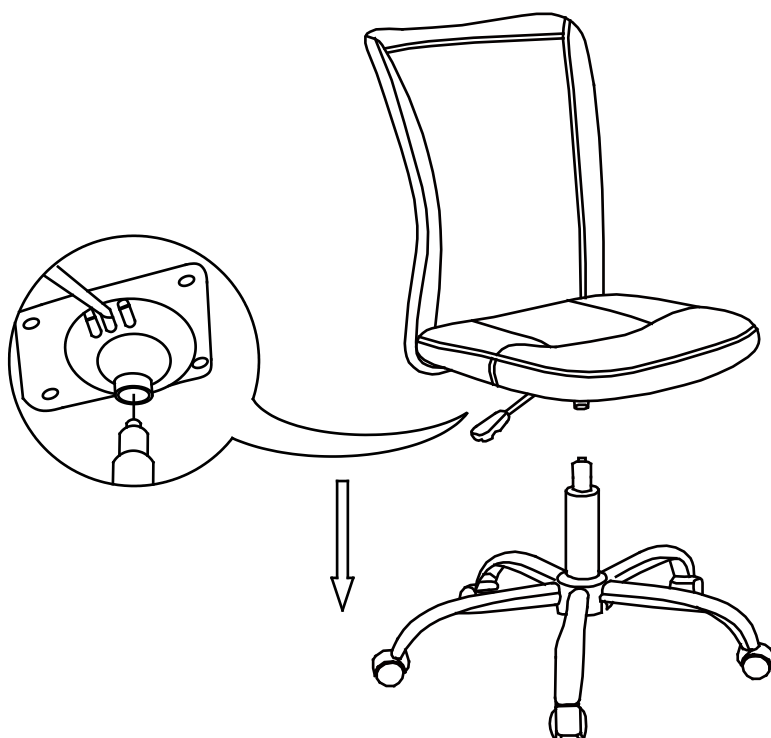



Step 6

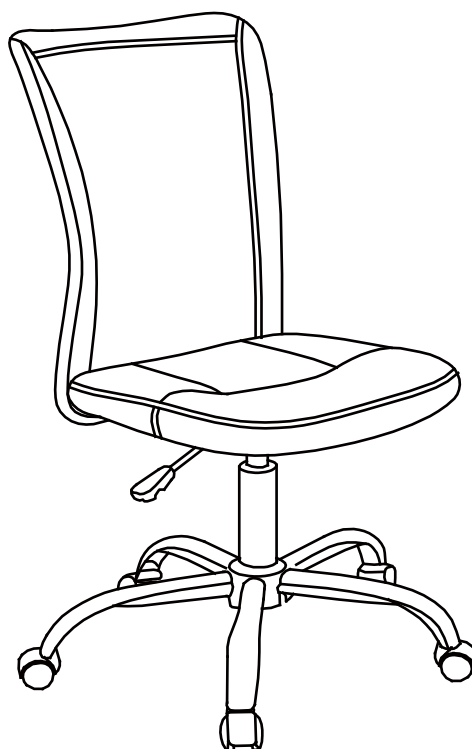

Your Antrim mesh task chair is now complete and ready for use.

IMPORTANT NOTE: Periodically check and re-tighten screws

CHAIR FUNCTION

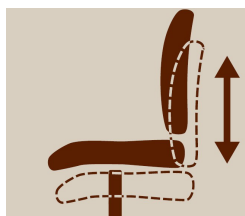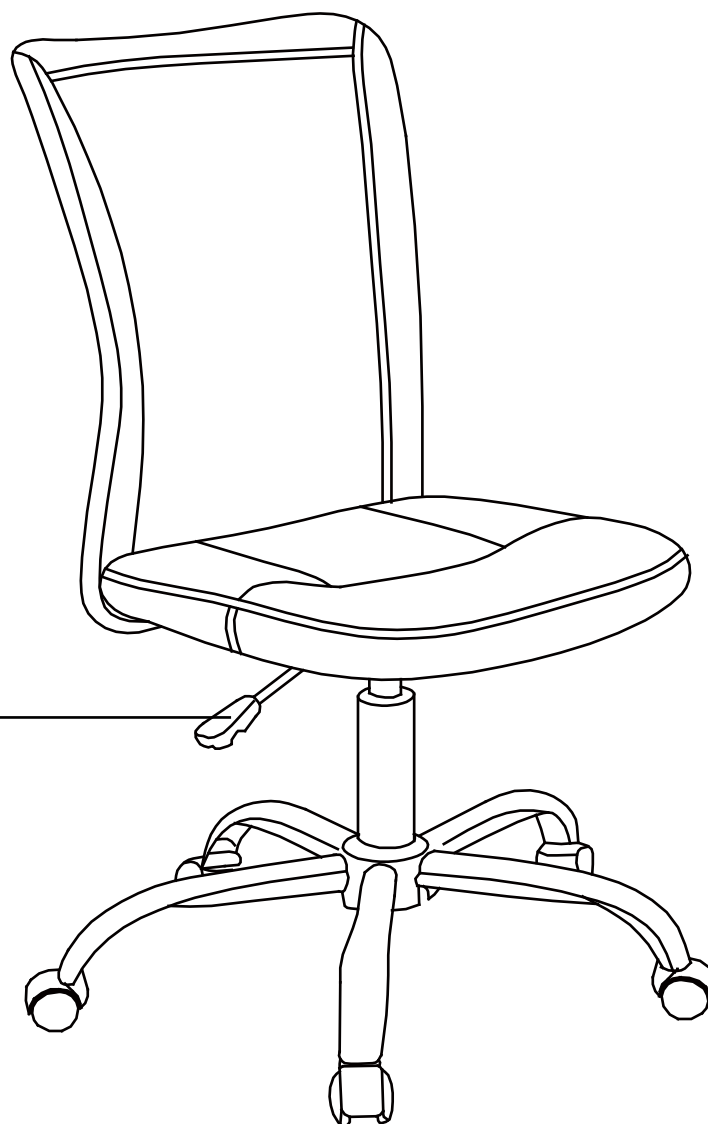

***Chair Height Adjustment**

–To increase chair height pull lever upward while lifting body weight slightly off the seat.
–Release lever at desired height.

–To lower chair height sit fully into the chair and pull lever upward.
–Release lever at desired height.