 


## **ASSEMBLY INSTRUCTIONS BATHURST HIGH BACK RACER CHAIR**

JBBATHCHRD/JBBATHCHBE/JBBATHCHWH  
JBBATHCHBK/JBBATHCHGY

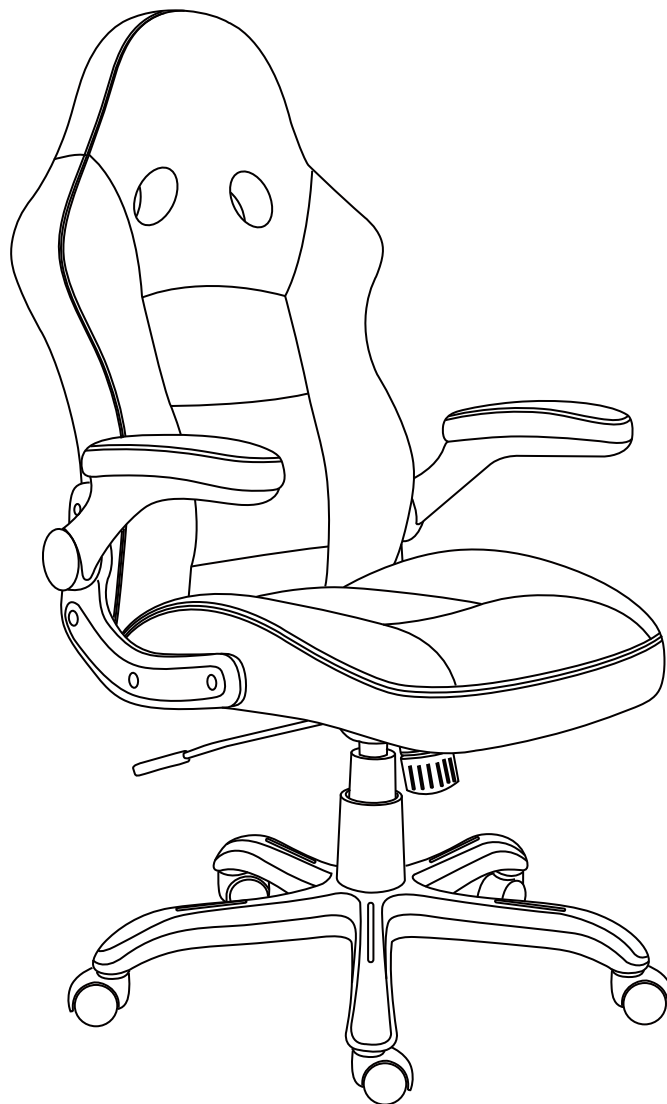

**Weight capacity: 120kgs**

This design and instruction booklet is subject to copyright.

[www.officeworks.com.au](http://www.officeworks.com.au)

1CTN

For spare parts or hardware call (03) 9310 3011 or email [hardware@kyvas.com.au](mailto:hardware@kyvas.com.au)

# Important

 
## Estimated Assembly Time: 20min

### Assembly Video

- To view an assembly video, go to <https://www.officeworks.com.au>
- Search the product by item code or name:



- Click on the icon to watch the video.

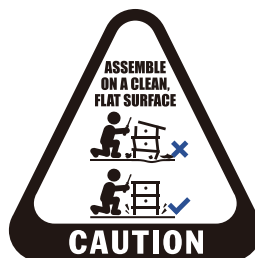

### NOTE

- Please check you have all hardware before assembly.
- If you are missing any hardware, please contact Kyvas on (03) 9310 3011 or email [hardware@kyvas.com.au](mailto:hardware@kyvas.com.au)
- Please ensure you have the name of the item, required hardware part and quantity.
- Please retain your receipt as proof of purchase to validate your warranty.

### CAUTION

- Do not tighten screws before all screws are in the right place.
- Do not use this product unless all bolts, screws and knobs are firmly secured.
- Check that all bolts, screws and knobs are securely tightened at least every 4 months.

### WARNING

 
- If parts are missing, broken, damaged or worn stop using the product until all repairs are made using manufacturer authorised parts.
- Failure to follow these warnings could result in serious injury

### DANGER


- CHILDREN MUST BE SUPERVISED.

Officeworks Ltd. | 236-262 East Boundary Road | Bentleigh East VIC 3165 | AUSTRALIA


# PART LIST

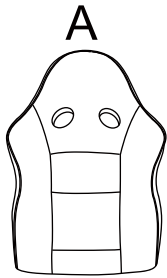


x1

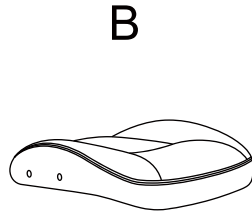 


x1

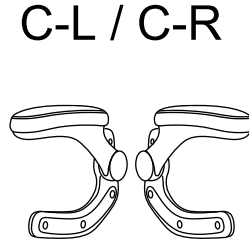 

x2

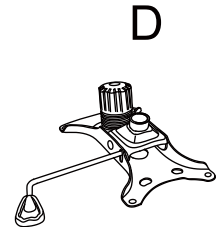 


x1

 


x1



 x1

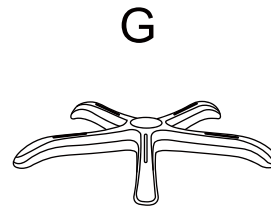

x1

 

x5

# HARDWARE LIST

**I** (1/4" x 3/4")



 
x2

**J** (1/4" x 1")



x8

**K** (1/4" x 7/8")




x2

**L**



 
x8

**M** (5mm)




x1

## Step 1

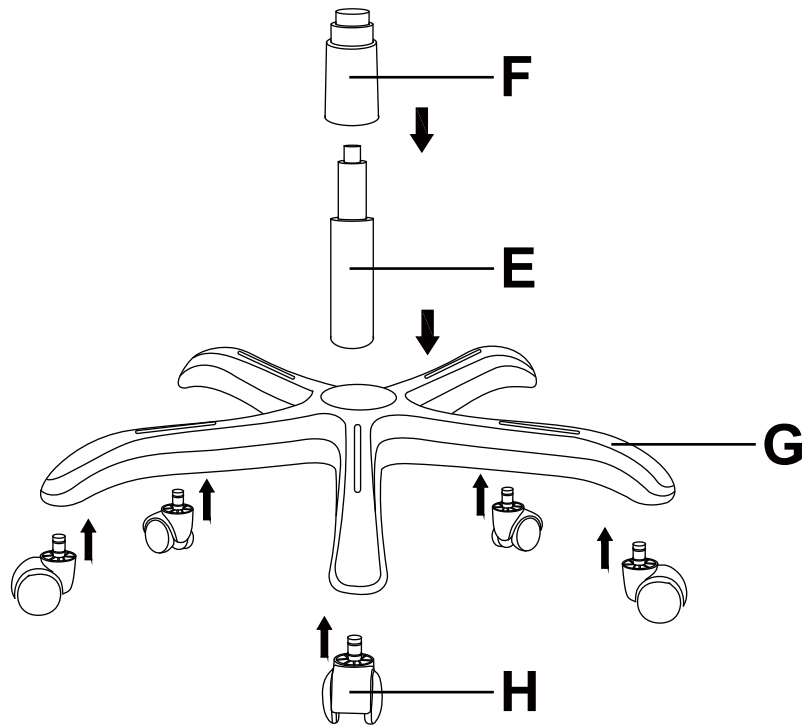 


Note: Turn the Star Base (G) upside down. Push the Castors (H) firmly into hole at the end of each leg. Turn the Star Base (G) upright and insert Gas Lift (E) into the center hole of Star Base (G). Place cover (F) over the Gas Lift (E).

## Step 2

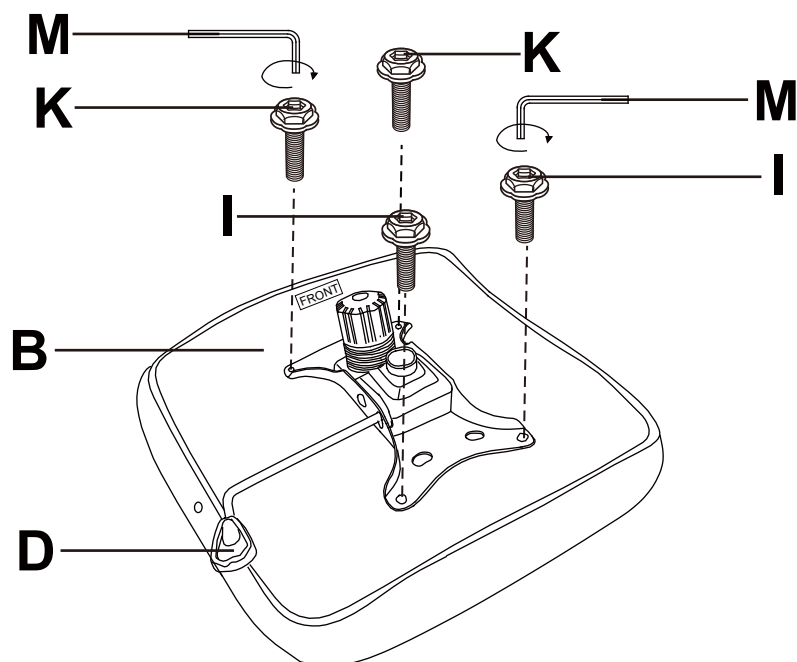 


Note: Align the Seat Plate (D) so the FRONT of the Seat Plate matches the FRONT label on the bottom of the Seat Cushion (B). Tighten the screws.

## Step 3

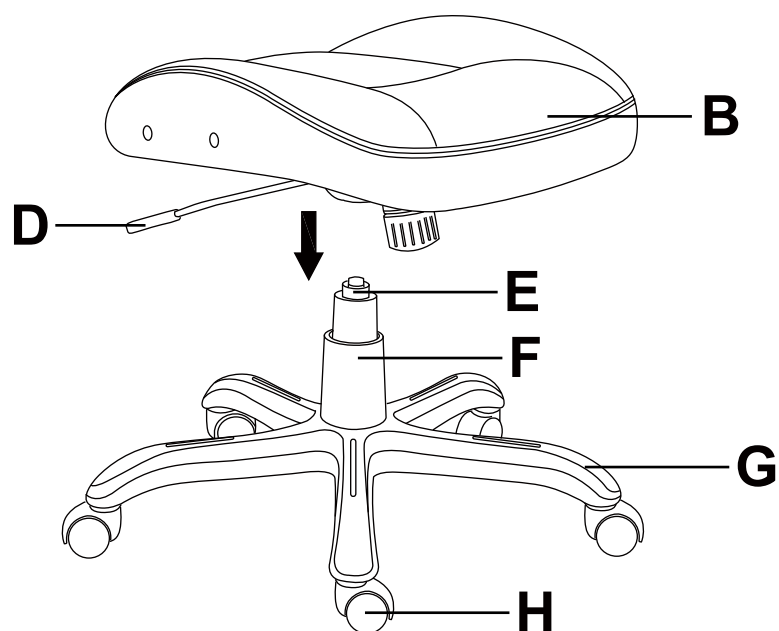 


Note: Place assembled seat on the Gas Lift (E). Push down firmly until connection is secure.

## Step 4

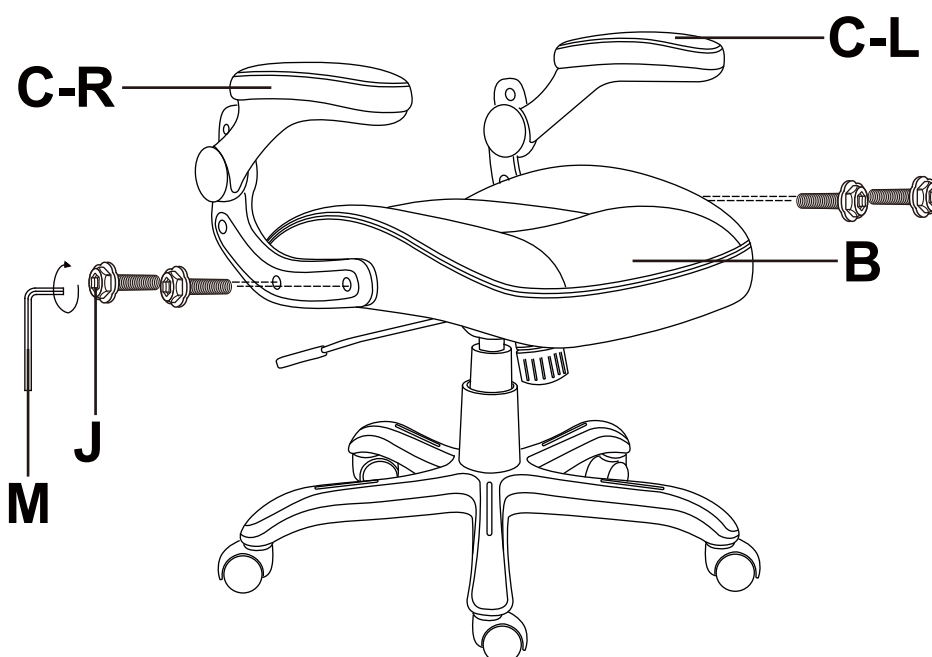 


Note: Attach Armrests (C) to the assembled Seat Cushion (B) using 4x Screws (J) with Allen Key (M). **Do not tighten Screws fully until you have completed assembly.**

## Step 5

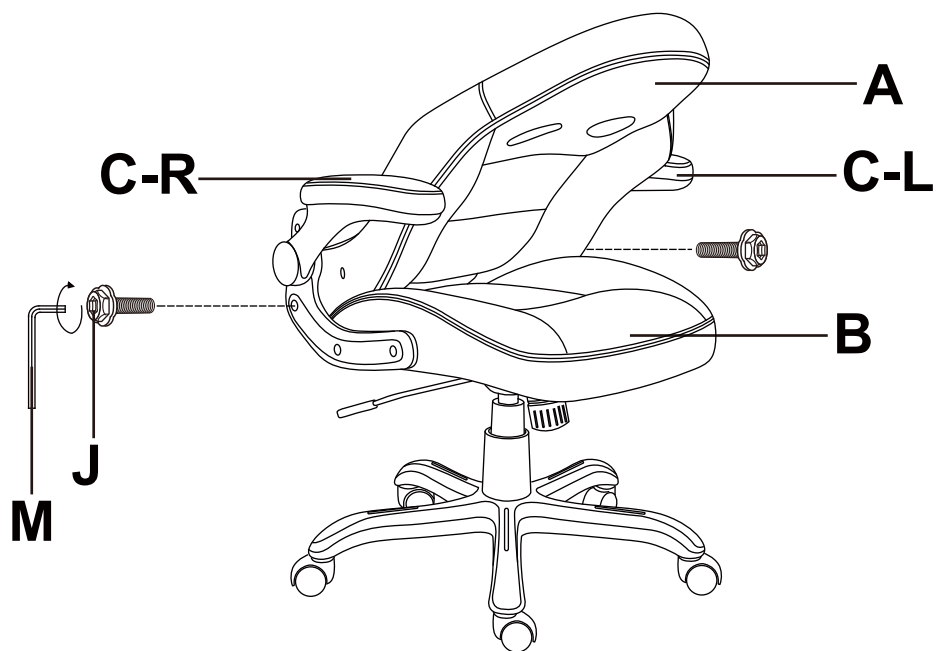 


Note: Attach Back Cushion (A) to Armrests (C) by securing 2x Screws (J) to the lower holes of the Back Cushion (A) as shown. **Do not tighten Screws fully until Step 7.**

## Step 6

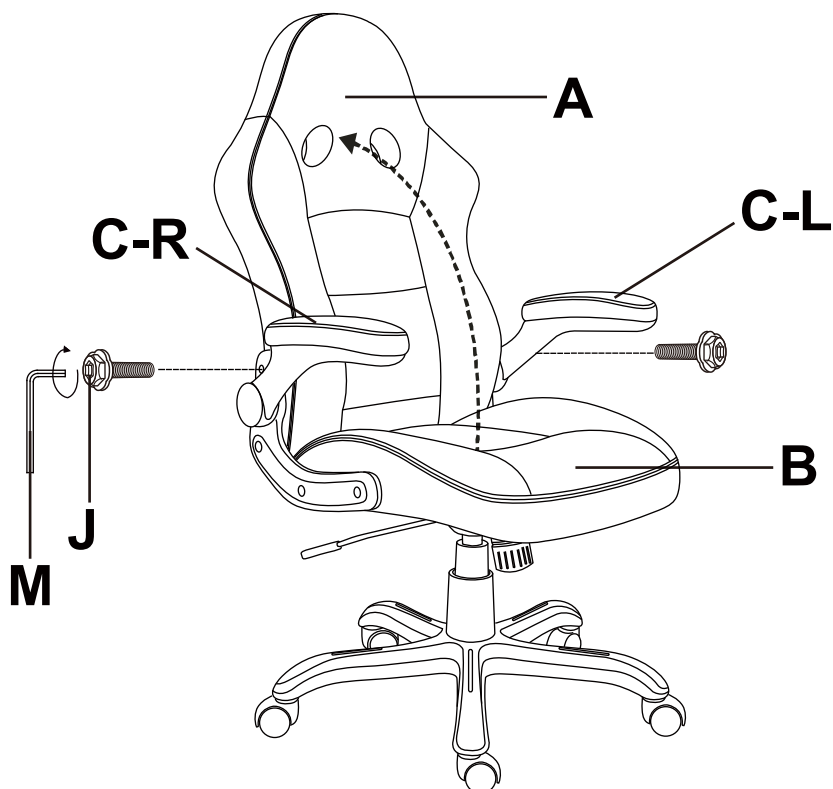 


Note: Push the Back Cushion (A) to the upright position. Assemble 2x Screws (J) into the top holes of Back Cushion (A).

## Step 7

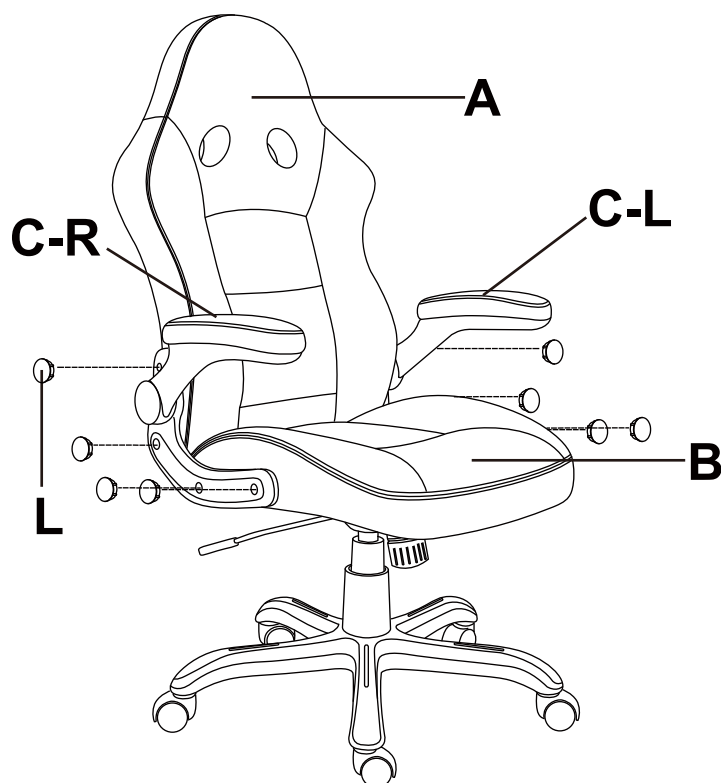 

Note: Fully tighten all Screws (J) with Allen Key (M). Press the Plastic Caps (L) into the Armrest holes to cover the screws.

## Step 8

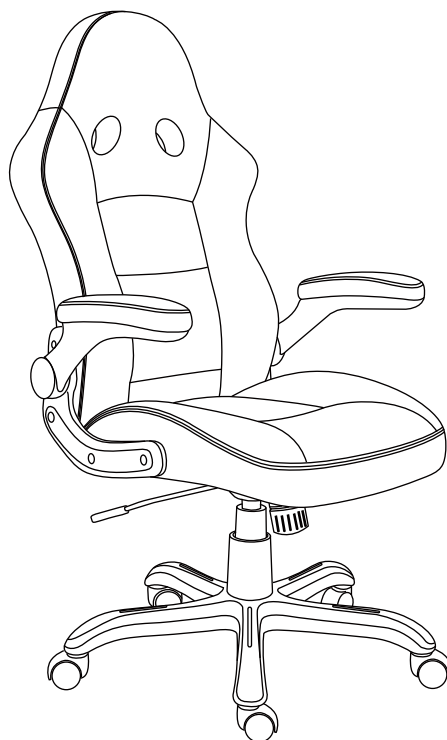 

Your Bathurst High Back Racer Chair is now complete and ready for use.  
IMPORTANT NOTE: Periodically check and re-tighten screws.

## Care Instructions for PU leather upholstery

### Care Instructions

- Vacuum regularly.
- Wipe with a clean damp cloth and mild soap. Wipe dry immediately with an absorbent dry cloth.
- Treat spills immediately with an absorbent cloth by blotting the spill.
- Do not use detergents, solvents or abrasive cleaners.
- Keep away and protect from direct sunlight and heat.
- Avoid contact with skin, in particular during high temperatures and humidity.
- Clean, check and tighten parts regularly.

## Care Instructions for fabric upholstery

### Care Instructions

- Vacuum regularly.
- To maintain the appearance of non-upholstered parts, wipe the surface with a clean cloth dampened with a mild soap solution.
- Spot clean with upholstery shampoo or dry powdered cleaner only. Test on a concealed area before proceeding. Apply proprietary cleaning products strictly according to instructions.
- Do not saturate fabric or interior with water or other cleaning products.
- Treat spills immediately with an absorbent cloth by blotting the spill.
- Persistent stains may require treatment by a professional cleaner.
- Do not use detergents, solvents or abrasive cleaners.
- Keep away and protect from direct sunlight and heat.
- Avoid contact with skin, in particular during high temperatures and humidity.
- Piling may occur as a result of daily wear. This is not a manufacturing fault and can be removed by using a Fabric Pill Remover. De-pilling removes unsightly loose surface fibres and does not affect fabric performance.
- Clean, check and tighten parts regularly.

Thank you for your purchase. Please retain your receipt to validate warranty.  
If you would like to know more about our furniture products, please visit [www.officeworks.com.au](http://www.officeworks.com.au)



# BATHURST HIGH BACK RACER CHAIR

## Functionality



### **\* Flip Up Armrest**

 
- Use your hand to raise and lower the armrest.



### **\* Chair Height Adjustment**


- To increase chair height pull lever upward while lifting body weight slightly off the seat.
- Release lever at desired height.
- To lower chair height sit fully into the chair and pull lever upward.
- Release lever at desired height.

Your feet should be resting flat on the floor.

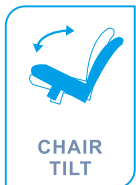

### **\* Chair Tilt**

 
- In the upright position pull lever out to unlock & allow chair to tilt back & forth.
- In the upright position push lever to lock. Chair will have slight movement in locked position.

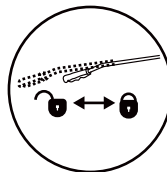

### **\* Adjustable Tilt Tension Control**

- Turn continuously to adjust how quickly chair tilts back & forth.

 Note: If adjusting while sitting in chair  
Turn knob left to tighten tension.  
Turn knob right to loosen tension.

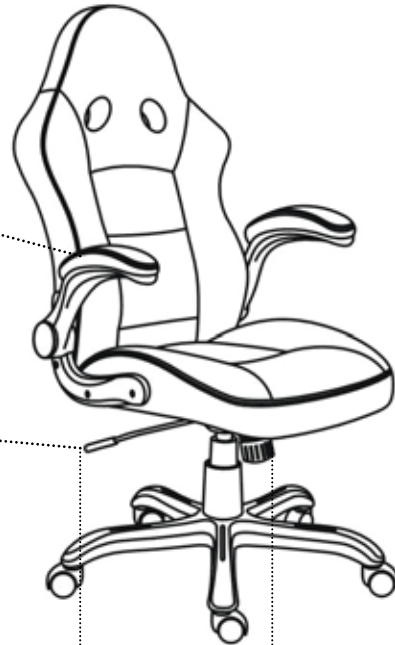

## **Warranty 3 years**

### **Product Warranty – valid for Australian customers only**

Officeworks Ltd warrants that this product will be free from defects and work as intended for 3 years from the date of purchase by the original customer.

If the product has any defects or does not work as intended during the Warranty Period, Officeworks will, at its election and at its expense, repair or replace the product.

This warranty does not apply:

- to cosmetic damage;
- to damage caused by consumables used in connection with the product (such as cleaning products);
- where the product has not been used in accordance with all provided instructions;
- to damage arising from fair wear and tear;
- where the product has not been subject to reasonable use;
- where the product has been intentionally or negligently damaged; and/or
- if the customer has attempted to repair the product.

To make a claim under this warranty, please return your product with your receipt or proof of purchase to your nearest Officeworks store or contact 1300 633 423.

This warranty is provided in addition to any rights you may be entitled to under the Competitions & Consumer Act 2010.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Thank you for your purchase. Please retain your receipt to validate warranty.  
If you would like to know more about our furniture products, please visit [www.officeworks.com.au](http://www.officeworks.com.au)