
# J.BURROWS


# Assembly Instructions LINCOLN MB EXECUTIVE CHAIR JBLINMBCBK/JBLINMBCWH/JBLINMBCRD



This Chair has a load rating of 120kg

# *Important*Estimated Assembly Time: 30min

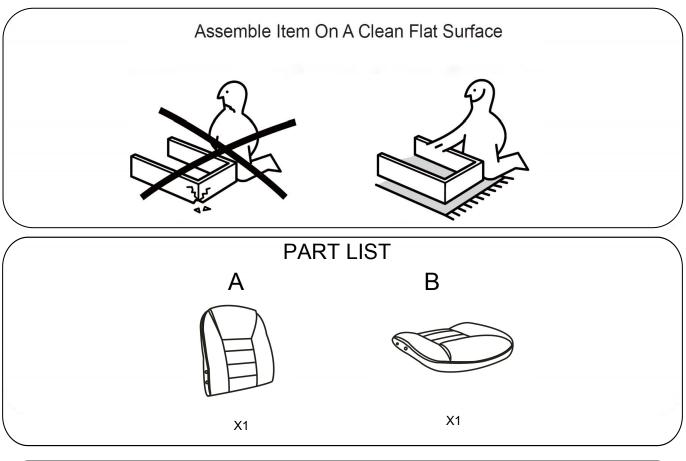

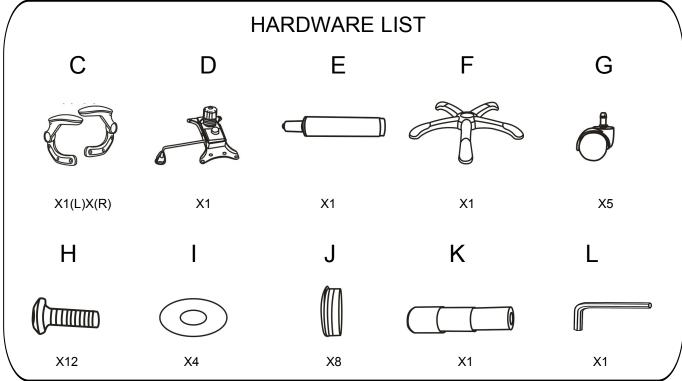

Please check you have all hardware components before assembling.


If you are missing any hardware components from the Hardware List please contact My Zone

on Tel: (03) 9310 3011 or email: hardware@myzone.net.au


Please ensure you have the name of the item, store purchased from, hardware part required and quantity.

Please retain your receipt to validate warranty. Enjoy your new purchase!


# Step1

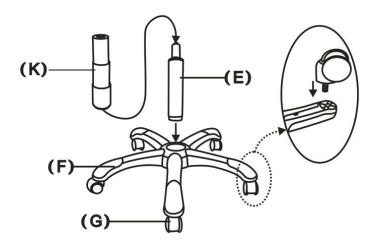


Step2

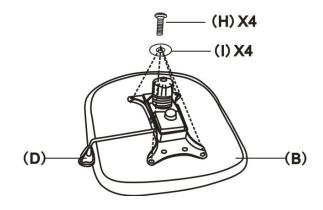


Step3

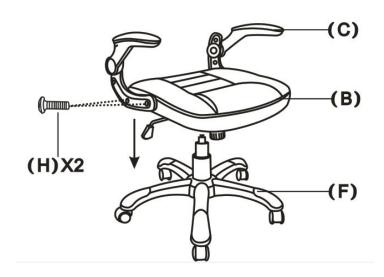

Note: Do not fully tighten bolts in Step 3 to make for easier assembly in Step 4

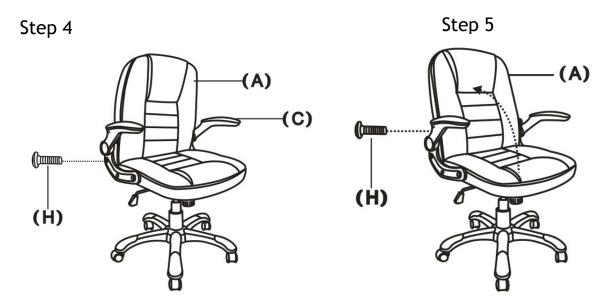

Note: Fully tighten all bolts.

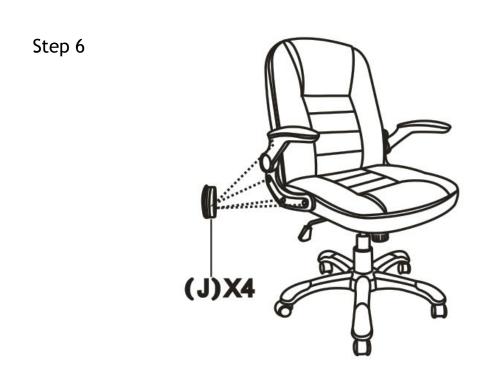

Your Lincoln Executive Chair is now complete and ready for use.

IMPORTANT NOTE: Periodically check and re-tighten screws


Officeworks Superstores Pty Ltd | 236-262 | East Boundary Road | East Bentleigh | 3165 | Australia

## **CHAIR FUNCTION**


 
### \* Flip back armrest

-The top half of arm can be rotate to 90 degree



#### \* Chair Height Adjustment -----

-To increase chair height pull lever upward while lifting body weight slightly off the seat.

- -Release lever at desired height.
- -To lower chair height sit fully into the chair and pull lever upward.
  - -Release lever at desired height.



## \* Chair tension function

- -Pull lever out to unlock & allow chair to tilt back & forth.
- -Push lever to lock. Chair will have slight movement in locked position.



#### \* Adjustable Chair Tension Speed ←------

-Turn continuously to adjust how quickly chair tilts back & forth.

Note: If adjusting while sitting in chair: Turn knob left to tighten tension. Turn knob right to loose tension.