

Assembly Instructions
Velocity Buffet
1200 Wide

2 CARTONS





MANUFACTURER CODE: VB124
OW CODES: CPVELBFWH, CPVELB12WI,
CPVELBFGR, CPVELB12BW

manufactured by designtec www.designtec.com.au



### **NOTE**

Please check you have all hardware before assembling.

If you are missing any hardware, please contact the store of purchase.

Please ensure you have the name of the item, required hardware part and quantity.

Please retain your receipt as proof of purchase to validate your warranty.

### **CAUTION**

Do not tighten screws before all screws are in the right place.

Do not use this product unless all bolts, screw and knobs are firmly secured.

Check that all bolt, screws and knobs are securely tightened at least every 4 months.

### WARNING

If parts are missing, broken, damaged or worn stop using the product until all repairs are made using manufacturer authorised parts.

Failure to follow these warnings could result in serious injury.

## **TOOLS REQUIRED FOR ASSEMBLY**

 
1 x Philips Head Screwdriver



## **HARDWARE INCLUDED**

Note - Individual hardware images are not to scale.

### A & B - TWO PART FOOT



### C - PIN



### D - 16mm SCREW



# E - CONFIRMAT SCREW



**F - SHELF SUPPORT** 



x8

H - HINGE



x 4

### I - HINGE PLATE



x 4

J - HANDLE SCREW



**K-HANDLE** 



# **PRE-INSERTED HARDWARE**


**CAM HOUSING** 



Unscrew the two part foot to separate PART (A) from PART (B).

Fix PART (A) of two part foot to the bookcase base using SCREW (D).


PART (B) of the two part foot can now be attached to PART (A) by placing it on top and rotating clockwise.

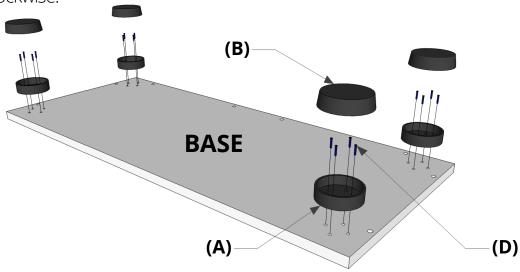

## STEP 2


Fix six (6) PINS (C) into the outer pre-drilled holes on the end panels & division with your screwdriver.

**NOTE:** these pre-drilled holes are slightly offset to the edge.

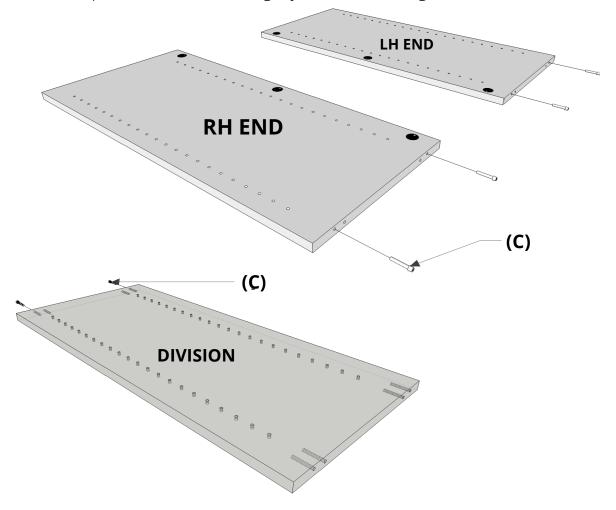

Fix ten (10) PINS (C) into the outer pre-drilled holes on the back panels with your screwdriver.


**NOTE:** these pre-drilled holes are slightly offset to the edge.

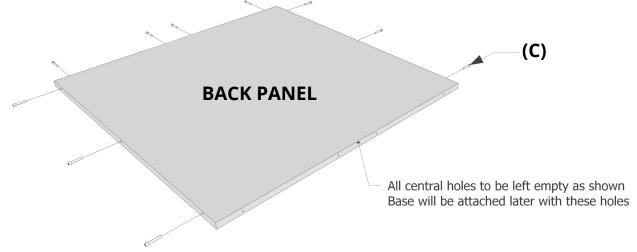

### STEP 4

Align the CAM HOUSING on your end panels with your PINS (C) on your back panel. Tighten by rotating the screw to the right.

Place your division in the centre and align the top with your ends, division & back. Tighten your CAM HOUSINGS by rotating the screw to the RHS.

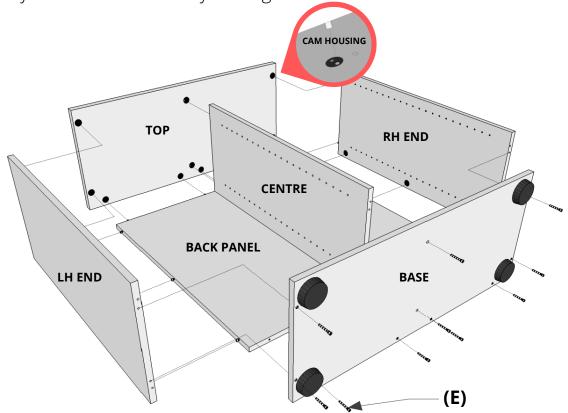


### STEP 5

Attach your base by inserting eight (8) CONFIRMAT SCREWS (E) into the holes as shown above, tighten using your screwdriver.


Fix your HINGE PLATES (I) in the top and bottom pre-drilled holes on each end panel, use your screw driver to secure.

Then fix HINGES (H) onto the doors, use your screw drive and 16mm SCREWS (D) to secure (two screws per hinge).

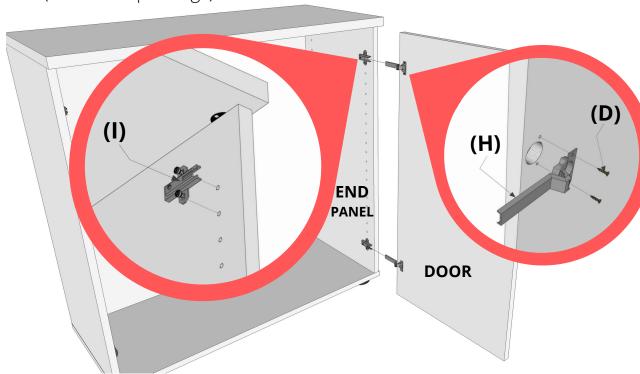


# **STEP 7**

Attach your HANDLES (K) to the door, use your screw driver and HANDLE SCREW (J) to secure (two screws per handle).

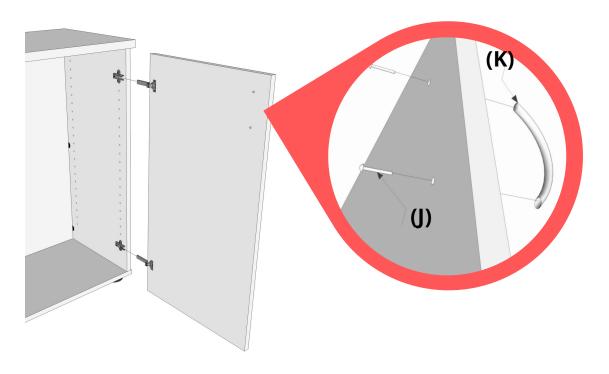


Align door hinges with hinge plates. Hook front section of the hinge to the hinge plate then push the back of hinge until it clicks in place and is secure.

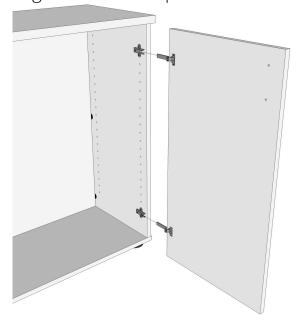

### STEP 9

To insert shelves, place your SHELF SUPPORTS (F) in the holes on the end panels at the desired shelf height and the shelf sits on top

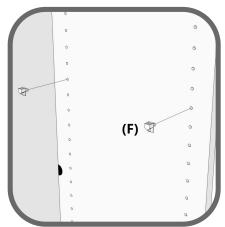

**NOTE**: You can adjust your doors using the 2 screws location on your hinge. The back screw adjusts the door forward or back. The front screw adjust your door left or right.

