



Assembly Instructions
Velocity Buffet
900 Wide
2 CARTONS



MANUFACTURER CODE: VB94
OW CODES: CPVELBUFWH, CPVELB90WI,
CPVELBUFGR, CPVELB90BW

manufactured by designtec
www.designtec.com.au

10
YEAR
WARRANTY

NOTE

Please check you have all hardware before assembling.

If you are missing any hardware, please contact the store of purchase.

Please ensure you have the name of the item, required hardware part and quantity.

Please retain your receipt as proof of purchase to validate your warranty.

CAUTION

Do not tighten screws before all screws are in the right place.

Do not use this product unless all bolts, screw and knobs are firmly secured.

Check that all bolt, screws and knobs are securely tightened at least every 4 months.


WARNING

If parts are missing, broken, damaged or worn stop using the product until all repairs are made using manufacturer authorised parts.

Failure to follow these warnings could result in serious injury.

TOOLS REQUIRED FOR ASSEMBLY

1 x Philips Head Screwdriver

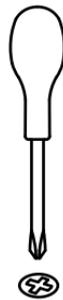

HARDWARE INCLUDED

Note - Individual hardware images are not to scale.

A & B - TWO PART FOOT



C - PIN



D - 16mm SCREW



E - CONFIRMAT SCREW



F - SHELF SUPPORT



L - METAL DOWEL



H - HINGE



I - HINGE PLATE



J- HANDLE SCREW




K - HANDLE



PRE-INSERTED HARDWARE

CAM HOUSING

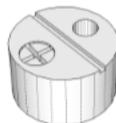


STEP 1

Unscrew the two part foot to separate PART (A) from PART (B).

Fix PART (A) of two part foot to the bookcase base using SCREW (D).


PART (B) of the two part foot can now be attached to PART (A) by placing it on top and rotating clockwise.

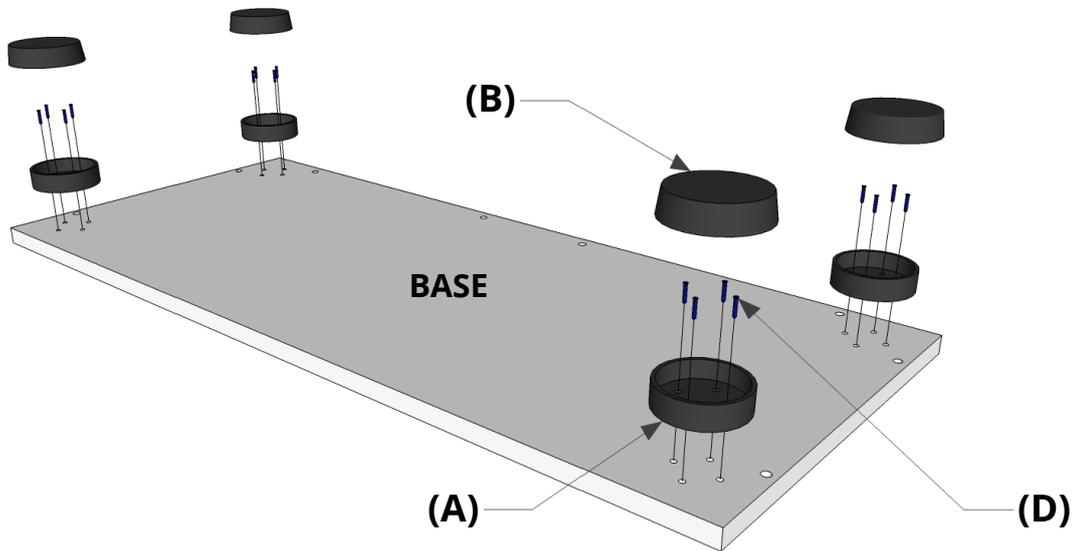

STEP 2


Fix four (4) PINS (C) into the outer pre-drilled holes on the end panels with your screwdriver.

NOTE: these pre-drilled holes are slightly offset to the edge.

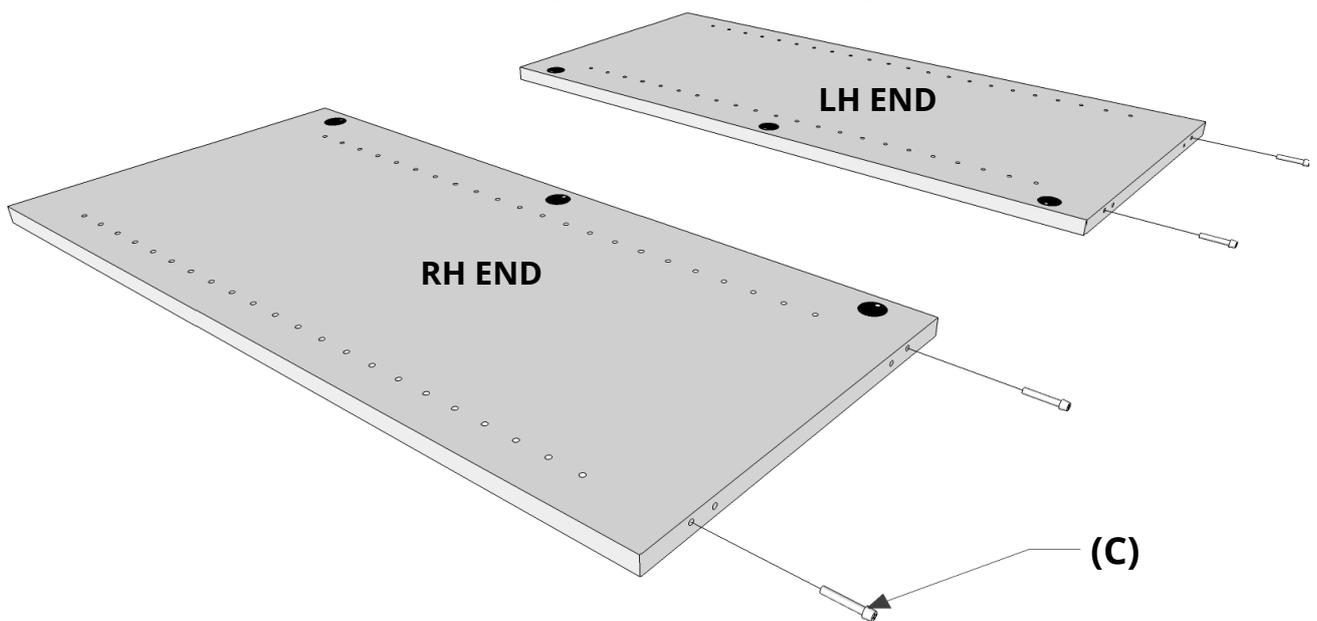

STEP 3

Insert two (2) METALS DOWELS (L) into pre-drilled holes to align the back panels together.

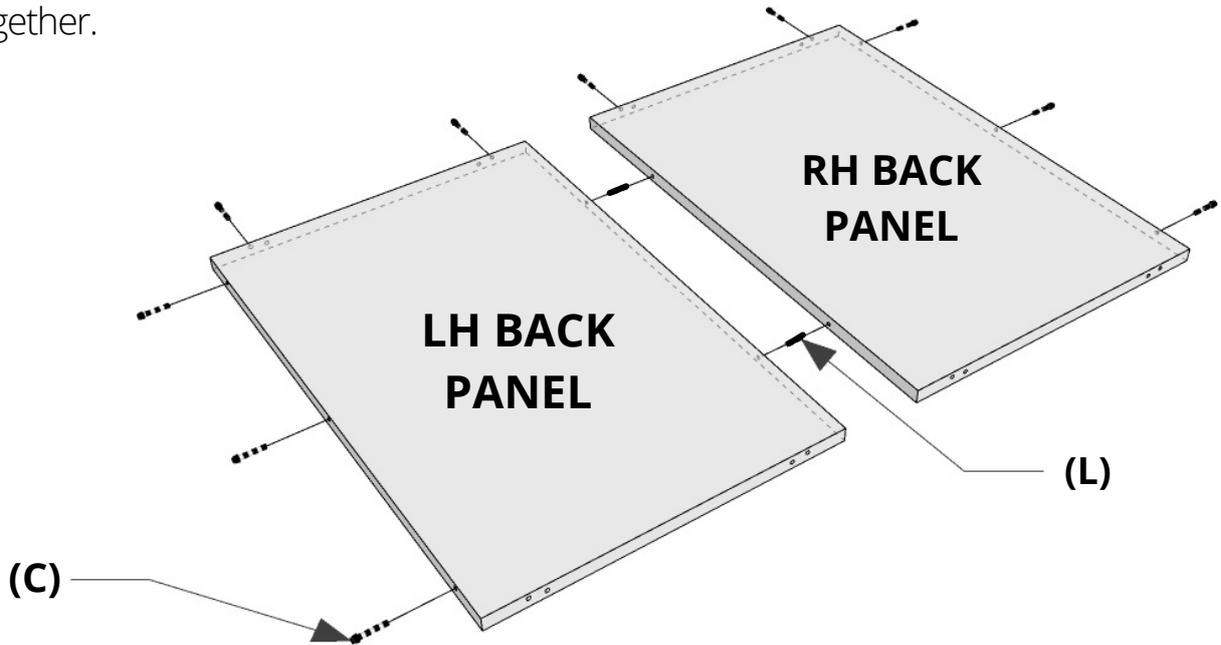


STEP 4

Fix ten (10) PINS (C) into the outer pre-drilled holes on the back panels with your screwdriver. NOTE: these pre-drilled holes are slightly offset to the edge.

STEP 5

Align the CAM HOUSING on your end panels with your PINS (C) on your back panel. Tighten by rotating the screw to the RHS. Repeat this step with your top panel.

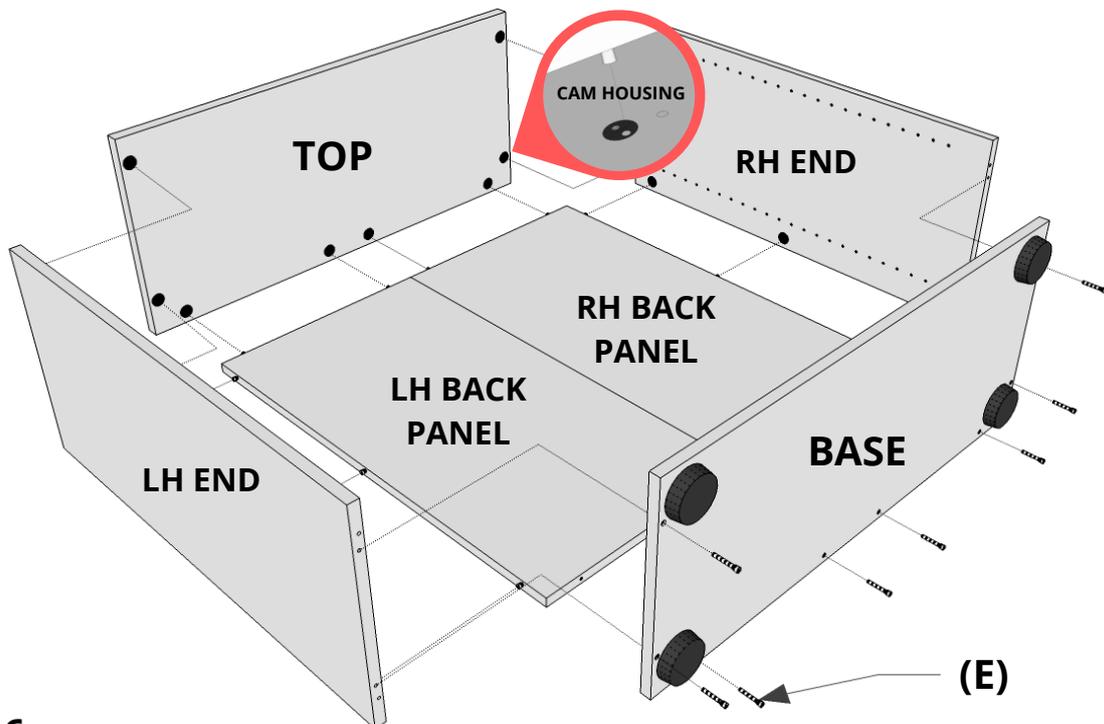


STEP 6

Attach your base by inserting eight (8) CONFIRMAT SCREWS (E) into the holes as shown above, tighten using your screwdriver.


STEP 7

Attach four (4) HINGE PLATES (I) (two for each door) to your end panels as shown, tighten the screws on the hinge plate with your screw driver.

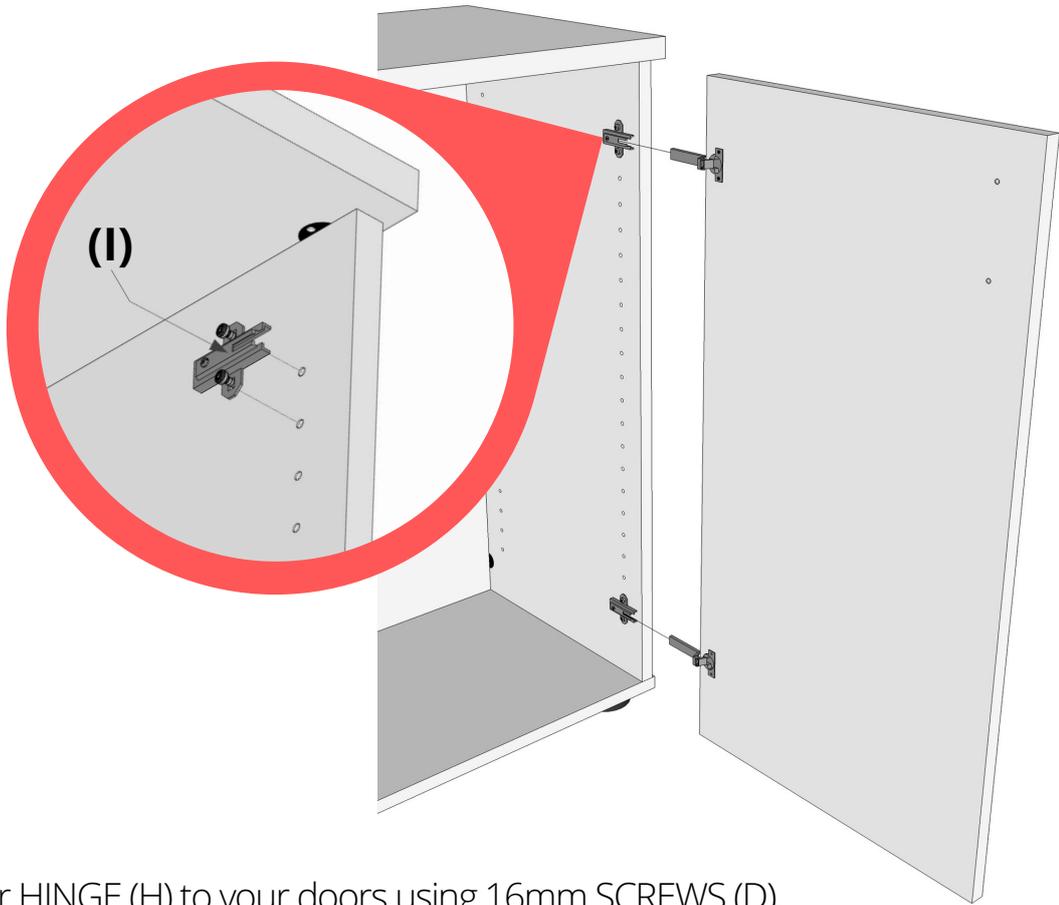


STEP 8

Attach your HINGE (H) to your doors using 16mm SCREWS (D).

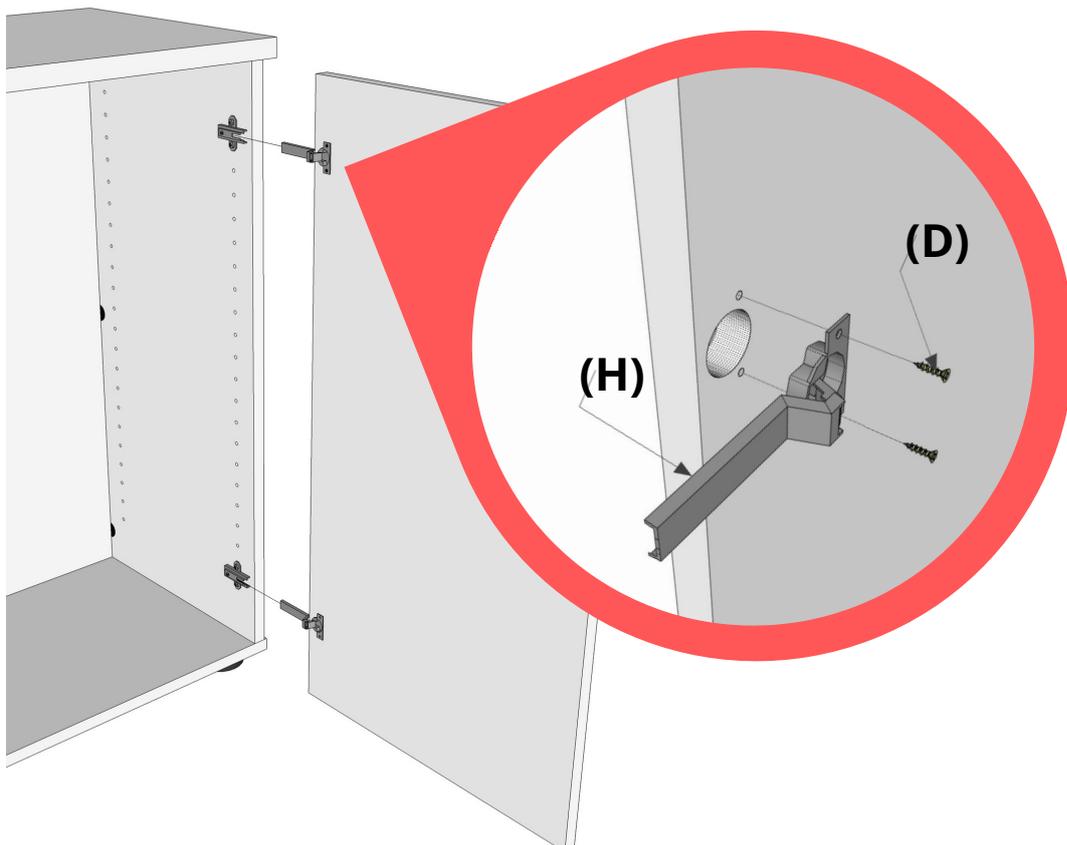


STEP 9

Attach your HANDLES (K) to the doors using the HANDLE SCREW (J).

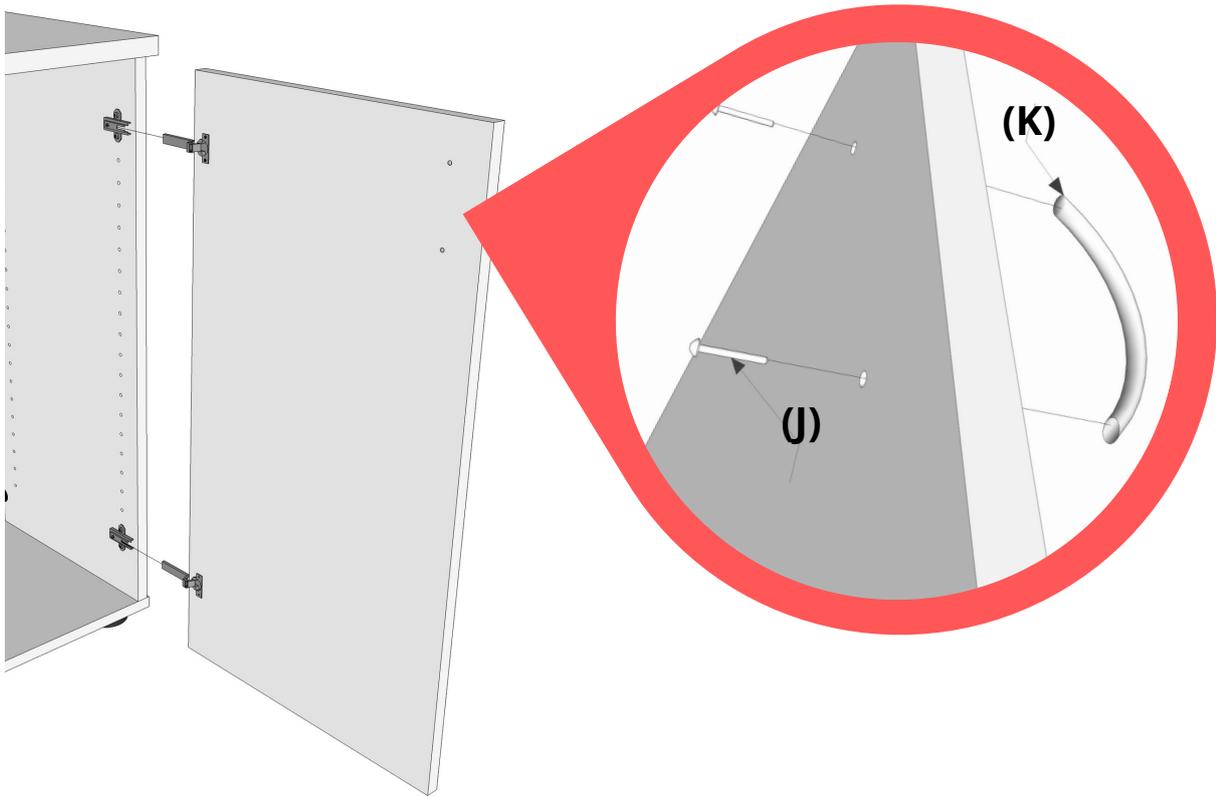

STEP 10

Align door hinges with hinge plates. Hook front section of the hinge to the hinge plate then push the back of hinge until it clicks in place and is secure.

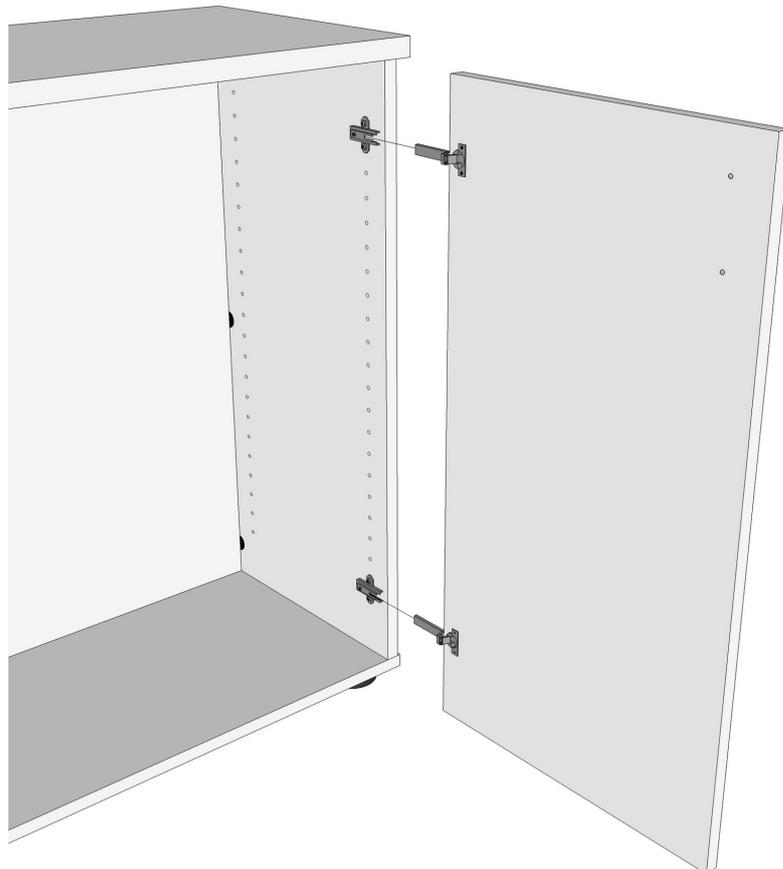

NOTE: You can adjust your doors using the 2 screws location on your hinge. The back screw adjusts the door forward or back. The front screw adjust your door left or right.

