

Astral Pool SLX Light Power Supply



INSTALLATION INSTRUCTIONS



INST378

Melbourne: 03 8796 8600 Gold Coast: 07 5552 2600 Perth: 08 9350 2600
 North Sydney: 02 9853 2100 Townsville: 07 4750 3100 sales@astralpool.com.au
 Brisbane: 07 3308 5400 Adelaide: 08 8152 7600 www.astralpool.com.au
 South Sydney 02 8778 9500





For full warranty terms and conditions and to register your warranty, simply visit www.astralpool.com.au/warranty and complete your details. Or scan the QR code and be taken directly to the registration page.

Record your equipment details here for quick reference:

Model No.: _____

Serial No.: _____

Installation Of Power Supply



 
WARNING: If the supply cord is damaged, it must only be replaced by AstralPool, its service agent or a similarly qualified person, in order to avoid a hazard.

WARNING: The transformer is not intended for series/parallel connection.

WARNING: Never connect more than one light to a single power supply outlet. Each outlet on the power supply must go to one - and one only – underwater light.

The SLX power supply has an IP23 rating, meaning it is suitable for installation outdoors. For safe operation the power supply must be installed in the correct orientation, with the cables leaving from the bottom of the device. If installing the power supply near the pool or spa water, you must ensure that the rules of AS3000 are followed at all times. AstralPool strongly recommends that installation be performed by a registered pool builder, electrician or other suitably qualified person.


Kit Contents
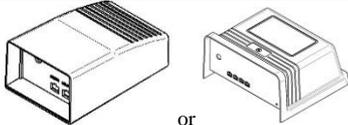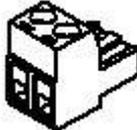
| Quantity | Item | |
|----------|---|---|
| 1 | SLX Lighting Transformer (2 output), OR SLX Lighting Transformer (4 output) |  |
| 2 or 4 | Light power supply plug |  |
| 2 | Screw 8G*3/4 |  |
| 2 | Masonry plug 8G*25mm | |


Installation Instructions

1. The SLX Lighting Transformer mounts uses a “keyhole” mounting system, as shown in the following diagrams. Having identified a suitable installation location, insert the two provided mounting screws into the wall with a 50mm or 100mm spacing. If affixing to masonry, use the provided masonry plugs.


Dual Output Mounting

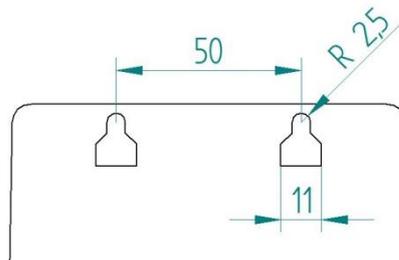

Four Output Mounting

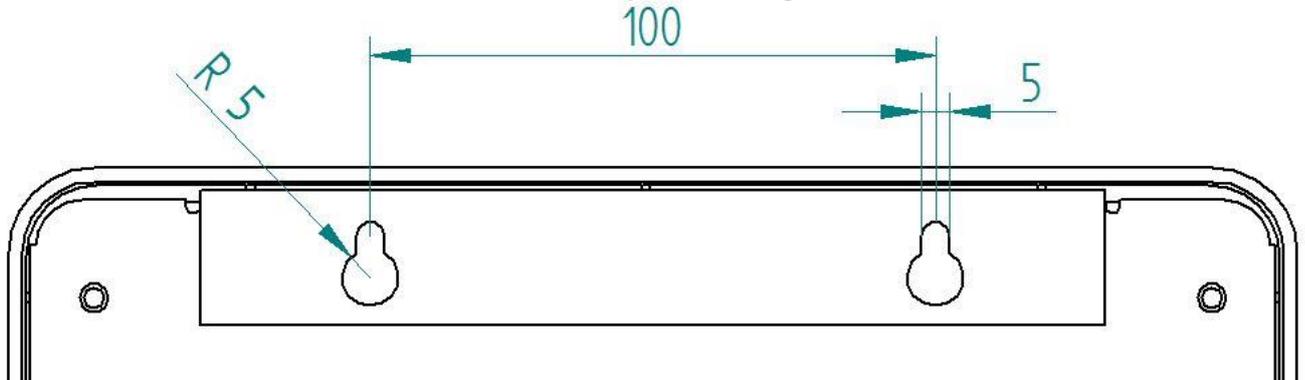

2. Hang the SLX Lighting Transformer from the two screws, ensuring that the power supply drops down into place and is locked in position. Plug the SLX power supply’s mains cable into a mains outlet.
3. To connect your lights to the power supply, insert each wire of the light cable into one of each opening in the supplied green connectors, and then tighten the screws on top. The wires can go into either opening, as there is no polarity.

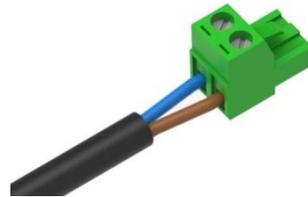

4. Ensure mains power to the SLX Lighting Transformer is off.
5. Insert each green connector into the bottom of SLX Lighting Transformer, into any of the available positions. The connectors will only insert one way.
6. Turn mains power on to the SLX Lighting Transformer and your lights should now be on. To turn the lights off, switch off power at the mains power outlet.

MAINTENANCE OF YOUR LIGHT CONTROLLER

Maintenance Schedule: Your new product incorporates parts to withstand high velocity water with chemicals in it. Some of these parts will wear in the normal course of use and require regular checks and maintenance. Performing these checks and maintenance will identify parts that have worn and require repair/replacement before further serious damage is sustained. A small amount of regular care and attention to your pool equipment will help ensure long life and trouble free performance.

To protect against extremes of temperature, your unit is vented to allow expensive electronics to cool. Ants and some insects are often attracted to the warmer, dry environment inside the enclosure. We recommend that, with power turned off, you spray a surface insecticide on the surfaces surrounding the control to prevent ant and insect ingress. Repeat every three months or as necessary.

| Timing | Maintenance Check | Service action (if required) |
|---------------|------------------------|--|
| Three Monthly | Check for insects/ants | Spray a surface insecticide on the surfaces around the unit to prevent ant and insect ingress. |

Important note: Regular maintenance is important to ensure long life and trouble free performance of your pool equipment. If unable to perform the maintenance yourself, contact your local AstralPool office who will arrange a trained service technician to perform the maintenance for you.



sales@astralpool.com.au
 www.astralpool.com.au

Fluidra Group Australia Pty Ltd
 219 Woodpark Road,
 Smithfield, N.S.W 2164
 ABN 087 002 641 965