

Printing a Mounting Template


NOTICE

It is not recommended that you print a mounting template on your own. Use the template that came in the product box.

If you do print the template, you must follow these instructions for printing a mounting template precisely. To print large templates, you need large enough paper and printer. Failure to have the correct sized paper and printer, or a failure to follow these instructions, may result in an incorrectly sized template and therefore an incorrect cutout (too large or too small) on the mounting surface of your boat.


NOTE: The options and locations of the options differ between Adobe Acrobat versions and other PDF viewing/printing applications. Be sure the scaling is 100% before printing.

- 1 Select File > Print.
- 2 Enter 2 in Pages to Print 1.
- 3 Select Actual Size 2 for Page Sizing & Handling.
- 4 Verify that the paper size is larger than the template 3.
 - In this example, the paper is not larger than the template.
- 5 If the paper size is not large enough, select Properties 4 and select a Paper Size that is larger than the template.
- 6 After printing the template, use a ruler to measure at least one dimension line to ensure the template printed to 100% scale.

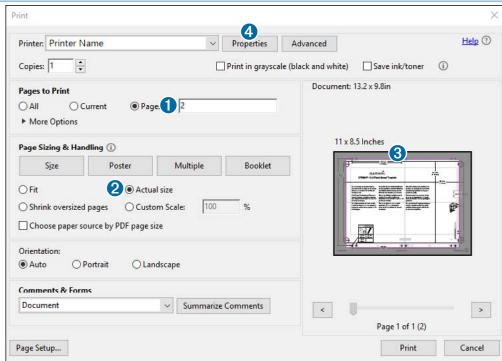

NOTICE

Garmin is not responsible for any damages or expenses resulting from a miscut mounting surface arising from a failure to follow these instructions.

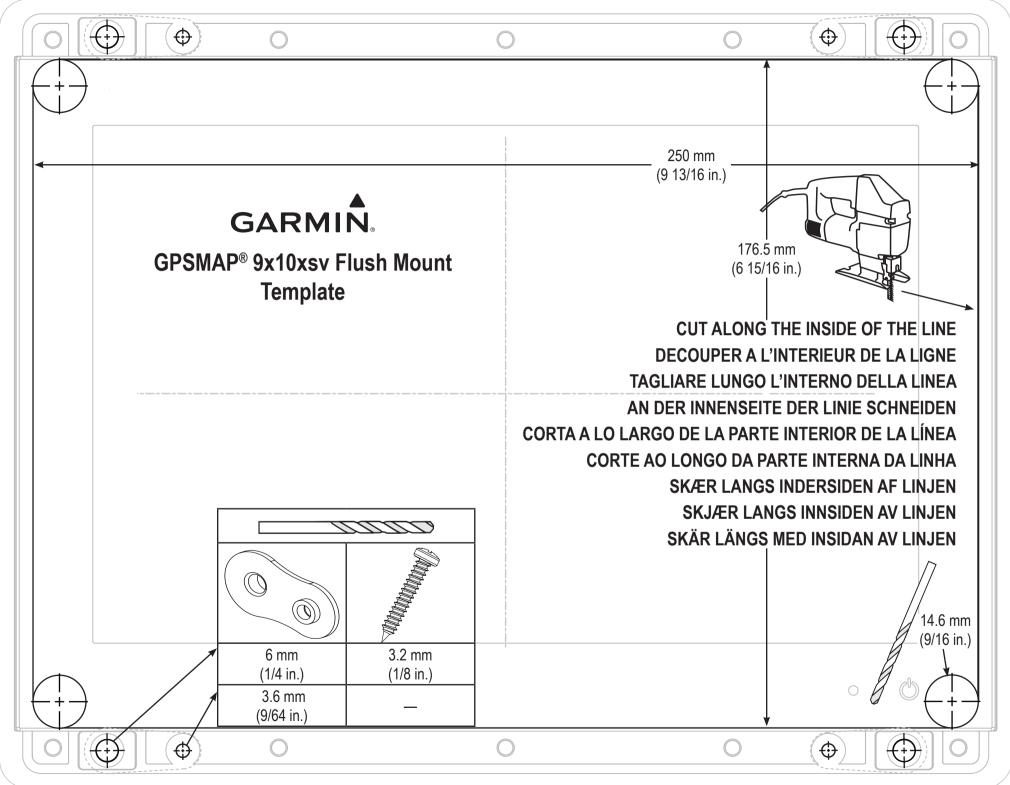

© 2025 Garmin Ltd. or its subsidiaries