

Opal Top Up and Single Trip Ticket Machine

Topic 4 – Unlock and open the machine

Make sure you have logged in to the maintenance software before unlocking and opening the machine!

1

REMOVE THE KEY FROM THE TOP LOCK

2

USE THE LIFTING TOOL (2A) TO LIFT LATCH (2B) ON BOTTOM LOCK

3

INSERT THE KEY (3) AND TURN FULLY TO THE LEFT (ANTI-CLOCKWISE)

4

OPEN THE DOOR UNTIL THE BRACKET (4) CLICKS INTO PLACE

5

REMOVE AND SECURE THE KEY