




PVRC49

AV Recorder

User Manual


With PVRC49 AV Recorder, you can convert your old video tapes or camcorder tapes to digital format with one click of button, record and digitalize video from VHS, VCR's, DVD Players, DVR's, Camcorders, Hi8, and Gaming Systems. PVRC49 AV Recorder records video directly, no computer required. Includes 8GB memory card inside, and supports extra Micro SD Card input. PVRC49 also can convert old music to digital format, and playback video, music and pictures.

 FEATURES:

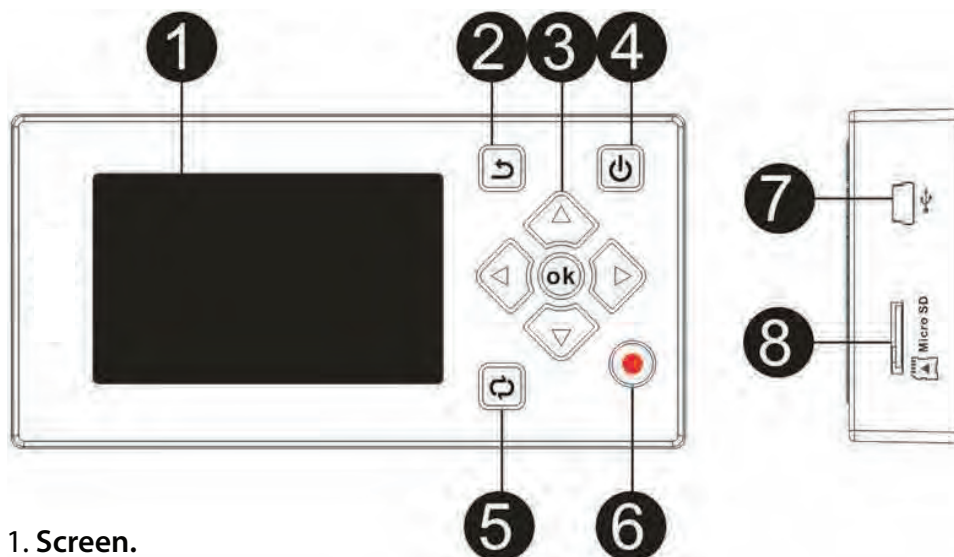

1. **Screen.**
2. **Return** – Return to menu. (save recorded file when under recording video or audio menu)
3. **Direction and OK button** – To operate the menu, and playback.
4. **On/Off** – Long press (2 seconds) to power on and off.
5. **Audio Play Mode** – Switch between 6 different play mode.
(Long press to delete the file when you play video, music or pictures.)
6. **Record Button** – In "TV IN" preview video mode, press to record video (even without video input), press again to stop and save file.
7. **POWER and DATA** – Supply 5V DV power with mini USB cable to charge battery, connect to computer to manager files or update firmware.

 8. Micro SD card slot – Plug Micro SD card saving record file.

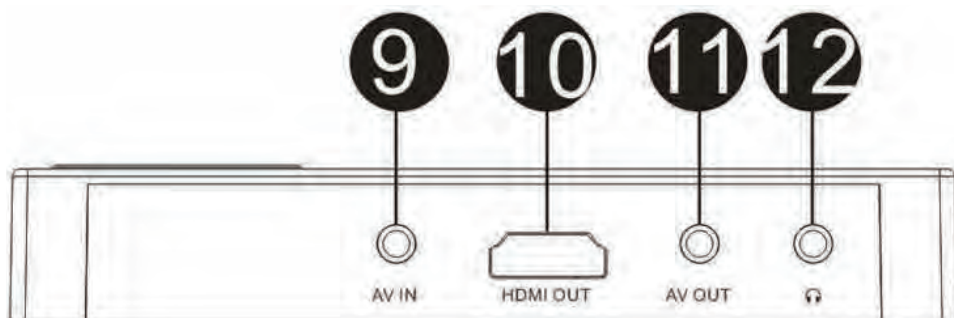


9. **AV IN** – AV input connection with AV Cable.

10. **HDMI OUT** – Connect to TV monitor display

11. **AV OUT** – Connect to TV monitor display

 12. **EARPHONE** – Connect earphone to listen to audio

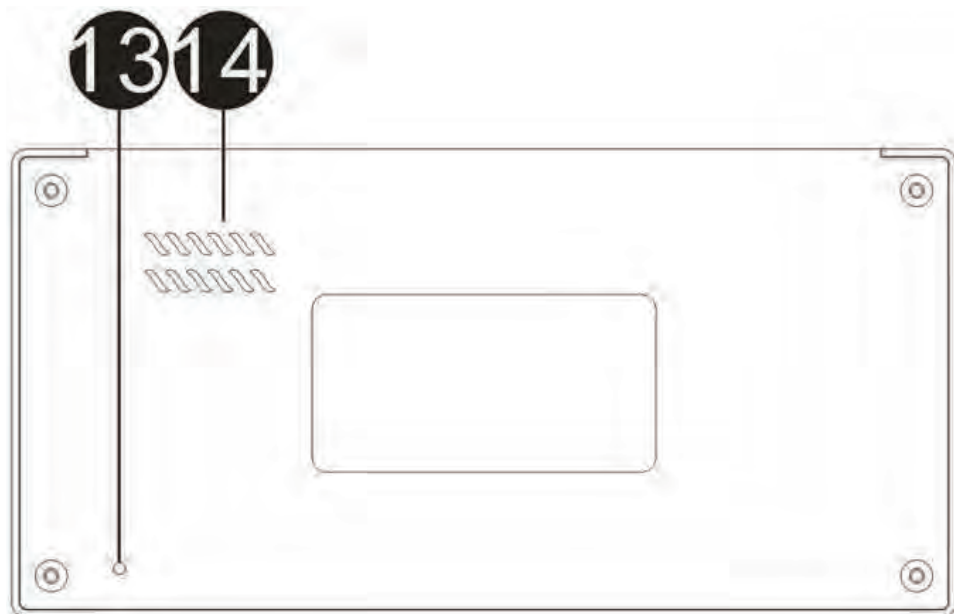

13. **RESET** – Click to reset to factory default setting.

14. **SPEAKER** – Built in speakers

REMOTE CONTROLLER

1. **Record** – In “TV IN” preview the video mode, press to record video (even without video input), press again to stop and save file.
2. **Home** – Return to home menu.
3. **Direction and OK button** – To operate the menu, and playback.
4. **Audio Play Mode** – Switch between 6 different play mode. (Long press to remind you to delete the playing file or not when you play video, music or pictures.)
5. **Previously** – Play previous video or audio.
6. **Next** – Play next video or audio.
7. **Fast Backward**.
8. **Fast Forward**.
9. **Return** – Return to superior menu.
10. **Mute**
11. **Audio level up**.
12. **Audio level down**.



CONNECTIONS

MICROSD CARD


Plug Micro SD card into the slot as shown on image. The screen will show the card is plugged.

For file safety, Micro SD card should be empty and formatted before using, supports FAT32, exFAT (does not support NTFS), MAX 32GB.

When Micro SD is plugged in, the media will automatically be recorded to the card. (not in built in memory)

If want play the media stored on Micro SD, make sure the default path is set to “Card Memory”

To remove Micro SD card, just press it again, let it pop-up.

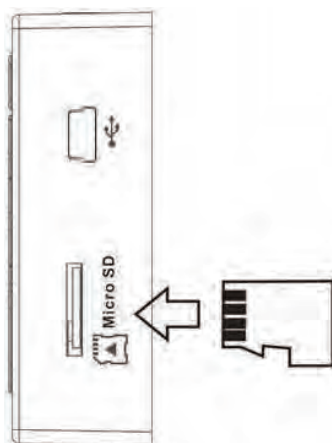

POWER, CHARGE AND DATA

To charge the battery, use USB cable to connect with 5V DC or PC, charging status will prompt on screen.


Connect to PC, there's 3 options:

Power & Data

Charge


Charge & Play

Choose one and click ok.

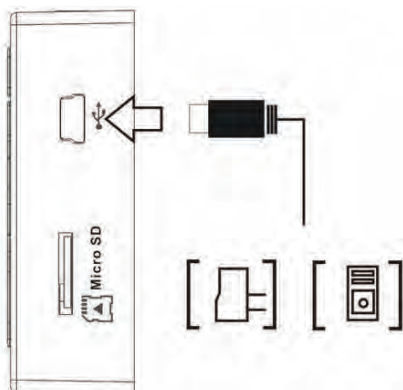

When you choose Power & Data, you can copy the file to the memory (both internal memory and card memory), also you can update the firmware of the device.

AV INPUT

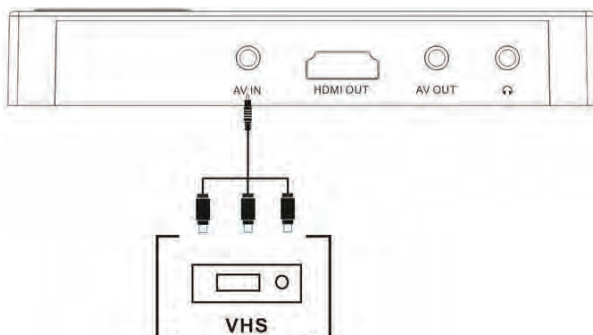

Use the 3.5MM to RCA cable (comes with the device in the box) connect to the video source, such as VHS, DV, etc.

The 3.5MM connector plugs to the AV IN of the device.


The RCA connectors to VHS, yellow = video, white = audio left channel, red = audio right channel.

Connect "TV IN" to play or record the video.

You can also listen and record the audio from the "Recorder".

Use 3.5MM to 3.5MM audio cable and connect to AV IN of the device, then connect the audio output to your earphones or other audio source. You also can record the audio.

AV OUTPUT

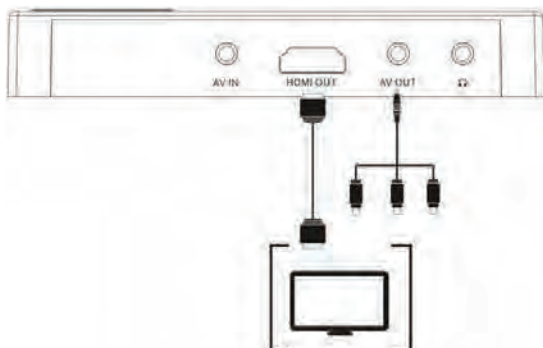


PVRC49 with two video output – HDMI OUT and AV OUT.

Use HDMI cable or 3.5MM to RCA cable (comes with the device in box) to connect with HDMI OUT or AV OUT. Connect to the TV or monitor. When connected (no matter HDMI or AV cable), the screen of PVRC49 will turn off and the video will play on the monitor.

Do not connect HDMI and AV cable at the same time. Only HDMI output will play. Please do not plug or unplug AV (HDMI) cable when playing (playback video or audio, recording video or audio), otherwise it will cause problems --- it will go back to home menu from the playing mode (playback video or audio, recording video or audio).

Note: You can't record music when you connect HDMI cable with device and TV.

EAPHONE OUTPUT

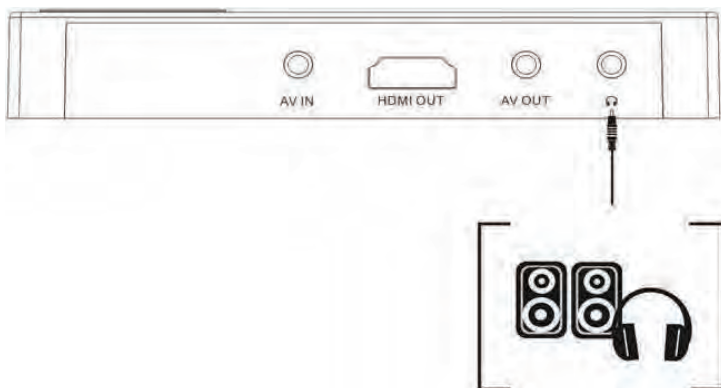

Connect earphone or speaker to earphone port to listen to the sound of PVRC49.

When you playback and plug your earphone, the audio will cut off from speaker of PVRC49 and switch to earphone.


When you playback with AV OUT and plug your earphone, the audio will play at the TV and earphone at same time.

When you playback with HDMI OUT and plug earphone, the audio will keep playing on TV but not on earphone.

OPERATE:

BASIC MENUS ON SCREEN

Long press (2 seconds) to power on PVRC49 (You may need to charge it if the battery is low):

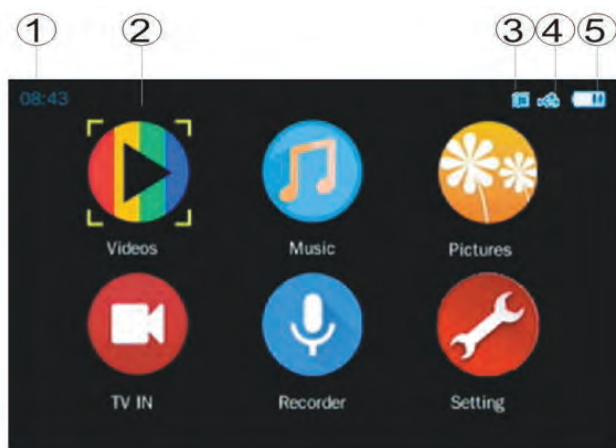

1. **TIME** – Shows current time.
2. **FUNCTION MENU** - Use direction button to choose icons, press OK to enter:
 - Videos** – Enter to playback recorded videos.
 - Music** – Enter to playback recorded audios.
 - Pictures** – Enter to playback pictures.
 - TV IN** – Enter to preview input video, and record.
 - Recorder** – Enter to preview input audio, and record.
 - Setting** – To set time, language, etc.
3. SD card in
4. USB cable plugged.
5. Capacity of battery.

 
RECORD VIDEO



Enter TVIN, will preview the connecting video, press 'RECORD' button to record video, press again to stop recording and save file. You also can press "OK" to record, press "OK" again to pause record, press "RETURN" button to save the recorded file.

RECORD AUDIO

Enter "Recorder", will preview the input audio, press 'RECORD' button to record audio, press again to stop recording and save file. You also can press "OK" to record, press "OK" again to pause record, press "RETURN" button to save the recorded file.


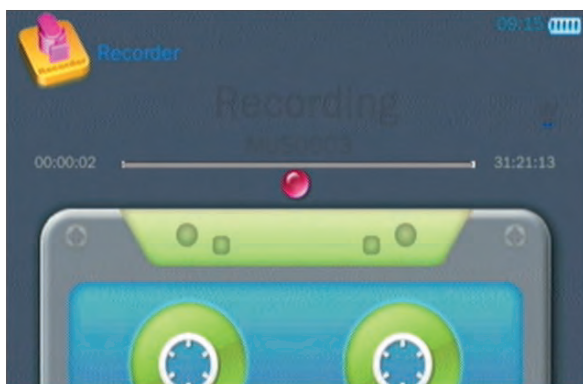


VIDEO PLAYBACK

Enter to Videos - TVIN, will see the recorded videos, choose file with direction buttons, press ok to play.

When playing, use UP/DOWN button to set audio level, LEFT/RIGHT keep pressing to Fast Backward / Fast Forward.

  Use return button to back to superior menu.

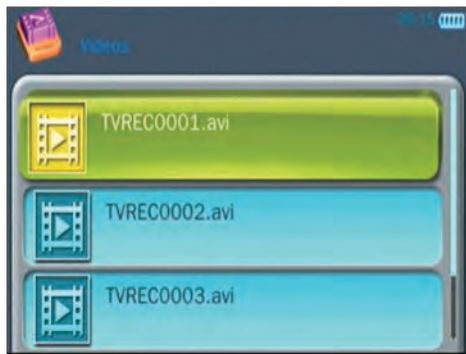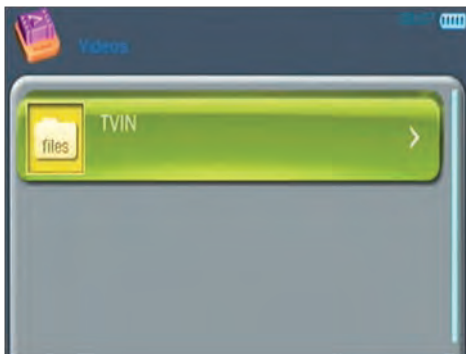


AUDIO PLAYBACK

Enter to Music - REC, will see the recorded audios.



 
Choose file with direction buttons, press ok to play.

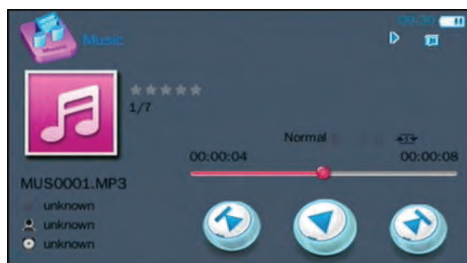

When playing, use UP/DOWN button to set audio level, keep pressing LEFT/RIGHT to Fast Backward / Fast Forward, Double press to choose Previously / next sound.

Use return button to go back to superior menu.



Use audio play mode button to choose mode:  = Radom play



= Radom and Repeat



= Introduction



= Sequence



= Repeat once




= Repeat all

PICTURE PLAYBACK

PVRC49 does not capture still image, but you can copy pictures to memory to view photos. Enter pictures—PIC to choose and view.

DELETE FILE

If you want to delete the video, music or picture file, please find the file under Videos, Music or Pictures menu and press OK to play, then long press “audio play mode” button  , – Confirm to Delete – Yes - No, select Yes and press OK to delete the file.



 
Display - Set Backlight time, for saving energy

Power Saving - Set idle time and sleep time, for saving energy.

Date & Time - Set date and time.

Language - Set language on menu, PVRC49 has 7 languages – English, French, German, Japanese, Spanish, Simplified Chinese and Traditional Chinese.

Enter Advanced:

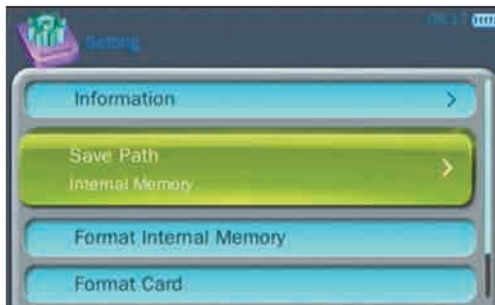

Information - shows the Firmware Version and Memory space


Save Path - set the default path (Internal or card memory)

Note: This setting is only for playback. For recording, it will be recorded to internal memory if there's no card attached. PVRC49 will only save recorded files to the SD card if it's plugged in, if there's no SD card it will be saved to the internal memory. "Format Internal Memory" "Format Card" "Reset Default Settings" will do as it means.

Enter TV:

TV IN - Set the input video system same as with your video source.

TV-OUT - Set the output video system same as with your TV monitor.

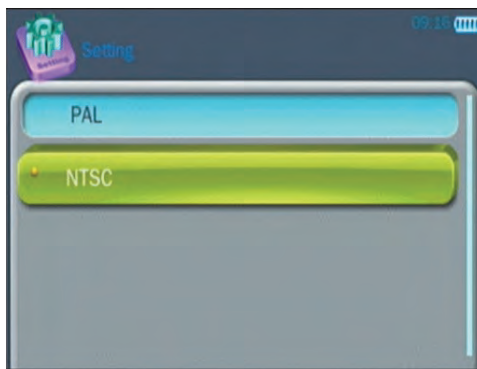

SPECIFICATIONS:

Connection

Interface	USB 2.0
Video Input	CVBS analogue video by 3.5mm to 3RCA cable
Audio Input	Analogue L/R audio by 3.5mm audio cable or 3.5mm to 3RCA cable
Video Output	CVBS analogue video by 3.5mm to 3RCA cable, HDMI
Audio Output	Analogue L/R audio by 3.5mm to 3RCA cable, HDMI, 3.5mm earphone port

Applicable Connection

Video	Video Tape, Camcorder Tape, VHS, VCR, DVD Player, DVR, Hi8, Game Player ...
Audio	CD Player, DVD Player, Cassette Player, Turntable, Smart Phone ...

Hardware Extra

User Interface	Button: ON/OFF, Back, REC, Repeat, UP, DOWN, LEFT, RIGHT, OK.
Others	3 Inch screen, Speaker inside, 950mAh Lithium Battery inside
Dimensions	125(L) × 62(W) × 20(H) mm
Weight	110g

Package Contents

Device	PVRC49 AV Recorder
Others	USB cable for power or data, USB power adapter, 3.5mm to 3RCA cable, Remote control, 3RCA adapter, Manual

Specification

Storage Media	8GB memory card inside, supports extra Micro SD Card Max 32GB, doesn't support NTSF format
Record Format	Video: .avi, Audio: .mp3
Record Quality	480 30fps, PAL:720×576, NTSC: 720×480
Record File	Video: about 8.5MB/Minute, 0.5GB/Hour. Audio: about 1.4MB/Minute
Play Format	Video:RM,RMVB,AVI,MKV,WMV,VOB,MOV,FLV,ASF,DAT,MP4,3GP,MPEG, up to 720P. Audio:MP3,WMA,DRM WMA,OGG,APE,FLAC,WAV,AAC
Working Time	Battery full charge: about 2 hours.
Power Supply	950mAh lithium battery, 5V/1A mini USB power adapter



VISIT US ONLINE:

Have a question?

Need service or repair?

Want to leave a comment?

PyleUSA.com/ContactUs

PYLE