

 
Model ST-108

MAGNETIC WINDOW/ DOOR ALARM INSTALLATION AND OPERATING INSTRUCTIONS

Please keep these instructions in a safe place for future reference

Kit includes:

- 1 x Magnetic window/ Door Alarm
- 1 x Double sided mounting tap set
- 1 x Instruction leaflet

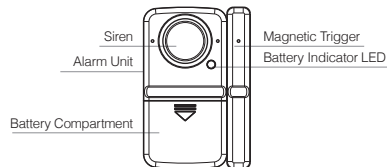

1. Introduction


The Magnetic Window/ Door Alarm is designed to sound an intruder alarm or visitor chime when a door or window is opened. The simply switch in the battery compartment of the unit can toggle between the different modes or switch the unit off when it is not required.

2. Battery installation

The Magnetic Window/ Door Alarm requires 4 x LR44 alkaline batteries (included).

To activate the batteries:

- Slide off the cover at the front of the main unit.
- Carefully remove the clear plastic insulation tab from the batteries. If the batteries are dislodged, replace them noting the polarity diagram inside the battery compartment.
- Replace the battery cover.

It is recommended that the alarm power is regularly tested by pressing the  button in the battery compartment. If the light illuminates, the batteries are in good condition. If it fails to illuminate, replace all the batteries.

To replace the batteries:

- Slide off the cover at the front of the main unit.
- Remove the old batteries and replace with 4 x new LR44 alkaline batteries noting the polarity diagram inside the compartment.
- Replace the battery cover.

IMPORTANT:

- Remove batteries before storing the alarm for long periods of time. Batteries corrode

over time and may cause permanent damage to the unit.


 
- Different types of batteries or new and old batteries should not be mixed.
- Depleted batteries should be removed from the unit and disposed of properly.

3. Installing the unit


 

- Clean the surfaces you want to mount the alarm on using cleaning alcohol or similar. Ensure the surfaces are completely clean and dry before proceeding.
- Using the double-sided adhesive pad provided, mount the alarm and magnetic sensor on the door or window to be protected, placing one of the units on the part of the fixture which opens and the other on the stationary part of the fixture (frame).
- Ensure that when the door or window is closed ,the dots on the alarm and magnetic are aligned with less than 15mm between them .

4. Operation


 
 
To arm the unit in ALARM mode (⚡)

- Toggle the  /  / (⚡) switch to the (⚡) position. When the door or window is opened (causing the sensors to separate by more than 15mm) the alarm will sound continuously until the door or window is shut or the unit disarmed.

To operate the unit in CHIME mode

- Toggle the  /  / (⚡) switch to the  position. When the door or window is opened (causing the sensors to separate by more than 15mm) the chime will sound.

To DISARM the unit

- Toggle the  /  / (⚡) switch to the  position. When the door or window is opened (causing the sensors to separate by more than 15mm) the unit will make no sound.

5. Care & maintenance

To clean the unit housing, use a soft cloth slightly dampened with water, and wipe dry. Do not use chemical agents as this may damage and discolour the unit.

WARNING:

RISK OF PERSONAL INJURY PROLONGED EXPOSURE TO THE ALARM SIREN
MAY CAUSE PERMANENT HEARING LOSS
HEARING LOSS
FOR INDOOR USE ONLY
DO NOT USE IN WET LOCATIONS