

digitech

Headphones **with Bluetooth Technology** **& FM Radio**



User Manual

Box Contents:



1 x Headphones



1 x 3.5mm to 3.5mm Auxiliary Cable



1 x USB Charging Cable

Product Diagram:



#	Feature	Description
1.	Power On/Off	Press and hold for up to 3 seconds to power the unit on or off
2.	USB Power Socket	Connect to the USB charging cable and suitable USB power source
3.	Volume Down / Previous Track	Press and hold to decrease the volume Press once to skip to the previous music track
4.	Play /Pause / Call Button	Press to play or pause while playing music Press to accept, reject or redial last number called
5.	Volume Up / Next Track	Press and hold to increase the volume Press once to skip to the next music track
6.	Mode Button	Select between Bluetooth, FM Radio & microSD card playing modes.
7.	microSD Card Slot	Insert a microSD card up to 64GB
8.	3.5mm Auxiliary Jack	Connect to an audio device such as a smart phone using the 3.5mm auxiliary cable
9.	LED Status Indicator	Displays the charging and pairing status of the headphones
10.	Microphone	Microphone to use for phone calls

Operation:

Bluetooth Pairing:

1. Press and hold the power button for up to 3 seconds to turn the headphones on.
2. Once the headphones have been turned on; the LED indicator should be flashing red and blue.
3. Open the settings of your smart phone and ensure Bluetooth® is turned on.
4. Once your Bluetooth is enabled; Scan for devices and the Bluetooth name Digitech AA-2128 should appear.

Bluetooth Name: **Digitech AA-2128**

5. Press the Digitech AA-2128 on the Bluetooth device list and your smartphone should show that it is connected.
6. You will hear a beeping sound from the earphones indicating it is connected. The blue LED will flash slowly. The battery status can also be shown in your Bluetooth settings.

Note: Pairing will last up to 10 minutes, if you do not finish pairing in this time; then you will need to repeat the pairing process.

Bluetooth Hands-Free:

Function	Button
Answer Incoming Call	Press the call button to answer the current incoming call
Reject Incoming Call	Press and hold the call button for up to 2 seconds to reject the current incoming call
Hang Up Call	Once a call has been received; press the call button again to hang up
Increase Volume	Press and hold the volume up button to increase the volume.
Decrease Volume	Press and hold the volume down button to decrease the volume.
Redial Last Number	Press the call button twice to dial the last number called automatically. Press the button again to cancel the call.

Music Playback:

Function	Button
Increase Volume	Press and hold the volume up button for up to 1 seconds to increase the volume.
Decrease Volume	Press and hold the volume down button for up to 1 seconds to decrease the volume.
Pause	Press the play/pause button to pause the current music track
Play	Press the play/pause button again after pausing to resume the current music track
Next Track	Press the volume up button once to skip to the next music track
Previous Track	Press the volume down button once to skip to the previous music track

FM Radio:

1. Press and hold the power button for up to 3 seconds to turn the headphones on.
2. Press the mode button once to switch to FM radio mode. You will hear the sound "FM mode".
3. The FM radio station will begin at 87.5MHz.
4. Press the play/pause button to begin automatically searching for a radio station. As soon as a radio station is found; it will stop on that station.
5. Press the play/pause button to keep searching for radio stations.
6. Press the previous or next track buttons to manually switch between frequencies.

microSD Card Playback:

1. Press and hold the power button for up to 3 seconds to turn the headphones on.
2. Insert a microSD card up to 64GB into the micro SD card slot.
3. Once the microSD card has been inserted; the music will be played automatically from the microSD card. Alternatively, you can press the mode button until you hear the words "TF Card Music".
4. You can use the play/pause buttons or next and previous tracks while in this mode.
5. The music audio formats supported are MP3 and WAV.

Note: The microSD card needs to be formatted to FAT32 or exFAT.

3.5mm Audio Input:

1. Insert the 3.5mm to 3.5mm auxiliary cable to the 3.5mm input socket located at the bottom of the headphones.
2. The headphones aren't required to be turned on in this mode. It will automatically play once your device is connected and playing audio.
3. You can now play audio from your device such as a smartphone, tablet, computer or MP3 player.

Note: All functions can't operate in this mode such as play/pause, volume adjustment, skipping tracks and the microphone.

LED Status Indicator:

LED	Description
Red On	Charging
Red Off	Fully Charged
Blue Flashing	FM Radio & microSD Mode
Red & Blue Flashing	Bluetooth Pairing

Charging:

1. Insert the USB charging cable in a suitable 5VDC mains power adaptor (not included) or a suitable USB charging port such as a computer.
2. Insert the micro B USB plug of the USB charging cable into the USB power socket of the headphones.
3. The LED status indicator will light up red once charging has started.
4. Once fully charged; the red LED status indicator will turn off. It takes up to 2 hours for a full charge.

Note: It is required to turn off the headphones while charging.

Troubleshooting:

Problem:	Solution:
Battery Won't Charge Or Power On	Connect to a suitable USB charging source such as a USB mains power adaptor or USB charging port and make sure it's correctly turned on.
	Make sure the battery is fully charged up to 2 hours and make sure the LED status indicator has turned off.
No Audio	Ensure the volume is correctly turned up on your smartphone if in Bluetooth mode.
	Ensure the earphones are correctly paired and turned on if in Bluetooth mode.
	Turn the earphones off and on again, turn off the Bluetooth of your smartphone or tablet and turn back on.
	Ensure the earphones are in Bluetooth range. They will automatically connect if you come back in range within 3 minutes.
No Power / LED Indicator	Ensure the USB charging cable is connected properly to a USB charging port or a USB charging adaptor.
	Check to see if your USB power source is working correctly.

Problem:	Solution:
Bluetooth Won't Pair	Restart the headphones and smartphone, tablet, computer or MP3 player.
	Type in the password "0000" if it asks you for one.
	Make sure the headphones are in Bluetooth mode.
microSD not recognised	Ensure the format of the microSD card is FAT32 or exFAT. Plug it in to a computer to check or change the current format.
	Make sure the capacity of the microSD card is 64GB or below.
	Ensure the microSD card is inserted the correct way.

Safety:

1. Do not open the headphones to prevent the unit from damage.
2. Keep the headphones away from high temperatures as it may damage the device.
3. Do not expose the headphones to water or liquids to prevent the unit from damage.

Features:

- . Bluetooth Wireless Technology
- . FM Radio & microSD Card Slot
- . Rechargeable Battery
- . In-Built Microphone
- . 3.5mm Auxiliary Jack

Specifications:

Bluetooth® Version: 4.2+EDR

Transmission Range: Up to 10m

Frequency Response: 20Hz-20KHz

Sensitivity: 98dB±3dB

Mic Sensitivity: -42dB±3dB

Impedance: 32Ω

FM Frequency: 87.5-108.0MHz

Playback Time: 8-14 Hours

Talk Time: Up to 10 Hours

Standby Time: Up to 180 Hours

Charging Time: Up to 2 Hours

microSD Capacity: Up to 64GB

microSD Format: FAT32/exFAT

microSD Audio Format: MP3, WAV

Battery: Li-Ion 3.7V, 400mA

Power: 5VDC, 1A (Micro B USB)

Power Consumption: 50mA (Max)

Dimensions: 190(H) x 180(W) x 78(D)mm