

Wireless Home Security System

==== User's Manual ====



Table of Contents

Federal Communications Commission Interference Statement	3
Safety Precautions	4
Chapter 1: Introduction	5
1.1 Features	5
1.2 Products List	6
1.3 System Architecture	7
Chapter 2: Getting Started	8
2.1 Gateway Configuration	8
2.2 Device Joining	12
2.3 Device Deletion	15
2.4 On-Site Installation	16
2.5 Surveillance Configuration	29
Chapter 3: APP Management	31
Chapter 4: Web Management	56
4.1 System	56
4.2 Arm Mode	72
4.3 Alarm Delay	73
4.4 Sensor	74
4.5 Siren	85
4.6 Automation	86
4.7 Surveillance	90
4.8 Notification	96
4.9 Security Zone	97
4.10 Logout	98
Chapter 5: Panel Console Management	99
Chapter 6: Appendix	107
6.1 3rd-Party Sensor Integration	107
6.2 Troubleshooting	112

Federal Communications Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RF Radiation Exposure Statement

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Safety Precautions

When using this device, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

Safety Considerations

- Do not place this device on an unstable cart, stand, or table. The device may fall, causing serious damage to it.
- Place this device in a location that is close enough to an electrical outlet to accommodate the length of the power cord.
- Place unit to allow for easy access when disconnecting the power cord of the device from the AC wall outlet.
- Do not cover the device, or block the airflow to the device with any other objects.
- Keep the device away from excessive heat and humidity and keep the device free from vibration and dust.
- Keep liquids away from the device.
- Do not expose the device to dripping or splashing.
- Do not place objects filled with liquids, such as vases, on the device.
- Do not overload the wall sockets, extension cords or adapter as this can result fire or electrical shock.
- Disconnect the power plug from the AC outlet if the product is not being used for a long period of time.
- To reduce the risk of fire or electric shock, install the device in a temperature-controlled indoor area free of conductive contaminants.
- Operate this device only with the type of power source indicated on the device's marking label. If you are not sure of the type of power supplied to your home, consult your retailer or local power company.

Cleaning

- Be sure to unplug the product before cleaning.
- Wipe the device with a clean, dry cloth.
- Do not use liquid, abrasive cleaners, waxes or solvents to clean the device.

Servicing

- Do not attempt to service this device yourself. Any attempt to do so will make the warranty invalid.
- When servicing, refer to the qualified service personnel.

Chapter 1: Introduction

Congratulations on purchasing this Wireless Home Turnkey System (WHTS). WHTS provides a fully wireless solution that enables home user to secure, monitor and control home facilities by locally or remotely via phone, tablet PC, laptop, keypad and keyfob. The most important is – no professional installation required, it is far simpler than conventional home security systems (i.e. wired CCTV) which may require complex wiring or even re-construction. With the devices lying around your house, you can be very easily to construct a smart home by yourself.


1.1 Features

WHTS supports the following features:

- Burglar-Proof: Easy to set up the home security by full arm or partial arm, and maximum 10 security zones are allowed.
- Anti-Disaster: Easy to prevent any disaster from happening at home by wireless.
- Emergency Alert: Easy to trigger panic to alert family by a couple of handheld devices.
- Real-Time Event Notification: Once any event be detected, the system will send out notifications by email or APP push per setup.
- Home Automation: Easy to turn ON/OFF the home electronic appliances wirelessly to provide a smart living environment.
- 3rd-Party Device Integration: Easy to integrate with the conventional sensors or devices by transducer or relay.
- Energy Management: Easy to monitor the power consumption of home electronic appliance for energy saving.
- Live View Video: Easy to watch the live video at Anytime and Anywhere by APP or Web interface.
- Event-Triggered Recording: Easy to record the live video wirelessly once detected any event per setup.
- Touch-n-Play Installation: Easy to deploy the whole security system by touch-n-play installation.
- Internet Access: Provide the lite function of wireless AP to allow Internet access by wired or wireless.
- APP Software (iOS / Android): Easy to operate via APPs.
- APP Push Notification: Easy to receive notification by APP push.

1.2 Products List

WHTS is a kind of turnkey security system by providing up to 14 items (including Gateway) as below. You may check out the product details by going through the respective chapter hereinafter.

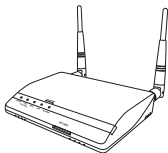


Wireless Gateway
(LA5570)




Wireless Panel Console
(LA5572)




Wireless Button Console
(LA5573)

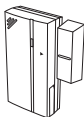

Wireless Contact Sensor
(LA5584)

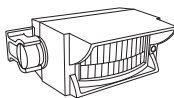

Wireless Pet Immune Motion
Sensor (LA5582)

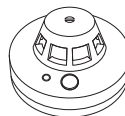

Wireless Photoelectric
Smoke Sensor (LA5587)



Wireless CO₂, Temperature
& Humidity Sensor



Wireless AI Transducer




Wireless DI Transducer




Wireless Alarm Switch
(LA5576)




Wireless Lock Switch
(LA5580)

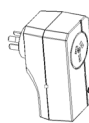

Wireless Power Switching
(AU) (LA5578)

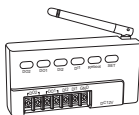


Wireless Relay Switch
(LA5577)

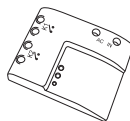

Wireless Power Relay
Module (LA5575)

1.3 System Architecture

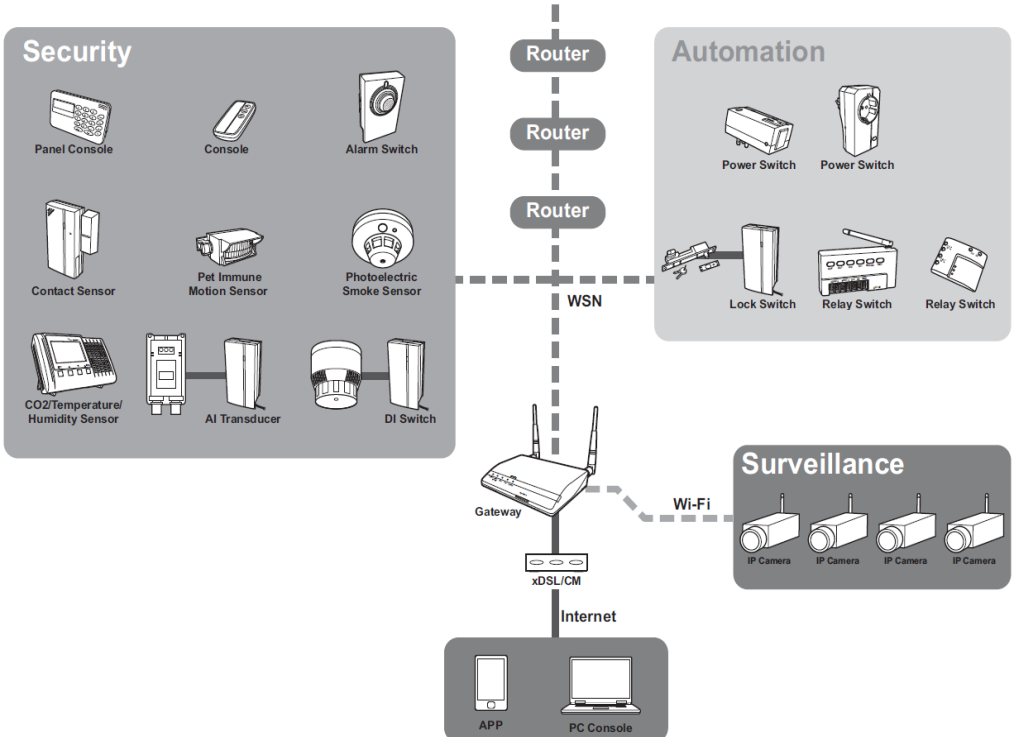

For details on the installation and configuration about the respective device, see “Chapter 2: Getting Started” on page 8.

Chapter 2: Getting Started

2.1 Gateway Configuration

This section provides a step-by-step guide to the installation and configuration of the Wireless Gateway.


Accessories:



Wireless Gateway




Power adapter

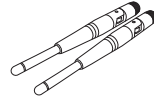

2 Detachable antennas




Stylus

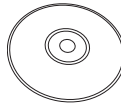


CD

2.1.1 Configuring Gateway Connection

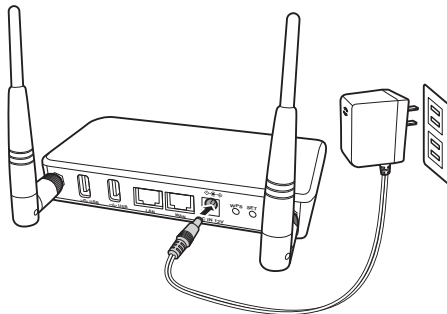

1. Fasten both antennas on the back of the Gateway.
2. Adjust the antennas position at 90° angle.
3. Plug in the power adapter to the Gateway and the other side to the wall outlet.

LED indicators

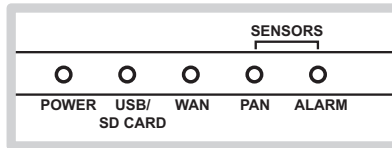


The following table describes the Gateway LEDs:

LED location	Color	Indication
Power	Blue (solid)	Power on.
USB/SD card	Orange (blinking)	Normal: SD card or USB disk drive is inserted. IP camera join: When long press the WPS button.
WAN	Blue (blinking)	Communication via Internet service provider (via WAN interface).
PAN	Green (blinking)	Sensor network status.
Alarm	Red (blinking)	Normal: Alarm is triggered. Device join: When long press the SET button.


- Wait for around 60 seconds for the Gateway to boot up. The **Power LED** lights blue.
- Start up your computer and enable the wireless network interface. Look for the wireless network icon at the bottom right of the screen.

wireless
network icon

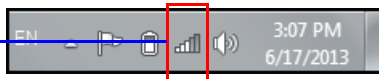

- Click the wireless connection icon.
Wireless Network Connection Status window will be displayed on the screen.

7. Choose the Gateway SSID, and click **Connect**.

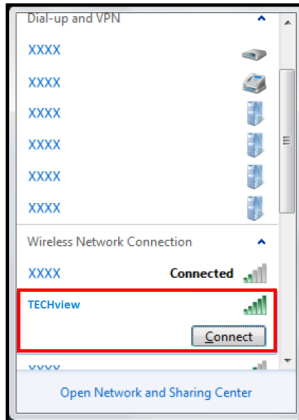


8. Enter the password and tap **OK**.

Note


- *The default wireless network setting of the gateway:
SSID: **TECHview**
Password: **(none)**
IP address: **192.168.19.254***

9. Start your web browser. (It is recommended to use IE7.0 or above)

10. Enter the Gateway IP address in the Address field and press **Enter**.

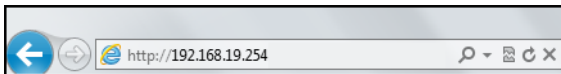

11. Once connected to the Gateway, the Login Password window appears.

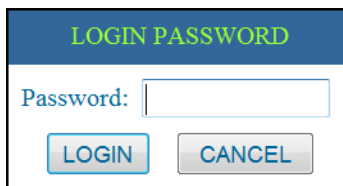

12. Enter the password and click **LOGIN**.

The default password is "123".

13. After passed the password authorization, the home page of Wireless Home Turnkey System (WHTS) shows up on the screen. To change the appropriate settings, "4.1 System" on page 56..



Note

- Short press the **SET** button to join the device.
- Press and hold the **SET** button for 15 seconds to reset all settings to the factory default settings.
- Unplug the power adapter from the Gateway and plug in again to reboot the system.


2.1.2 Installing the Memory Card

A memory card can be installed in the Gateway to provide additional storage space for recorded videos.

Insert the SD card into its slot, making sure it is in the correct orientation as shown in the illustration.

Note

- *The Gateway supports SD card up to 32GB.*

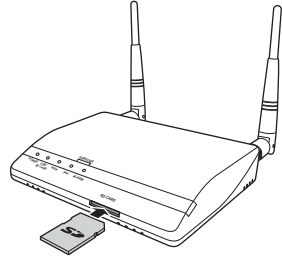

2.2 Device Joining


All RF devices can be directly joined using the following 2 methods: Gateway or Router (Power Switching). With Router, it acts as a wireless hub for interconnecting sensors and gateway, and it also can expand communication coverage by cascading up to 3 routers.

Note


- *RF devices are referring to the Sensors (including Console, Switch, and Transducer).*

2.2.1 Device Joining via Gateway


1. Plug in the power adapter to the Gateway and the other side to the wall outlet.
2. Short press the **SET** button at the back of the Gateway.
Wait until the Alarm LED indicator blinks red before releasing the **SET** button.

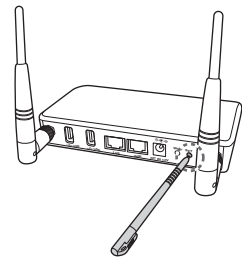

3. Remove the sensor bracket if necessary.

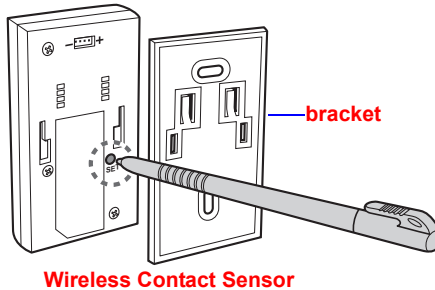


4. Short press the **SET** button at the back of the sensor.
Wait until the LED indicator blinks green before releasing the **SET** button.

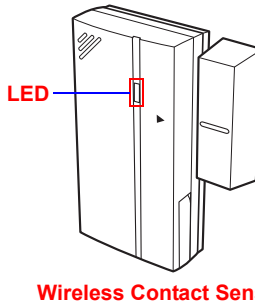


- For CO₂ sensor, press both the ▲ and ▼ buttons until the screen blinks.
5. To verify if the device binding process is successful, do one of the following:
 - Wait for few seconds until both indicators (on the Gateway and device) turned off.
 - Click **Refresh** icon on the web console to verify if the device binding process is successful.
 6. Repeat above steps to bind other devices.

2.2.2 Device Joining via Router (Power Switching)

1. Plug in the power switch to the wall outlet.

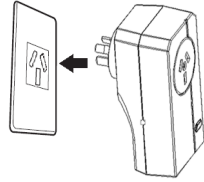


2. Short press the **SET** button on the power switch.
Wait until the LED indicator blinks green before releasing the **SET** button.

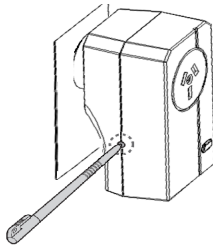

3. Remove the sensor bracket if necessary.
4. Short press the **SET** button at the back of the sensor.
Wait until the LED indicator blinks green
before releasing the **SET** button.

- For CO₂ sensor, press both the ▲ and ▼ buttons until the screen blinks.

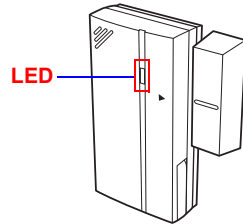

Wireless Contact Sensor

5. To verify if the device binding process is successful, do one of the following:
 - Wait for few seconds until both indicators (on the router and device) turned off.
 - Click **Refresh** icon on the web console to verify if the device binding process is successful.
6. Repeat above steps to bind other devices.

2.2.3 Checking Device Received Signal Strength Indication (RSSI)

Short press the **SET** button at the back of the sensor **twice**.

The signal strength is indicated by its LED indicator.

Status	LED Color and Behavior
Good	Blinks green (very quickly) for 15 seconds.
Normal	Blinks green (quickly) for 15 seconds.
Poor	Blinks green (slowly) for 15 seconds. (not recommended)
No Signal	Blinks red for 3 seconds and then turns off. (not recommended)

Note

- *RSSI devices are including Button Console, Contact Sensor, Motion Sensor, Smoke Sensor, AI Transducer, DI Transducer, and Siren.*

2.3 Device Deletion

2.3.1 Device Deletion

To remove the device binding, press the **SET** button for 5 seconds. The LED indicator blinks green and then turns off. After few seconds, the LED indicator blinks red and then turns off again, indicating the deletion process is complete. You can also remove the device binding on the web console. However, it is only applicable for non-battery-power device.

- For CO₂ sensor, press both the ▲ button until the screen blinks.

2.3.2 Reboot the Gateway

Unplug the power adapter from the Gateway and plug in again to reboot the system.


2.3.3 Reset the Gateway

Press and hold the **SET** button for 15 seconds to reset all settings to the factory default settings.

2.4 On-Site Installation

2.4.1 Panel Console (LA5572)

- a. Mount the bracket on the wall.
- b. Open the battery cover and install the batteries into the battery compartments. Then close the bottom cover firmly.

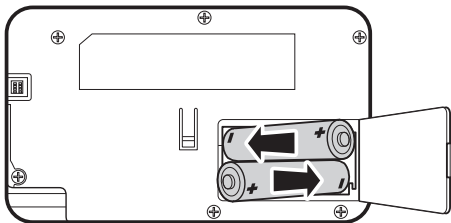


Note


- The battery is designed for power backup and it will last for 2 hours.
- The tamper-proof function will only be activated after the system is armed.

2.4.2 Button Console(LA5573)


- a. Follow the steps to change the battery.
(Attention: CR2032 battery positive side up)

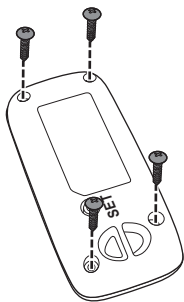

Remove the 4 screws
and the back cover

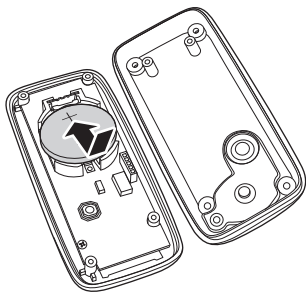


Install the battery

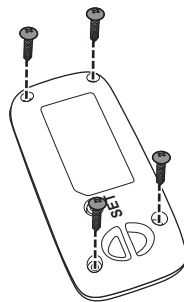

Replace the back cover
and attach the 4 screws

b. Button functions

Button	Press	Long press (3 seconds)
FA	Full Arm	Panic
PA	Partial Arm	On*
DA	Disarm	Off*

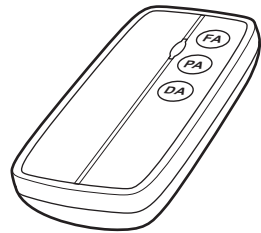


* It needs to set up the link device to make the function buttons work.


2.4.3 Contact Sensor(LA5584)

a. Install the battery into the battery compartment.


(Attention: CR2032 battery positive side up)

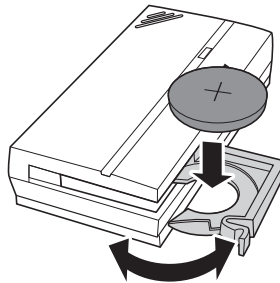

b. Mount the bracket on the frame side of the door or window, and then put the reed on the bracket.

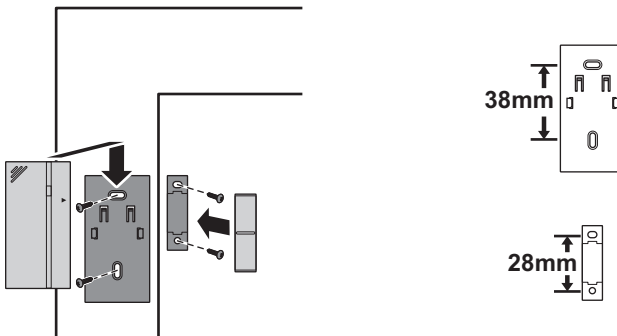

- c. Place the magnet on the door or window side. Align the arrow point of the reed by less than 10mm distance. Then stick on it.

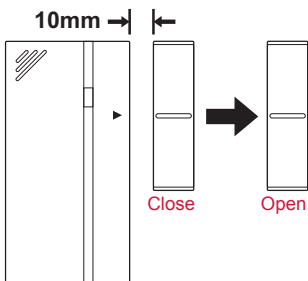


Note


- Due to tamper-proof design, please make sure the installation is stable to avoid any false alarm.

2.4.4 Motion Sensor(LA5582)

- a. Mount the bracket on the wall, at the height of 1.8 to 2.4 m. Do not install it upside down.

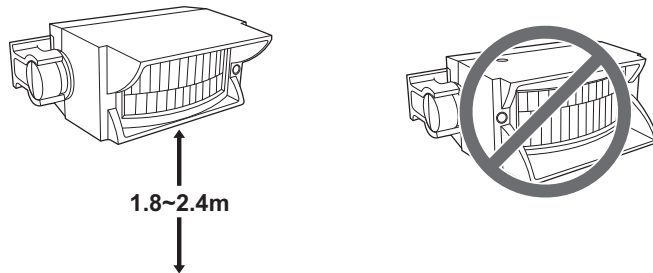

b. The scan pattern is illustrated in the figure below.

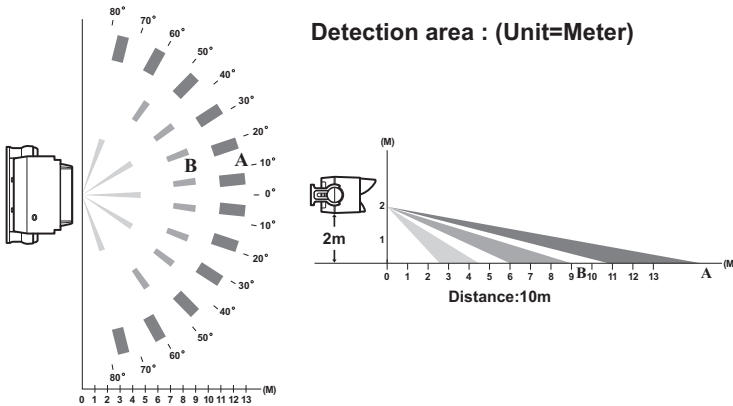

- The effective distance is 8~10m, at 2m height.
 - 150-degree at horizontal position.
 - 25-degree at vertical position.
- c. Pet immune detection could be effective if it meets the following criteria:
- Height: less than 50cm.
 - Weight: less than 6kg.
- d. To avoid false alarm, do the following:
- Be sure the installation is stable.
 - Do not place the device to face any light source directly.
 - Never face the sensor to the place that pests can climb up directly.


To save the battery power, there is a 30 seconds lock-out after motion sensor triggered; which means after the motion sensor triggered, it will stay in sleep mode for 30 seconds.

Note


- *Tamper-proof function is only available for Panel Console, Contact Sensor, Motion Sensor, and Siren.*
- *Alarm switch (siren) is highly recommended to be joined/installed at last to avoid the false alarm caused by unexpected tamper-proof.*

2.4.5 Smoke Sensor(LA5587)

- a. Install the batteries into the battery compartments and close the bottom cover firmly.

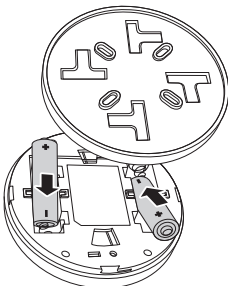


- b. Mount the bracket on the ceiling. When the sensor detects the smoke, it will automatically trigger the alarm and also send out the signal to the Gateway. To manually turn off the alarm sound, push the button on the front side of the sensor.

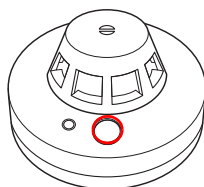


2.4.6 CO₂ Sensor

- a. Hang it on the wall through the rear holds or place it on a stable surface.

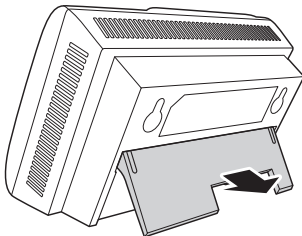

b. Operation:

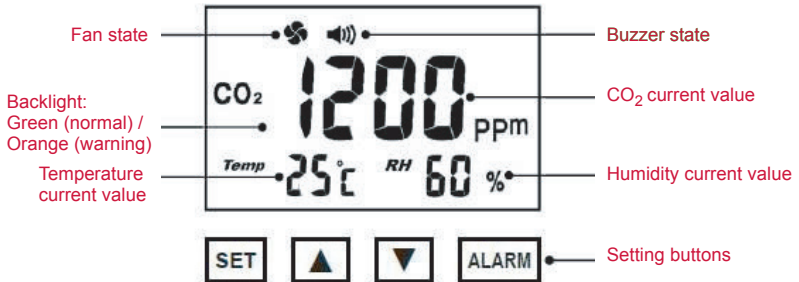

(a) Two level warnings and temperature unit setting:

- (1) Press the **SET** button once to access the level 1 (L1) warning threshold setup.
- (2) Press the **▲** or **▼** button to increase or decrease the setting value, 100ppm per time.
- (3) Press the **SET** button again to access the level 2 (L2) warning threshold setup.
- (4) Press the **▲** or **▼** button to increase or decrease the setting value, 100ppm per time.
- (5) Press the **SET** button again to access the temperature unit setup.
- (6) Press the **▲** or **▼** button to switch “°C” or “°F”.
- (7) Press the **SET** button again to save and exit.

(b) Buzzer setup:


- (1) When the buzzer beeps, press the **ALARM** button to stop.
- (2) Long press the **ALARM** button for 3 seconds to switch ON or OFF the buzzer.

c. Factory default:


- (1) L1: 1200ppm
- (2) L2: 2000ppm
- (3) Temperature unit: °C
- (4) Buzzer beeps: ON

2.4.7 Alarm Switch (LA5576)

- a. To power on the device, do one of the following:
- Plug in the power adapter to the device and the other side to the wall outlet.
 - Insert the batteries into the device.
To insert the batteries, refer to the illustration below



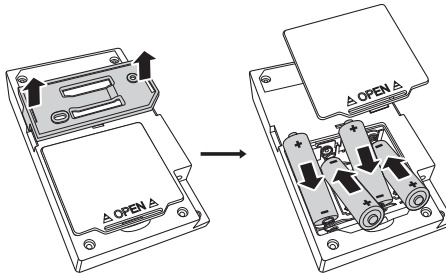


- b. Once the alarm is triggered, the alarm volume is approximately 90dB. To turn off the alarm sound, press the upper LED button.

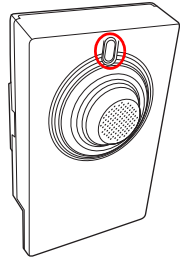

2.4.8 Power Switching(LA5578)

- Plug it into a wall socket and connect to any household appliance with less than 10A.
- Press the **ON/OFF** button to manually turn on/off the power relay.

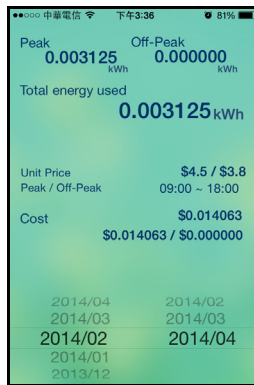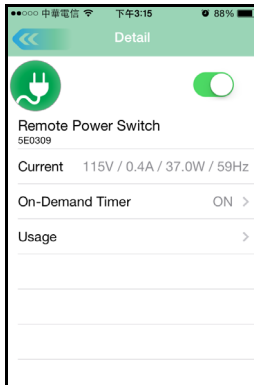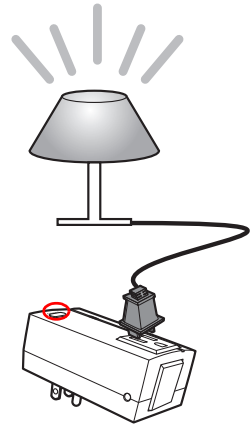


- Power Meter: Plug the home appliance on LA5578. It can calculate the Voltage(V), Current(A), Power(W), Frequency(Hz) when the device is power ON. (the minimum Watt should be powered on for at least 1 hour)
- Energy Used Cost: Input the unit cost at peak time and off-peak time by Web Management first and select the accumulate period (by month, the maximum is 3 months). Then the system will automatically calculate the Total Cost, Peak Time Cost, and Off-Peak Time Cost. (the earliest period is 1 year ago)
- The power meter value can be displayed on the Web Management, APP, and Panel Console(LA5572). However, the cost value can only be displayed on the Web Management and APP.

The following devices are designed to be integrated with the 3rd party sensor once required. Please refer to "Chapter 6: Appendix" on page 107. for more details.

2.4.9 Analog Input (AI) Transducer

- a. Power on the device.
- b. Connect the wiring pin of 3rd party device by 4~20mA signal.
- c. The Pin functions are as below:
 - Wire 1- (Red) DC 5~12V Power Input
 - Wire 2- (Black) Common & Negative 4-20mA Signal Input
 - Wire 3- (Yellow) Positive 4-20mA Signal Input
 - Wire 4- (Green) Reserved
 - Wire 5- (White) Reserved
- d. To connect the GTF200-FL Gas detector as example, please see the following diagram:

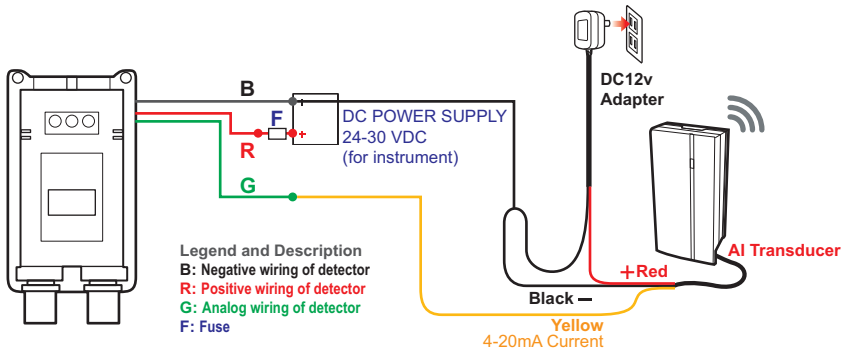


- e. Mount the bracket on the wall.
- f. When configuring the detective range, the high range value is 20mA and the low range value is 4mA (4~20mA). The threshold value will be set based on percentage. (for example: when 20mA setting as 50, 4mA setting as 10; if the threshold value setting as 40, that means the device will be triggered while the current value over 16mA.)
 - (1)Signal current: 4mA → → → → 16mA → 20mA
 - (2)Setting value: 10 → → → → 40 → 50

2.4.10 Digital Input (DI) Transducer

a. Install the battery into its compartment.

(Attention: CR2032 battery positive side up)

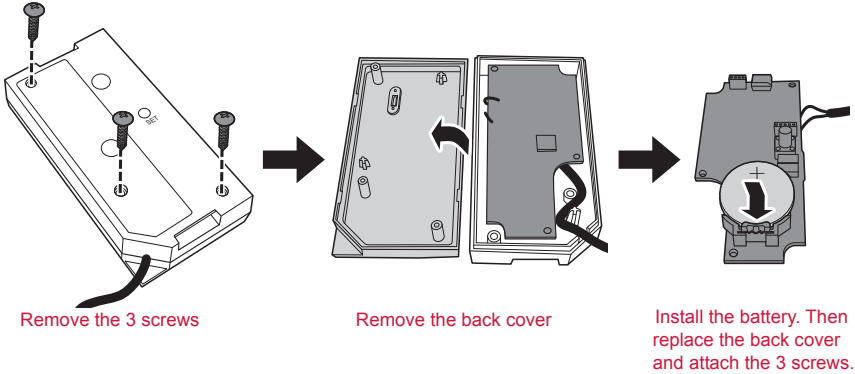


b. Connect the wiring pin of 3rd party device by DI/DO (dry contact).

c. The Pin functions are as below:

Wire 1- (Red) Dry contact Input (Positive)

Wire 2- (White) Dry contact Input (Negative)


d. To connect the CX-96R CO detector as example, please see the following diagram:

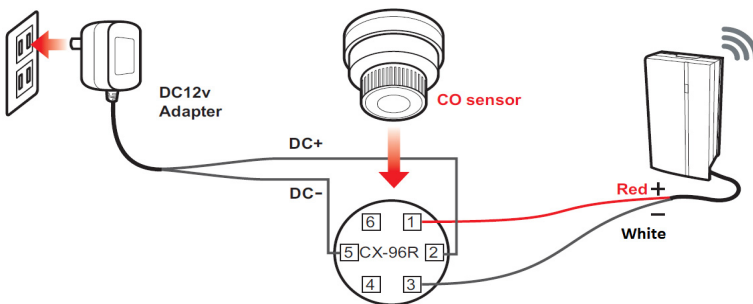

e. Mount the bracket on the wall.

2.4.11 Lock Switch(LA5580)

- a. Power on the device.
- b. Connect the wiring pin of 3rd party lock.
- c. The Pin functions are as below:
 - Wire 1- (Red) DC +12V Power Input
 - Wire 2- (Black) Common
 - Wire 3- (Yellow) Open Collect Digital Output (12V / 120mA Max.)
 - Wire 4- (Green) Open/Close status 0V, 12V DC Level input (active high)
 - Wire 5- (White) Lock/Unlock status 0V, 12V DC Level input (active high)
- d. To connect the SL-130B Electronic lock as example, please see the following diagram:

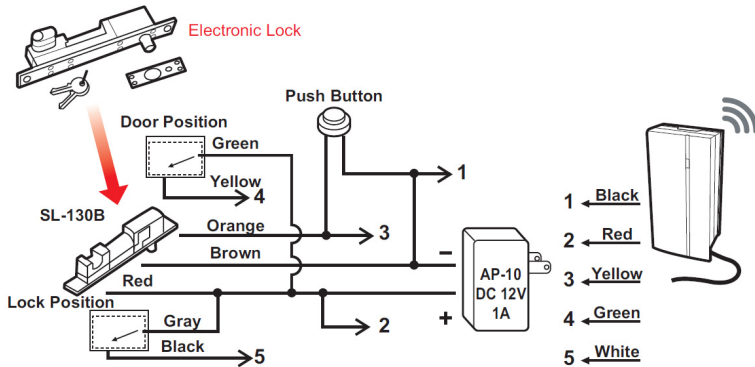

- e. Mount the bracket on the wall.

2.4.12 Relay Switch(LA5577)

- Power on the adapter with a proper location.
- Connect the wiring pin of 3rd party device by DI/DO (dry contact).
- The description of integration and wiring as example:

SET: blinking when joining

Reboot: blinking when reboot

Wire 1- DC +12V: Power Input

Wire 2- GND: Common

Wire 3- DI1: Dry contact Input 1 (Positive)

Wire 4- DI2: Dry contact Input 2 (Positive)


Wire 5- DO1: Dry contact Output 1

Wire 6- DO1: Dry contact Output 2

Wire 7- DO2: Dry contact Output 1

Wire 8- DO2: Dry contact Output 2

***hard buttons: DI/DO for trigger simulation**

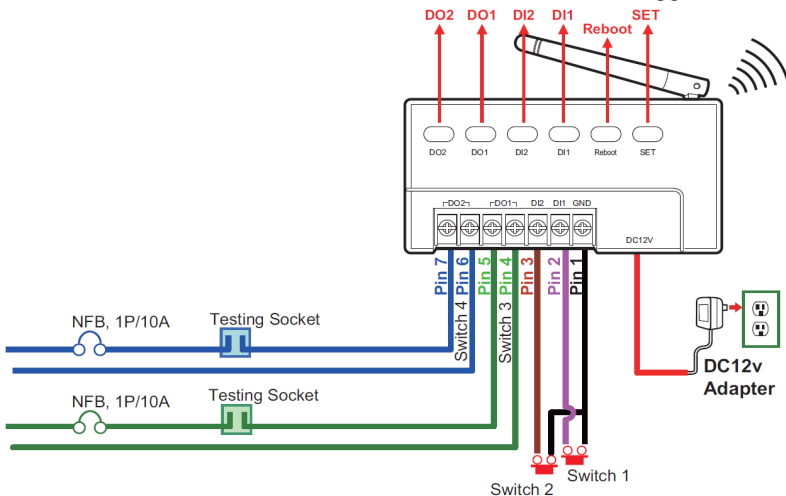

***NFB: No-Fuse Breaker**

2.4.13 Power Relay Module(LA5575)

- a. Power on the adapter with a proper location.
- b. Connect the wiring pin of 3rd party device by DI/DO (dry contact).
- c. The description of integration and wiring as example:

Wire 1- AC IN: 100VAC~240VAC


Wire 2- AC IN: 100VAC~240VAC

Wire 3- K1: Dry Output 1 Dry contact

Wire 4- K1: Dry Output 1 Dry contact

Wire 5- K2: Dry Output 2 Dry contact

Wire 6- K2: Dry Output 2 Dry contact

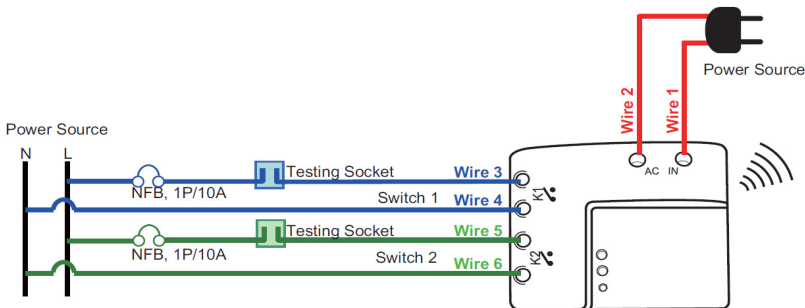


***NFB: No-Fuse Breaker**

2.5 Surveillance Configuration


This Gateway supports the types of camera setup.

2.5.1 Wired Configuration

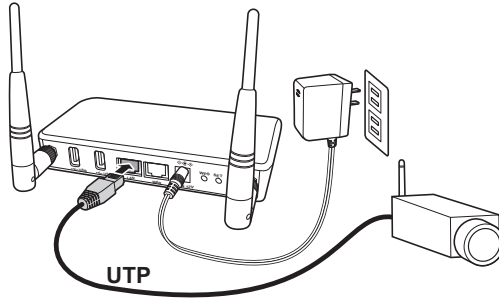

1. Connect the Gateway and the IP camera by using an Ethernet cable. IP camera will obtain an IP address from the Gateway via DHCP protocol.
2. To obtain the IP camera MAC address and configure related IP camera settings, refer to "4.7 Surveillance" on page 90..
3. Reboot both Gateway and IP camera to take effect.


2.5.2 Wireless Configuration

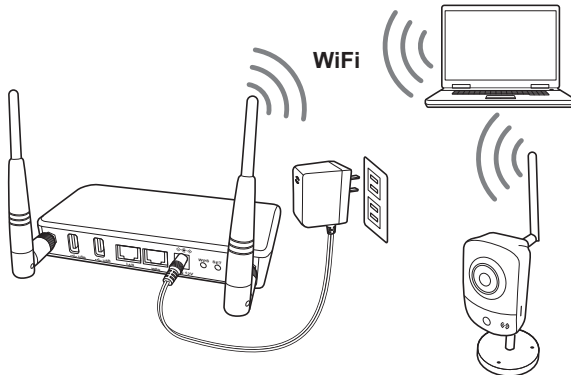

1. Connect the Gateway and the IP camera by using an Ethernet cable. IP camera will obtain an IP address from the Gateway via DHCP protocol.
2. To obtain the IP camera MAC address and configure related IP camera settings, refer to "4.7 Surveillance" on page 90..

3. Enable IP camera wireless function then select the Gateway as an access point (AP).
4. Disconnect the Ethernet cable. Then reboot both Gateway and IP camera to take effect.

2.5.3 Wireless via WPS Configuration

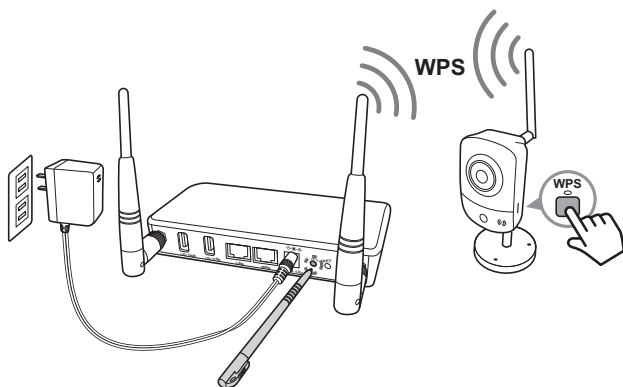

1. Make sure your WLAN security type is WPA. Refer to "4.1.4 WLAN" on page 60. for more details.
2. Click the WPS button of IP camera, then click the **WPS** button of the Gateway for 3 seconds to start WPS pairing process.
IP camera will obtain an IP address from the Gateway via DHCP protocol.
3. To obtain the IP camera MAC address and configure related IP camera settings, refer to "4.7 Surveillance" on page 90..
4. Reboot both Gateway and IP camera to take effect.
5. If the WPS pairing process is failed, reset the IP camera to its default settings and try it again. If the problem persists, connect the IP camera to the Gateway either using Wired or Wireless Configuration method.

Note

- *The IP default range: 192.168.19.60~99 is reserved for IP camera.*
- *For details on the 3rd-party IP camera setup, please refer to its user manual.*
- *It is highly recommended to install VLC media player (v1.1.9 or above) on your PC before displaying the video of IP camera via HTTP browser.*

Chapter 3: APP Management

3.1 Download APP on Smart Handheld Device

By using APP, you can view the sensors status, video live view, and access the Web Management remotely to monitor your home and family at anytime and anywhere.

Note

- *The user interface varies depending on your smart handheld device design.*

3.1.1 Installing Application (iOS)

Recommended environment:

- iPhone 4 or above / iPad2 or above
 - iOS 6.1 or above
1. Download the APP (TECHView Home Auto) from **App Store**.
 2. Install the application.

3.1.2 Installing Application (Android)

Recommended environment:


- Android phone CPU 1 GHz or above, with Duo core
 - Android 4.0 or above
1. Download the APP (TECHView Home Auto) from **Google Play**.
 2. Install the application.

3.2 Network Setting

For Wi-Fi connection (local use), set your phone Wi-Fi setting to connect to the gateway's SSID. Once connected, you may have to enter the encryption key once required.


Note

- Default SSID is "TECHview" and no encryption key.
- For mobile network user (3G or above), skip this network configuration.

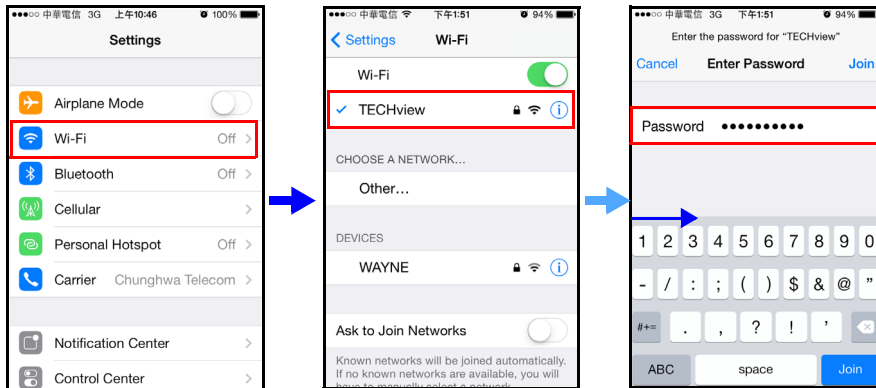


3.3 Launch APP

Touch the APP icon () to launch the APP.

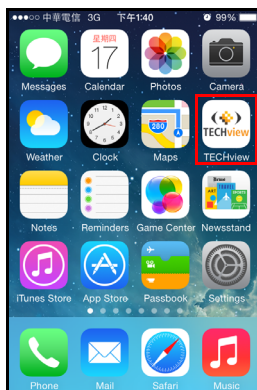


3.4 Login Page

1. Touch the APP icon () to enter the login page.
2. Enter the Gateway “Domain Name or IP” and “Password” to login.


Note

- You may turn on “Remember Password” function to retain the password for the next time login. The default is “123”, same as WebUI.

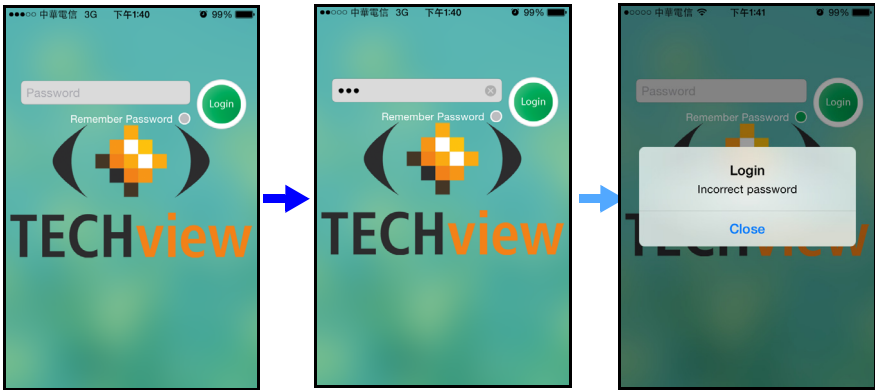


3.5 IP Detection and Selection

If Internet link is connected, the APP will automatically detect WAN IP. To select the detected WAN IP, swipe down the screen as shown in the illustration below.

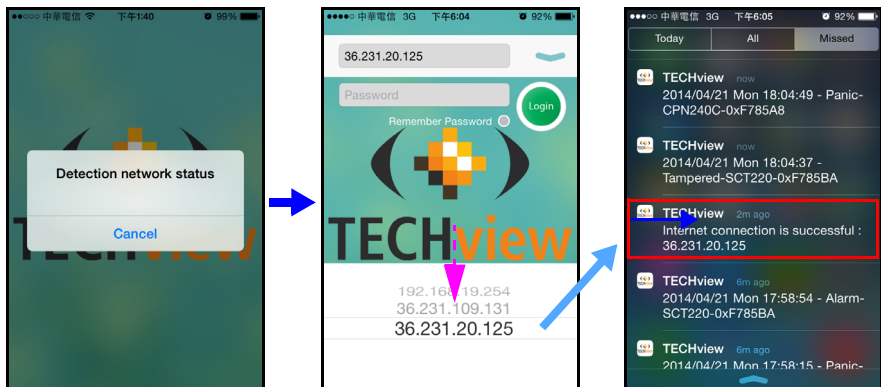

Once the system detects any changes on the WAN IP, the APP will push a message to notify user.


User may enter the specific IP / Gateway Domain Name directly.

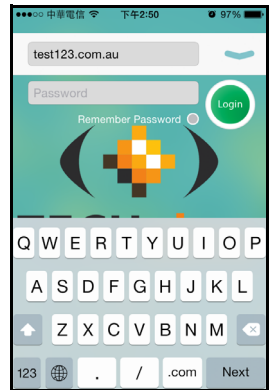

3.6 Push Notification Setting (iOS)


When first time login the APP, it will automatically register the push notification service and enable the function automatically.

If you do not want to receive the push notification, set the **Settings > Notifications Center** setting to “None” to disable the function.

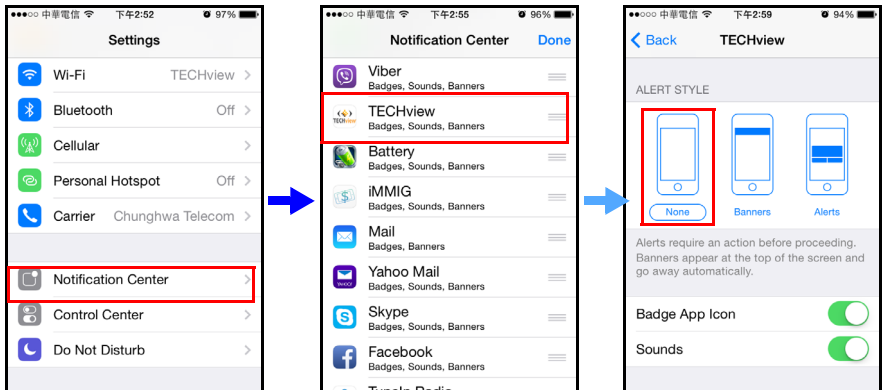


3.7 Push Notification Setting (Android)

When first time login the APP on an Android device, a pop-up message appears on the screen to confirm if you're allowed to turn on the push notification service. Click **YES** to continue.

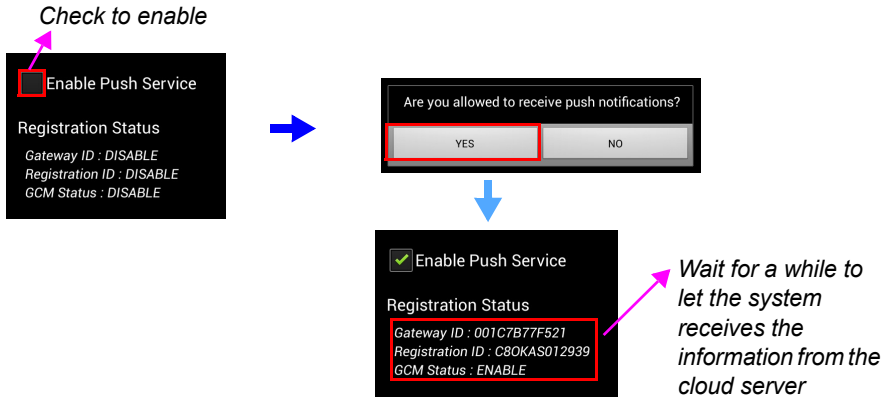

You can also configure the **Push Notification** at “MISC SETTINGS”.

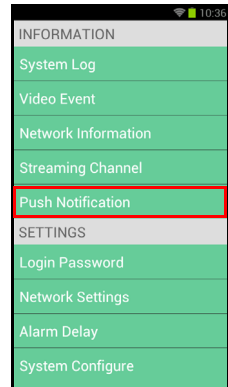


3.8 Push Notification

When some events are detected, the gateway will automatically send out the push messages to your smart handheld device in minutes, even when the APP is off-line.



3.9 Main Page

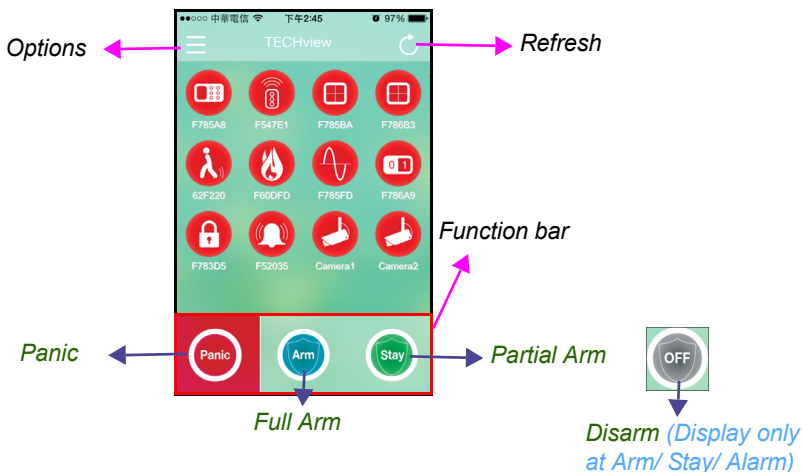


The current devices status is indicated by its color.

- **Red** means normal,
- **Green** means triggered/on

On iPhone, push the **Home** button to switch to desktop. The APP is still running in background.


3.10 Panic

Touch and hold the **Panic** icon (shown on the function bar) for a few seconds, then it will trigger alarm immediately.

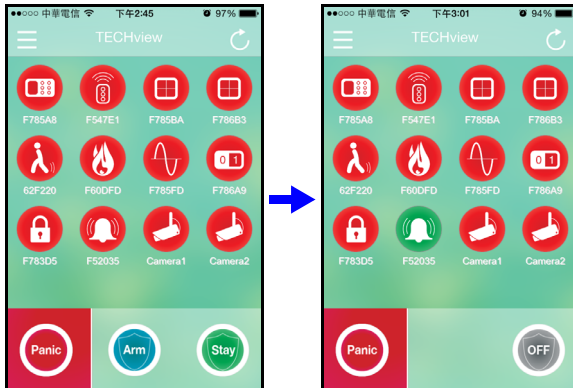


3.11 Arming/Disarming

Touch the **Arm/Stay** or **OFF** icon to arm or disarm the system.

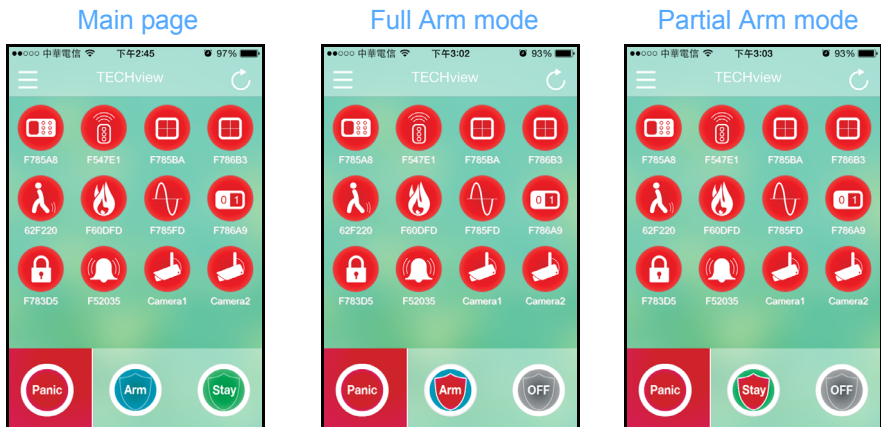


3.12 Sensor State Error

While arming, the system will check all contact sensors' state first and display an error message if any of the sensor is detected in "open" state.

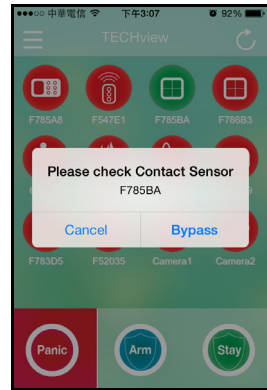

3.13 Alarm Trigger


Once any alarm is triggered, a pop-up message will appear on the screen, the system will send out a push message to your smart handheld device, and all related device icons will change to **Green** color to alert.

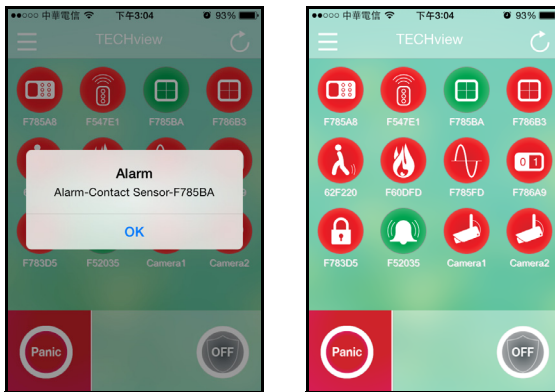

If the alarm has been triggered (i.e. 30 minutes ago), the related sensor icons remain in **Green** until the state is changed back (click "OFF" on APP).


3.14 Refresh

Click the **Refresh** icon to manually refresh all status immediately.

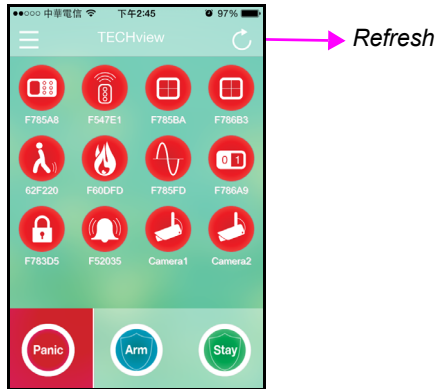


The auto refresh timer is approximately 5~15 seconds by default.

If you quick-click the **Refresh** icon for three times, the system will pop-up the “Prompt” window to confirm the connection.

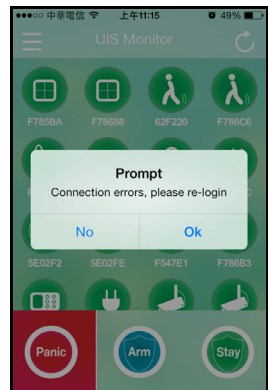


3.15 Rename

Touch and hold the desired device icon and the *rename* dialog box appears on the screen. Enter the new name using the on-screen keyboard. You may also customize the name in any language (i.e. Chinese) supported by your smart handheld device.

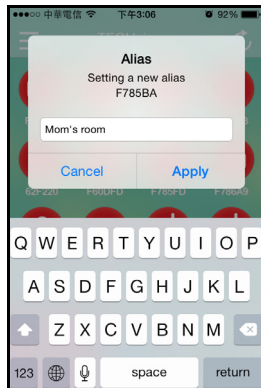


3.16 Device Information

Select and touch the device icon once, the screen will display the device information, which includes device type, device ID/name, zone, switch link, camera link, and its current value.

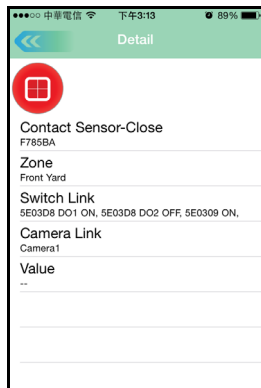

3.17 Relay Detail


Relay Switch and Power Relay Module are DI/DO device types. Click it to see the setup detail.

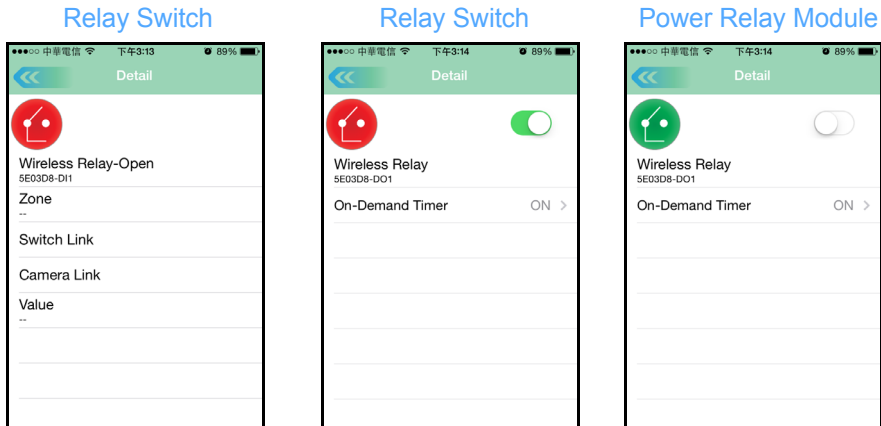


3.18 Switch On/Off

For automation-type controllers (such as Wireless Power Switching or Wireless Lock Switch), you can manually turn on/off the device switch.

Select and touch the switch device icon once, then slide it to turn ON or OFF.

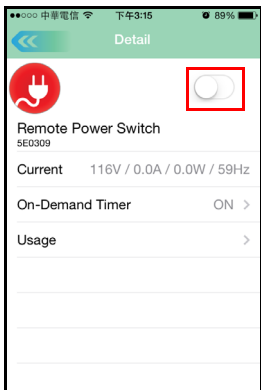

<Power Off>

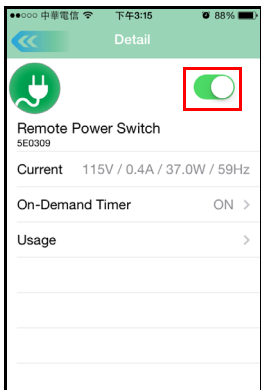



<Power On>

Siren can be turned ON or OFF randomly by touching the “Siren” icon.

3.19 Current Power Status

When power switching is turned on, the current measured value will show voltage, current, power, and frequency.


Touch it to enlarge the display.

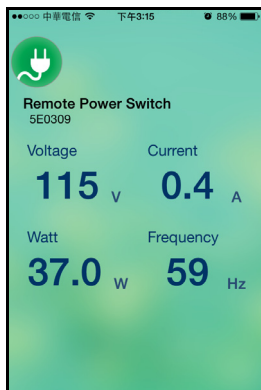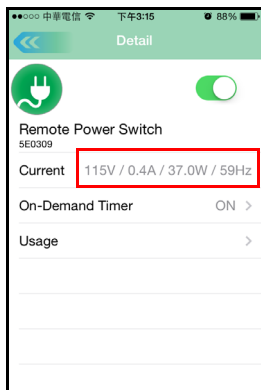

3.20 On-Demand Timer

Touch **On-Demand Timer** to select the power on timer.


Select **Schedule** to set the schedule to let the device to automatically turn the switch on/off.

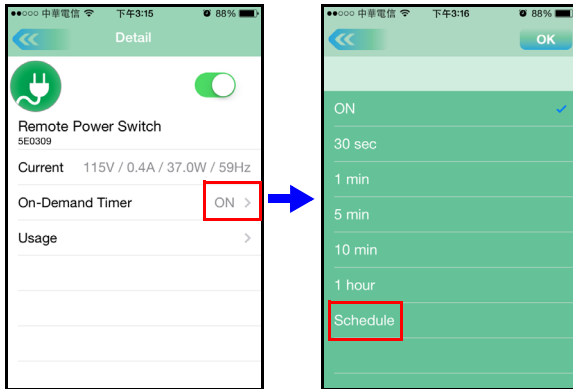

3.21 Schedule Setup


You can set up to 2 schedules per day.

Set the desired schedule to **ON** and touch to access the time and day setup. Specify the *Start* and *End* time, then select the desired day.

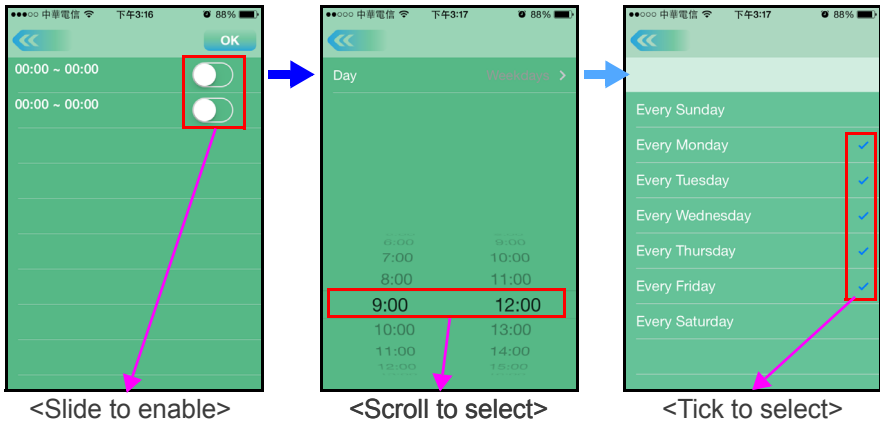

3.22 Power Meter and Cumulative Usage


Touch **Usage** to select the cumulative period to calculate. The total spent energy and cost will be displayed.

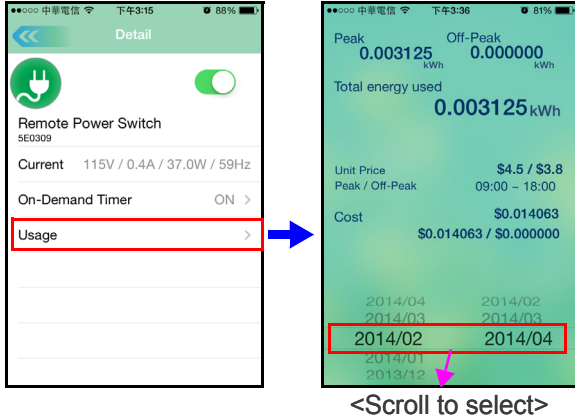

The maximum cumulative period is 3 months, and the earliest month shown on the screen is 12 months ago.

3.23 Video Live View

Select and touch IP camera's icon to display the live video. To view the live image of any camera on full screen, hold your smart handheld device horizontally for better viewing.

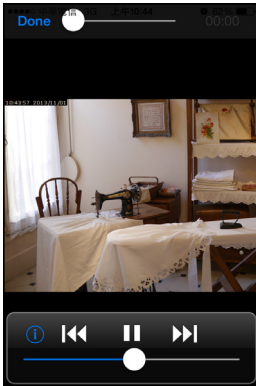

Normal view



Full screen

3.24 Taking Screenshot

For iPhone/iPad, press both **Power** and **Home** buttons to capture a screenshot of the current screen.


On most Android phones, press both **Power** and **Volume Down** buttons to capture a screenshot of the current screen.



Full screen


3.25 Device Disconnected

The device icon will be shown in **GREY** once disconnected from the Gateway. If this happens, check if the power supply is unplugged or the battery power is low on each disconnected sensor.

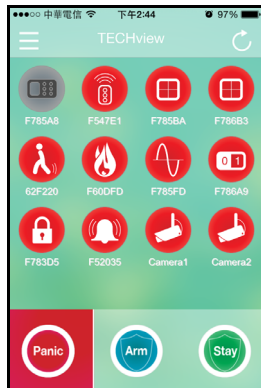


3.26 Options

Touch **Options** (on the top-left) to show the sub-function page.

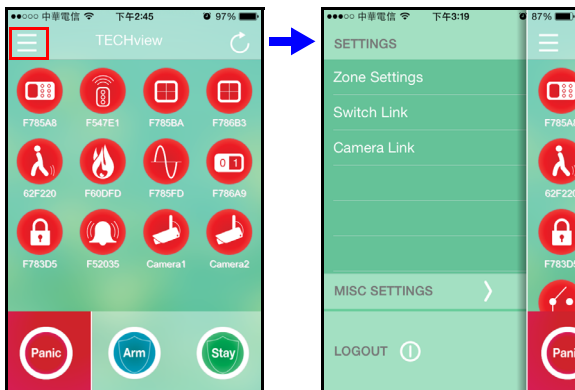


3.27 Zone Setup

Touch **Zone Settings** to enter the zone setup page.

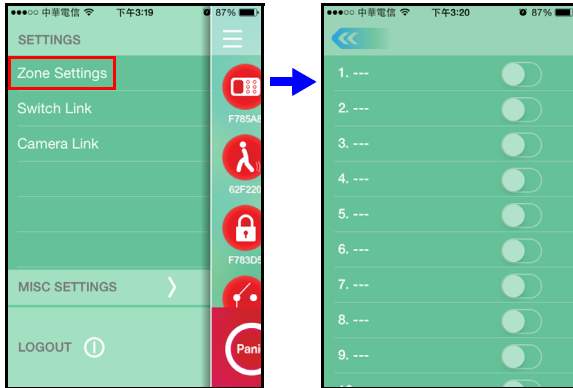

You may choose the zone name, devices to apply (the ✓ icon will appear on the screen), and enable the specific zone will be armed while Partial Arming.

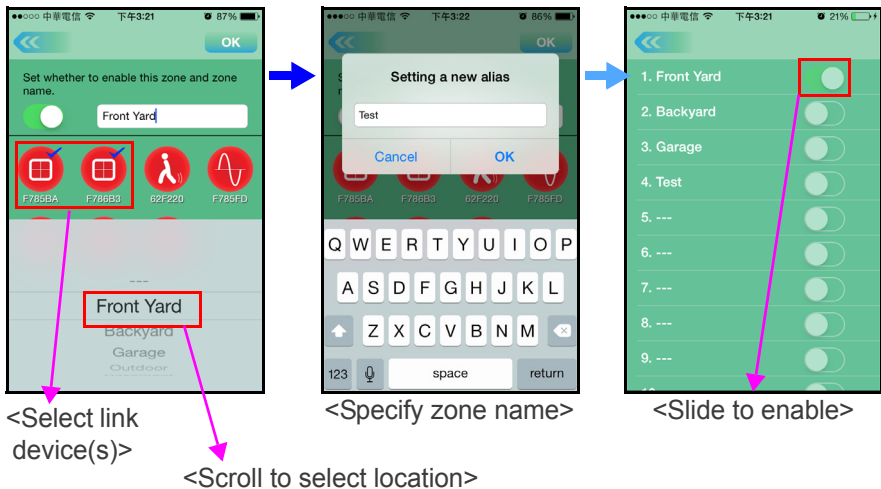

To customize the zone name, select **Other** and enter the desired zone name.


3.28 Switch Link

Touch **Switch Link** to configure the link setup.

Select the sensor first, then select the switch to link, up to 5 switches. The ✓ icon will appear on the screen.

- By default the switch is set to **ON**. A red power icon (⏻) at the right-bottom indicates the power is on. To turn off the switch, click the ⏻ icon. The red power icon (⏻) will disappear.
- To cancel the selection, tap the desired switch.

Touch **OK** to confirm.

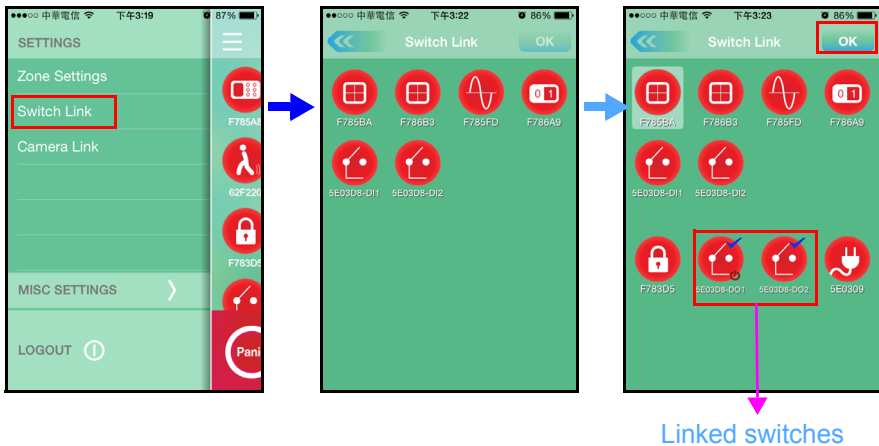


3.29 Camera Link

Touch **Camera Link** to configure the camera setup.


Select the camera first, then select the sensor to link. The ✓ icon will appear on the screen.

Touch **OK** to confirm.

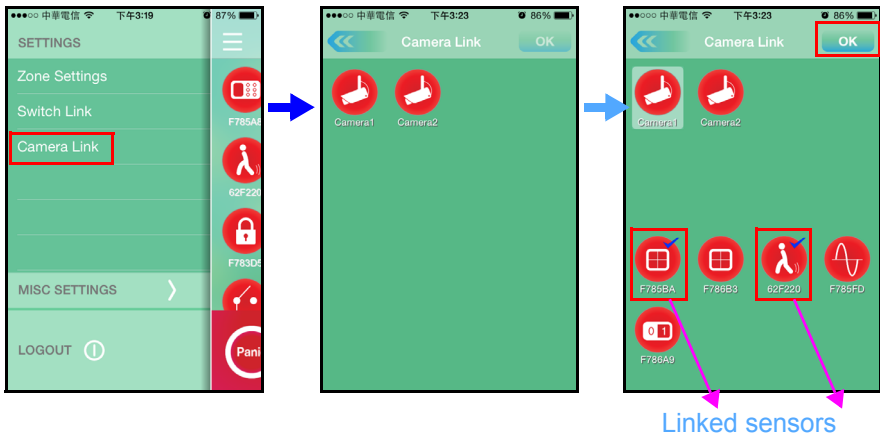


3.30 System Log

Touch **Options** > **MISC SETTINGS** > **System Log** to view the latest event log stored in the Gateway.

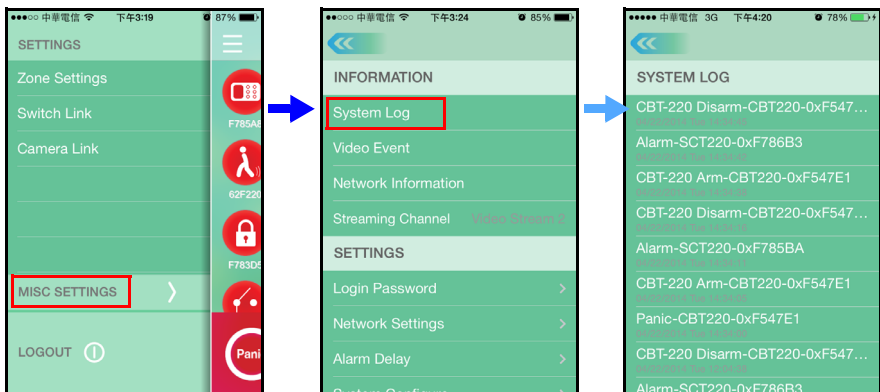

3.31 Video Event

Touch **Options** > **MISC SETTINGS** > **Video Event** to view the event-trigger video list. To play back the video, select the desired event and the video playback starts.

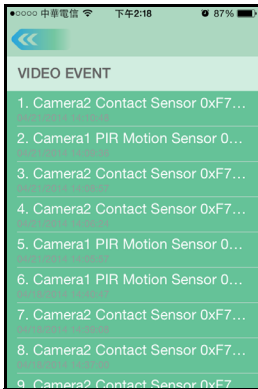


Event-trigger video list



Full screen

3.32 Network Information


Touch **Options** > **MISC SETTINGS** > **Network Information** to view the Gateway network information.

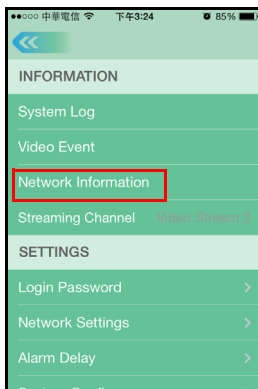

3.33 Website Interface

Touch **Options** > **MISC SETTINGS** > **Network Information** > **Website** to enter the Gateway Web Management for changing the necessary settings (if required).


The details on how to configure settings on the respective sensor, see Chapter 4: Web Management on page 56.

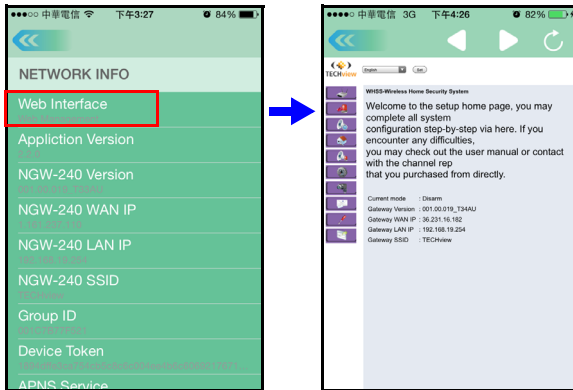

3.34 Streaming Channel


Touch **Options** > **MISC SETTINGS** > **Streaming Channel** to select the video streaming setting.

The default is “Video Steam 2”. This setting means the lower resolution and suitable for mobile devices.

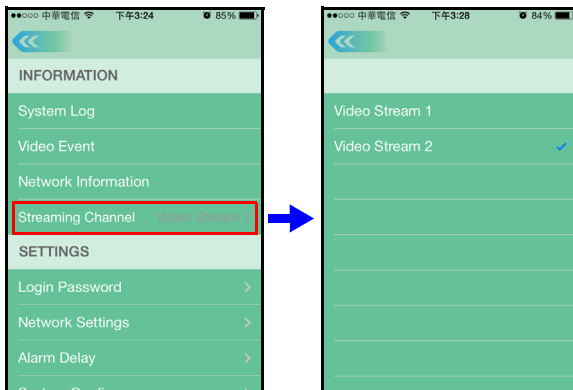

3.35 Login Password

Touch **Options** > **MISC SETTINGS** > **Login Password** to change the password. The default password is “123”.

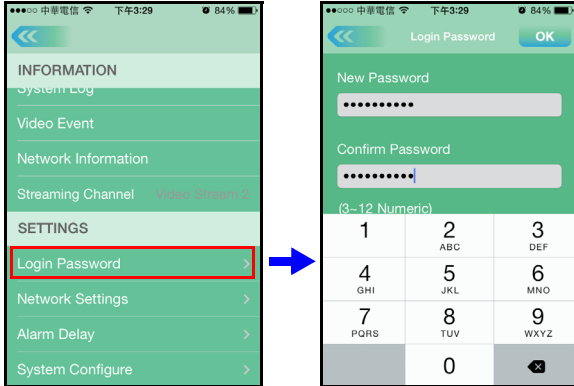


Note


- The password must be at least 3 numeric characters. The maximum password length is 12.

3.36 Network Settings


Touch **Options** > **MISC SETTINGS** > **Network Settings** to change the WAN mode. The default setting is “DHCP”.

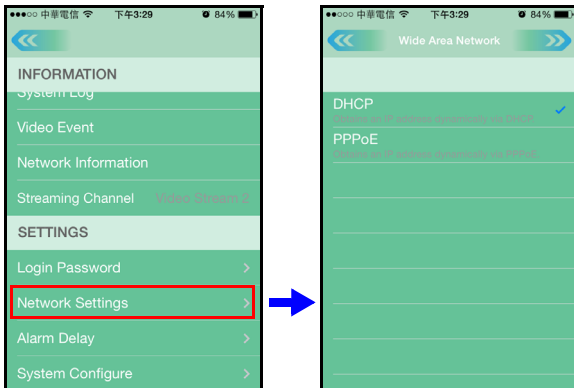

Enter the Wi-Fi SSID name and password. Then reboot the system to make the setting takes effect.

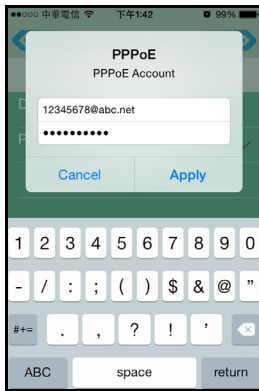

PPPoE

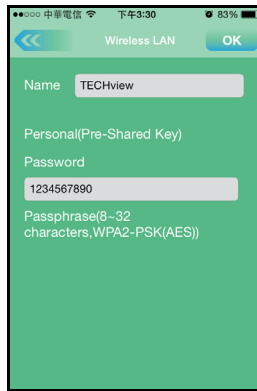



DHCP

Note

- If the WAN mode is set to "Static IP", you have to access the Web Management to change the network setting.

3.37 Alarm Delay

Touch **Options** > **MISC SETTINGS** > **Alarm Delay** to configure the delay time. The default settings are 10 seconds for outgoing and 30 seconds for incoming.

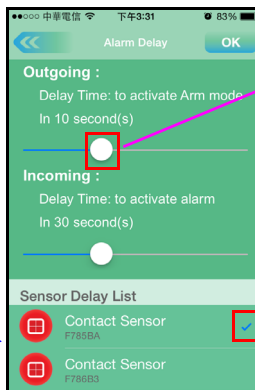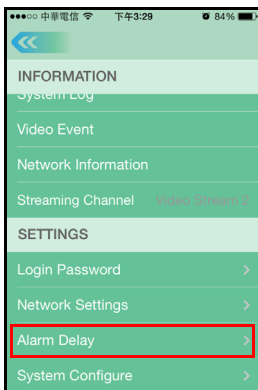


Drag the bar to select the time


Select which devices are on the delay list

3.38 System Configuration

Touch **Options** > **MISC SETTINGS** > **System Configure** to backup/restore the system settings.

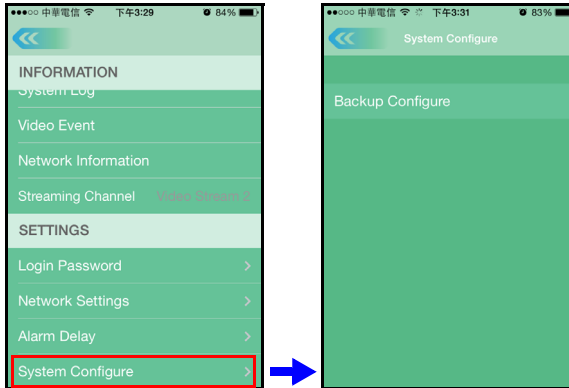

Select **Backup Configure** to save the current system configuration settings. Select **Restore Configure** to restore the settings that you have saved earlier.

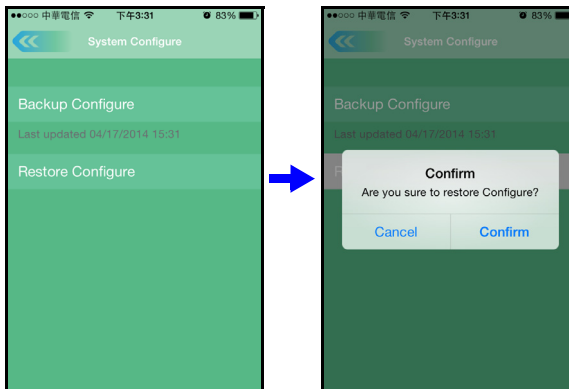


Note

- The **Restore Configure** function will only available when there is a backup data.

3.39 Logout

Touch **Options** > **LOGOUT** to log out of the APP. Then touch **Logout** to confirm.

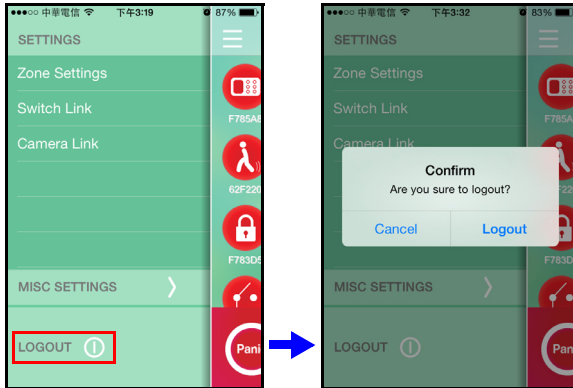


Chapter 4: Web Management

4.1 System

After completed the initial Gateway configuration (see 2.1 Gateway Configuration on page 8), you can now connect to the Gateway via HTTP web browser.

In the home page of the WHTS, the left navigation bar shows the menu options to configure the system.

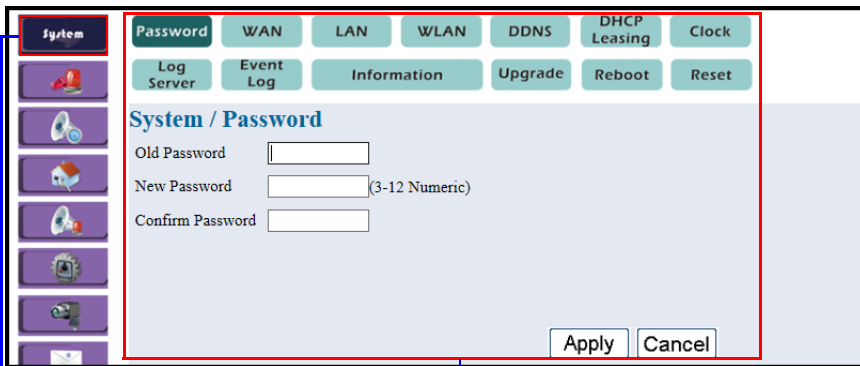

Menu option

System setting/status

4.1.1 Password

This option allows you to change the login password.

1. Select **System > Password**.
2. Enter password in the **Old Password** field.
The default password is "123".
3. Enter the new password in the **New Password** and **Confirm Password** fields.
4. Click **Apply**.

4.1.2 WAN

This option allows you to configure the Gateway WAN interface. There are three available options. Depending on what internet service provider you choose, you can use one of them to connect to Internet.

- **DHCP**

This option allows the Gateway to obtain an IP address dynamically via DHCP.

1. Select **System > WAN > DHCP**.

The screenshot shows the web management interface for the Gateway. The top navigation bar includes 'System', 'Password', 'WAN' (selected), 'LAN', 'WLAN', 'DDNS', 'DHCP Leasing', and 'Clock'. Below this is a secondary bar with 'Log Server', 'Event Log', 'Information', 'Upgrade', 'Reboot', and 'Reset'. The main content area is titled 'System / WAN' and features three radio button options: 'DHCP' (selected), 'PPPOE', and 'Static IP'. Below the options, it states 'Obtains an IP address dynamically via DHCP.' and includes an 'Apply' button at the bottom right.

2. Click **Apply**.

- **PPPoE**

This option allows the Gateway to obtain an IP address dynamically via PPPoE.

1. Select **System > WAN > PPPOE**.

The screenshot shows the web management interface for the Gateway, similar to the DHCP page. The top navigation bar includes 'System', 'Password', 'WAN' (selected), 'LAN', 'WLAN', 'DDNS', 'DHCP Leasing', and 'Clock'. Below this is a secondary bar with 'Log Server', 'Event Log', 'Information', 'Upgrade', 'Reboot', and 'Reset'. The main content area is titled 'System / WAN' and features three radio button options: 'DHCP', 'PPPoE' (selected), and 'Static IP'. Below the options, it states 'Obtains an IP address dynamically via PPPoE.' and includes two input fields for 'User Name' and 'Password'. An 'Apply' button is located at the bottom right.

2. Enter the user name and password of PPPoE.
3. Click **Apply**.

- **Static IP**

This option allows you to configure the Gateway WAN interface using a fixed IP address.

1. Select **System > WAN > Static IP**.


The screenshot shows a web management interface with a sidebar on the left containing icons for System, Log Server, Event Log, Information, Upgrade, Reboot, and Reset. The main content area is titled "System / WAN" and features several tabs: Password, WAN (selected), LAN, WLAN, DDNS, DHCP Leasing, and Clock. Below the tabs are buttons for Log Server, Event Log, Information, Upgrade, Reboot, and Reset. The configuration options include radio buttons for DHCP, PPPOE, and Static IP (selected). A note states "Uses a fixed IP address." Below this are input fields for IP Address (0.0.0.0), Subnet Mask (255.255.255.0), Default Gateway IP (0.0.0.0), and DNS IP Address (168.95.192.1). An "Apply" button is located at the bottom.

2. Enter the information for **IP Address**, **Subnet Mask**, **Default Gateway IP**, and **DNS IP Address** as assigned.
3. Click **Apply**.

4.1.3 LAN

This option allows you to configure the Gateway LAN interface.

1. Select **System > LAN**.

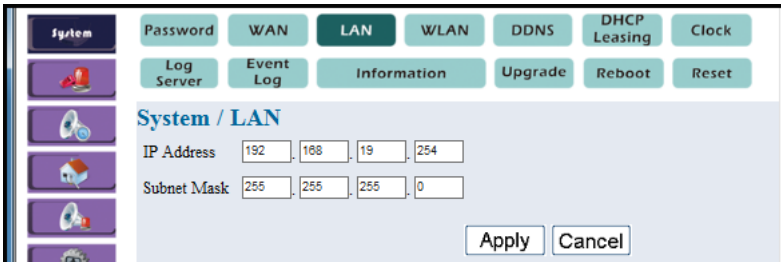

The screenshot shows a web management interface for configuring the LAN interface. The navigation menu on the left includes 'System', 'Log Server', 'Event Log', 'Information', 'Upgrade', 'Reboot', and 'Reset'. The main content area has tabs for 'Password', 'WAN', 'LAN' (selected), 'WLAN', 'DDNS', 'DHCP Leasing', and 'Clock'. Below the tabs are buttons for 'Log Server', 'Event Log', 'Information', 'Upgrade', 'Reboot', and 'Reset'. The 'System / LAN' section contains input fields for IP Address (192, 168, 19, 254) and Subnet Mask (255, 255, 255, 0). At the bottom right are 'Apply' and 'Cancel' buttons.

2. Enter **IP Address** and **Subnet Mask** as your preferred.
The default IP address is “192.168.19.254”.
3. Click **Apply**.


Note

- Here below is the default fixed assignment for the last field of IP address (i.e. xx.xx.xx.**60**)
 - a. 60 ~ 99 is reserved for IP camera use.
 - b. 100 ~ 253 is reserved for DHCP client use.

4.1.4 WLAN

This option allows you to configure the Gateway Wireless LAN interface.

1. Select **System > WLAN**.

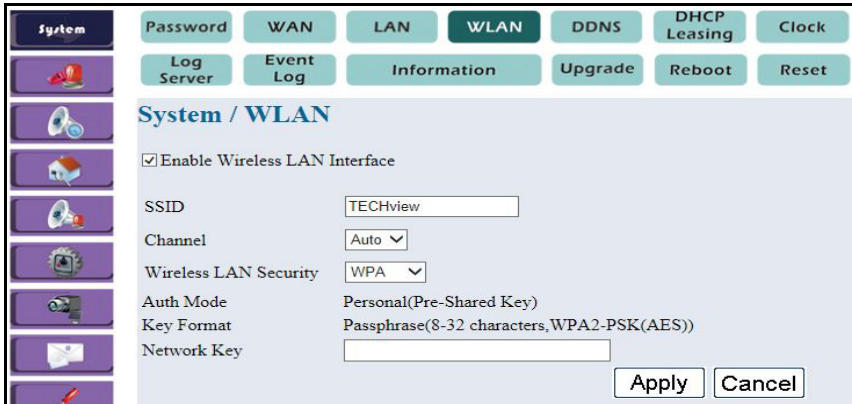

2. Check **Enable Wireless LAN Interface** to enable the Wireless LAN.
3. Enter **SSID**.
The default **SSID** for the Gateway is “TECHview”.
4. On *Channel*, specify the wireless channel. To avoid conflicting with other access points, set the setting to **Auto**.
5. On *Wireless LAN Security*, select the desired security settings.
6. To enable WEP/WPA encryption, enter the key for data encryption in **Auth Mode**.
7. Click **Apply**.


Note

- If the WPS function is being used, the WLAN security type must be set to WPA.

4.1.5 DDNS

This option allows you to configure the Gateway Dynamic DNS (DDNS) information.

1. Select **System > DDNS**.

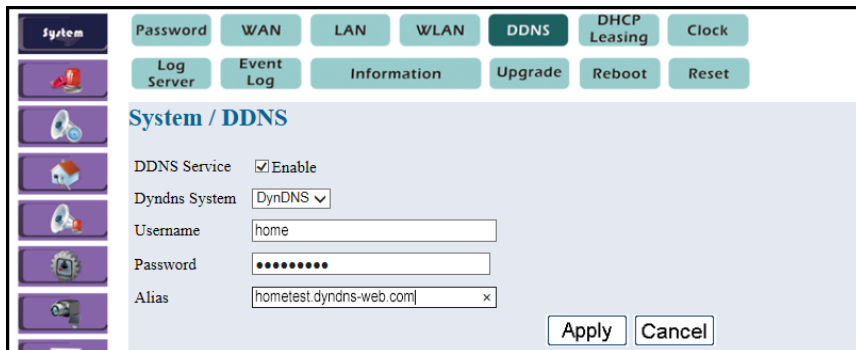

The screenshot shows a web management interface with a sidebar on the left containing icons for System, Password, WAN, LAN, WLAN, DDNS, DHCP Leasing, Clock, Log Server, Event Log, Information, Upgrade, Reboot, and Reset. The main content area is titled "System / DDNS" and contains the following configuration options:

- DDNS Service: Enable
- Dyndns System: DynDNS (dropdown menu)
- Username: home (text input)
- Password: [masked with dots] (password input)
- Alias: hometest.dyndns-web.com (text input with a clear 'x' button)


At the bottom right of the form are "Apply" and "Cancel" buttons.

2. Check **Enable** to enable DDNS Service.
3. Select the DDNS service provider's domain name in the **Dyndns System** field.
4. Enter **Username** and **Password**.
The account information will be provided by DDNS service provider once the DDNS service registration is completed.
5. Enter the registered domain name in the **Alias** field.
6. Click **Apply**.




Creating a DDNS Domain Name

1. Start your web browser and enter <http://dyn.com/dns>.
2. Select **Devices Remote Access**.

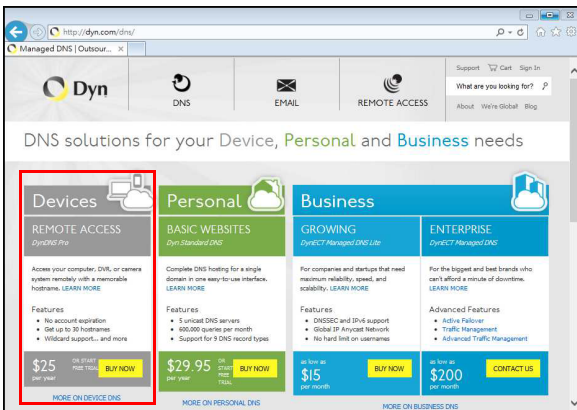

3. Fill in the necessary data and follow the on-screen instruction to create a Dyn account.

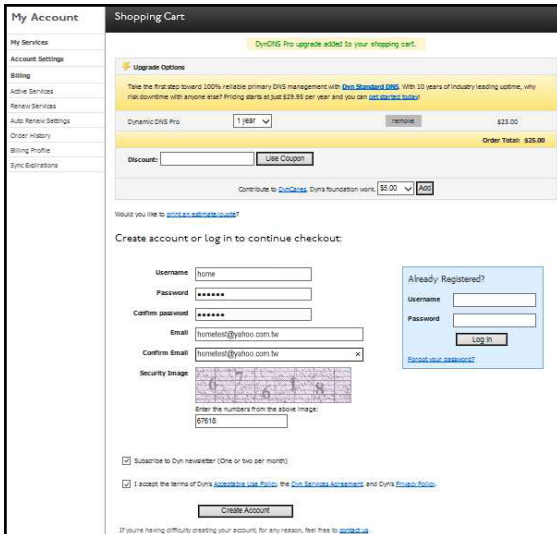


4. Enter the confirmation code to confirm your account.

Thanks for creating your Dyn account!

We've sent an email to grant.lee@uiisoo.com.tw, to verify your account. Please check your inbox and click on the confirmation link or enter the confirmation code below:

Confirmation Code:

[Resend Verification](#) [Change Email Address](#)


Note

- A confirmation code will be sent to your e-mail account.


5. Click **PROCEED TO CHECKOUT** to continue.


My Account	Shopping Cart
<ul style="list-style-type: none"> My Services Account Settings Billing Active Services Renew Services Auto Renew Settings Order History Billing Profile Sync Expirations 	<p style="text-align: right;"><input type="button" value="PROCEED TO CHECKOUT"/></p> <p style="text-align: center;">Thank you for confirming your account!</p> <p>Upgrade Options</p> <p>Take the first step toward 100% reliable primary DNS management with Dyn Standard DNS. With 10 years of industry leading uptime, why risk downtime with anyone else? Pricing starts at just \$29.95 per year and you can get started today!</p> <p>Dynamic DNS Pro <input type="text" value="1 year"/> <input type="button" value="remove"/> \$25.00</p> <p style="text-align: right;">Order Total: \$25.00</p> <p>Discount: <input type="text"/> <input type="button" value="Use Coupon"/></p> <p>Contribute to DynCares, Dyn's foundation work. <input type="text" value="\$5.00"/> <input type="button" value="Add"/></p> <p>Would you like to print an estimate/quote?</p> <p style="text-align: right;"><input type="button" value="PROCEED TO CHECKOUT"/></p>





6. Fill in the payment information and click **PLACE ORDER**.**Note**

- You will be given a 14-day free trial and you can cancel the application within the trial period. The payment will only be charged after the free trial.

Provide payment information:

Pay with PayPal 

Add a new credit card 

Card Number:

Card Expiration:

Security Code:

Billing Address:

Full Name:

Company (optional):

Address:

City:

State/Province:

ZIP/Postal Code:

Country:

Phone: (if required)

Confirm your order

7. Create a new hostname and click **Activate**.
Enter a hostname and IP address and select a DDNS server.

My Account | **Add New Hostname**

My Services

- DynDNS Pro/Hosts**
- DynECT Managed DNS Lite
- Domain names, DNS hosting, Dyn Email services
- Internet Guide
- DynECT Email Delivery Lite
- Renew Services
- Auto Renew Settings
- Sync Expirations
- Tips on Getting Started

Account Settings

Billing

My Cart
0 items

You don't currently have a [DynDNS Pro service](#) in your account.

To get the full benefits of Dynamic DNS, including premium subscriber domains and other features, [add DynDNS Pro](#)

Hostname: .

Wildcard: create `*.host.dyndns-yourdomain.com` alias (for example to use same settings for `www.host.dyndns-yourdomain.com`)
only for DynDNS Pro users

Service Type:

- Host with IP address
- WebHop Redirect (URL forwarding service)
- Offline Hostname

IP Address:
[Your current location's IP address is 61.57.131.206](#)

IPv6 Address (optional):

TTL value is 60 seconds. [Edit TTL...](#)

Mail Routing: I have mail server with another name and would like to add MX hostname...

Activate

After all settings are complete, the DDNS alias will be the combination of “hostname” and “DDNS server”.

For example:


Hostname: **xxx**; DDNS server: **dyndns-web.com**

DDNS alias: **xxx.dyndns-web.com**

4.1.6 DHCP Leasing

This option displays the Gateway DHCP client information.

1. Select **System > DHCP Leasing**.

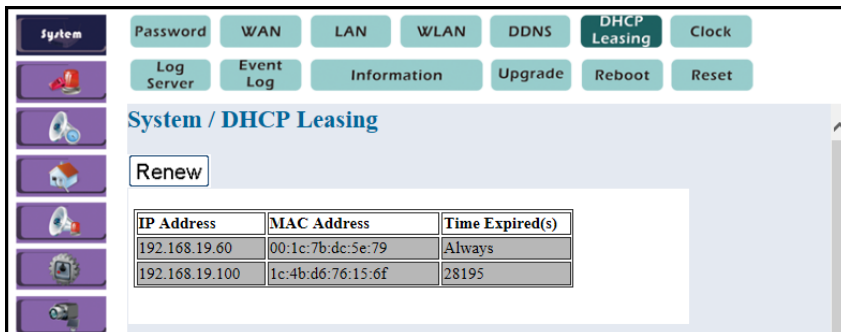

2. Click **Renew** to renew the Gateway DHCP client information.


Note

- The first IP address shown on the above illustration as “Always” belongs to an IP camera. To configure IP camera setup, refer to 4.7 Surveillance on page 90 for details.

4.1.7 Clock

This option allows you to adjust the current system date and time.

1. Select **System > Clock**.

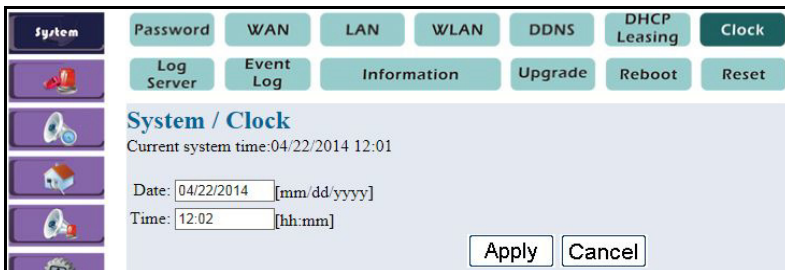


2. Enter the new **Date** and **Time** as required.
3. Click **Apply**.

4.1.8 Log Server

This option allows you to set up the external Syslog server information. There are two available options: Syslog and SIA.


Select **System > Log Server**.

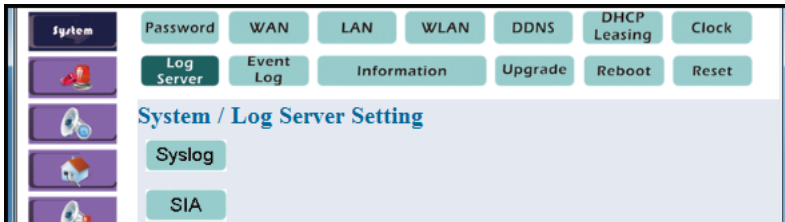

Syslog

This option allows you to configure the external log server information.

1. Select **Syslog**.

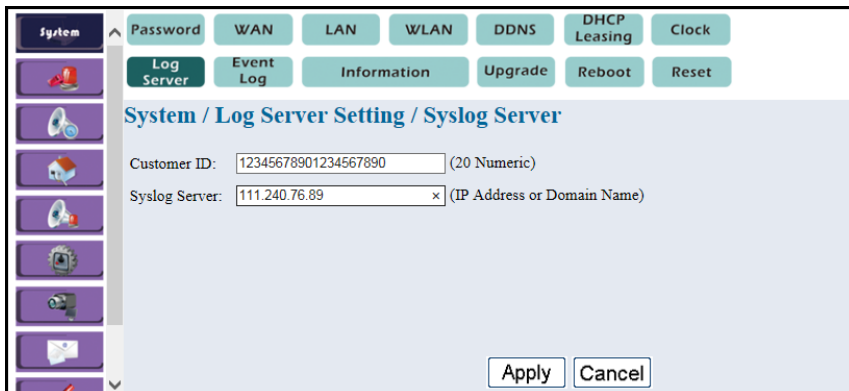


2. Enter the gateway ID number and the IP address (or Domain name) of the external event log server.
3. Click **Apply**.

SIA

This option allows you to configure the external SIA server information.

1. Select **SIA**.

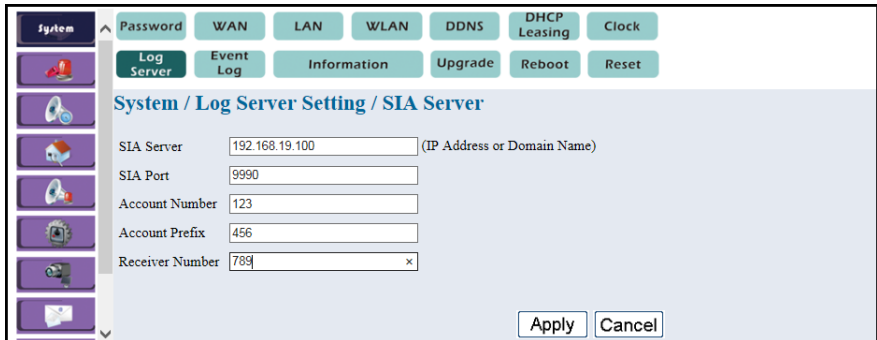

The screenshot shows a web management interface with a sidebar on the left containing various system icons. The main content area has a top navigation bar with buttons for Password, WAN, LAN, WLAN, DDNS, DHCP Leasing, and Clock. Below this is a secondary navigation bar with buttons for Log Server, Event Log, Information, Upgrade, Reboot, and Reset. The main heading is "System / Log Server Setting / SIA Server". The configuration fields are as follows:

SIA Server	<input type="text" value="192.168.19.100"/>	(IP Address or Domain Name)
SIA Port	<input type="text" value="9990"/>	
Account Number	<input type="text" value="123"/>	
Account Prefix	<input type="text" value="456"/>	
Receiver Number	<input type="text" value="789"/>	<input type="button" value="x"/>


At the bottom right of the configuration area, there are two buttons: "Apply" and "Cancel".

2. Enter the IP address or Domain name, SIA port number, Account number and prefix, and specify the receiver number.
3. Click **Apply**.

4.1.9 Event Log

This option displays the latest fifty (50) event logs.

1. Select **System > Event Log**.

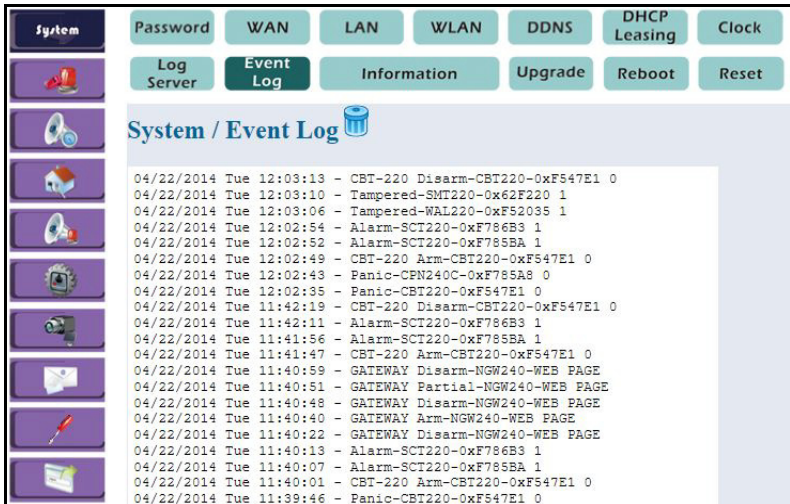

2. Click  to delete all event logs.

Note

- All logs are automatically saved into the SD card installed on the Gateway. (50 logs per file and more than 1,000 logs could be saved).
- All logs can also be sent via a designated e-mail. For more information, refer to 4.8 Notification on page 96.
- Alarm, Panic, Tampered, Lost connection, Low battery, Over current protection logs will be sent via APP push notification service. For more information, refer to 3.6 Push Notification Setting (iOS) on page 35 or 3.7 Push Notification Setting (Android) on page 36.

4.1.10 Information

This option displays the Gateway information (software version, network, and SSID).

Select **System > Information**.



4.1.11 Upgrade

This option allows you to upgrade the Gateway software.

a. Upgrade by USB pen drive

1. Select **System > Upgrade**.



2. Save the image file (whss.pck) into the USB drive.
3. Plug the USB drive into the Gateway USB port.
4. Enter the password.
5. Click **Upgrade**.

b. Upgrade by remote site

1. Select **System > Upgrade**.
2. Save the firmware file (*.pck) to your computer.
3. Click the **Browse** button to select the latest firmware file. Then press **Select** to confirm the selection.
4. Click **Upgrade** to update the firmware.


Note

- For the password information, please contact the authorized partners.

4.1.12 Reboot

This option allows you to power reboot the system once you changed any system settings.

1. Select **System > Reboot**.

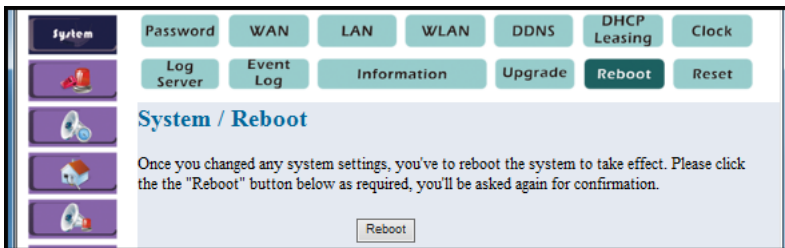


2. To reboot the system, click **Reboot**.
3. A pop-out message “Do you really want to reboot the System?” to re-confirm again. Select **Yes** to proceed.

4.1.13 Reset

This option allows you to reset all settings to the factory default.

1. Select **System > Reset**.

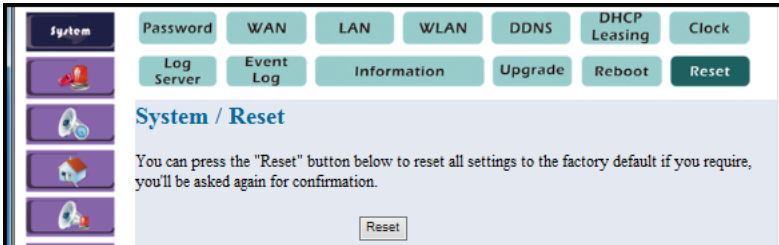

2. To reset the system, click **Reset**.
3. A pop-out message "Do you really want to reset the system?" to re-confirm again. Select **Yes** to proceed.

4.2 Arm Mode

This option allows you to select the alarm mode.

1. Be sure that the Alarm Controller configuration is successful. See 2.2 Device Joining on page 12.
2. Select **Arm Mode**.




3. Select the desired alarm mode (Disarm/Partial Arm/Full Arm).
 - **Disarm**: Disarm for the security function, only start the disaster prevention function.
 - **Full Arm**: Start all disaster prevention and security functions.
 - **Partial Arm**: Start partial of the security function, and all disaster prevention function.

4.3 Alarm Delay

This option allows you to configure the outgoing/incoming alarm delay time once the sensor triggered.

1. Select **Arm Delay**.

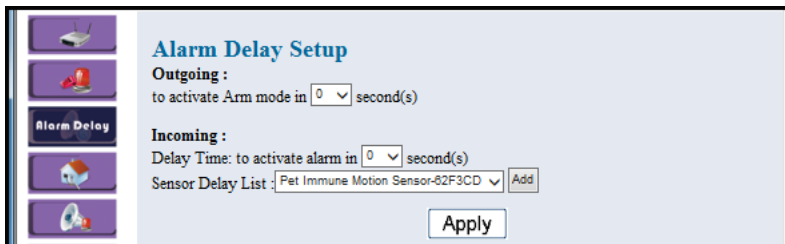


The screenshot shows the 'Alarm Delay Setup' configuration page. On the left is a vertical sidebar with five icons: a house, a fire alarm, 'Alarm Delay' (highlighted), a bell, and a person. The main content area has the title 'Alarm Delay Setup' in blue. Below the title, there are two sections: 'Outgoing' and 'Incoming'. The 'Outgoing' section has the text 'to activate Arm mode in' followed by a dropdown menu showing '0' and the text 'second(s)'. The 'Incoming' section has the text 'Delay Time: to activate alarm in' followed by a dropdown menu showing '0' and the text 'second(s)'. Below that is a 'Sensor Delay List' section with a dropdown menu showing 'Pet Immune Motion Sensor-82F3CD' and an 'Add' button. At the bottom right of the main area is an 'Apply' button.

2. Set the delay time to activate the alarm mode.
3. Select the desired sensor on **Sensor Delay List**.
(This option is only applicable for Contact sensor or Pet Immune Motion sensor.)
4. Click **Apply**.

4.4 Sensor

This option allows you to configure the device binding settings. The compatible device types include the following: Wireless Panel Console, Wireless Button Console, Wireless Contact Sensor, Wireless Pet Immune Motion Sensor, Wireless Photoelectric Smoke Sensor, Wireless CO₂ Sensor, Wireless AI Transducer, Wireless DI Transducer, and Wireless Relay DI.

1. Be sure to complete all device binding configurations first. See 2.2 Device Joining on page 12.
2. Select **Sensor**.
3. Click the desired device icon to enter the relevant setup page.

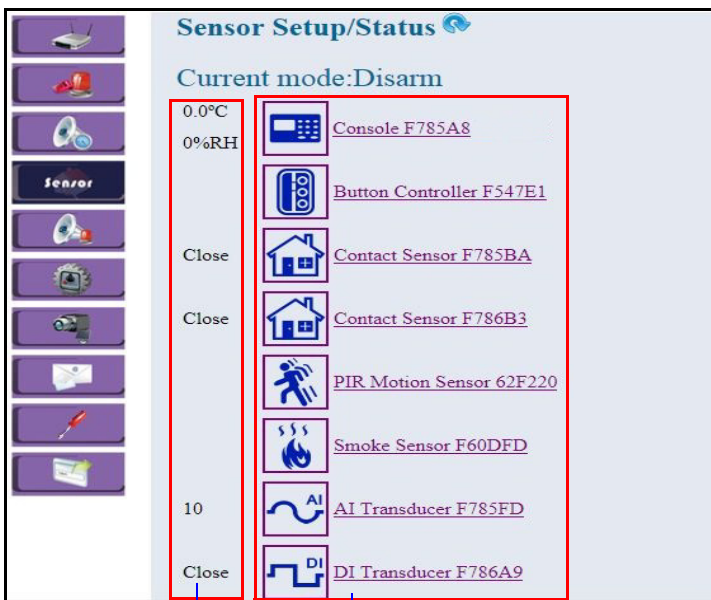

Sensor status or current value

Sensor name and ID


Note

- The console will be automatically refreshed in every 10 seconds.


4.4.1 Panel Console

This option allows you to configure the Wireless Panel Console settings.

1. Click .

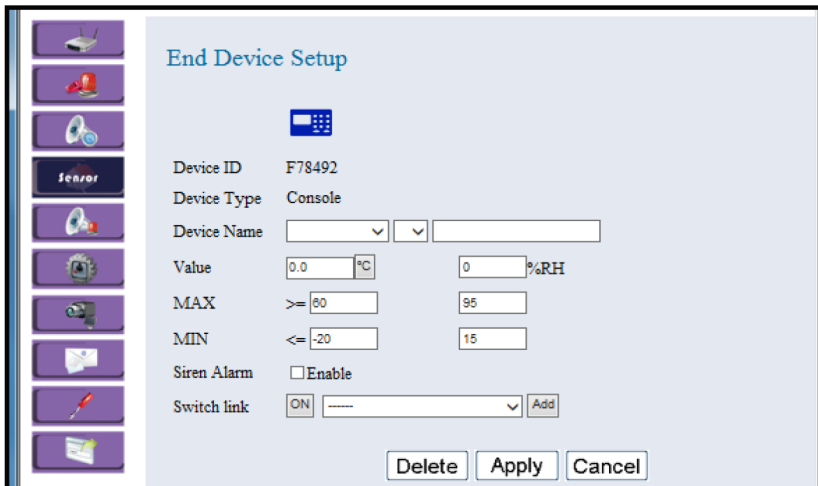

End Device Setup



Device ID: F78492

Device Type: Console

Device Name:

Value: °C %RH

MAX:

MIN:

Siren Alarm: Enable


Switch link:

2. Select the location, device number, and specify the sensor name. Click on the pull-down menu to see more options. The current temperature and humidity readings are displayed in the **Value** field.
3. Set the maximum (**MAX**) and minimum (**MIN**) threshold values. You may swap temperature unit (°C or °F) once required.
4. Check **Enable** to enable siren alarm once the current temperature or humidity hits the threshold.
5. To bind multiple links with the automation-type controllers (such as Wireless Power Switching or Wireless Lock Switch), select the controller ID in the *Switch link* field and click **Add**. Select **ON** or **OFF** the device when the alarm is triggered.
6. In the *Switch link* field, click **Remove** to delete the current binded automation-type device.
7. Click **Apply** to save the settings.

4.4.2 Button Console

This option allows you to configure the Wireless Button Console settings.


1. Click .

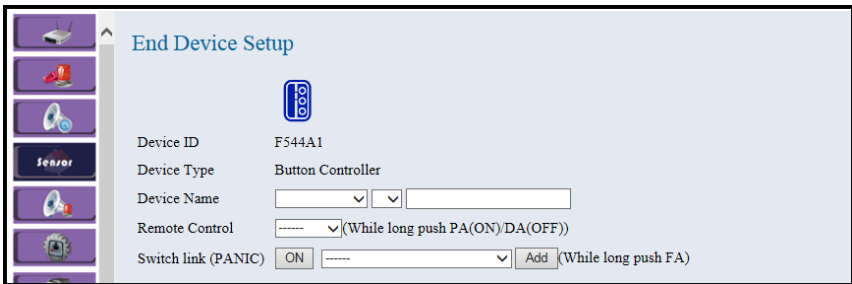

2. Select the location, device number, and specify the sensor name. Click on the pull-down menu to see more options.
3. In the *Remote Control* field, select one automation-type device to enable remote automatic control.
4. To bind multiple links with the automation-type controllers while pushing the Panic links with the automation-type controllers, select the controller ID in the *Switch link* field and click **Add**. Select **ON** or **OFF** the device when the alarm is triggered.
5. In the *Switch link* field, click **Remove** to delete the current binded automation-type device.
6. Click **Apply** to save the settings.

Note

- You may press the respective button (FA/PA/DA) to change the alarm mode.

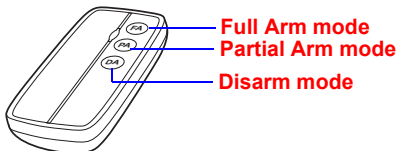

- While in emergency, press and hold FA button to trigger the emergency alert.
- When using this device with an automation-type device, press and hold PA button for 3 seconds to turn on the device connection. Press and hold DA button for 3 seconds to turn off the device connection.

4.4.3 Contact Sensor

This option allows you to configure the Wireless Contact Sensor settings.

1. Click .



End Device Setup

Close 

Device ID: F785BA

Device Type: Contact Sensor

Device Name:

Security Zone: Front Yard

Camera Link: Camera1

Switch link: ON


Switch link 1: Remote Power Switch5E0309-ON

2. Select the location, device number, and specify the sensor name. Click on the pull-down menu to see more options.
3. Select the security zone while enabling partial arm.
4. In *Camera Link* field, select the camera for enabling the event-triggered recording.
5. To bind multiple links with the automation-type controllers to enable remote automatic control, select the controller ID in the *Switch link* field and click **Add**. Select **ON** or **OFF** the device when the alarm is triggered.
6. In the *Switch link* field, click **Remove** to delete the current binded automation-type device.
7. Click **Apply** to save the settings.

4.4.4 PIR Motion Sensor

This option allows you to configure the Wireless Motion Sensor settings.

1. Click .

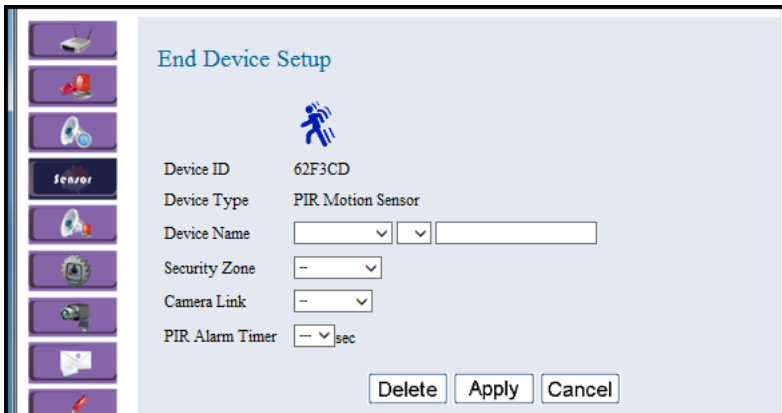

2. Select the location, device number, and specify the sensor name. Click on the pull-down menu to see more options.
3. Select the security zone while enabling partial arm.
4. In the *Camera Link* field, select the camera for enabling the event-triggered recording.
5. In the *PIR Alarm Timer* field, set the alarm timer for siren once triggered. This is to avoid any false alarm likes animal immunity.
6. Click **Apply** to save the settings.


Note

- *To avoid false alarm and save the battery power, there is a 30 seconds lock-out after motion sensor triggered; which means after the motion sensor triggered, it will stay in sleep mode for 30 seconds.*

4.4.5 Smoke Sensor

This option allows you to configure the Wireless Smoke Sensor settings.

1. Click .

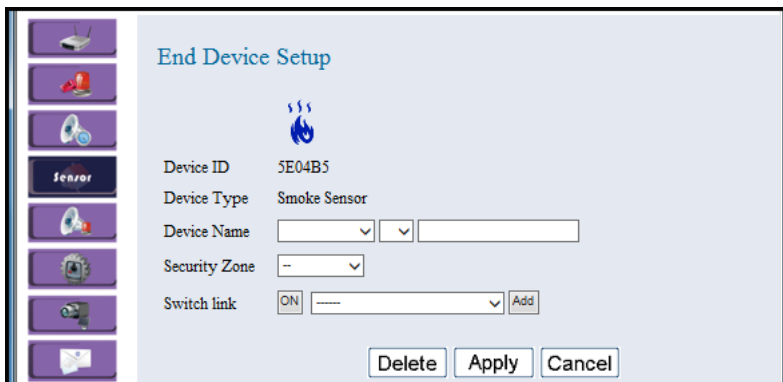

The screenshot shows the 'End Device Setup' page for a Smoke Sensor. The sidebar on the left contains icons for different device types, with the 'Smoke Sensor' icon selected. The main content area displays the following configuration fields:

- Device ID: 5E04B5
- Device Type: Smoke Sensor
- Device Name: Two dropdown menus and a text input field.
- Security Zone: A dropdown menu.
- Switch link: A radio button labeled 'ON', a dropdown menu, and an 'Add' button.


At the bottom of the configuration area are three buttons: 'Delete', 'Apply', and 'Cancel'.

2. Select the location, device number, and specify the sensor name. Click on the pull-down menu to see more options.
3. Select the security zone while enabling partial arm.
4. To bind multiple links with the automation-type controllers (such as Wireless Power switching or Wireless Lock switch), select the controller ID in the *Switch link* field and click **Add**. Select **ON** or **OFF** the device when the alarm is triggered.
5. In the *Switch link* field, click **Remove** to delete the current binded automation-type device.
6. Click **Apply** to save the settings.

4.4.6 Carbon Dioxide (CO₂) Sensor

This option allows you to configure the Wireless Carbon Dioxide Sensor settings.

1. Click .

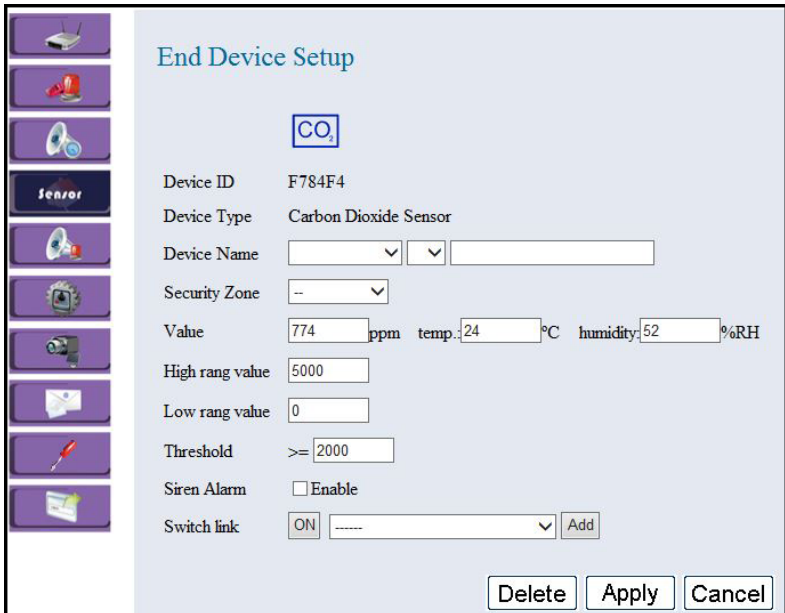

2. Select the location, device number, and specify the sensor name. Click on the pull-down menu to see more options.
3. Select the security zone while enabling partial arm. The current carbon dioxide, temperature and humidity readings are displayed in the *Value* field.
4. Set the high range/low range/threshold values in the *its respective* field.
5. Check **Enable** to enable siren alarm once the current carbon dioxide reading hits the threshold.
6. To bind multiple links with the automation-type controllers to enable remote automatic control, select the controller ID in the *Switch link* field


and click **Add**. Select **ON** or **OFF** the device when the alarm is triggered.

7. In the *Switch link* field, click **Remove** to delete the current binded automation-type device.
8. Click **Apply** to save the settings.


4.4.7 AI Transducer

This option allows you to configure the Wireless AI Transducer settings.

1. Click .

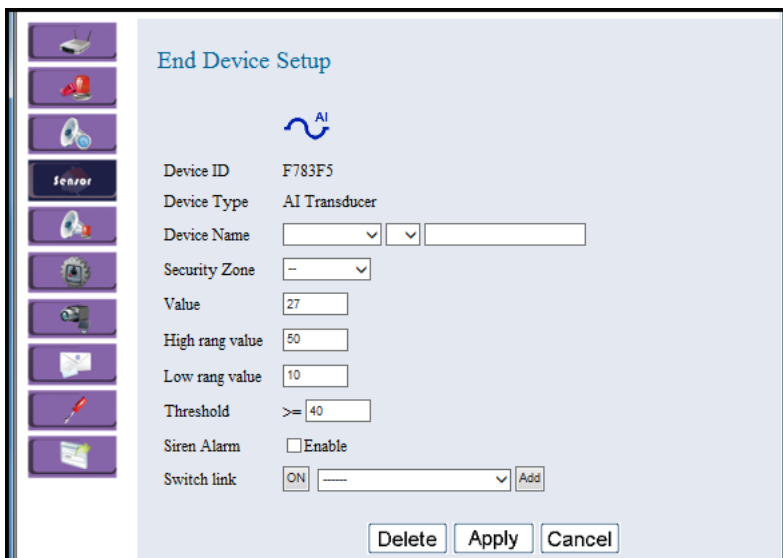

End Device Setup



Device ID: F783F5

Device Type: AI Transducer

Device Name:

Security Zone:

Value:

High rang value:

Low rang value:

Threshold:

Siren Alarm: Enable

Switch link:


2. Select the location, device number, and specify the sensor name. Click on the pull-down menu to see more options.
3. Select the security zone while enabling partial arm. The current data reading are displayed in the *Value* field.
4. Set the maximum and minimum metric of the attached third party sensor in the *High/Low range value* fields.
5. Set the threshold value in the *Threshold* field.

6. Check **Enable** to enable siren alarm once the current reading hits the threshold.
7. To bind multiple links with the automation-type controllers to enable remote automatic control, select the controller ID in the *Switch link* field and click **Add**. Select **ON** or **OFF** the device when the alarm is triggered.
8. In the *Switch link* field, click **Remove** to delete the current binded automation-type device.
9. Click **Apply** to save the settings.


4.4.8 DI Transducer

This option allows you to configure the Wireless DI Transducer settings.

1. Click .

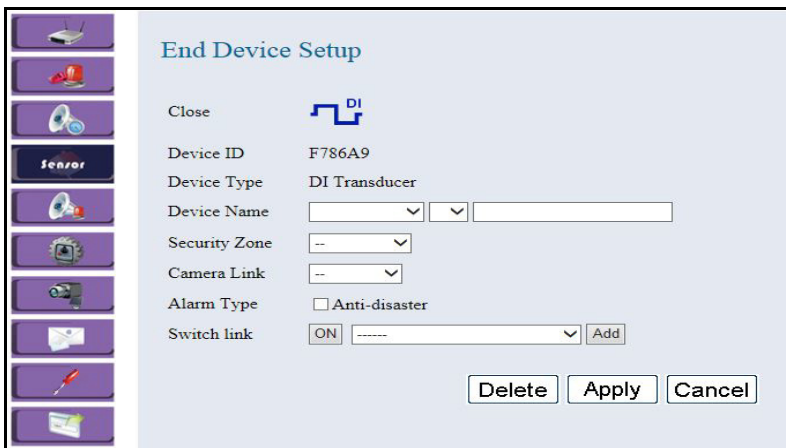

End Device Setup

Close 

Device ID: F786A9

Device Type: DI Transducer

Device Name:

Security Zone:

Camera Link:

Alarm Type: Anti-disaster

Switch link:


2. Select the location, device number, and specify the sensor name. Click on the pull-down menu to see more options.
3. Select the security zone while enabling partial arm.
4. In the *Camera Link* field, select the camera for enabling the event-triggered recording.
5. In the *Alarm Type* field, check **Anti-disaster** when connecting with the third party disaster sensor. (The DI sensor will be ready to alarm all the time.)

6. To bind multiple links with the automation-type controllers to enable remote automatic control, select the controller ID in the *Switch link* field and click **Add**. Select **ON** or **OFF** the device when the alarm is triggered.
7. In the *Switch link* field, click **Remove** to delete the current binded automation-type device.
8. Click **Apply** to save the settings.


4.4.9 Wireless Relay DI

This option allows you to configure the Wireless Relay DI settings.

1. Click .

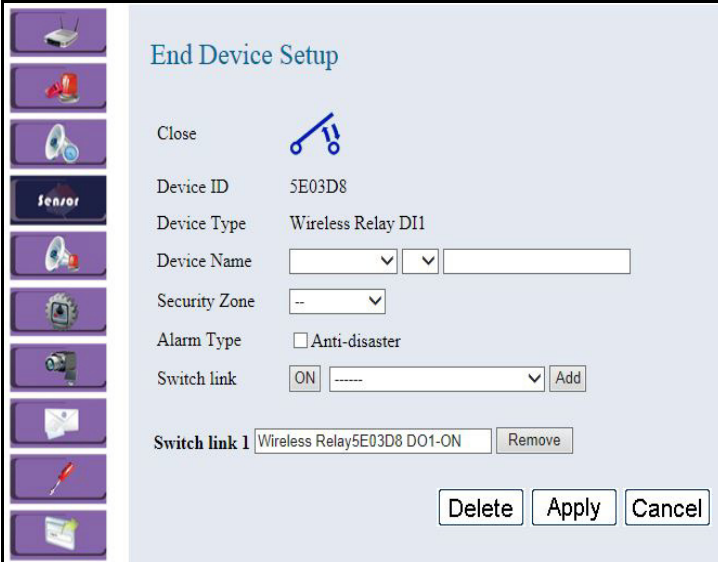

The screenshot shows the 'End Device Setup' configuration page. On the left is a vertical sidebar with icons for various device types, with 'Sensor' highlighted. The main area contains the following fields and controls:

- Close**: 
- Device ID**: 5E03D8
- Device Type**: Wireless Relay DI1
- Device Name**: Two dropdown menus and a text input field.
- Security Zone**: A dropdown menu with '--' selected.
- Alarm Type**: Anti-disaster
- Switch link**: ON, a dropdown menu with '-----' selected, and an **Add** button.
- Switch link 1**: A text input field containing 'Wireless Relay5E03D8 DO1-ON' and a **Remove** button.

At the bottom right, there are three buttons: **Delete**, **Apply**, and **Cancel**.


2. Select the location, device number, and specify the sensor name. Click on the pull-down menu to see more options.
3. Select the security zone while enabling partial arm.


4. In the *Alarm Type* field, check **Anti-disaster** when connecting with the third party disaster sensor. (The DI sensor will be ready to alarm all the time.)
5. To bind multiple links with the automation-type controllers to enable remote automatic control, select the controller ID in the *Switch link* field and click **Add**. Select **ON** or **OFF** the device when the alarm is triggered.
6. In the *Switch link* field, click **Remove** to delete the current binded automation-type device.
7. Click **Apply** to save the settings.


4.5 Siren

This option allows you to configure the Wireless Alarm Controller settings.

1. Be sure to complete the siren configuration (See 2.2 Device Joining on page 12).
2. Select **Siren**.

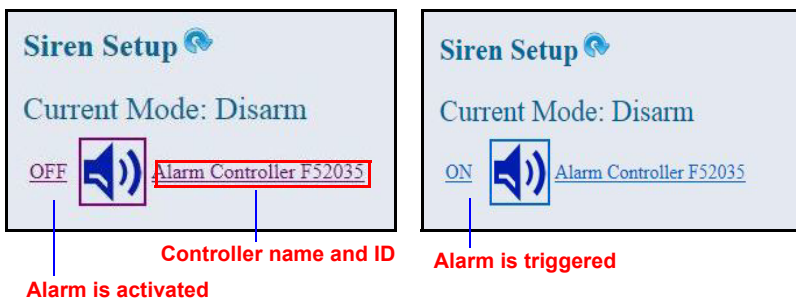

3. You can click device status to turn on/off the siren manually.
4. Click .

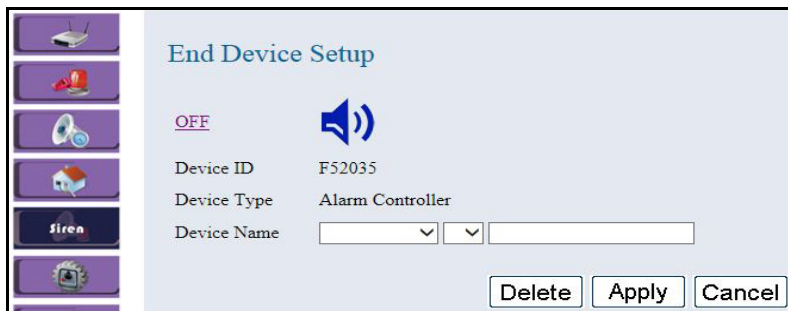

5. Select the location, device number, and specify the sensor name. Click on the pull-down menu to see more options.
6. Click **Apply** to save the settings.


Note

- If any of the sensor battery is low (2.7V or below), the system will automatic generate battery low event log to alert and also trigger the siren alarm for 3 seconds.

4.6 Automation

This option allows you to configure the automation-related controller settings. The automation type devices include: Wireless Power Meter Switch, Wireless Lock Controller, and Wireless Relay DO.

1. Be sure to complete the automation type controller configurations (See 2.2 Device Joining on page 12).
2. Select **Automation**.

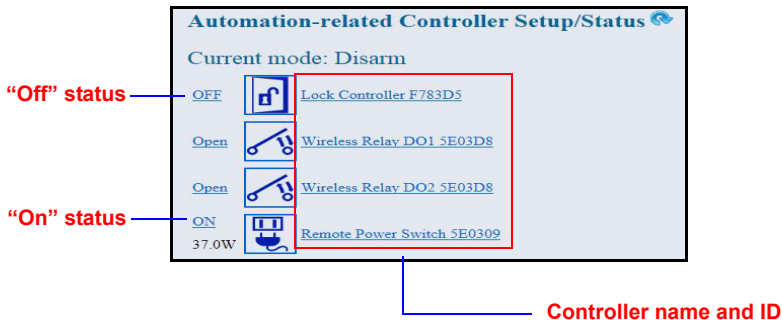


3. You can click device status to turn on/off the automation device manually.

4.6.1 Remote Power Meter Switch

This option allows you to configure the Wireless Power Meter Switch settings.

1. Click

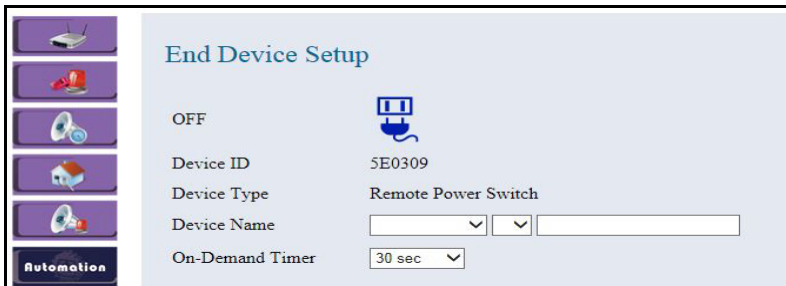

2. Select the location, device number, and specify the sensor name.

Click on the pull-down menu to see more options.

- Set the schedule to automatically switch the device on/off in the *On-Demand Timer* field.

To calculate the power consumption and cost, do the following:
The current measurement value is displayed in the *Power Value* field.

Automation

Electricity Running Cost Calculator

Power Value : 116V / 0.0A / 0.0W / 60Hz

Peak : Unit Price \$ 4.50 / ToD 09:00 ~ 18:00

Off-Peak : Unit Price \$ 3.80

Calculation Period: from 2014/02 to 2014/04
(last 3 months in max.)

Total energy used: 0.003125 kWh (Peak 0.003125 / Off-Peak 0)

Total amount: \$0.014063 (Peak \$0.014063 / Off-Peak \$0)

Delete Apply Cancel


- Enter the peak/off-peak unit price.
- Specify the peak hour time duration.
- Select the calculation period. The calculation period is from 1 to 3 months. The current measure value is displayed in the *Power Value* field.

The total energy consumption and cost are displayed in the *Total energy used* and *Total amount* fields.

- Click **Apply** to save the settings.

Note


- By this automation feature, you may power control your in-house lighting, or device remotely.

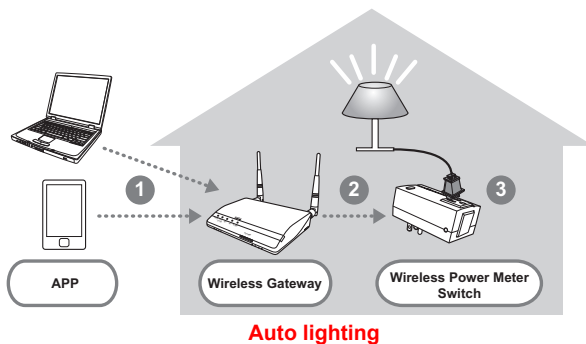

Scheduling Power On/Off Time

To set the schedule to let the device to automatically turn the switch on/off, do the following:

1. In the *On-Demand Timer* field, select **Schedule**.

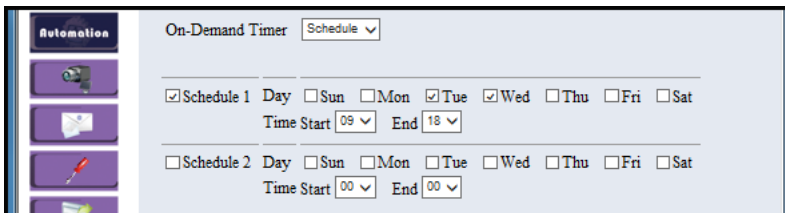


2. Check **Schedule 1/ Schedule 2** box to enable this function.
3. Choose the day(s) that you want to set. Check the respective box.
4. Set the **Start** and **End** time.
5. Click **Apply** to save the settings. If the **Schedule 1** and **Schedule 2** are overlap, the system cannot save the settings.

4.6.2 Lock Switch

This option allows you to configure the Wireless Lock Switch settings.

1. Click .

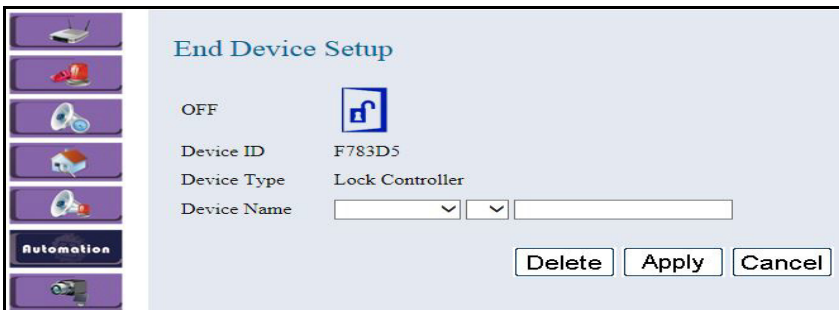

2. Select the location, device number, and specify the sensor name. Click on the pull-down menu to see more options.
3. Click **Apply** to save the settings.


Note

- The Lock Controller is used to integrate with electronic lock and transform the signal into wireless control signal. See 6.1 3rd-Party Sensor Integration on page 107.


4.6.3 Wireless Relay DO

This option allows you to configure the Wireless Relay DO settings.

1. Click .

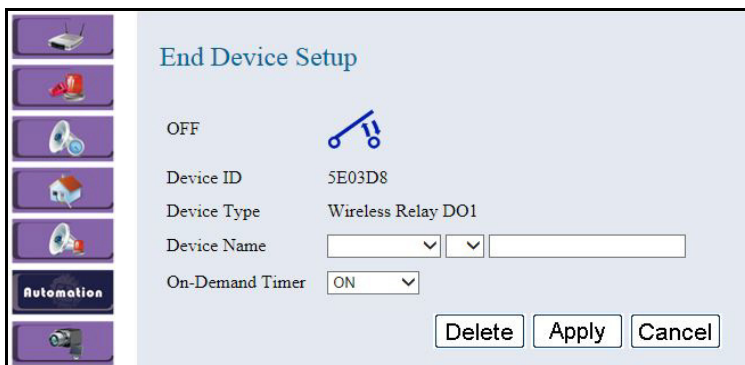

End Device Setup

OFF 

Device ID 5E03D8

Device Type Wireless Relay DO1

Device Name


On-Demand Timer

2. Select the location, device number, and specify the sensor name. Click on the pull-down menu to see more options.
3. Set the schedule to automatically switch the device on/off in the *On-Demand Timer* field. (Same as scheduling the Power Meter)
4. Click **Apply** to save the settings.

4.7 Surveillance

This option allows you to configure both the 3rd-party wireless and wired IP camera, change its settings, and view live video via web browser.


1. Be sure to complete the IP camera configuration. See 2.5 Surveillance Configuration on page 29.
2. Select **Surveillance**.

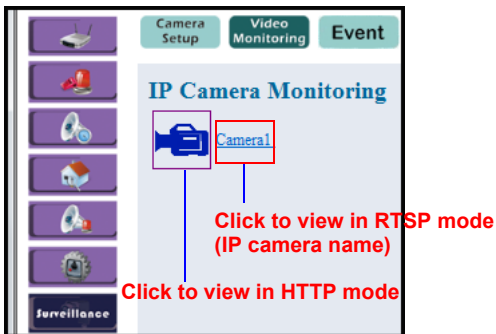

4.7.1 Setup

This option allows you to configure the third-party IP camera settings.

1. Select **Camera Setup**.

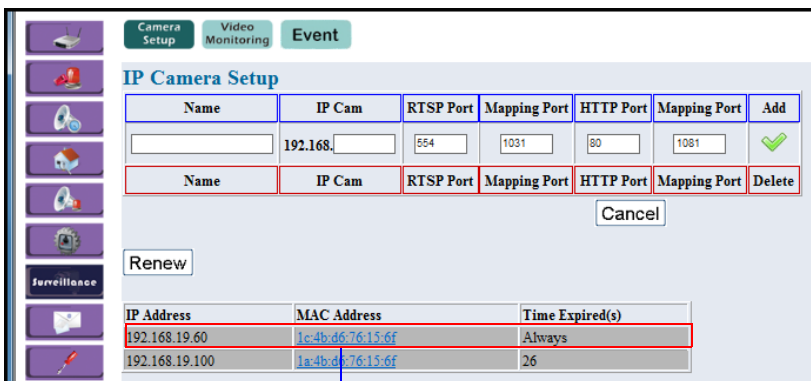

IP camera MAC address

- After the IP camera links to the Gateway via DHCP, the IP camera MAC address will appear on the list. Click **Renew** to renew the list.
- Click the MAC address and it will automatically fill the setup parameters.

The screenshot shows the 'IP Camera Setup' interface. At the top, there are tabs for 'Camera Setup', 'Video Monitoring', and 'Event'. Below the tabs is a table with columns: Name, IP Cam, RTSP Port, Mapping Port, HTTP Port, Mapping Port, and Add. The first row contains 'Camera1', '192.168.19.60', '554', '1031', '80', '1081', and a green checkmark. Below this table is a 'Renew' button. At the bottom, there is a table with columns: IP Address, MAC Address, and Time Expired(s). The first row shows '192.168.19.60', '1c:4b:d6:76:15:6f', and 'Always'. The second row shows '192.168.19.100', '1a:4b:d6:6:15:6f', and '26'.

Name	IP Cam	RTSP Port	Mapping Port	HTTP Port	Mapping Port	Add
Camera1	192.168.19.60	554	1031	80	1081	✓
Name	IP Cam	RTSP Port	Mapping Port	HTTP Port	Mapping Port	Delete

Renew

IP Address	MAC Address	Time Expired(s)
192.168.19.60	1c:4b:d6:76:15:6f	Always
192.168.19.100	1a:4b:d6:6:15:6f	26

Then confirm the **Name**, **IP address**, and **Port mapping** information. You can also change or add the IP camera parameters manually.

- Click ✓ to add the IP camera.
- Reboot both Gateway and IP camera to take effect.

The screenshot shows the 'IP Camera Setup' interface with a red warning message: 'You must reboot gateway'. Below the warning is a table with columns: Name, IP Cam, RTSP Port, Mapping Port, HTTP Port, Mapping Port, and Add. The first row contains 'Camera1', '192.168.19.60', '554', '1032', '80', '1082', and a green checkmark. Below this table is a 'Renew' button. At the bottom, there is a table with columns: IP Address, MAC Address, and Time Expired(s). The first row shows '192.168.19.60', '1c:4b:d6:76:15:6f', and 'Always'. The second row shows '192.168.19.100', '1a:4b:d6:6:15:6f', and '26'.

You must reboot gateway

IP Camera Setup

Name	IP Cam	RTSP Port	Mapping Port	HTTP Port	Mapping Port	Add
Camera1	192.168.19.60	554	1032	80	1082	✓
Name	IP Cam	RTSP Port	Mapping Port	HTTP Port	Mapping Port	Delete

Renew

IP Address	MAC Address	Time Expired(s)
192.168.19.60	1c:4b:d6:76:15:6f	Always
192.168.19.100	1a:4b:d6:6:15:6f	26

However, if the IP camera is not fully compatible with the Gateway, click “**IP camera name**” and configure the necessary settings.

The screenshot shows the 'IP Camera Setup' dialog box with the following fields and labels:

Label	Field Name	Value
IP camera name	Name	Camera1
IP address of the IP camera	IP address	192.168.19.60
	Authentication	<input type="checkbox"/> enable
	RTSP Streaming	
Access stream name	Access Name For Stream 1	live.sdp
IP camera RTSP port number	RTSP Port	554
Gateway RTSP port number	RTSP Mapping Port	1031
IP camera HTTP port number	Web Page	80
Gateway HTTP port number	Web Page Mapping Port	1081
Dual stream options	Dual-stream	<input checked="" type="checkbox"/> available
Access stream name	Access Name For Stream 2	live2.sdp

Buttons: Apply, Cancel

If there needs Authentication for login IP camera in RTSP mode, check **enable** in the *Authentication* field and enter the Username and Password.

6. Click **Apply** to save the settings.

4.7.2 Monitoring


This option allows you to view live video via either RTSP mode or HTTP mode.


1. To view live video, select **Monitoring**.
2. Click **“IP camera name”** to display video via RTSP mode.

Click  to display video via HTTP mode.


Note

- If you cannot view video in RTSP mode, install the VLC software first into your computer. To download the VLC software, visit <http://www.videolan.org/vlc>.
- The Gateway can only support the video recording up to 4 IP cameras.
- If you using IE 10 browser, enable the “Display all website in Compatibility View” option in **Tools > Compatibility View Setting**.

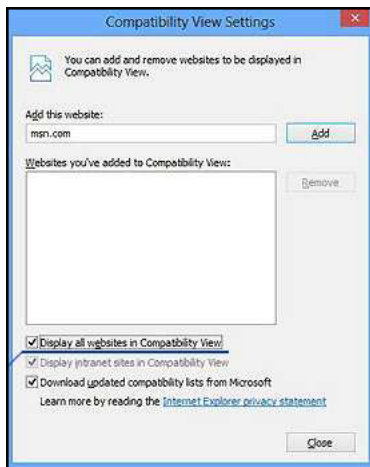

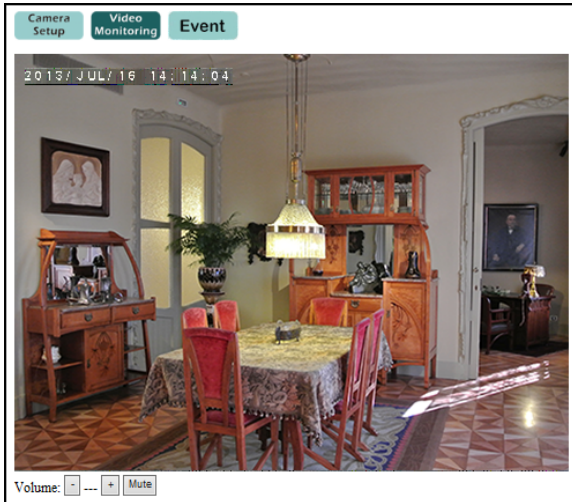

Live view via RTSP mode

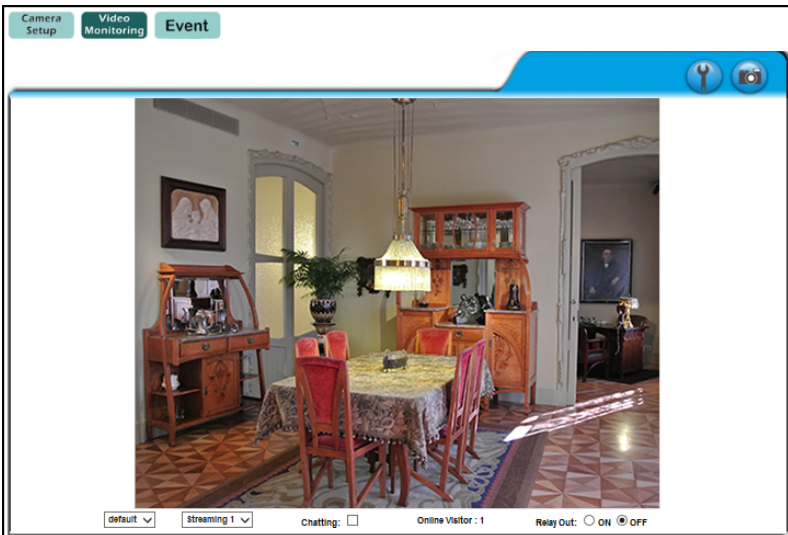

Live view via HTTP mode



4.7.3 Event

This option allows you to view the recorded videos or save the recorded file into your computer.

1. To view recorded videos, select **Event**.



Camera Setup		Video Monitoring		Event	
Event List				Playback	Export
1	04/22/2014 12:04:32	Camera2	Contact Sensor-0xF786B3		
2	04/22/2014 12:04:29	Camera1	Contact Sensor-0xF785BA		
3	04/22/2014 12:02:52	Camera2	Contact Sensor-0xF786B3		
4	04/22/2014 12:02:50	Camera1	Contact Sensor-0xF785BA		
5	04/22/2014 11:42:09	Camera2	Contact Sensor-0xF786B3		
6	04/22/2014 11:41:55	Camera1	Contact Sensor-0xF785BA		
7	04/22/2014 11:40:12	Camera2	Contact Sensor-0xF786B3		
8	04/22/2014 11:40:07	Camera1	Contact Sensor-0xF785BA		

2. Click  to play back the recorded file.
3. Right-click on  and select “Save target as” to export the file into your computer.

Note

- *The latest 50 events will appear on the Event List and all events are automatically saved into the SD card installed on the Gateway. The maximum memory card size is 32 GB.*
- *If the recorded file is H.264, please rename the file extension name to “.h264” when you save it to your computer/notebook.*

4.8 Notification

This option allows you to configure e-mail notification settings.

4.8.1 Email

This option allows you to configure e-mail notification settings.

1. Select **Notification > Email**.

Notification / Email

Email Service 1 Enable

SMTP Server (IP or Domain Name)

Authentication Yes

User name

Password

Email Address

Email Service 2 Enable

SMTP Server (IP or Domain Name)

Authentication Yes

User name

Password

Email Address

Email Service 3 Enable

SMTP Server (IP or Domain Name)

Authentication Yes

2. Check **Enable** to enable e-mail notification service.
3. Enter SMTP server's IP address or Domain Name in the *SMTP Server* field.
4. Check **Yes** to enable SMTP authentication once required.
5. Enter username and password in the *User name* and *Password* fields once required.
6. Enter the e-mail address of the recipient in the *Email Address* field.
The e-mail message can be sent out to up to 3 recipients concurrently.
7. Click **Apply** to save the settings.

4.9 Security Zone

This option allows you to configure the security zone.

1. Select **Security Zone**.

2. Select the location.
3. Click on the pull-down menu to see more options.
To customize the zone name, select **Other** and enter the desired zone name.

Note

- *The maximum input data for the customized zone name is 10 characters.*


4. Check the desired security zone area to enable this zone while partial arming.
5. Click **Apply** to save the settings.

Note

- *When you set up the Security Zone Name, you can define each sensor's "security zone" at sensor's setup page. Once you check the box () of the security zone, you can "Partial Arm" the selected zone as you want.*

4.10 Logout

This option allows you to log out of the system.
Select **Logout**.

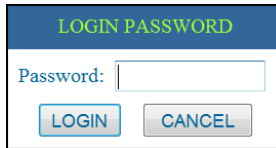

A dialog box titled "LOGIN PASSWORD" with a blue header. Below the header, the text "Password:" is followed by a text input field. At the bottom of the dialog, there are two buttons: "LOGIN" and "CANCEL".


Chapter 5: Panel Console Management

Using wireless panel console (LA5572), you can also operate the system functions.


5.1 Device Configuration

This section provides a step-by-step guide to configure LA5572 with the gateway.

- 1.> Press the **SET** button on the gateway for 2 seconds. The Alarm LED lights red shortly.
- 2.> Press the **SET** button on the Panel Console. The “**Connect to LA5570...**” appears on the screen.

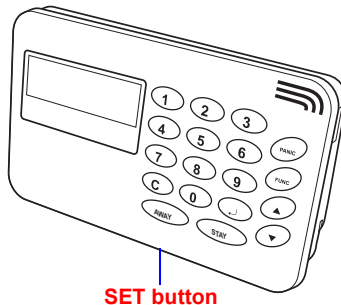


- 3.> Wait for the date, time, temperature, humidity and system status appear on the Panel Console, indicating the binding is completed.
If the Console Panel displays “**Connect to LA5570...Fail!**”, repeat the above steps until the binding is completed.
- 4.> Mount the Panel Console on the wall.

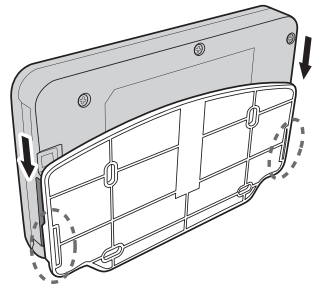

Note

- LA5572 supports both city power and battery (alkaline AA battery x 2, non-rechargeable, for 2 hours emergency use).
- Once LA5572 is unexpectedly unplugged from the bracket under system arm mode, the tamper-proof detection will trigger the alarm.

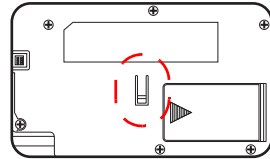


5.2 Function buttons

The following table describes the LA5572 function buttons:

Button	Description
	Press to enable/disable Full arm mode.
	Press to enable/disable Partial arm mode.
	Press to trigger the emergency alarm.
	<ul style="list-style-type: none"> • Press to enter the configuration mode. • Press again to exit.
	Scroll up or Backspace key.
	Scroll down key.
	Enter key.
	Cancel or Back key.
	Keypad.

5.3 Menu Navigation

Press the  button and key in the password to enter the menu mode.

> Automation
 Sensor

Menu options

The following table describes the available menu options:

Menu	Sub-menu	Description
Automation	Automation List	Display a list of binding automation-type devices and display the device status.
Sensor	Sensor List	Display a list of binding sensors and display the device status.
Siren	Siren List	Display a list of binding sirens and display the device status.
System	Password	Change the password. By default, the password is "123".
	System Clock	Adjust the date and time.
	Security Zone	Display the available zone list and display the zone status.
	Arm Delay Setup	Set the alarm delay time while triggering the selected sensors. Give you an option to add or remove the selected sensor.
	Event Logs	Display the latest 50 entries of system event logs.
	Information	Display the system version and network settings.


Note

- Please refer to 5.9 Device Operation Detail on page 106 for more information.

5.4 Using the AWAY/STAY Button


To activate the alarm:

Press the **AWAY** or **STAY** button to enable choose the arm mode (AWAY means Full ARM, STAY means Partial ARM) mode.

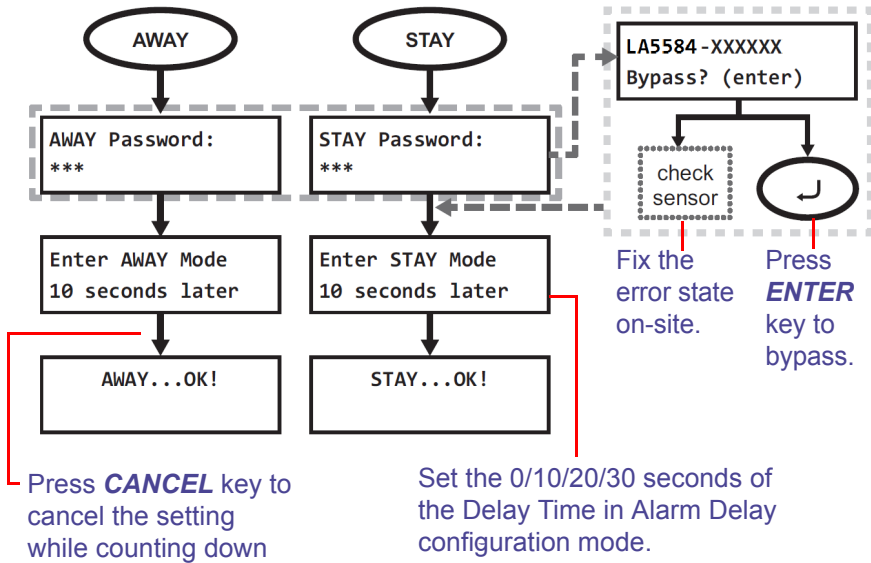

To deactivate the alarm:

Press the **AWAY** or **STAY** button again to disable the respective arm mode

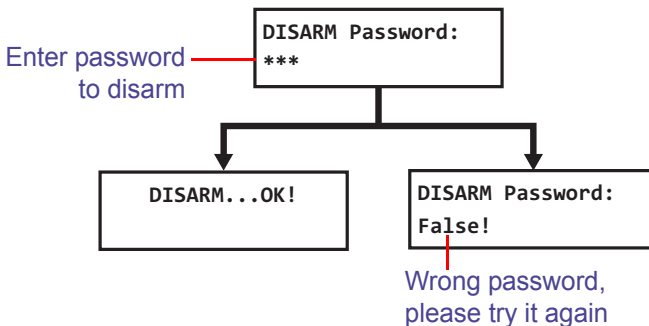


5.5 Using the Panic Button

To trigger emergency alarm immediately:

- Press and hold the  button for 3 seconds.

To deactivate the alarm:

- Enter the password and press the  button.



5.6 Using the Function Button

Press the  to enter the operation mode.



5.7 Operating Tips

The following messages that you may meet while using LA5572.

- a. When the battery power is low, a “Low Battery!” message will display on the screen to remind.

```
LA5572
BATTERY LOW!
```


- b. If you remove the wall-mount bracket while arming or other device tamper proof (i.e. LA5584), the siren will be triggered automatically. Enter the password directly to turn it off.



- c. Once the sensor is disconnected from the gateway, it will indicate by a strike-through as below. Check the sensor power status or re-join it with the gateway.


```
> LA5584-000079
  LA5584-00006C
```

- d. When the alarm is triggered, Panel Console will be sync up and display the alarm message on the screen. Enter the password directly to turn it off.

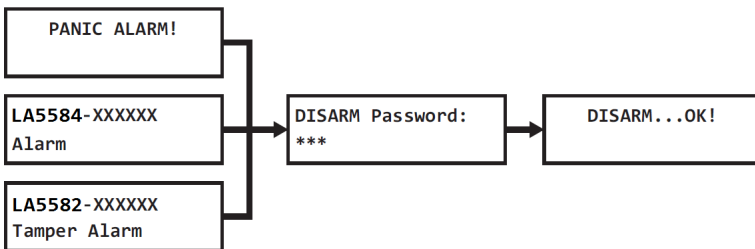

5.8 Hotkey

With the hotkey features, you can use a combination of keys to access or control the specific device.

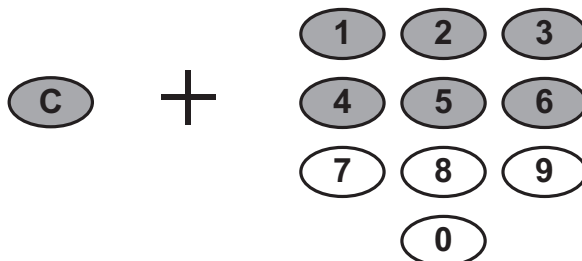

The hotkey list as the following:

Combination keys	Device Type
"C" + "1"	Wireless Temperature/Humidity Sensor
"C" + "2"	Wireless Power Switching
"C" + "3"	Wireless Lock Switch
"C" + "4"	Wireless Relay Switch
"C" + "5"	Wireless Alarm Switch
"C" + "6"	Wireless CO ₂ , Temperature & Humidity Sensor

5.9 Device Operation Detail

Main Function	Sub-Tree 1	Sub-Tree 2	Sub-Tree 3
Automation	LA5578-xxxxxx	LA5578 Status LA5578 Value	LA5578 Status: Open vClose
	LA5580-xxxxxx	LA5580 Status: Open vClose	LA5580 Value: 220V / 1.5A / 330W
	LA5577-xxxxxx	LA5577-xxxxxx DI1 LA5577-xxxxxx DI2 LA5577-xxxxxx DO1 LA5577-xxxxxx DO2	LA5577 Status: Open vClose
	LA5575-xxxxxx	LA5575-xxxxxx DO1 LA5575-xxxxxx DO2	LA5575 Status: Open vClose
Sensor	LA5573-xxxxxx		
	LA5584-xxxxxx	LA5584 Status: Open vClose	
	LA5582-xxxxxx		
	LA5587-xxxxxx		
Siren	LA5576-xxxxxx	LA5576 Status: Open vClose	

Chapter 6: Appendix


6.1 3rd-Party Sensor Integration

The following sensor types are designed to be integrated with the 3rd-party sensor once required.


Sensor type	3rd-party sensor
Wireless AI Transducer	i.e. 4-20mA CO Detector, Gas Detector, or Temperature Sensor
Wireless DI Transducer	i.e. NC/NO CO Detector, Smoke Detector, Fire Alarm, or Gas Detector
Wireless Lock Switch	Electronic Lock
Wireless Relay Switch	
Wireless Power Relay Module	

Contact your installer for detail instructions about the 3rd-party sensor installation.


AI/DI Transducer and Lock Switch Applications

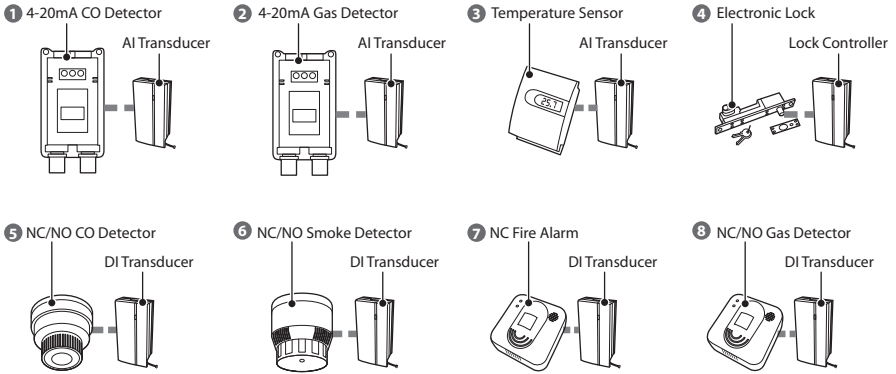


AI Transducer Integration (Gas Detector)

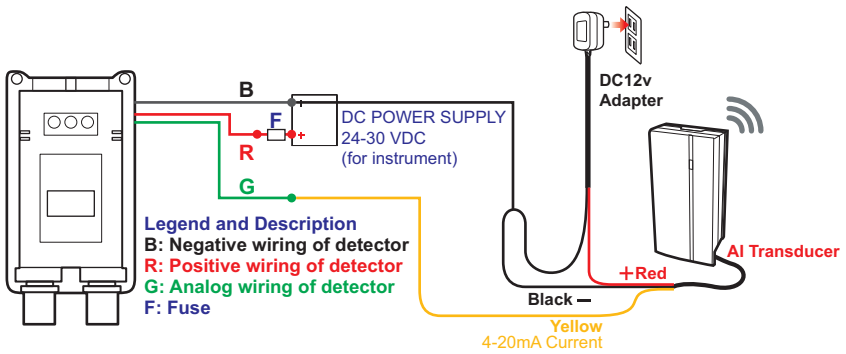


AI Transducer Integration (Temperature Sensor)

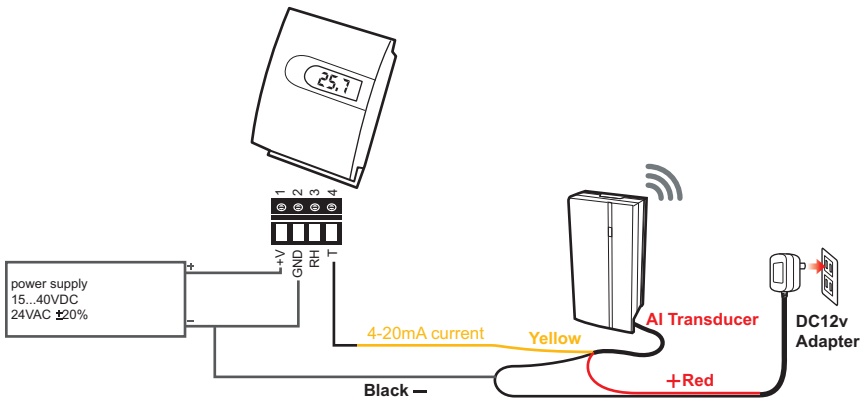


DI Transducer Integration (CO Sensor)

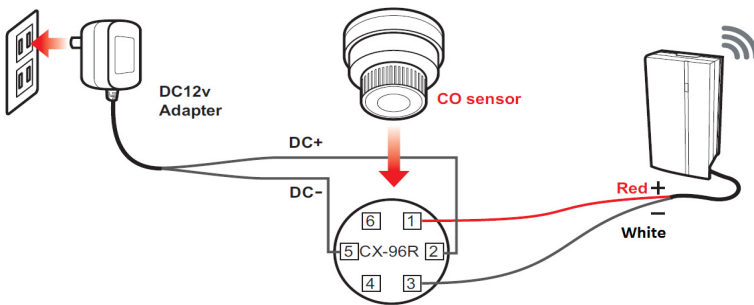


DI Transducer Integration (Smoke Sensor)

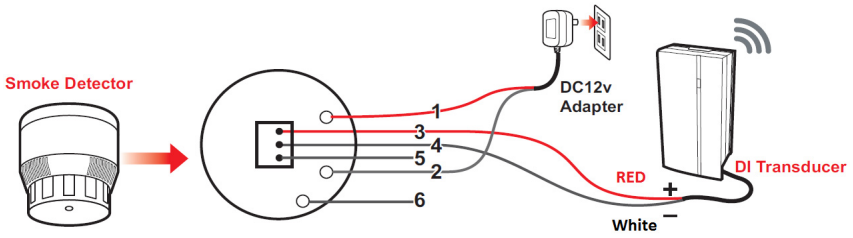


Lock Switch Integration

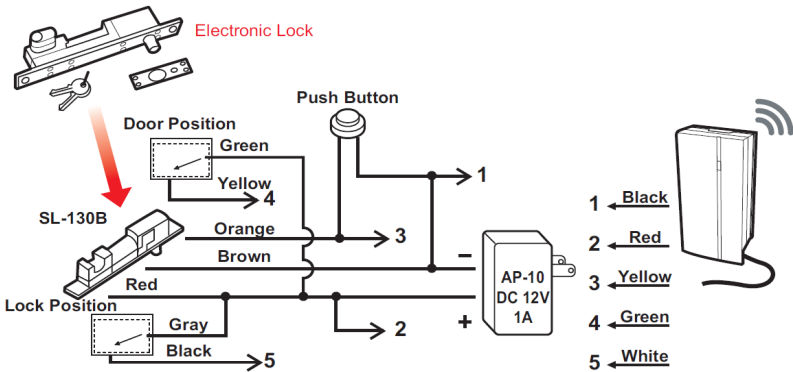

Relay Switch (LA5577)

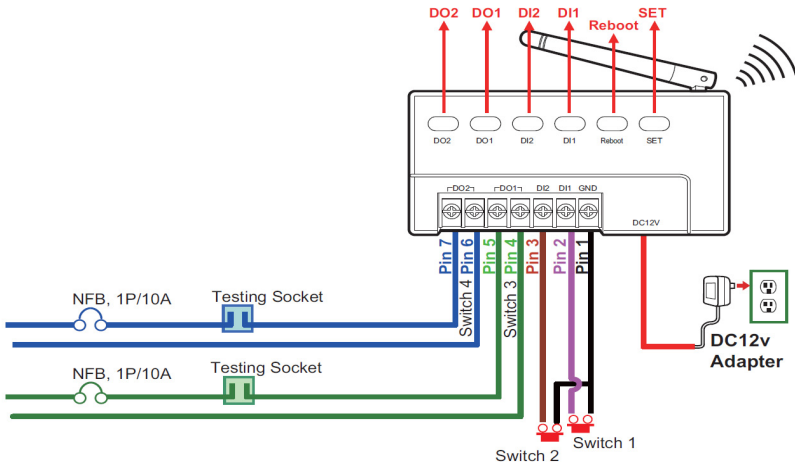
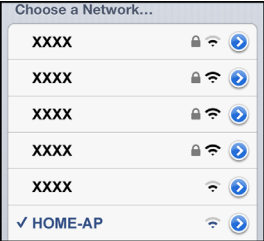



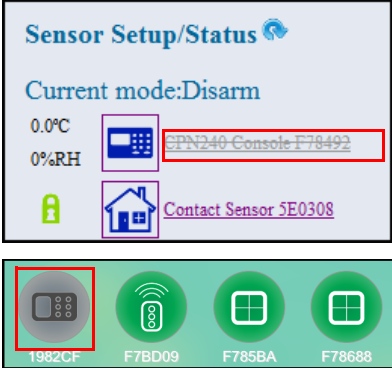
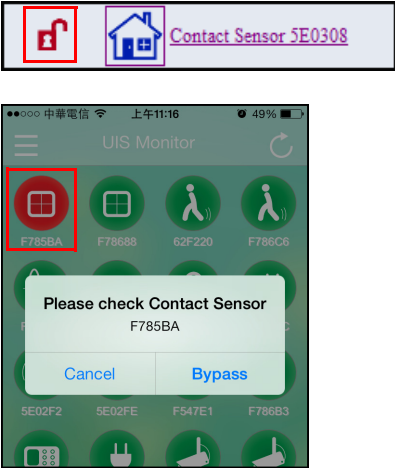
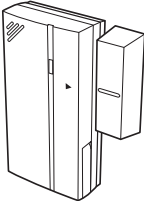
Power Relay Module (LA5575)


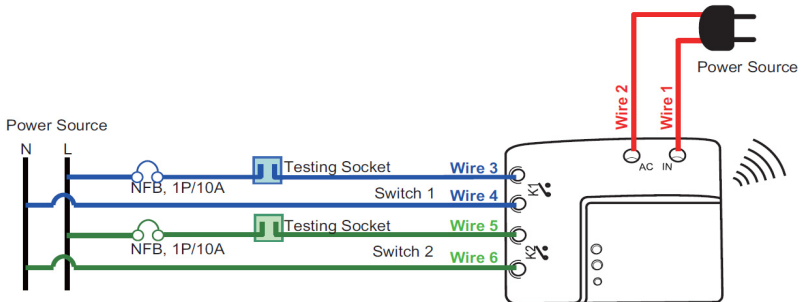



6.2 Troubleshooting

This section contains a common troubleshooting tips that you may meet while using WHTS system. If you need additional helps, please contact our partner.

Problem	Solutions
<p>Cannot access the WHTS web console or APP.</p>	<p>Check if the AP (SSID) is correct and it is properly connected to the Gateway.</p>  
<p>The device is disabled while partial arming.</p> 	<p>Make sure this device is not in the selectable security zone.</p> <p>Note: When the Contact Sensor is not assigned in the security zone, it will not arm when partial arming.</p>

Problem	Solutions
<p>The device is disconnected.</p> 	<p>Re-bind this device to re-activate the connection. See 2.2 Device Joining on page 12.</p>
<p>The Contact Sensor status is in “open” mode.</p> 	<p>Place the magnet closer to the Contact Sensor main unit and click Refresh on the web console.</p> 

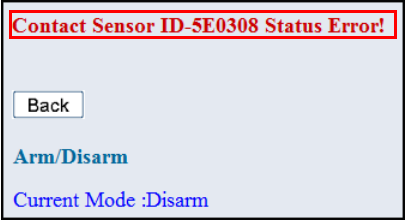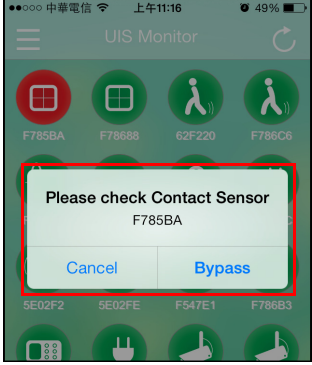Problem	Solutions
<p>Got an error message when enabling the arm mode to Partial Arm or Full Arm.</p>  	<p>Set the Contact Sensor to “close” mode.</p> <p>Note: When the Contact Sensor is in “open” mode, you cannot enable Partial Arm and Full Arm mode.</p>
<p>Cannot access the WHTS web console even if the AP (SSID) is correct.</p>	<p>Unplug the power adapter from the Gateway and plug in again to reboot the system.</p>

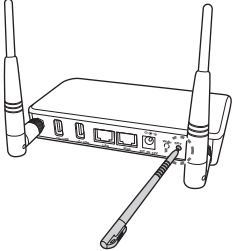Problem	Solutions
Forgot the password.	<p>Press the SET button for 15 seconds to restore the factory default settings.</p> 
Cannot upgrade the Gateway firmware.	<p>A password is required before updating the firmware. Please contact the manufacturer for more information.</p>