
PALLETISER COBOT-POWERED SIMPLICITY

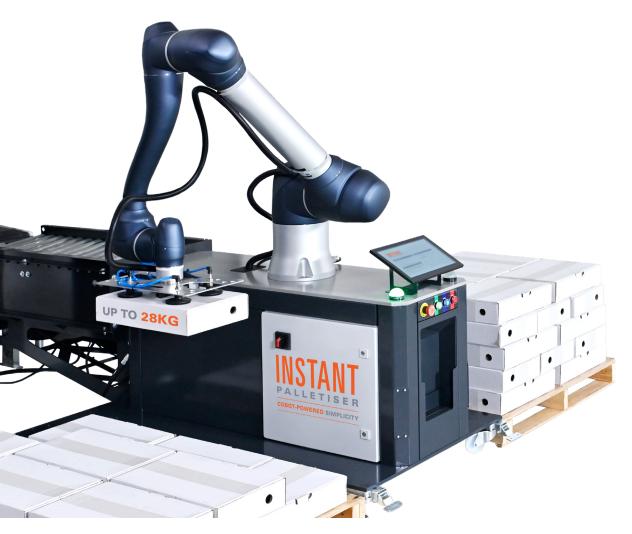





NO PROGRAMMING NEEDED



PALLETISES IN TWO LOCATIONS

- The easiest palletiser you'll ever use
- No programming required
- No safety fencing required*
- Handles up to 28kg cases / 25kg option
- Stacks in one or two locations
- Stacks up to 8 cycles per minute

- Stacks at heights up to 2,500mm
- Small footprint of 3.61 m x 2.63 m with two pallets in position
- Delivers perfectly-aligned cases
- * Uses built-in safety zone scanners for speeds over 5 cases per minute.



Get started in minutes

Instant Palletiser is the most hassle-free palletiser available anywhere. Simply connect to power and air, input the case/pallet size and let it do the rest.


Cobot palletising will help you overcome labour shortages, reduce risky repetitive tasks and labour hours at the end of the line and deliver a more consistently-stacked pallet. Here's a unique cobot palletiser: Stronger, safer and requires no programming, teaching or calibration, with a total setup time of less than five minutes

Fast and Compact

Instant Palletiser has a maximum cycle rate of 8 cases per minute and a case payload of 28kg. It stacks up to 1,550mm high with a 2,500mm option. The entire footprint is 3,607 x 2,636mm, including two pallets.

Programming-Free Startup

Instant Palletiser requires zero programming, training or

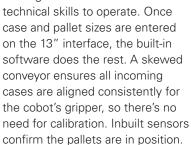

Continuous Operation

It can stack at two pallet locations, allowing continuous operation. Or it can be configured to stack two different SKUs or even use one location for slip sheets.




AMR-Ready

Optional docking stations make Instant Palletiser work cells ready for pallet positioning by autonomous mobile robots (AMRs).

Safer for People

Physical safety is a critical issue on any factory floor. Instant Palletiser has been fully risk-assessed to comply with

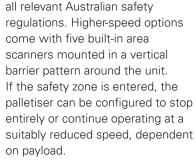

Options

| Model | Description | Pay- load kg | Cycle Rate Cases per/min | Pallet Stack Height mm |
|-------------|--|--------------------|-----------------------------------|---------------------------------|
| Instant S | Cobot safety, without zone scanners | 28 | 5.0 | 1,550 |
| Instant HS | Includes cobot safety and five vertical zone scanners | 28 | 8.0 | 1,550 |
| Instant THS | Includes zone scanners and telescopic mast | 28 | ~6.0 | 2,500 |

5 Steps to Instant Palletising

- 1. Roll into place and connect to air and power
- 2. Power up the unit
- 3. Enter the case size and weight, select pallet type
- 4. Let the software generate the stacking strategy
- 5. Start palletising!



sales@foodmach.com.au | www.foodmach.com.au

SCAN FOR MORE

