



Perpetual Desk Calendar

Thanks for purchasing one of our perpetual desk calendars!

This perpetual desk calendar is very simple to use - just slide the covers over to the right location for the current month! The top track shows the month. The bottom track shows all the days in the current month. Just slide it until the "1" on the first row is under the first day of the month for that month. To help you, the table below shows this for the next 21 years.

First Day of the Month, 2020-2040

	Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sep	Oct	Nov	Dec	
2020	Wed	Sat	Sun	Wed	Fri	Mon	Wed	Sat	Tue	Thu	Sun	Tue	2020
2021	Fri	Mon	Mon	Thu	Sat	Tue	Thu	Sun	Wed	Fri	Mon	Wed	2021
2022	Sat	Tue	Tue	Fri	Sun	Wed	Fri	Mon	Thu	Sat	Tue	Thu	2022
2023	Sun	Wed	Wed	Sat	Mon	Thu	Sat	Tue	Fri	Sun	Wed	Fri	2023
2024	Mon	Thu	Fri	Mon	Wed	Sat	Mon	Thu	Sun	Tue	Fri	Sun	2024
2025	Wed	Sat	Sat	Tue	Thu	Sun	Tue	Fri	Mon	Wed	Sat	Mon	2025
2026	Thu	Sun	Sun	Wed	Fri	Mon	Wed	Sat	Tue	Thu	Sun	Tue	2026
2027	Fri	Mon	Mon	Thu	Sat	Tue	Thu	Sun	Wed	Fri	Mon	Wed	2027
2028	Sat	Tue	Wed	Sat	Mon	Thu	Sat	Tue	Fri	Sun	Wed	Fri	2028
2029	Mon	Thu	Thu	Sun	Tue	Fri	Sun	Wed	Sat	Mon	Thu	Sat	2029
2030	Tue	Fri	Fri	Mon	Wed	Sat	Mon	Thu	Sun	Tue	Fri	Sun	2030
2031	Wed	Sat	Sat	Tue	Thu	Sun	Tue	Fri	Mon	Wed	Sat	Mon	2031
2032	Thu	Sun	Mon	Thu	Sat	Tue	Thu	Sun	Wed	Fri	Mon	Wed	2032
2033	Sat	Tue	Tue	Fri	Sun	Wed	Fri	Mon	Thu	Sat	Tue	Thu	2033
2034	Sun	Wed	Wed	Sat	Mon	Thu	Sat	Tue	Fri	Sun	Wed	Fri	2034
2035	Mon	Thu	Thu	Sun	Tue	Fri	Sun	Wed	Sat	Mon	Thu	Sat	2035
2036	Tue	Fri	Sat	Tue	Thu	Sun	Tue	Fri	Mon	Wed	Sat	Mon	2036
2037	Thu	Sun	Sun	Wed	Fri	Mon	Wed	Sat	Tue	Thu	Sun	Tue	2037
2038	Fri	Mon	Mon	Thu	Sat	Tue	Thu	Sun	Wed	Fri	Mon	Wed	2038
2039	Sat	Tue	Tue	Fri	Sun	Wed	Fri	Mon	Thu	Sat	Tue	Thu	2039
2040	Sun	Wed	Thu	Sun	Tue	Fri	Sun	Wed	Sat	Mon	Thu	Sat	2040
	Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sep	Oct	Nov	Dec	

If you have a version with the clock - that's also simple to use! To set the time, gently pull out the clock from the frame. Remove the rubber gasket around the clock. Gently pull the setting wheel out until it clicks. Turn the setting wheel until the time is correct. Then push it back in to reactivate the clock. Add the gasket and gently push the clock back in place. To replace the battery, gently remove the back silver cover - you may need a small screwdriver - and then you can access the battery. Please be gentle with the clock - it's delicate!

If you have any issues with the calendar, please send us an email at hello@footeandflame.com.au and we will resolve it for you!