

			Service Intervals (Odometer reading or months, whichever occurs first)															
			Months															
			12	24	36	48	60	72	84	96	108	120	132	144	156	168		
Odometer Reading × 1000 km			15	30	45	60	75	90	105	120	135	150	165	180	195	210		
OPERATIONS INSIDE THE VEHICLE																		
Check brake pedal and clutch pedal for free play			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Check parking brake lever stroke and play			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Replace air purifier filter			R	R	R	R	R	R	R	R	R	R	R	R	R	R		
Check all lights			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Check all controls for correct operation (wipers/ washers a/c etc)			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Check seatbelts for correct function			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
OPERATIONS OUTSIDE THE VEHICLE																		
Check wheel alignment (visual inspection for tyre wear)			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Check front and rear wheel bearings for play			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Check brake hoses and pipes for leakage			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Check brake pads and discs for wear			Normal usage		I :Every 7,500km or every 6 months													
			Severe usage															
Check fuel hoses and pipes for leakage or deterioration			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Check tyre pressures			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Check wiper rubbers			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
OPERATIONS AFTER ENGINE IS WARMED UP																		
Check fluid level in automatic transmission and CVT			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Change automatic transmission fluid and CVT fluid			Normal usage		R :Every 90,000km													
			Severe usage		R :Every 45,000km													
Change engine oil		Petrol-powered vehicles	API classification: "For service SM " or higher ACEA classification: "For service A1/B1, A3/B3, A3/B4 or A5/B5 "		Normal usage		R	R	R	R	R	R	R	R	R	R	R	
					Severe usage		R :Every 7,500km											
		Diesel-powered vehicles	JASO classification: "For service DL-1 " ACEA classification: "For service C1, C2, C3 or C4 "		Normal usage		R	R	R	R	R	R	R	R	R	R	R	R
					Severe usage		R :Every 7,500km											
Replace engine oil filter			Normal usage		R R R R R R R R R R R R R R R R													
			Severe usage		R :Every 7,500km													
Check engine idling speed			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Check CO concentration (petrol-powered vehicles)			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Check exhaust gas recirculation (EGR) system			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
OTHERS																		
Check body condition for damage			I :Every year															
Perform common rail engine small injection quantity learning (Diesel-powered only)			I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Road test			I	I	I	I	I	I	I	I	I	I	I	I	I	I		

(Servicing beyond 210,000km or 168 months should continue to be performed as nominated, commencing from the 45,00km schedule)

NOTE

*1: If found any noise from the valve any time, please check the valve clearance.

"Severe usage" specifications apply to only vehicles used under severe operating conditions.

(1) Driving in dusty area.

(6) Towing of a trailer.

(2) Driving on rough roads, on submerged roads, or hilly areas.

(7) Use as a taxi or as a rent-a-car.

(3) Driving in cold zones.

(8) When more than 50% of the driving is in heavy city traffic and the ambient temperature is 32° or more.

(4) Engine idling for a long time, or short-distance travel during cold weather.

(9) When more than 50% of the driving is at 120km/h or more and the ambient temperature is 30° or more.

(5) Frequent sudden application of brakes.