

		Service Intervals (Odometer reading or months, whichever occurs first)															
		Months	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180
Odometer Reading × 1000 km		15	30	45	60	75	90	105	120	135	150	165	180	195	210	225	
OPERATIONS INSIDE THE VEHICLE																	
Check brake pedal and clutch pedal for free play			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check parking brake lever stroke and play			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check all lights			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check all controls for correct operation (wipers/washers/ a/c etc)			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check seatbelts for damage and correct functions			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
OPERATIONS OUTSIDE THE VEHICLE																	
Check wheel alignment (visual inspection for tyre wear)			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check front and rear wheel bearings for play			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check brake hoses and pipes for leakage			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check brake pads and discs for wear		Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
		Severe usage	I :Every 7,500km or every 6 months														
Check brake shoe linings and drums (drum in disc) for wear		Normal usage		I		I		I		I		I		I		I	
		Severe usage	I :Every 7,500km or every 6 months														
Check fuel hoses and pipes for leakage or deterioration			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check tyre pressures			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check wipers rubbers			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
OPERATIONS AFTER ENGINE IS WARMED UP																	
Check fluid level in automatic transmission		except V5AWF model	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check automatic transmission for fluid leakage (In case of leakage, check the fluid level)		V5AWF model	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Replace automatic transmission fluid		V5AWF model															
		Normal usage	R :Every 195,000km														
		Severe usage	R :Every 90,000km														
Replace engine oil (4G6 engine)		API classification: " For service SM" or higher ACEA classification: " For service A1/B1, A3/B3, A3/B4 or A5/B5 "	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R
		Severe usage	R :Every 7,500km														
Replace engine oil (4N1 engine)		JASO classification : "For service DL-1" ACEA classification : "For service C1, C2, C3 or C4"	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R
		Severe usage	R :Every 7,500km														
Replace engine oil filter			Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R
		Severe usage	R :Every 7,500km														
Check engine idling speed			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check CO concentration (petrol-powered vehicles)		4G6 engine	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check exhaust gas recirculation (EGR) system		4G6 engine	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
OTHERS																	
Check body condition for damage			I :Every year														
Perform common rail engine small injection quantity learning		4N1 engine	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Road test			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

(Servicing beyond 225,000km or 180 months should continue to be performed as nominated, commencing from the 30,00km schedule)

NOTE *1: If found any noise from the valve any time, please check the valve clearance.

*Severe usage" specifications apply to only vehicles used under severe operating conditions. Severe operating conditions include the following cases :

- | | |
|--|--|
| (1) Driving in dusty area. | (6) Towing of a trailer. |
| (2) Driving on rough roads, on submerged roads, or hilly areas. | (7) Use as a taxi or as a rent-a-car. |
| (3) Driving in cold zones. | (8) When more than 50% of the driving is in heavy city traffic and the ambient temperature is 32° or more. |
| (4) Engine idling for a long time, or short-distance travel during cold weather. | (9) When more than 50% of the driving is at 120km/h or more and the ambient temperature is 30° or more. |
| (5) Frequent sudden application of brakes. | |