

I : Inspection L : Lubrication R : Replace or change ● : Applicable None : Not applicable

Items	Months Odometer Reading	Service Intervals (Odometer reading or months, whichever occurs first)																
		12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	195	210
	× 1000 km	15	30	45	60	75	90	105	120	135	150	165	180	195	210			

OPERATIONS INSIDE THE VEHICLE

Check brake pedal and clutch pedal for free play		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check operation of all functions and lights		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check parking brake lever stroke and play		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Replace air purifier filter	Normal usage		R		R		R		R		R		R		R		R
	Severe usage	R : More frequently															

OPERATIONS OUTSIDE THE VEHICLE

Check wheel alignment (Visual inspection for tyre wear)			I		I		I		I		I		I		I		I
Check tyre pressures		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check front and rear wheel bearings for play					I						I				I		
Check brake hoses and pipes for leakage		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check brake pads and discs for wear	Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	Severe usage	I : Every 7,500km or every 6 months															
Check fuel hoses and pipes for leakage or deterioration			I		I		I		I		I		I		I		I

OPERATIONS AFTER ENGINE IS WARMED UP

Check automatic transmission for fluid leakage (In case of leakage, check the fluid level)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Replace automatic transmission fluid Note : Transmission oil filter replacement required	Normal usage	R : Every 90,000km															
	Severe usage	R : Every 45,000km															
Replace engine oil	Normal usage	R : Every 15,000km or every 12 months															
	Severe usage	R : Every 7,500km															
Replace engine oil filter	Normal usage	R : Every 15,000km or every 12 months															
	Severe usage	R : Every 7,500km															

OTHERS

Check body condition for damage		I : Every year															
Reset service interval reminder		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Road test		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

NOTE:

*1 : If found any noise from the valve any time, please check the valve clearance.
"Severe usage" specifications apply to only vehicles used under severe operating conditions.
Severe operating conditions include the following cases :
(1) Driving in a dusty area or in an area in which the vehicle is likely to be exposed to salty air or brine.
(2) Driving on rough roads, on submerged roads, or hilly areas.
(3) Driving in cold zones.
(4) Engine idling for a long time or short-distance travel during cold weather.
(5) Frequent, sudden application of brakes.
(6) Towing of a trailer.
(7) Use as a taxi or as a rent-a-car.
(8) More than 50% of operation time in heavy city traffic in hot temperatures of 32°C or higher.
(9) More than 50% of operation time at speeds of 120km/h or higher in hot temperatures of 30°C or higher.
(10) Operation under excessive load.

OILS AND FLUIDS

Part Number	Description	Specification
7711943734	Engine oil DSL R9M 1.6	MM0720, 5W30 C4
7711943728	Engine oil DSL M9R 2.0	MM17, 5W30 C3
AU901456	Coolant	Glacool RX type D
AU901457	Gear oil ATF	DCT MV
AU901461	Gear oil MTF	NFJ 75W85
AU901462	Reagent Fluid	AdBlue 15 Ltr container
MR936863	Brake Fluid	Dot4
Power Assist Fluid (Filled for life)		Dexron II or III