


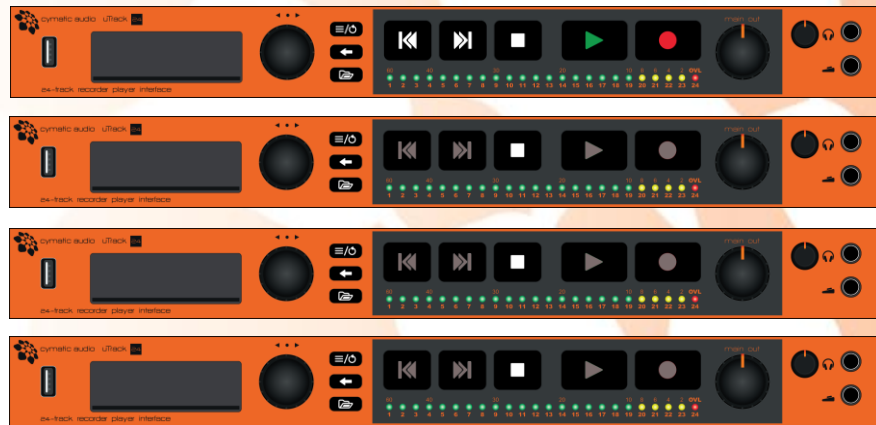

uTrack24



SYNC
uTrack24
June 2016

Table of Contents

Table of Contents	2
1. INTRODUCTION	3
2. NETWORK SETUP	4
3. SYNC GROUPS	5
3.1. Creating a SYNC Group	5
3.2. Dissolving a SYNC Group	6
4. AUDIO AND SYNCHRONIZATION	6
5. RECORDING	7
6. uTOOL	8
6.1. Import Recordings	8
6.2. Export Playback Content	9
7. PLAYBACK	10
8. DEVICE FAILURE	11
9. uREMOTE	11
10. USE CASES	12
10.1. Recording 32 Channels (Stacked Mode)	12
10.2. Recording 24 Channels (Redundant Mode)	14
10.3. Playback 56 Channels (Stacked Mode)	16
10.4. Playback 24 Channels (Redundant Mode)	18
11. Legal Disclaimer	19

1. INTRODUCTION

With the addition of the SYNC group feature, uTrack24 turns into a scalable recorder and player system, adding up to up to 96 audio channels, or offering redundant channels and still keeping the simple and intuitive handling that you already are familiar with.

The SYNC group feature does not rely on using multiple clock and communication cables. Instead, connect multiple uTrack24 units through the Ethernet port and assign them to a SYNC group – that's all.

The basic clocking technology of our SYNC feature is the same IEEE 1588 (PTP) standard as used by the open AES67 standard and guarantees perfect frequency and phase sync across the network. A standard Ethernet cable is all it takes to turn two uTrack24 units into a 48-channel recorder/player, and to get an even higher channel count, connect up to 4 uTrack24 units to a standard Ethernet switch.

In a SYNC group, one uTrack24 unit takes the role as the MASTER, and all other units are numbered SLAVES. Operate your large-scale recorder/player on the MASTER as you do in stand-alone mode, and the SLAVES will follow the action. The uTrack24 units can even run in different channel configurations, giving you the flexibility to create your perfectly sized recorder/player.

This manual will show you


- how to setup your network
- how to create a SYNC group
- how to setup your uTrack24 units, also with regards to audio I/O and clock sources
- how to operate your SYNC group, also through uRemote
- how uTool helps you to import/export SYNC group content
- examples of different use cases



Note: If you are not yet familiar with uTrack24 operation, please read the uTrack24 user manual first.


2. NETWORK SETUP

The simplest SYNC group setup consists of two uTrack24 units connected over an Ethernet cable:

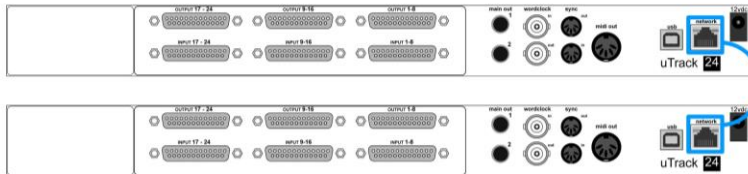

This setup does not require any manual configuration – the units will automatically connect and you can instantly proceed defining the SYNC group and assign one unit as the MASTER who's buttons are used to control your 48-track recorder/player. However, this setup does not allow using uRemote because the system is not connected to WLAN.

To increase the system's channel count, and to add WLAN for uRemote control, connect your uTrack24 units to a standard WLAN router:

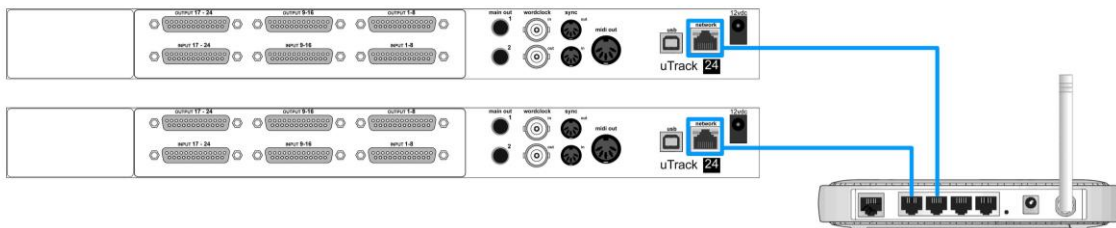

uTrack24 units feature a DHCP client, so all units will seamlessly connect if the WLAN router has DHCP server enabled. Please read the WLAN router user manual and check these settings

- DHCP server should be activated
- security settings should be set to prevent unauthorized access



Note: Do not plug or unplug network audio devices (like uTrack24) during active recording or playback processes as this might cause synchronization issues.


3. SYNC GROUPS

Once the uTrack24 units are connected to the same network, they still act as independent recorders/players. You need to assign units to a SYNC group in order to create a multi-unit system. Follow these steps to create a SYNC group.


3.1. Creating a SYNC Group

In a first step, define which unit will be your MASTER unit. The MASTER uTrack24 is in charge of controlling the SYNC group, either using the buttons which are all lit up and fully functional as in stand-alone mode, or through uRemote.


1. On the MASTER, press the MENU button and select “Sync”:

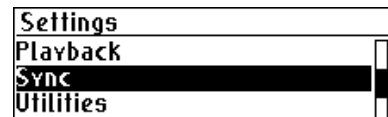


2. In the Sync Menu, select “Setup uTrack24 sync”:

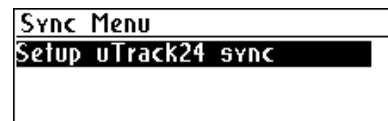


3. Start the SYNC group creation by selecting “Ok”:

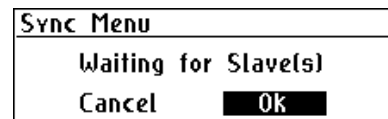

4. While waiting for the SLAVE(s), all connected units show:

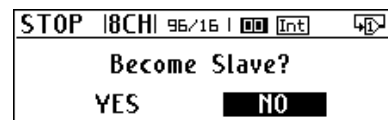

5. Select “YES” on all units that should join this SYNC group.
The MASTER will acknowledge every new SLAVE unit in the display:

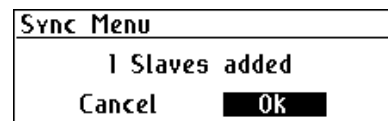

6. When done, select “Ok” on the MASTER to complete the setup.
Note that after the 3rd SLAVE has joined the SYNC group, the setup auto-completes.

The MASTER unit can easily be identified as it is the only unit in the group with all transport buttons active and lit up, while on the SLAVE units only the STOP button is illuminated. In addition, MASTER and SLAVE(s) can be identified by the label in the display:

MASTER



SLAVE



3.2. Dissolving a SYNC Group

A SYNC group can only be dissolved when the system is idle. During recording and playing, dissolving a SYNC group is prohibited for safety reasons.

When a MASTER or a SLAVE is removed from a SYNC group, the entire SYNC group is dissolved and all units are then switching to stand-alone mode.

To dissolve a SYNC group, press the MENU button on the MASTER or on a SLAVE unit, then go to “Sync” to dissolve your group:



4. AUDIO AND SYNCHRONIZATION

A SYNC group can be used in two ways:

- a) Stacked Mode: Increase the number of tracks to a maximum of 96 audio channels
- b) Redundant Mode: Run two identical systems in a redundant configuration

As with every digital audio system, all devices should be synchronized to the same clock source. In a SYNC group a few more settings are required for proper operation throughout the work flow. But no worries, most of it is taken care of by the MASTER by properly setting up the connected SLAVE units. Of course, important parameters that offer flexibility are kept under your control.

Parameter	Set By	Remarks
Sample Rate	MASTER	The MASTER sets the correct sample rate on all SLAVES, in recording and playback mode. If you wish to change the sampling rate for new recordings, change it on the MASTER unit only.
Bit Depth	MASTER	The MASTER sets the correct bit depth on all SLAVES. If you wish to change the bit depth for new recordings, change it on the MASTER unit only.
Track Count	MASTER+SLAVES	MASTER and SLAVES can be set to independent track counts. For example, to create a 32-channel recorder set the MASTER for 24 audio tracks and the SLAVE #1 to 8 audio tracks.
Clock Source	MASTER+SLAVES	By default, all units in a SYNC group synchronize to “PTP” which is a precision time protocol transferred over the network. If you need to synchronize to another clock, WCLK or Digital I/O card, <u>all units</u> should be reconfigured for this clock source.



Note: The changes in the MASTER will be sent to the SLAVES when the menu entry is left, and after a timeout.



Warning: Do not use differing clock modes on uTrack24 units within a SYNC group, to avoid clicks and pops due to asynchronous operation.


5. RECORDING

It is solely up to the audio signal connections to define whether a stacked or redundant multitrack recorder is formed. The recording process is all the same, and only when importing the recordings to your PC using uTool you will indicate which kind of recording you created.

The MASTER is setting up all SLAVES for sampling rate and bit depth. In addition, the recording take name is negotiated between the devices to guarantee a unique and consistent take name.

Record:

The recording is started on the MASTER. While recording, use the MASTER buttons for control:

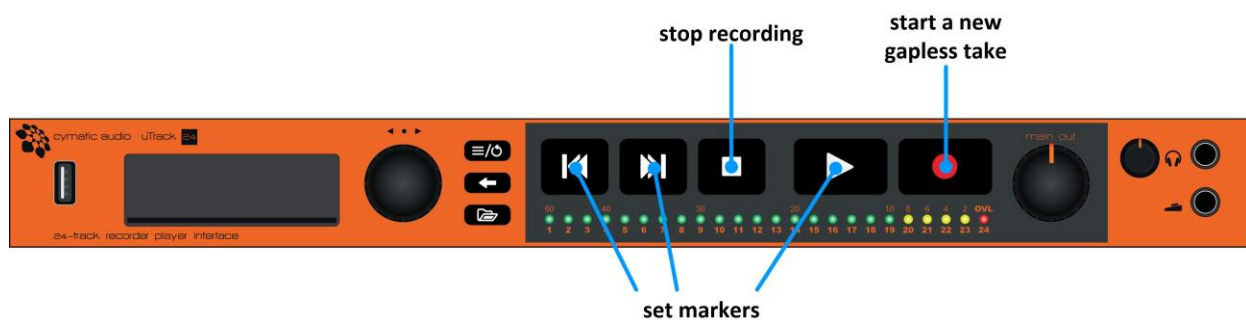

Prepare Rec:

In SYNC groups pre-recording is not available. Instead, use the new "Prepare Rec" parameter, available on the MASTER, to set your system to instant recording (ON) or not (OFF). If set to ON, all devices in the SYNC group will start the recording right at the click of the REC button. If the "Prepare Rec" parameter is set to OFF, it will take a few seconds until the recording starts.



Note: Set "Prepare Rec" to ON in case you are mainly recording, in order not to miss the start of your take.

Stop:

The normal way to stop a recording is to press the STOP button on the MASTER. The STOP button on a SLAVE will only stop the recording on this SLAVE unit and should only be used in emergency situations.

For example: If the MASTER's hard disk is full, the MASTER will stop recording. However, the SLAVES continue recording (so at least these tracks are safe). In this (hopefully rare) situation, the only way to stop a SLAVE is pressing its STOP button.



Warning: Synchronized playback is not guaranteed if a slave has been stopped manually.



Note: If the recordings have been stopped in an improper way, import the recording with uTool and export it again, in order to avoid playback problems due to track length mismatch.

6. uTOOL

uTool is a simple yet important tool in your work flow. It is not only the interface between your uTrack24 (and other Cymatic Audio products) and your DAW running on your computer, converting and optimizing the takes for your DAW and for uTrack24. It is used for proper import/export of stacked and redundant content, and it can even help fixing song problems that have been introduced e.g. by recording exceptions.




Note: Please read the uTool user manual for an introduction to uTool.

6.1. Import Recordings

Connect your hard disks one by one. uTool automatically detects which hard disk belongs to which unit (MASTER, SLAVE #).

Choose one of the import modes:

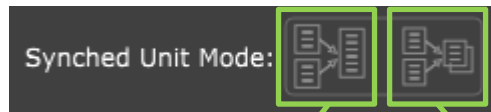

Stacked Mode:

uTool creates a single folder with up to 96 audio tracks. The imported tracks are numbered as follows:

- MASTER: #01 ... #24
- SLAVE #1: #25 ... #48 (etc.)

Redundant Mode:


uTool creates a folder for each device. The folder names for SLAVE units are appended:

- SLAVE #1: _Slave1
- SLAVE #2: _Slave2
- SLAVE #3: _Slave3

Within every folder the tracks are numbered 01 ... 24.

6.2. Export Playback Content

When creating a new multitrack song in uTool, first define the number of stacked units as this will give you the maximum number of available audio tracks. Note the 24 MASTER [M] and 24 SLAVE #1 [S1] tracks on the right-hand side.

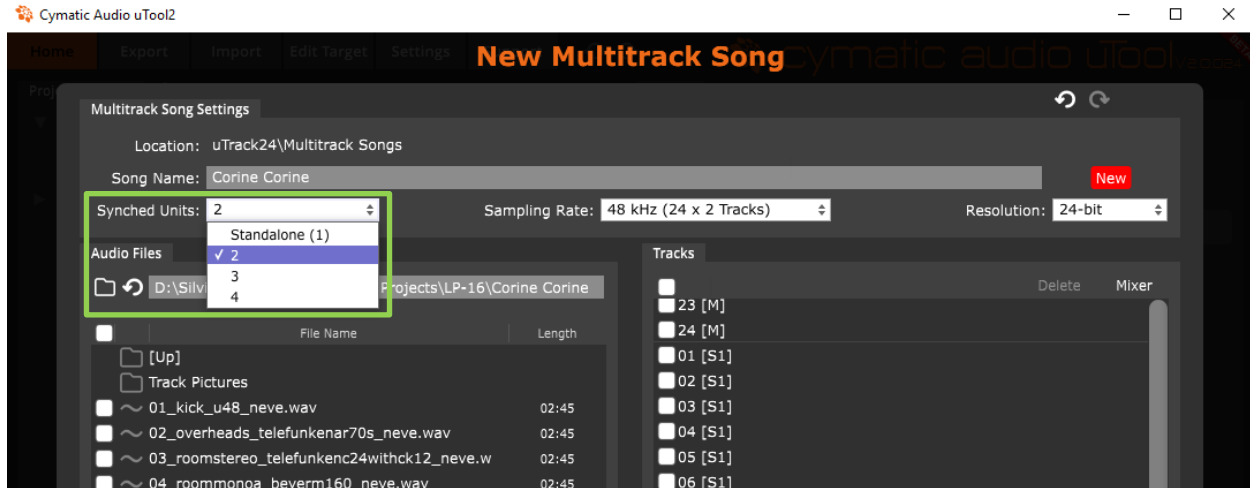

Now assign your wave files to the tracks and save your song.

Leave the multitrack editor and open the “Export” page. Here you can export every hard disk individually, or define an “Export Batch”

In order to get redundant content, simply export the same content to multiple drives



Warning: Exporting to synchronized units requires matching content on all hard drives. If the content doesn't match, the units might play at different song positions or even play different songs after a gapless transition.



Warning: With a SYNC group, playback without gaps between songs requires a playlist that defines no pause.

7. PLAYBACK

The audio signals and hard disk content defines whether a stacked or redundant multitrack player system is formed. The playback process is all the same.

The MASTER is controlling all SLAVES, so start your playback on the MASTER. The SLAVES will follow all operations on the MASTER unit, including the loading of a playlist. As a consequence, the SLAVES prohibit access to the file browser and selecting a song.

The normal way to stop the player is by pressing the stop button on the MASTER unit. The stop button on the SLAVES will only stop this SLAVE unit and should be used in emergency situations only.

The following playback features are not available in a SYNC group:

- Head positioning
- Loops within a song
- Jumping to markers
- Insert a song from the browser
- Stereo Mode
- Autoplay

Pre-Loading:

The pre-loading option is available by setting "Prepare Rec" to OFF. When pre-loading is complete, all devices in the SYNC group will start the playback instantly at the click of the play button. If "Prepare Rec" is ON, it will take a few seconds until the playback will start.



Note: When mainly used as a player, set "Prepare Rec" to OFF in order to have instant playback.

8. DEVICE FAILURE

The benefit of a multi-device system is having the option of creating a redundant system, running two devices in parallel, and if one unit should fail, e.g. due to power-loss or hard disk exception, the system still keeps working. It is crucial for a failing device, and even more so for a reconnecting device, not to interfere with the residual units and disturb them in their on-going operation.

Whenever a SYNC group member is failing, the rest of the group seamlessly continues the current operation, be it playback or recording.

When a SYNC group member appears again, it seamlessly joins the SYNC group and stays inactive at first. With the next transport operation (play, record) the entire SYNC group continues working normally.

SLAVE missing:

When a SLAVE fails, all remaining devices in the SYNC group continue recording or playing. The MASTER indicates the failure in the display.



MASTER missing:

Should the MASTER fail, the remaining SLAVES will seamlessly continue recording or playing. The SLAVES will switch to stand-alone mode, activating their local transport buttons, and all SLAVES indicate the failure in their display.




Note: When the MASTER re-appears while the SLAVES are recording or playing, stop the SLAVES with their own stop button to form the SYNC group.

9. uREMOTE

uRemote shows SYNC group members as follows:

- The MASTER is on top
- The SLAVES are indented and in correct order

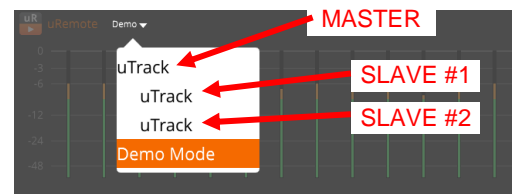

The entire SYNC group should be controlled through the MASTER unit, as you would do using the local buttons.




Note: Use uTool to rename your units for better identification.

10. USE CASES

10.1. Recording 32 Channels (Stacked Mode)

Recording a large scene is now possible using up to 4 uTrack24 units, with a total track count of up to 96. In this example a 32-channel recording setup is shown step by step.

1. Recording:

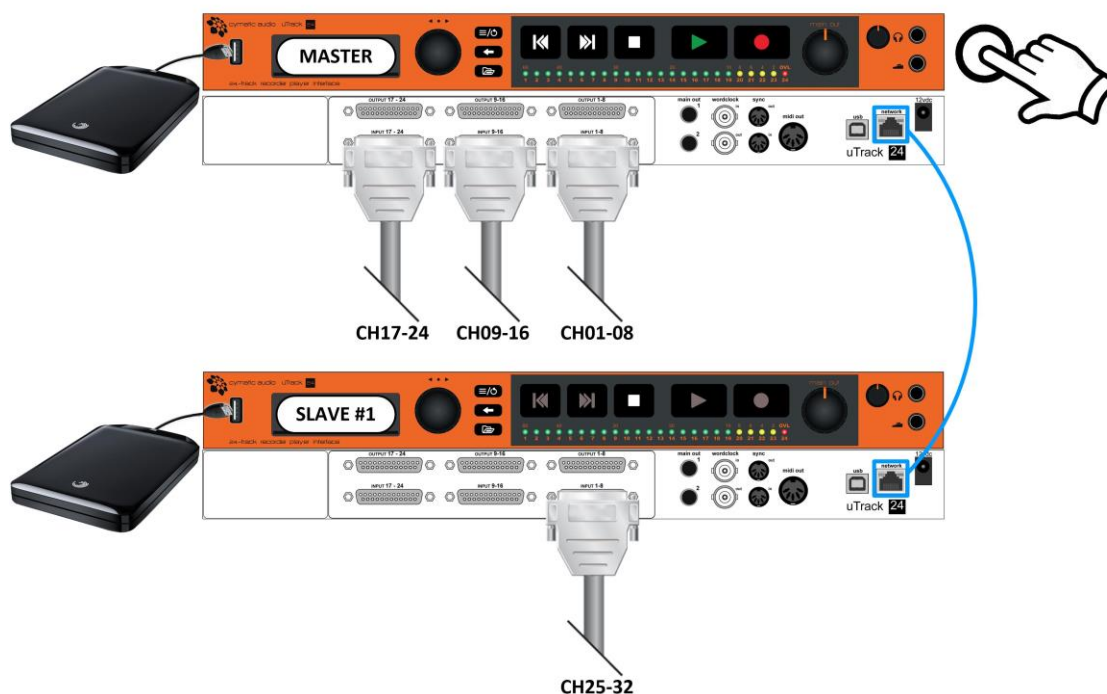


Step	Action	Remarks
1	Connections	Connect your audio tracks to the MASTER (24CH) and the SLAVE (8CH). Connect MASTER and SLAVE over Ethernet.
2	Power up	Connect the hard disks and power up the system.
3	Create SYNC group	Define MASTER and SLAVE (see chapter 3.1 “Creating a SYNC Group”)
4	Record	Start recording by pressing the MASTER’s record button. Press record again to start a new take.
5	Stop recording	When done, press the stop button on the MASTER.



Note: You don’t need to label your external drives. uTool can automatically identify the drives.

2. Import to PC:

Start uTool and connect the hard disks to your PC, one by one.

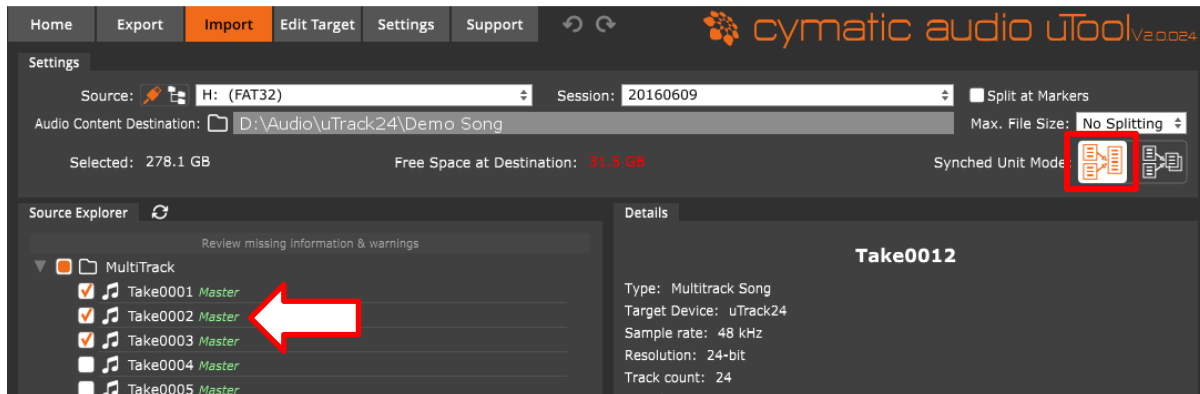


Step	Action	Remarks
1	Connect first hard disk	
2	Define "Synched Unit Mode"	In this example, select stacked mode.
3	Define/Select Session Name	All hard disks belonging to the same SYNC group should be imported to the same import session.
4	Select take(s) to import	Select one or multiple takes. Note: uTool displays the SYNC group assignment for each take ("Master", "Slave1", ...)
5	Import	Click "Import" to start the import.
6	Connect second hard disk	
7	Define "Synched Unit Mode"	Again, select stacked mode.
8	Define/Select Session Name	All hard disks belonging to the same SYNC group should be imported to the same import session.
9	Select take(s) to import	Select one or multiple takes. Note: uTool displays the SYNC group assignment for each take ("Master", "Slave1", ...)
10	Import	Click "Import" to start the import.

10.2. Recording 24 Channels (Redundant Mode)

Recording in redundant mode is achieved by feeding the same audio channels to more than one uTrack24. While this can be done without a SYNC group, the SYNC group has the advantage of operating on one unit only, the MASTER, and having the certainty that the SLAVE will be providing an identical backup recording – or vice versa.

1. Recording:

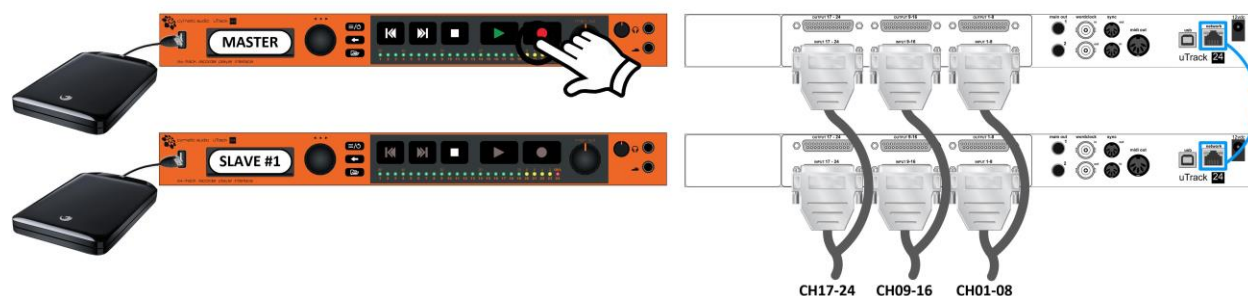


Step	Action	Remarks
1	Connections	Connect your audio tracks in parallel to the MASTER and to the SLAVE. Connect MASTER and SLAVE over Ethernet.
2	Power up	Connect the hard disks and power up the system.
3	Create SYNC group	Define MASTER and SLAVE (see chapter 3.1 “Creating a SYNC Group”)
4	Record	Start recording by pressing the MASTER’s record button. Press record again to start a new take.
5	Stop recording	When done, press the stop button on the MASTER.



Note: You don’t need to label your external drives. uTool can automatically identify the drives.

2. Import to PC:

Start uTool and connect the hard disks to your PC, one by one. Note that uTool automatically detects the SYNC group assignment (MASTER, SLAVE).

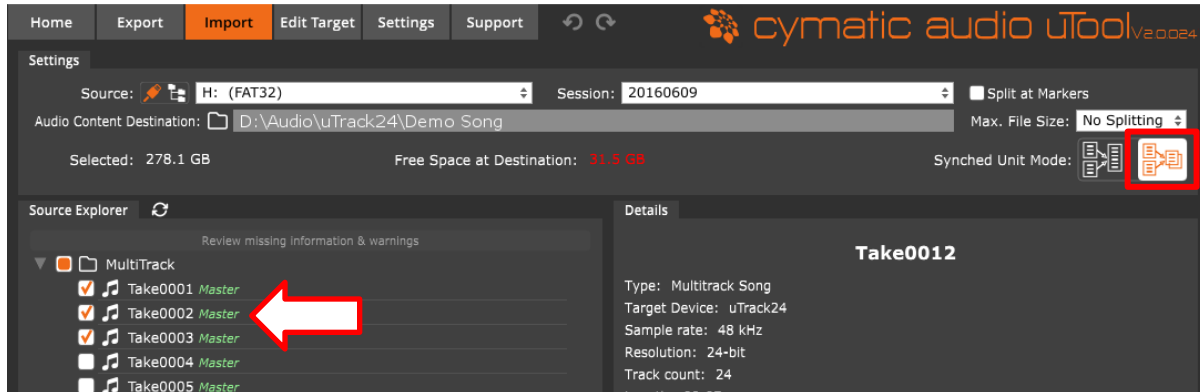

Step	Action	Remarks
1	Connect first hard disk	
2	Define "Synched Unit Mode"	In this example, select redundant mode.
3	Define/Select Session Name	All hard disks belonging to the same SYNC group should be imported to the same import session.
4	Select take(s) to import	Select one or multiple takes. Note: uTool displays the SYNC group assignment for each take ("Master", "Slave1", ...)
5	Import	Click "Import" to start the import.
6	Connect second hard disk	
7	Define "Synched Unit Mode"	Again, select redundant mode.
8	Define/Select Session Name	All hard disks belonging to the same SYNC group should be imported to the same import session.
9	Select take(s) to import	Select one or multiple takes. Note: uTool displays the SYNC group assignment for each take ("Master", "Slave1", ...)
10	Import	Click "Import" to start the import.

10.3. Playback 56 Channels (Stacked Mode)

If 24 audio channels are not enough for your production, the SYNC group can provide you with up to 96 playback channels. It all starts by preparing proper song projects in uTool.

1. Song Preparation:


Step	Action	Remarks
1	Create song	Click "New MultiTrack Song", then: <ul style="list-style-type: none"> • Give it a meaningful name. We picked "Example 56CH". • Select the number of uTrack24 devices, to define the maximum number of available tracks. We select 3 units (24 plus 24 plus 8 tracks). Note that we now get 72 tracks; the effective track usage follows in step 2 below. • Select your preferred sampling rate and resolution. (e.g. 44.1 kHz and 24-bit)
2	Define Audio	Assuming you have already prepared and exported all your tracks, drag and drop your track wave files into the right-hand list of tracks. In this example, all 24 tracks of the first two uTrack24 units are in use, and the 3 rd uTrack24 has audio in tracks 1 to 8.
3	Export	Close the project editor, go to "Export", then: <ul style="list-style-type: none"> • Select "Example 56CH" from the Project Explorer. • Connect and select your target hard disk. • On the bottom, select the hard disk type of your SYNC group. • Export your content.
4	Export	Repeat step 4 for all three hard disks. Make sure to properly label your hard disks in order not to end up with swapped audio channels in your playback setup.



Note: Make sure you properly label your hard disks. uTrack24 will play out the hard disk content without any checks if the content matches the SYNC group unit.

With 3 uTrack24 units an Ethernet switch is needed for building the network. Optionally you may use a WLAN router for wireless control through the uRemote app.

2. Playback:

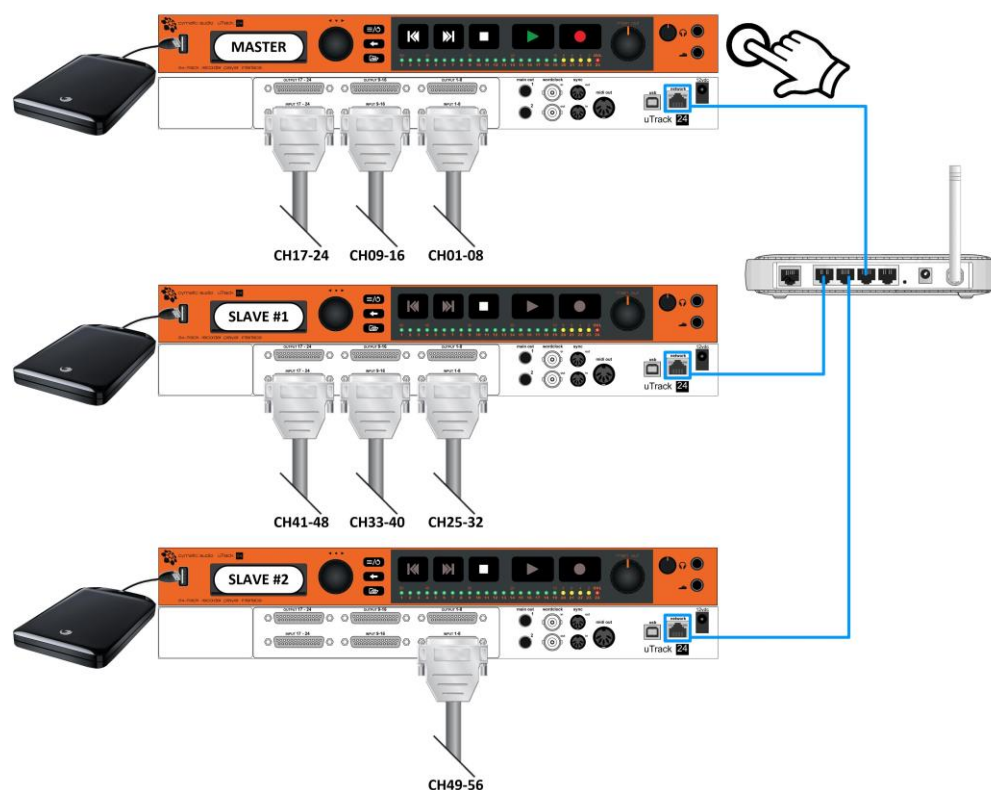

Step	Action	Remarks
1	Connections	Connect your audio tracks to the MASTER and to the SLAVE. Connect MASTER and SLAVES to the Ethernet switch.
2	Power up	Connect the hard disks to the proper uTrack24 unit and power up the system.
3	Create SYNC group	Define MASTER and SLAVES (see chapter 3.1 "Creating a SYNC Group")
4	Playback	Start playing by pressing the MASTER's play button. Use only the MASTER's buttons to operate the system.

10.4. Playback 24 Channels (Redundant Mode)


The song preparations for a redundant player system are straight forward. In this example we plan using an auto-switcher that uses one track to decide whether a device is alive or not.

Create your content (including an “alive track”) in your DAW, and the project(s) in uTool as usual. However, this time we need two hard disks with exactly the same content. You can either normally export to your first hard disk and then duplicate this hard disk using your PC, or you can use the more convenient “Export Batch” feature in uTool.

1. Song Preparation:

Step	Action	Remarks
1	Create song	Normal procedure, but one track should carry an “alive” sound for the auto-switcher.
2	Define audio	Normal procedure using uTool
3	Export	Connect both hard disks to your PC, select the projects to export, then click “Export Batch”. In the Export Batch window, select both hard disks as export targets, then click “Export” on both targets.

2. Playback:

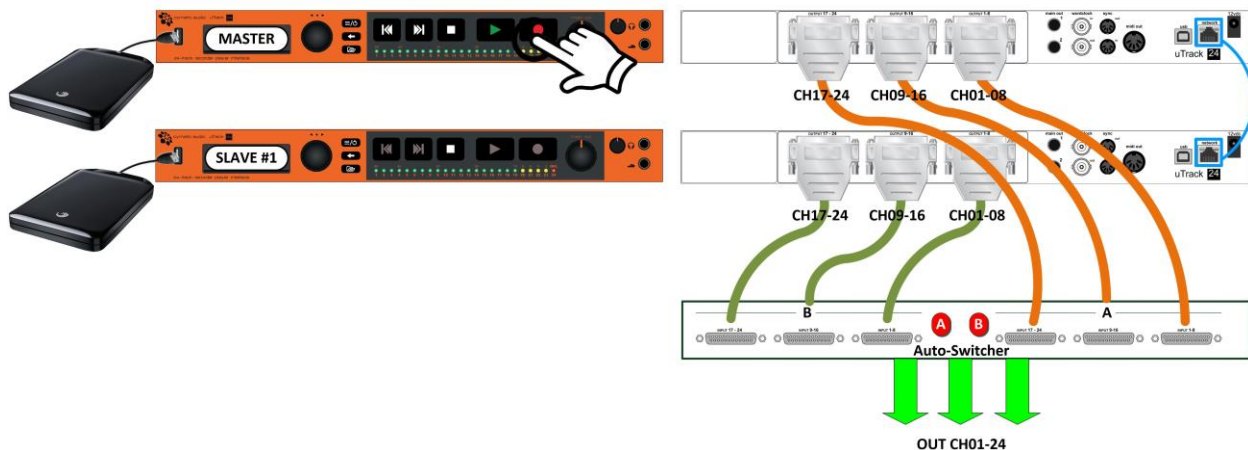

Step	Action	Remarks
1	Connections	Connect the outputs of both uTrack24 units to an auto-switcher. Then connect the auto-switcher's outputs to your console. Connect MASTER and SLAVES over Ethernet.
2	Power up	Connect the hard disks to the uTrack24 units and power up the system.
3	Create SYNC group	Define MASTER and SLAVES (see chapter 3.1 “Creating a SYNC Group”)
4	Playback	Start playing by pressing the MASTER's play button. Use only the MASTER's buttons to operate the system. The auto-switcher will switch to uTrack24 B in case uTrack24 A should fail.

11. Legal Disclaimer

Technical specifications and appearance are subject to change without notice and accuracy is not guaranteed. Cymatic Audio accepts no liability for any loss which may be suffered by any person who relies either wholly or in part upon any description, photograph or statement contained herein. Colors and specifications may vary from the actual product.

Cymatic Audio products are sold through resellers only. Fulfillers and resellers are not agents of Cymatic Audio and have absolutely no authority to bind Cymatic Audio by any express or implied undertaking or representation.

Apple Macintosh is a trademark of Apple Inc., registered in the U.S. and other countries. Windows is a registered trademark of Microsoft Corporation in the United States and other countries. ASIO is a registered trademark of Steinberg Media Technologies GmbH. All other trademarks, product names, and company names mentioned in this document are the property of their respective owners.



Cymatic Technologies B.V.

P.O. Box 208
6590 AE Gennep
The Netherlands

www.cymaticaudio.com

Support:

support@cymaticaudio.com

© copyright 2016 Cymatic Technologies B.V.

SYNC
uTrack24
June 2016