

## Cold Room Hire Additional Terms & Conditions

1. Cold Rooms are manufactured to be towed on bitumen or sealed roads only
2. Cold Rooms cannot be towed more than 100km from Ede Events' depot at 44 Keane Street, Currajong QLD
3. Cold Rooms cannot be towed loaded under any circumstances
4. Cold Rooms must be clean and empty on return
5. If collecting from, or returning to, Ede Events' depot, Hirer must provide suitable vehicle & towing equipment in accordance with QLD law.
6. Monitoring of temperature of Cold Room is the responsibility of the Hirer. Ede Events' accepts no responsibility, under any circumstance, for loss of stock.
7. These terms in addition to full Conditions of Hire available here <https://www.edeevents.com.au/conditions-of-hire/>

## Specifications

Internal Dimensions	Length 3.4m x Width 1.5m x Height 1.9m
Weight	900kg
Power	240Volt electrical supply (standard 10amp power point)
Temperature Range	1°C to 4°C

## Settings & Operation

Cold Rooms are designed for chilling, not freezing. The temperature is set to cut out at approximately 1°C and cut in at +4°C. Your Cold Room will be set at default to be between 1°C and 2°C.

The temperature can be adjusted by turning the temperature dial on the grey thermostat located in the electrical box in the motor compartment. Clockwise for colder, anti-clockwise for warmer.

There is a defrost timer that will shut off the motor for 25 minutes every 12 hours. The defrost timer may be in defrost mode when the Cold Room is turned on. In this case, wait 25 minutes for the motor to restart.

Cold Room should take approximately 60-90 minutes to cool when empty, dependent on outside temperature, excluding any defrost time. Get the Cold Room to desired temperature prior to filling.

**PLEASE NOTE;** The jockey wheel is NOT designed to hold the load of a filled Cold Room. Use the support provided.

**WARNING;** Do NOT attempt to remove any covers or casings in the motor compartment. They contain live wires and coming into contact with them will result in an electrical shock hazard.

## Trouble Shooting

- Cold Room not cooling
  - Are the internal lights & blower fans on?
    - YES – Cold Room is likely in defrost mode. Wait 25 minutes.
    - NO – This is a power supply issue. Try another extension lead or power outlet.
- Power is tripping
  - Cold Rooms are equipped with earth leakage protection. If the power is tripping at your switchboard, then this is a power supply issue. Try another extension lead or power outlet. If there is a fault with the Cold Room, the power will trip at the earth leakage on the Cold Room prior to your switchboard.
- Temperature Gauge isn't accurate.
  - The thermometer on the Cold Room is a temperature display, however this can vibrate out of calibration during transport. Use a household thermometer or temperature gun to check the internal temperature.
- Cold Room too cold
  - Place a glass of water in the room. If it starts to freeze a crust on top, then the room may be too cold. Adjust the thermostat anti-clockwise a very small amount (1/16<sup>th</sup> of a turn) and monitor.
- Cold Room too warm
  - Cold Room should be empty when attempting to get it cold. Adjust the thermostat clockwise a very small amount (1/16<sup>th</sup> of a turn) and monitor.