



# Instruction Manual

720P HD Smart Projector - BP720PGP



*Enjoy it.*



# CONTENTS

General Safety	4
Product Overview	8
Remote Control	9
First time setup	10
Initial Setup	11
Wi-Fi	13
Google	13
Acceptance - Terms of Service	14
Google Assistant Setup	15
Google TV - Dashboard	17
Google Assistant	18
<b>Settings</b>	
Menu	19
Projection method	20
FAQs	21
Specifications	22
Customer Helpline	Last Page

# GENERAL SAFETY

Read this manual thoroughly before you start using the Projector.

Store this manual, the completed warranty card, your receipt and the product packaging.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.



The cover (or back) of the unit should not be removed to prevent risk of electric shock.

This unit must be serviced by a qualified service personnel only.



The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.



The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.

## IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

- Only using furniture that can safely support the Products.
- Ensure the Product is not overhanging the edge of the supporting furniture.
- Do not place the product on a high furniture without securing both the furniture and the product to a stable support.
- Do not place the product on cloth or other conductive materials.
- Warn children of the dangers of climbing on furniture to reach the projector or its controls and to call for an adult to assist.

# GENERAL SAFETY (CONT.)

## IMPORTANT INFORMATION

- Do not expose this appliance to rain or moisture as it may result in fire or an electric shock hazard
- Do not tamper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not expose the product to splashing or water contact
- Please do not place any object on top of the product including objects filled with liquids such as vases.
- Replace with same or equivalent type.

## Installation

**Please follow instruction when installing** this product in accordance with the instruction manual. This product must be positioned in a sufficiently stable location, it can be potentially hazardous due to falling and can cause injury, particularly to children if it positioned incorrectly.

- Before installing this Projector set, make sure your outlet voltage corresponds to the voltage stated on the product rating label
- Do not use a damaged power cord, plug or loose outlet. Doing so may cause an electric shock.
- Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation of the equipment.
- Do not bend, twist or kink the power cord excessively.
- Do not allow anything to rest on or roll over the power cord. Doing so may cause a fire or an electric shock.
- Do not run the power cord near heat-producing appliances such as radiators, stoves or irons. The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.
- Unplug this Projector during lightning storms or when unused for long periods of time. Not doing so may result in fire or electric shock.
- Do not cover the ventilation openings of the product with items such as newspapers, tablecloths, curtains etc or insert objects into the slots available on the products. As this could result in the product temperature rising and could cause a fire.
- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center. Failure to do so may result in fire or electric shock.
- When not using the unit for long periods of time or when you are moving the unit please ensure to disconnect the power cord from the wall socket.

# GENERAL SAFETY (CONT.)

- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or young children of any age, They must be supervised product by a person responsible for their safety.
- Batteries from the remote control must be only removed by an adult, the adult must ensure to keep them out of reach of infants and children. Seek medical attention immediately if a child has swallowed a battery.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.

## ! CAUTION !

**DO NOT** look directly into Project LENS. This can cause damage to a persons or childrens eyes. Take all nessecary precautions to make sure that no one looks into the LENS while turned on.

**MAKE SURE** this project is out of reach of children or baby so that they do not stand and look into the project LENS.

**DO NOT** cover the vents, the vents are needed to let out hot air. Placing objects near or covering the vents can cause the product to overheat and permanently damage the projector.

# GENERAL SAFETY (CONT.)

**Please make sure upon positioning this product, the place is:**

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not install this equipment in a confined space such as a bookcase or similar unit.
- Do not install the Projector set near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place containers with liquids, if liquid falls inside the products it may result in short-circuit, fire or electric shock.
- Do not place small metallic objects on top of the unit. Metal object falls inside the product it may result in short-circuit, fire or electric shock.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the Projector set.
- Install the unit at a reasonable distance from the wall to ensure sufficient ventilation.



“HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.”

# PRODUCT OVERVIEW



**1. Lens**

**2. Power Button**

**3. Indicator Light**

**4. Earphone Jack**

**5. USB Disk Port**

 
**6. HDMI IN**

**7. Power Input**



# REMOTE CONTROL

Your projector comes with a Remote Control to access and control your projector from a distance. (Batteries not included).

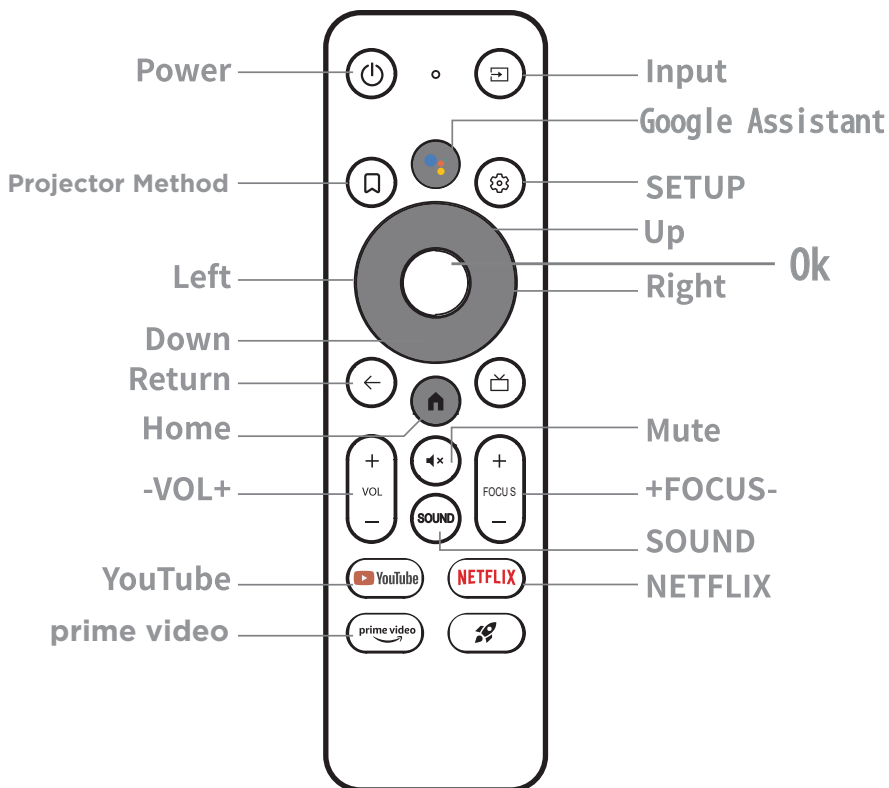

## Using the Remote Control

- Do not mix old and new batteries in the remote.
- Do not use different types of battery.
- If you do not intend to use the unit for a long time, please remove batteries from the remote to avoid accident.
- Keep batteries away from children and pets.
- Never throw batteries into a fire.
- Do not drop, or impact the remote control as it void warranty immediately.
- The remote control operate within 6M effectively.
- Do not expose the remote control sensor to a bright light.

# FIRST TIME SETUP (cont.)

 
## 1 Projector installation

You can choose horizontal placement



choose horizontal placement

## 2 Adjust the focus

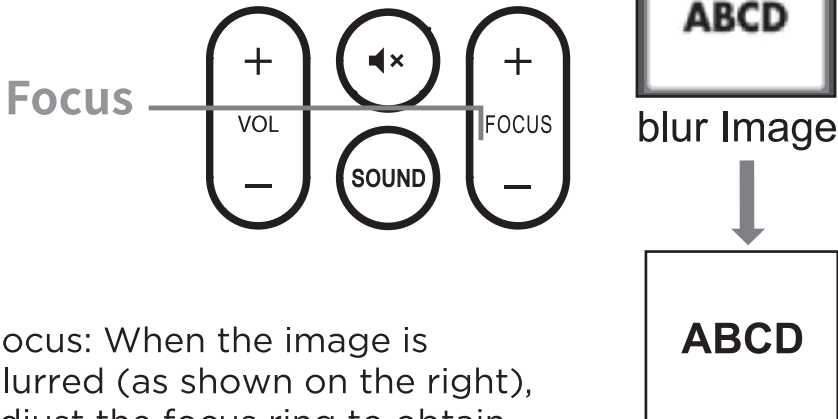


Focus: When the image is blurred (as shown on the right), adjust the focus ring to obtain a satisfactory image imaging effect. If you cannot obtain satisfactory clarity through adjustment, please move the product forward or backward as appropriate.

# INITIAL SETUP

 For the first initial setup, on screen setup wizard will guide you through setting up your projector. Please follow according to onscreen guide to setup your projector correctly.

Be sure to follow the below prompts to pair your Bluetooth remote control. After the pairing is successful, you can now operate the projector.


Press **BACK** and **HOME** buttons on RC at the same time for 3 seconds to enter pairing mode.

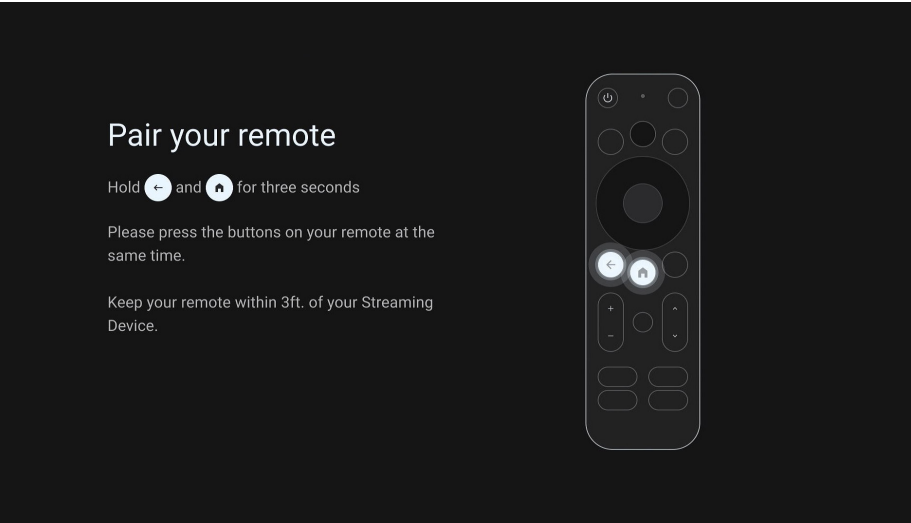

Use the ▲/▼ buttons to select system language, then press **OK/SELECT** to confirm.



 Select CORRECT country you are located in otherwise Google projector will not work correctly.


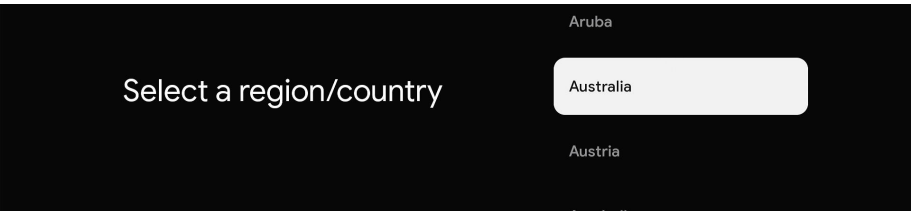


# INITIAL SETUP (Cont.)

At the Initial Setup you will be asked whether you want to setup your Google Projector now or just proceed with basic setup.


If you want to SKIP Google Projector Setup steps - SELECT **“SKIP”**.

  If you select **“CONTINUE”** please follow the below instructions below:

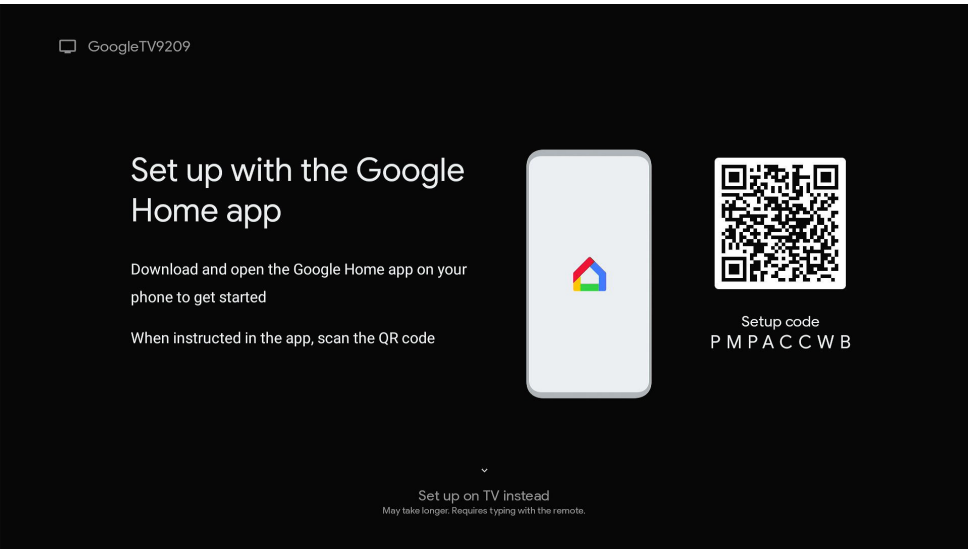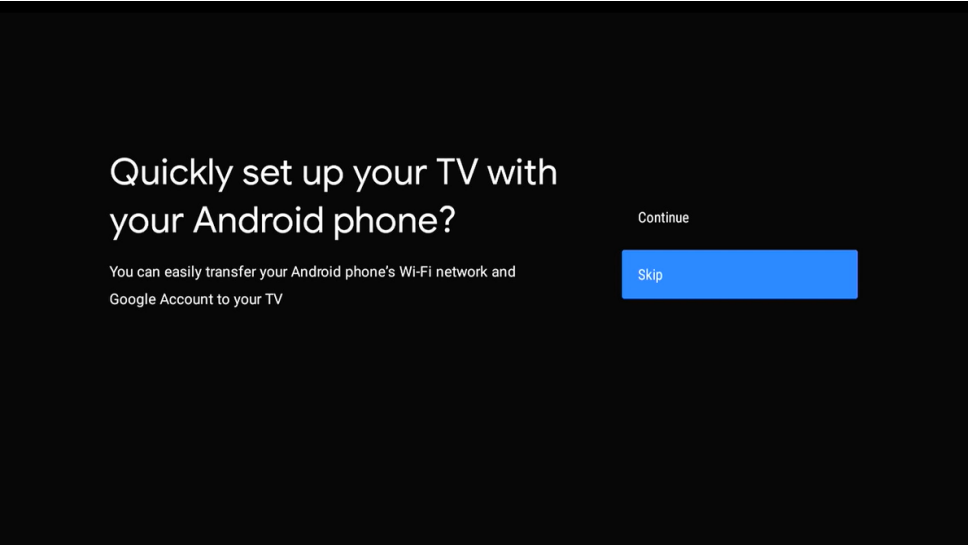


# Wi-Fi

 Select your home Wi-Fi network and enter in the password to start connection process.  
Once successfully connected you will proceed to the next step.

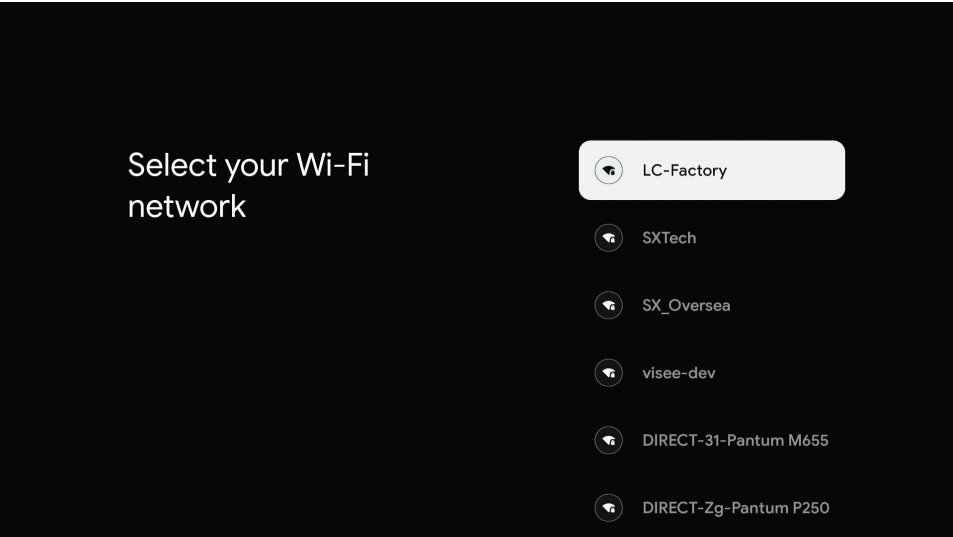

# GOOGLE

 To have access and to download applications from **Google Play**, you must sign in with a Google Account. Once you open **Google Play**, you will be prompted to sign in or create a new account.

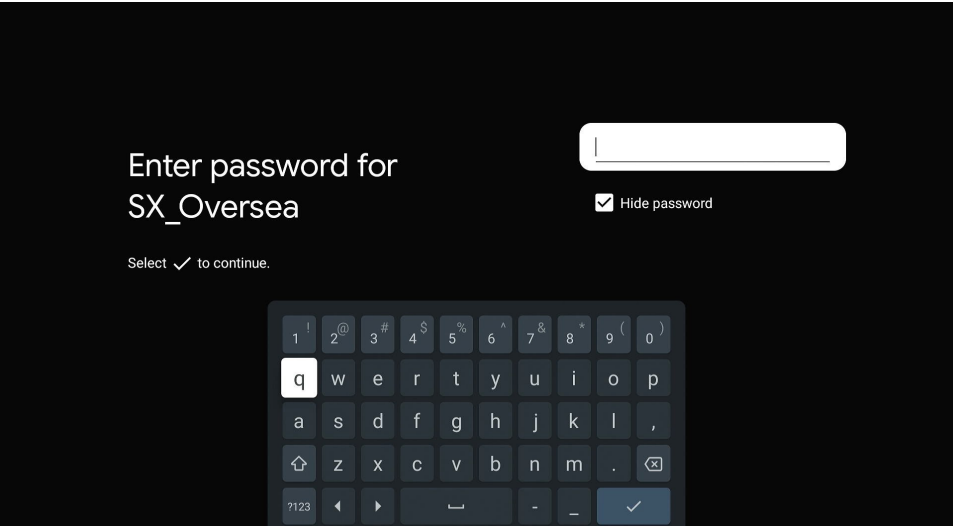


# ACCEPTANCE - TERMS OF SERVICE

By accepting the Google Terms of Service to improve the product experience, Select **“ACCEPT”** to proceed with this condition.

Google

Hi Terry!

 terrytatest@gmail.com

By clicking "Accept", you agree to the Google Terms of Service and the Google Play Terms of Service. The Google Terms of Service also applies to your use of Assistant. The Google Privacy Policy describes how Google handles information generated as you use Google services.

This device may automatically receive and install updates and apps from Google or your device's manufacturer. Some of these apps may offer optional in-app purchases. You can remove them or adjust their permissions at any time from the device settings.


User activity will be visible to other users of the device, including recommendations and YouTube activity. Furthermore, additional Google accounts may sign in on this device, and Google will be able to infer relationships between signed in accounts on this device.

Accept

Terms of Service

Play Terms of Service

Privacy Policy



Google Services

Select each to learn more about each service, such as how to turn it on or off later. Data will be used according to Google's Privacy Policy.

Click "Accept" to confirm your selection of these Google services settings.

Accept

Use location

Allow Google and apps with your permission to use location estimated from Wi-Fi. Google may collect location data periodically and use this data in an anonymous way to improve location accuracy and location-based services

☒

Help improve Google TV

Automatically send diagnostic information to Google

☒

Recommendations and ads

 
Your activity from other Google products improves the recommendations and ads you get

Services and your privacy

Google Assistant sends services you talk to a unique code


# GOOGLE ASSISTANT SETUP

Now starts the process of setting up your Google Assistant to work best for you.  
Please select Continue to start this process.

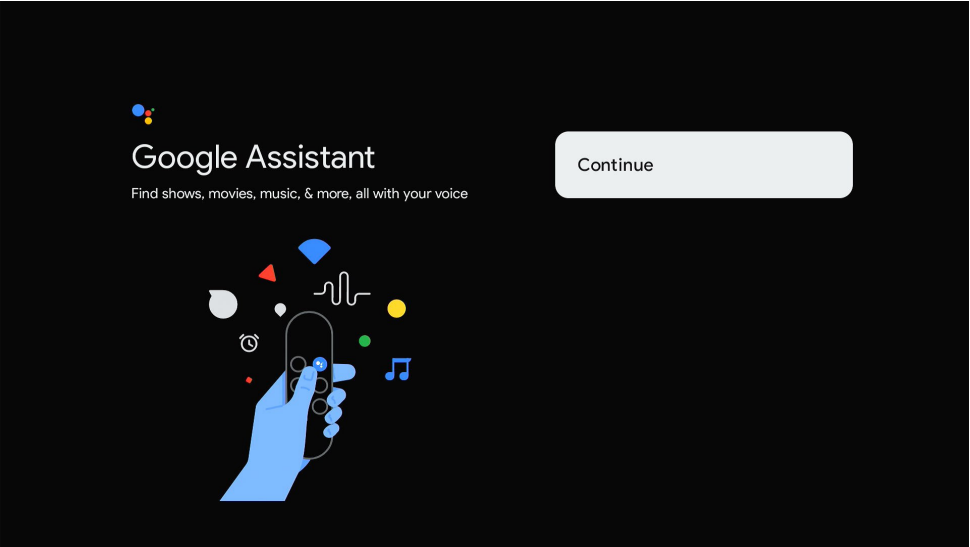



For the best experience with Google Assistant, please select **“Allow”** for Google Assistant to share requests with your Projector’s Installed apps.

 Without this permission, Google Assistant may not be bale to find all the content from your Projector’s Apps.

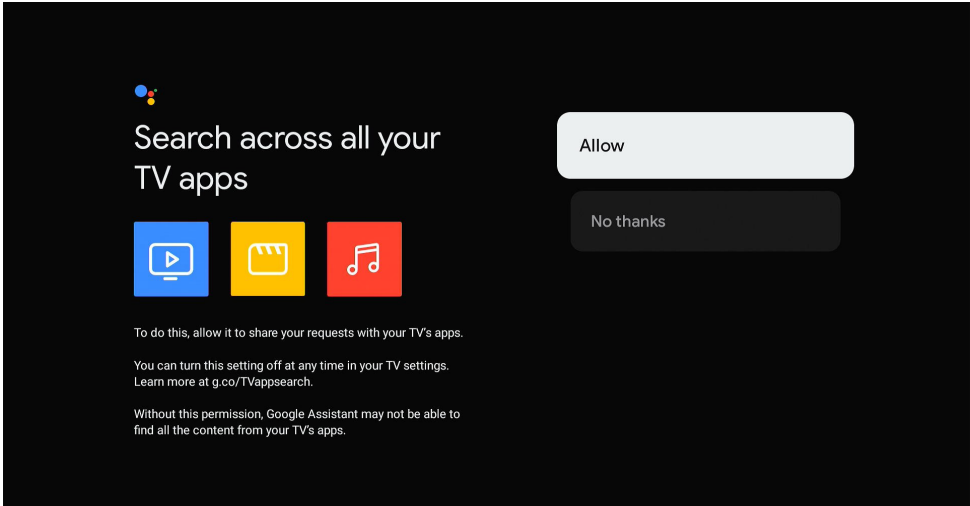


# GOOGLE ASSISTANT SETUP (CONT.)

  If you have select “Allow” in the previous step, content recommendations can now be provided to you.

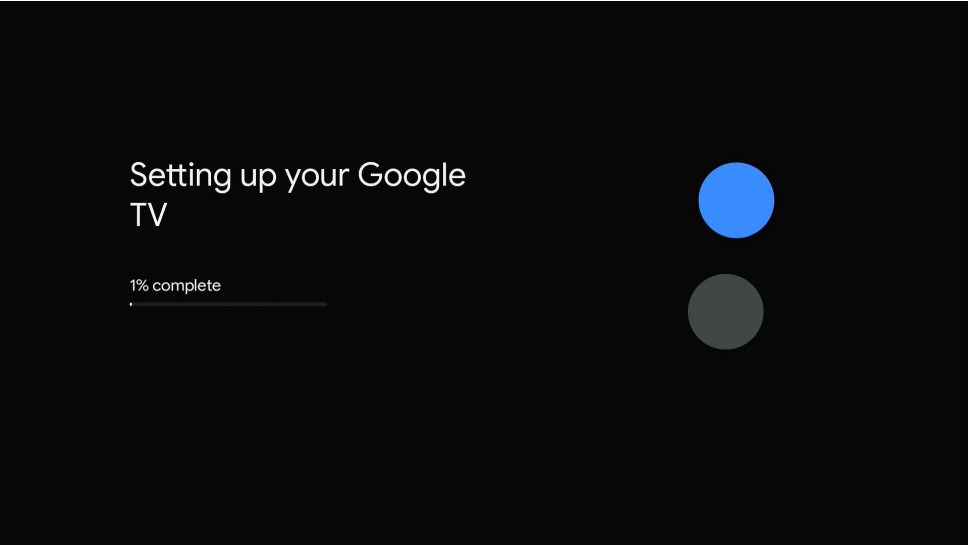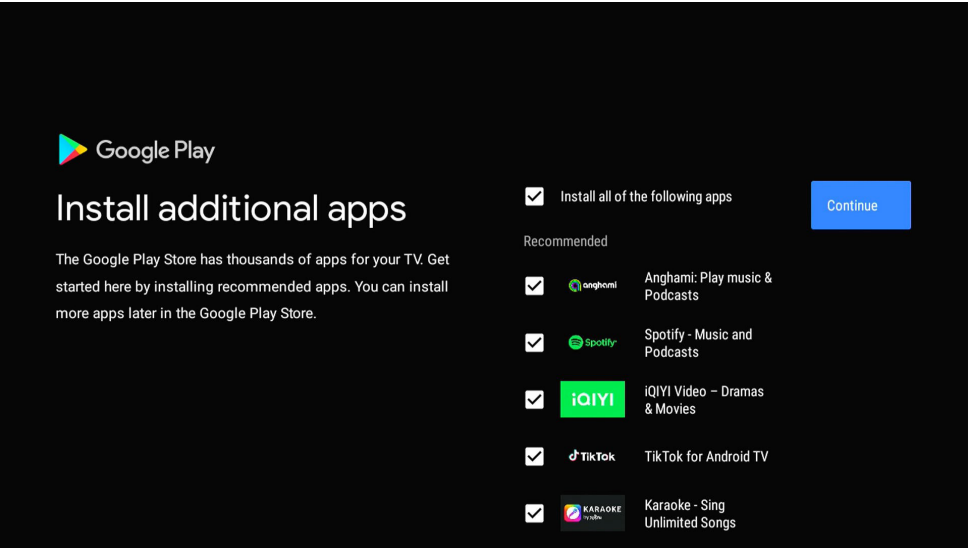




# GOOGLE TV - DASHBOARD

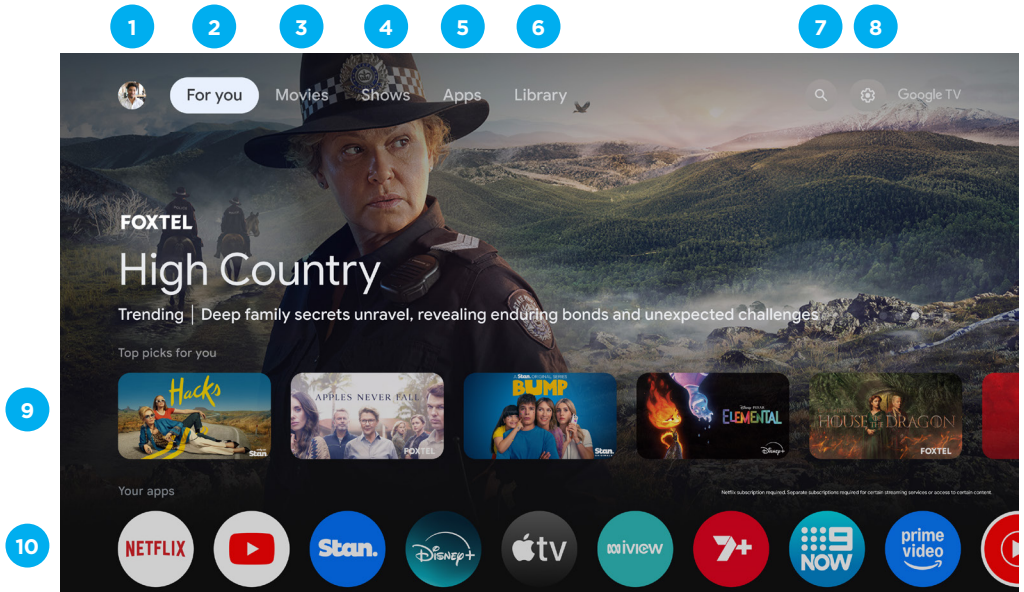 


1. **PROFILE** - Select this option if you want to access:  
Add or Manage Google Account
2. **FOR YOU** - Main page for advertised TV shows, Live TV, Installed Apps, and top picks based on content recommendations tailored for you.  
9 - Each row past this point will display recommended content from the apps you already have installed.  
10 - Apps you have installed. At the end of this row of apps, Select the + box and add your app that you have downloaded and installed to the home screen of your Google TV.
3. **MOVIES** - This menu is all movies recommended for you to watch.
4. **SHOWS** - This menu is all TV shows recommended for you to watch.
5. **APPS** - To search for and download/install onto your Google TV.
6. **LIBRARY** - All installed app will appear in this menu, including updates and more.
7. **SEARCH** - Press the Google Assistant button on your remote to do more on your TV with your voice, or select "Search" and type in what you are looking for.
8. **SETTINGS** - To Access Settings, Date & Time, TV Inputs, Picture (TV Display).

# GOOGLE ASSISTANT

 Do more on your Projector with your voice. Press the Google Assistant button on your remote to quickly search 400,000+ movies and shows, get recommendations to match your mood, control smart home devices, and more.

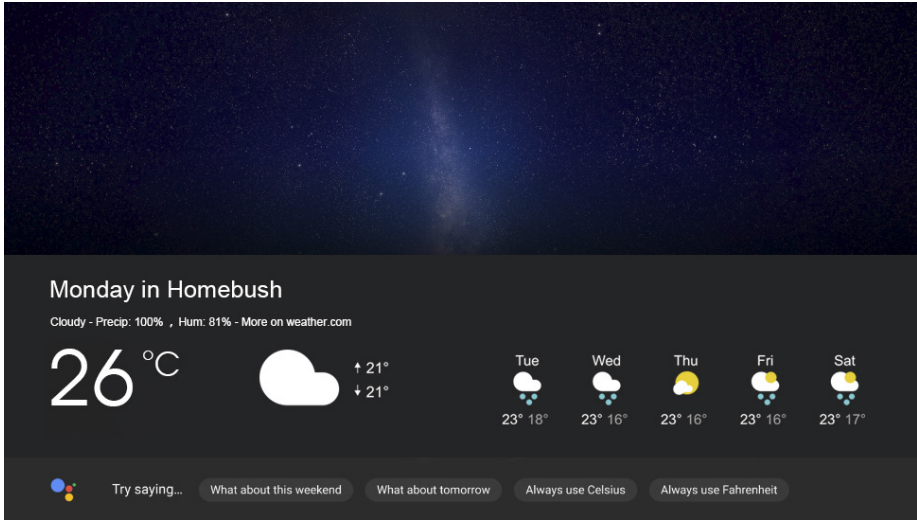

 
Ask Google to search for the latest blockbuster, stream shows, or open multiplayer games. Have it dim the lights by connecting smart home devices. Manage tasks and see your calendar. Or ask it questions and see the answers on your projector.

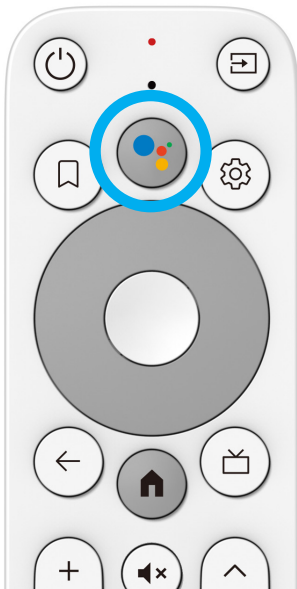

“What’s the weather today?”


# SETTINGS MENU

 To access **SETTINGS** menu, select **SETTINGS (#5 on page 17)** via the HOME screen.

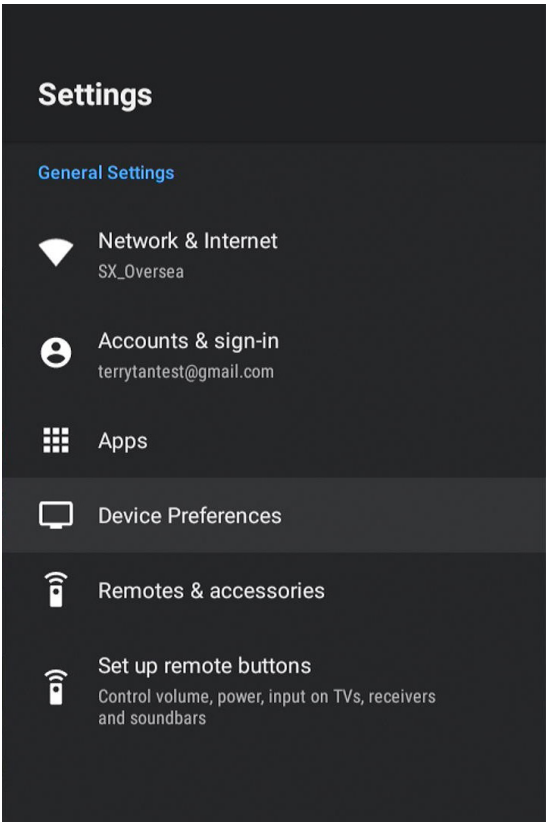

# PROJECTION METHOD SETTING

 - 1. Enter HDMI mode
- 2. Press “Projector method” button on remote
- 3. Select Method Normal/Flip Mirro/Mirro/Flip

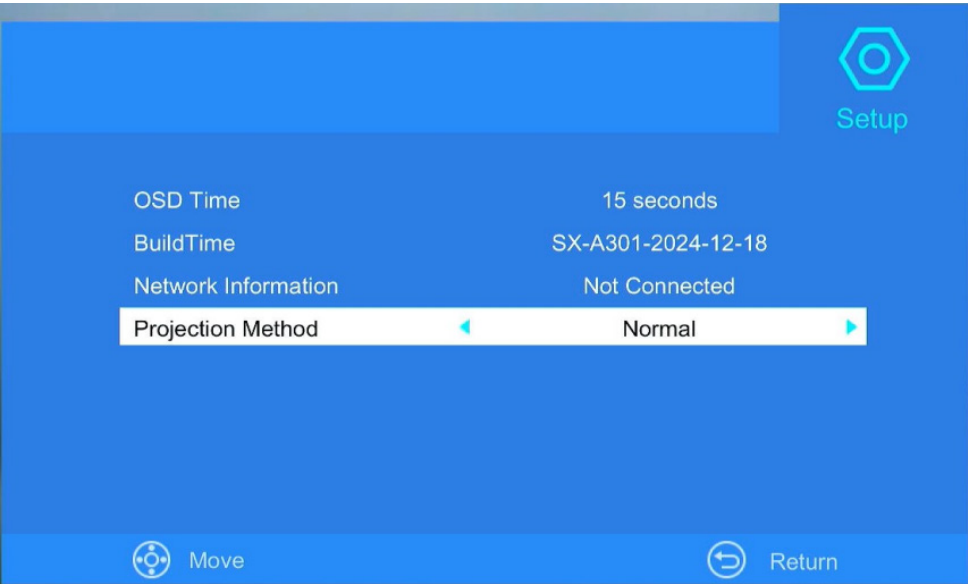

# FAQS

## MY REMOTE CONTROL ISN'T PAIRING WITH MY GOOGLE PROJECTOR?

If your remote control is not pairing or becomes disconnected, please reconnect it and pair it again in the Settings menu:

1. Press **SETTINGS** Icon
2. Select "**REMOTES & ACCESSORIES**"
3. Select "**PAIR ACCESSORY**"
4. Follow the onscreen instructions to pair your remote. Once you detect your Bluetooth Remote control, Press **OK** on remote control to select it and pair.

If it doesn't connect, try the process again until it pairs, otherwise contact our call centre.

**NOTE:** You can still use your remote control without pairing. However, Google Assistant will not be available until the remote control is paired.

## GOOGLE TV (REMOTE CONTROL) - APP

If you want to control your Projector via your smart device. Search for: "Google TV" app and download. Once following prompts to connect your smart device to your Google Projector, you will then be able to control your Projector from your smartphone.

### NOTE:

Please be noted that if device does not be operated within 20 minutes, the Google device will enter sleep/energy-saving mode. You can wake up the system by pressing the "Home" button on the remote control.

Also you can make your own setting, finding Settings → System → Power & Energy → When Inactive, where you can set a longer duration or disable the energy-saving feature entirely (select "Never" to disable it).

# SPECIFICATIONS

Resolution	1280 x 720 Native Resolution	
Contrast ratio:	1000 : 1	
Lumens	120 ANSI	
Aspect Ratio	16:9, AUTO	
Multimedia Playback Format under USB Mode	<b>Movie:</b> MKV, WMV, MPG, MPEG, DAT, AVI, MOV, ISO, MP4, RM	
	<b>Music:</b> WAV, MP3, MP2, FLAC	
	<b>Photo:</b> PNG, JPEG, BMP	
Power Source	220-240V ~ 50/60Hz	
Power Consumption	50W	
Dimensions	120 (w) × 140 (d) × 150 (h) mm	
Weight	<b>Net:</b> 0.91 kg	
	<b>Gross:</b> 1.4 kg	
Accessories	1 x Projector with Carry Handle	1 x Remote Control
	1 x Power Cord	1 x Instruction Manual
	1 x Warranty Card	

NOTE: This document is for reference only, the operation interface is subject to software.

THIS PAGE IS  
LEFT BLANK ON  
PURPOSE



**CUSTOMER SUPPORT:**

info@ayonz.com  
02 8279 8606

**DISTRIBUTED BY:**

Ayonz Pty Ltd