



[www.blackanddecker.com.au](http://www.blackanddecker.com.au)

**BD4T250**  
4 Slice Stainless Steel Toaster

## General Care and Safety Guide

**Thank you for choosing this Black & Decker product. This appliance has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, will give you years of useful service. Please read these instructions carefully and keep them for future reference.**

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Ensure that the toaster is switched off from the supply mains before cleaning or moving.
5. Use only the voltage specified on the rating plate of the appliance.
6. Keep all objects at least 1 Metre from the front, sides and rear of the appliance
7. This appliance is intended for household use only and not for commercial or industrial use.
8. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
9. Always unplug appliance when not in use.
10. When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Black & Decker Customer Services Team.
11. If your appliance does not work, or is not working properly, contact the place of purchase. Repair work on the appliance by unqualified persons can cause serious risk to the user.
12. Ensure hands are dry before handling the plug or the main unit.
13. Carry out regular checks of the supply cord to ensure no damage is evident.
14. Ensure that the cord is fully extended (not coiled) while in use.
15. Avoid contact with the metal parts. Keep hands, hair, clothing, away from the outside of the toaster during operation to reduce the risk of injury to person and/or damage to the unit.
16. Switch off and use handles provided when moving.
17. It is recommended that this appliance is plugged directly into the wall socket.
18. A correctly specified, undamaged extension cord may be used with this appliance provided it is used in a safe manner.

## General Care and Safety Guide

19. Never place appliance close to radiant heat source.
20. Never operate in areas where petrol, paint or other flammable liquids are used or stored.
21. Never insert or allow foreign objects to enter any opening, as this may cause an electric shock, fire or damage to the appliance.
22. Never use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
23. Never connect the appliance to mains supply until completely assembled and adjusted.
24. Never remove plug from power socket until the appliance has been switched off.
25. Never remove plug from power socket by pulling cord – always grip plug.
26. This appliances is not intended to be operated by means of an external timer or separate remote-control system.
27. Never twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
28. Never use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
29. Due to the risk of injury, never use this appliance for any purpose other than its intended use. This appliance is intended for use in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses, by clients in hotels, motels, bed and breakfast type environments and other residential type environments
30. Never use this appliance outdoors.
31. Never operate the appliance with a damaged cord or plug, after it malfunctions, or if it has been damaged in any manner. Have the appliance checked and repaired by a qualified electrician if repair is necessary.
32. Never place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.

# Components

1. Bread Slots
2. Carriage Control Levers
3. Bagel Functions
4. Browning Controls
5. Cancel Functions
6. Removable Crumb Tray (not pictured)



## Operating your Toaster

Always choose a safe location for the toaster, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use. This appliance requires no installation.

**WARNING:** This appliance generates heat during use. Proper precautions must be taken to prevent the risk of burns, scalds, fires or other damage to persons caused by touching the exterior while in use.

**WARNING:** Never attempt to extract jammed toast, or any other item with a knife or any other object, as contact with live elements could result in an electric shock. Allow the appliance to cool, switch off and unplug from the power source and carefully turn the toaster upside down and shake gently to remove the bread.

**WARNING:**  **CAUTION! HOT SURFACE**

Place the unit on a dry, level and heat-resistant surface, away from the edge of the work surface. Ensure that the cord does not overhang the work surface as this is a hazard. Do not use the unit on the floor.

1. Ensure the switch is in the OFF position before plugging the power plug into the socket.
2. Insert the bread, crumpets or bagels into the bread slots.
3. Using the browning control, slide to select the desired browning setting; toasting settings range from 1 (lightest) to 7 (darkest). When using the toaster for the first time, select setting 3. Varying types of bread and personal preferences may require a different setting.
4. Press the carriage control lever down until it locks into place. The toasting cycle can be stopped at any time by pressing the cancel button.
5. Remove the toast, taking care not to touch any hot surfaces. In the unlikely event that bread or crumpets become jammed, switch off and unplug from the power source. Allow the toaster to cool fully before carefully turning the toaster upside down and shaking gently to remove the jammed items. Never insert your hands or any hard or sharp instrument into the slots.
6. If the toasts starts to smoke before it has popped up, stop the toasting process by pressing the cancel button.

### Variable Browning Controls

Dry or thin slices of bread will toast quicker than moist or thick slices, so it is recommended to use a lower browning control setting.

When toasting two slices at the same time, try to use the same size and consistency of bread to achieve equal browning.

## Cleaning

The unit must be cleaned thoroughly after each use.

To avoid risk of electric shock, before cleaning, you **MUST ALWAYS** switch off and unplug the unit.

Allow the toaster to cool before cleaning.

**DO NOT** use harsh chemicals to clean the toaster. Use only a soft, damp cloth to gently wipe the toaster and dry well.

To remove crumbs, slide out the crumb tray and discard contents. Wipe clean and replace. Never operate the toaster without the crumb tray in place.

To remove any pieces of bread remaining in the toaster, turn the toaster upside down and shake gently. Never insert any hard or sharp instruments into the slots as this could cause damage to the toaster and cause a safety hazard.

**DO NOT** immerse the toaster in water.

# 1 Year Warranty

Thank you for purchasing this Black & Decker product. Your product is warranted against faults and manufacture when used in normal domestic use for a period of **one year**. In non-domestic use Black & Decker limits the voluntary warranty to **three months**.

Black & Decker undertake to repair or replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period.

This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, or work carried out by anyone other than a qualified electrical service technician.

PLEASE KEEP YOUR RECEIPT AS THIS WILL HELP VERIFY YOUR WARRANTY.

The benefits to you given by this warranty are in addition to other rights and remedies available to you under a law in relation to the goods or services to which this warranty relates.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand this warranty is additional to the conditions and guarantees of the Consumers Guarantee Act (1993).

## New Zealand

CDB  
PO Box 100-707  
N.S.M.C  
Auckland , 0745

Phone +64 (0)9 917 4000  
Phone 0800 232 633

## Australia

CDB Goldair Australia Pty  
PO Box 574  
South Morang  
Victoria, 3752

Phone +61 (0)3 9365 5100  
Phone 1300 465 324

### Black & Decker One Year Warranty (IMPORTANT: Please complete and retain this warranty card)

Name \_\_\_\_\_

Address \_\_\_\_\_

Place Of Purchase \_\_\_\_\_ Date of Purchase \_\_\_\_\_

Name Of Product \_\_\_\_\_ Model Number \_\_\_\_\_

Attach a copy of the purchase receipt to this warranty card

Due to continual design improvements, the product illustrated in this User Manual may differ slightly from the actual product.

<b>New Zealand</b>	CDB Media Ltd.	Tel.	+64 (0)9 917 4000
	PO Box 100-707	Tel.	0800 232 633
	North Shore Mail Centre	Email	info@cdb.co.nz
	Auckland, 0745	<b>Monday – Friday 8am-5pm</b>	
<b>Australia</b>	CDB Goldair Australia PTY	Tel.	+61 (0)3 9365 5100
	PO Box 574	Tel.	1300 465 324
	South Morang	Email	info@cdbgoldair.com.au
	Victoria, 3752	<b>Monday – Friday 8am-5pm</b>	

**TECHNICAL SPECIFICATION**

Model: BD4T250  
Supply: 220-240VAC 50/60Hz  
Wattage: 1450-1750W