


# Born.

## ASSEMBLY INSTRUCTIONS

STUDIO EASEL

JBA13176S

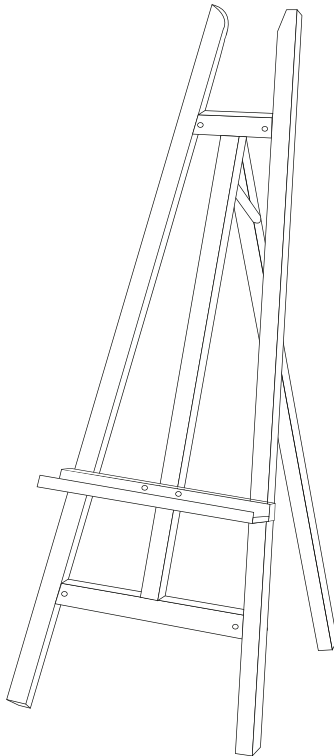



Assembled easel size: 60W x 90D x 150H cm

Fits maximum canvas size: 60" (152cm)


Material: Beechwood

Estimated assembly time: 5 min

## Hardware list


A		Bolts 4pcs Dia0.6x6.5cm	E		Wing nuts 3pcs
B		Bolts 2pcs Dia0.5x6cm	F		Washers 7pcs Outer dia 1.4cm Inner dia 0.6cm
C		Bolts 1pcs Dia0.5x7cm	G		Allen key 1pc
D		Cams 4pcs			

## Components

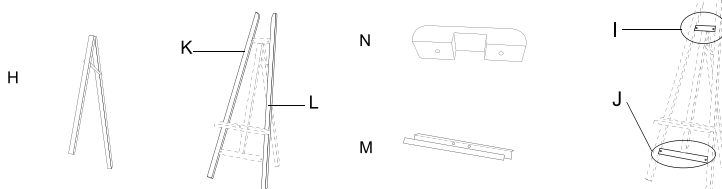


## Assembly

### Step1

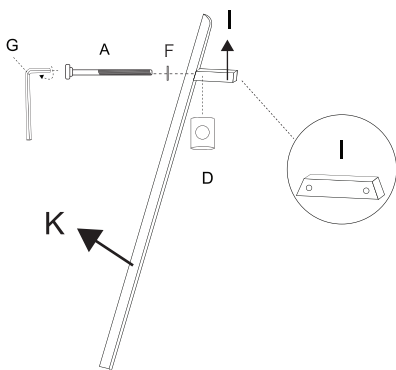

Assemble part K and I,  
using bolt A, washer and cam.  
Do not tighten the bolt at this moment.


### Step2

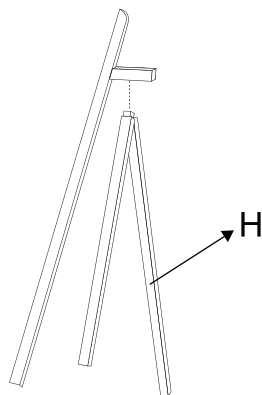

Fit part H into assembled unit as shown.


## Assembly

### Step3

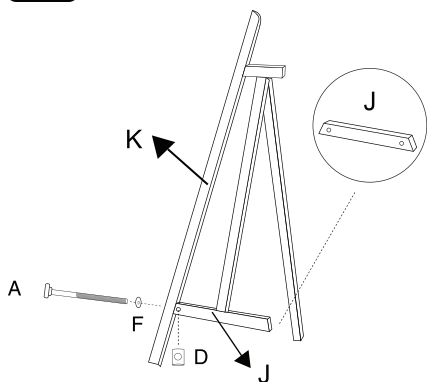

Fit part J into assembled unit as shown. Secure part K and J, using bolt A, washer and cam. Do not tighten bolt at this moment.


### Step4

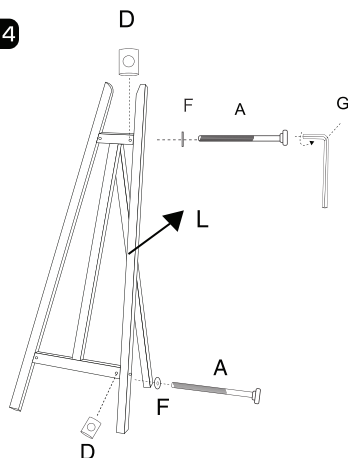

Fit part L into assembled unit as shown. Secure using bolts A, washers and cams. Now tighten all bolts using allen key.


## Assembly

### Step5

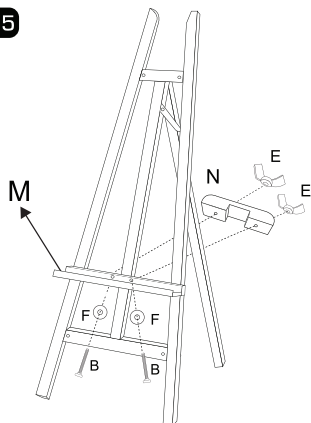

Attach the canvas support M and N to the assembled unit as shown. Secure using bolts B, washers and wing nuts, but do not over tighten the bolts.

### Step6

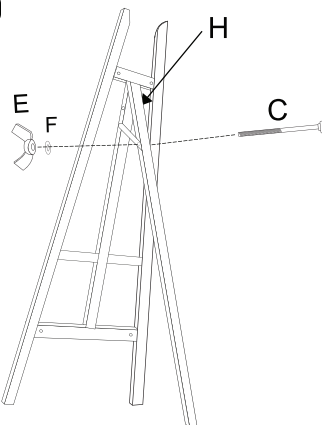

Secure support H, using bolt C, washer and wing nut, but do not over tighten the bolt. Assembly is now complete.

## **Product Warranty – Valid for Australian Customers Only**

Officeworks Ltd warrants that this product will be free from defects and work as intended for 3 years from the date of purchase by the original customer.

If the product has any defects or does not work as specified during the Warranty Period, Officeworks will, at its election and at its expense, repair or replace the product.

This warranty does not apply:

- to cosmetic damage;
- to damage caused by consumables used in connection with the product;
- where the product has not been used in accordance with all provided instructions;
- to damage arising from fair wear and tear;
- where the product has not been subject to reasonable use;
- where the product has been intentionally or negligently damaged; and/or
- if the customer has attempted to repair the product.

To make a claim under this warranty, please return your product with your receipt or proof of purchase to your nearest Officeworks store or contact 1300 633 423.

This warranty is provided in addition to any rights you may be entitled to under the Competition & Consumer Act 2010. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

OFFICEWORKS LTD  
236-262 EAST BOUNDARY ROAD  
EAST BENTLEIGH VIC 3165 AUSTRALIA



Thank you for your purchase. Please retain your receipt to validate warranty.

If you would like to know more about our Born art range, please visit [www.officeworks.com.au](http://www.officeworks.com.au)