



## ULTRASONIC DIFFUSER AMBIENCE



### OPERATING MANUAL - MODEL 889

#### FEATURES

 
- Humidifies the air
- Safe & cool to touch
- Up to 7 hours operation
- Auto switch off
- 7 LED light options
- Operating times:
  - Interval (6mins on/2mins off)
  - Continuous ON
- Water capacity 100mL

Please read the Operating Manual carefully and retain for reference.


#### How the Bosisto's Ultrasonic Diffuser works:

Using high frequency oscillation (vibration), water and essential oils are converted into a fine mist and dispersed into the air.


#### FRONT

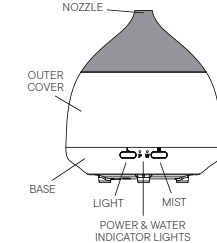





#### BACK

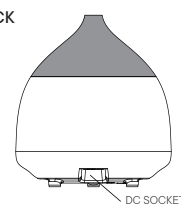 

#### BOTTOM

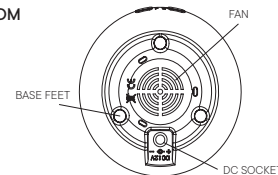 


#### INSIDE

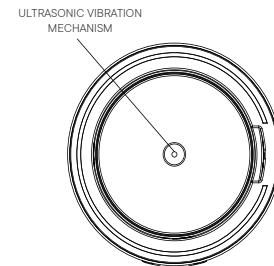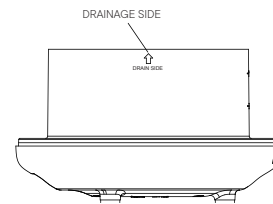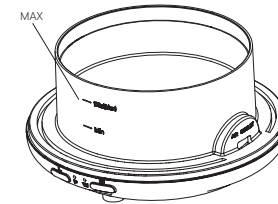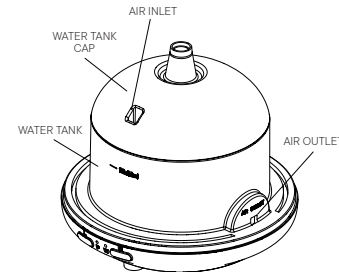    

#### OPERATING INSTRUCTIONS


1 Holding upright, carefully remove the cover from the base.

 2 Gently remove the water tank cap. DO NOT tilt the unit if there is water remaining.

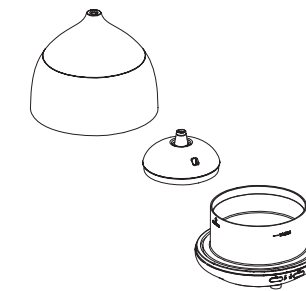

3 Add clean, cold tap water to the water tank using the measuring cup, without exceeding the maximum waterline. DO NOT spill any water outside the tank. DO NOT use hot water or refill while the unit is in operation.

 4 Add 6-9 drops of diffuser oil or essential oil to the water.

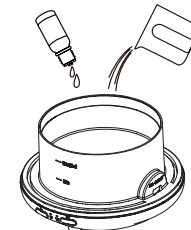


5 Replace the water tank cap and cover. To avoid spillage, DO NOT tilt the unit.

6 Connect the DC adapter into the DC socket in the base of the diffuser. Plug the AC adapter into the power supply.

7 **MIST:** Press the 'MIST' button once for interval setting (6mins on/2mins off). Press again for continuous ON. To power off, press the 'MIST' button 3 times.

 **LIGHT:** Press the 'LIGHT' button once for rotating colour. Press a second time to hold colour. Press the 'LIGHT' button 3 times to turn light function off.

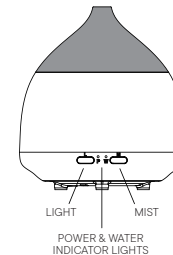

8 If the unit is not going to be used for a long time, drain any remaining water, clean with diluted mild kitchen detergent and ensure the unit is completely dry before storing away. Ensure unit is disconnected from the power supply when cleaning. If the water level inside the unit runs low, it will automatically stop operating and will not allow further operation.

INDICATOR LIGHT	CONDITION	INSTRUCTION
P (Power)	OFF	Not connected with Power Supply
	ON	Connected with Power Supply
W (Water)	OFF	Not working
	ON	Working normally
	Blinking	Paused


## THINGS TO NOTE

 - The amount and intensity of mist produced will vary, but this is not unusual and should not be considered as a fault.
- Factors that affect this include water type, humidity, temperature and air currents.
- If there is no water in the water tank, pressing the MIST button will cause the light to “flash” 3 times and “beep” twice to remind you to add water. The unit will not work without water.
- Only diffuser or essential oil can be used in the unit. Those containing chemical fragrance, spice or impurities will cause malfunction and void the warranty.
- Use 6–9 drops of diffuser or essential oil per 100mL water at a time. Too much essential oil will clog the system and cause malfunction. Clean the unit as per the Maintenance instructions, before changing to a new type of essential oil.


## ACCIDENTAL LEAKAGE

- In the event of the unit being knocked over or tipped during use, please follow the steps below to avoid malfunction

- 1 Unplug the unit, remove the outer cover and water tank cap.

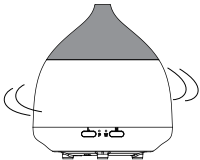

 - 2 Pour any remaining water out of the water tank.

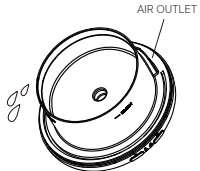

- 3 Shake the unit gently to drain any water from inside the mechanism and then allow to dry for at least 24 hours.

## MAINTENANCE

To ensure you enjoy the best results and long-term satisfaction, we recommend that you follow the operating and maintenance instructions carefully. Please follow the steps below if the unit has been used for 5–6 times or for 2–3 days.

**STEP 1:** Disconnect the AC adapter from the power supply. Take off the cover while keeping the unit stable. Disconnect the DC plug from the unit.

**STEP 2:** If there is water left in the tank, remove the water tank cap and pour it out from the drain side. DO NOT pour from the air outlet side or water may flow into the unit.

**STEP 3:** Use a damp cloth or cotton bud with water or diluted mild kitchen detergent to clean the outside or inside of the unit.

**DO NOT** use chlorine, acidic (vinegar) or enzyme-based detergents to clean the outside or inside of the unit.

 
**IMPORTANT: DO NOT** press heavily or scratch the ultrasonic vibration mechanism in the water tank during cleaning.

**STEP 4:** If there is any dirt inside the mist outlet:

- Remove the outer cover and clean it with a cotton bud.
- Remove the water tank cap plus the lid insert and clean with a cotton bud.

Re-attach the lid insert into the top of the water tank cap until you hear a click on each side.

**STEP 5:** Add water into the tank with the measuring cup. Install the cover. Activate the unit to operate for 30 minutes. Rinse it after pouring out the remaining water.

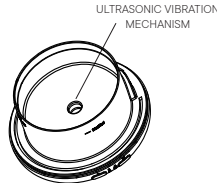

## PRECAUTIONS AND SAFETY WARNINGS

To ensure safety in operating this unit, please follow the instructions below:

- Do not fill the unit to over 100mL.
- Do not switch on power when the tank is empty.
- Do not touch the ultrasonic vibration mechanism.
- Clean regularly as per Maintenance instructions to avoid malfunction.
- Always unplug from power supply before cleaning or maintenance.
- For hygiene reasons, after use, pour remaining water from “DRAIN SIDE” of tank, and wipe with a clean, dry cloth.
- Essential oils can stain. In the event of spillage or contact with surface, please wipe away with a soft cloth.
- Only use the measuring cup provided to add water to the tank. Never fill directly from the tap.
- Do not let mist blow directly onto furniture, clothing, walls etc.
- Keep away from direct sunshine and heat sources.
- Always keep on stable flat surfaces. Do not place on carpet.
- Keep away from electronic equipment such as computer, TV and audio equipment.
- Do not tip the unit as this may cause water to enter the mechanism and cause malfunction.
- Use tap water only. Do not use hot water, mineral or sparkling water.
- Do not touch any part of the unit with wet hands.
- Keep out of reach of children and pets. This appliance is not to be used by persons with reduced physical, sensory or mental capabilities, lack of experience and knowledge, unless they have been given supervision or instruction.
- Do not cover the unit or block the mist outlet.
- Do not use the unit if the power lead has been damaged or the socket is loose.

## TROUBLESHOOTING

Please refer to the table below in the event of the unit operating abnormally

ISSUE	POSSIBLE CAUSE	SOLUTION
Will not switch on-switch off early	<ul style="list-style-type: none"><li>• Is there enough water in the tank?</li><li>• Is the power cord connected properly?</li></ul>	<ul style="list-style-type: none"><li>• Add water to the tank</li><li>• Disconnect, check cables and re-connect carefully.</li></ul>
No mist or abnormal mist	<ul style="list-style-type: none"><li>• Not enough water?</li><li>• Too much water?</li><li>• Dirt on the ultrasonic vibration mechanism?</li><li>• Cover and inner cover are not installed properly?</li><li>• Dirt on the air suction port on the underside of the base?</li></ul>	<ul style="list-style-type: none"><li>• Add suitable amount of water in the tank.</li><li>• Water must never be filled over 100mL (MAX) line.</li><li>• Please refer to Maintenance instructions</li><li>• Remove and re-install correctly, so vapors can be released freely.</li><li>• Clean the air suction port of any dust.</li><li>• Restricted airflow will affect mist.</li></ul>
Water leakage from product	<ul style="list-style-type: none"><li>• Cover and inner cover are not installed properly?</li><li>• Has the unit been tipped over?</li><li>• Low temperature or high humidity?</li></ul>	<ul style="list-style-type: none"><li>• Remove and reinstall correctly, so vapors can be released freely.</li><li>• Follow accidental leakage instructions.</li><li>• Under these conditions, the mist may condense quickly into water droplets.</li></ul>

## SPECIFICATIONS - MODEL 889

Dimensions	125mm (d) x 125mm (h)	Water Capacity	100mL
Weight	Approx. 200g	Mist Capacity	15–20mL/Hr
Power	Special Adapter Input: AC 100~240V 50/60 Hz Output: DC24V 500mA Length of power line: Approx. 170cm Power: Approx. 12 W	Accessories	Special AC Adapter Measuring Cup Operating Manual
Timer	Interval (6mins On/2mins Off) and Continuous ON	Ultrasonic Frequency	2.4 MHz
LED Light	7 colours		

## 1 YEAR WARRANTY

This product has been produced with the greatest care for normal, household use. Following directions carefully will ensure dependable operation. If you experience unsatisfactory operation or are dissatisfied with your Bosisto's Ambience Ultrasonic Diffuser (Model 889) please contact our friendly Customer Service team at FGB Natural Products.

Modification to the product by the consumer or failure to follow the manufacturer's operating instructions will void the warranty.

If repair is required under the warranty period, the product should be returned with proof of purchase.

The purchaser assumes responsibility for the proper care and use of the product in accordance with the printed Operating Manual. The purchaser or user must make his or her judgment as to when to use the product and the length of use. Keep the Operating Manual available as it is your guide to safe, efficient operation.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law 2011. You are entitled to a replacement of the faulty unit or refund for a major failure.

**For warranty claims please call 1800 655 841**