 


## **ASSEMBLY INSTRUCTIONS**

### **CONTOUR 2 DOOR CUPBOARD JBCONT2DCB**

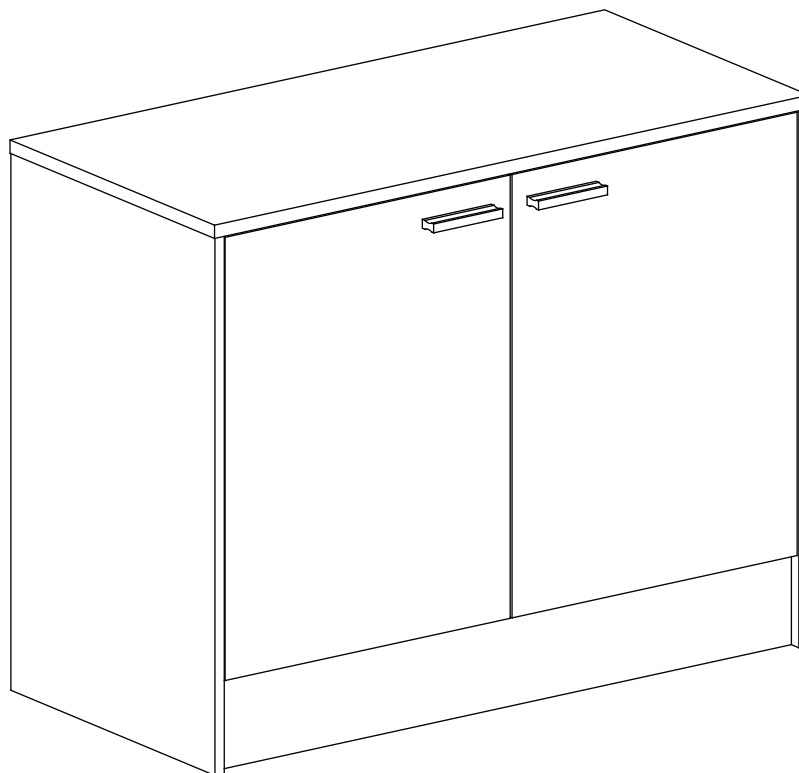

This design and instruction booklet is subject to copyright.  
[www.officeworks.com.au](http://www.officeworks.com.au)

1 Carton

---

For spare parts or hardware call (03) 9310 3011 or email [hardware@kyvas.com.au](mailto:hardware@kyvas.com.au)

**Important**  
**Estimated Assemble Time: 70min**

 
- To view an assembly video, go to <https://www.officeworks.com.au/>
- Search the product by item code or name:



- Click on the icon to watch the video.



**People Required**

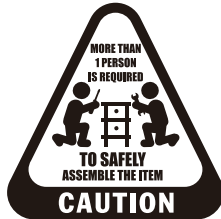

More Than One Person Is Required  
To Safely Assemble The Item

**Customer Service  
Contact Details**




Spare Parts & Hardware  
(03) 9310 3011

**General Advice**



 Assemble On A Clear Flat  
Surface

**Tools Required**

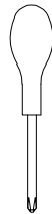

**CAUTION:** Do not use tools other than those required, as this can damage your new item.

**NOTE**

- Please check you have all hardware before assembling.
- If you are missing any hardware, please contact Kyvas on (03) 9310 3011 or email [hardware@kyvas.com.au](mailto:hardware@kyvas.com.au)
- Please ensure you have the item, required hardware part and quantity.
- Please retain your receipt as proof of purchase to validate your warranty.

**CAUTION**

- Do not tighten screws before all screws are in the right place.
- Do not use this product unless all bolts, screws and knobs are firmly secured.
- Check that all bolts, screws and knobs are securely tightened at least every 4 months.

 
**WARNING**

- If parts are missing, broken, damaged or worn stop using the product until all repairs are made using manufacturer authorised parts.
- Keep children and animals away from the assembly area.  
This furniture contains small parts that could cause choking if swallowed.
- Keep all plastic wrapping materials away from babies and children to avoid danger of suffocation.
- This item is not for outdoor use – unless stated otherwise.
- Failure to follow these warnings could result in serious injury.

**DANGER**

- **CHILDREN MUST BE SUPERVISED.**


## Panel Overview

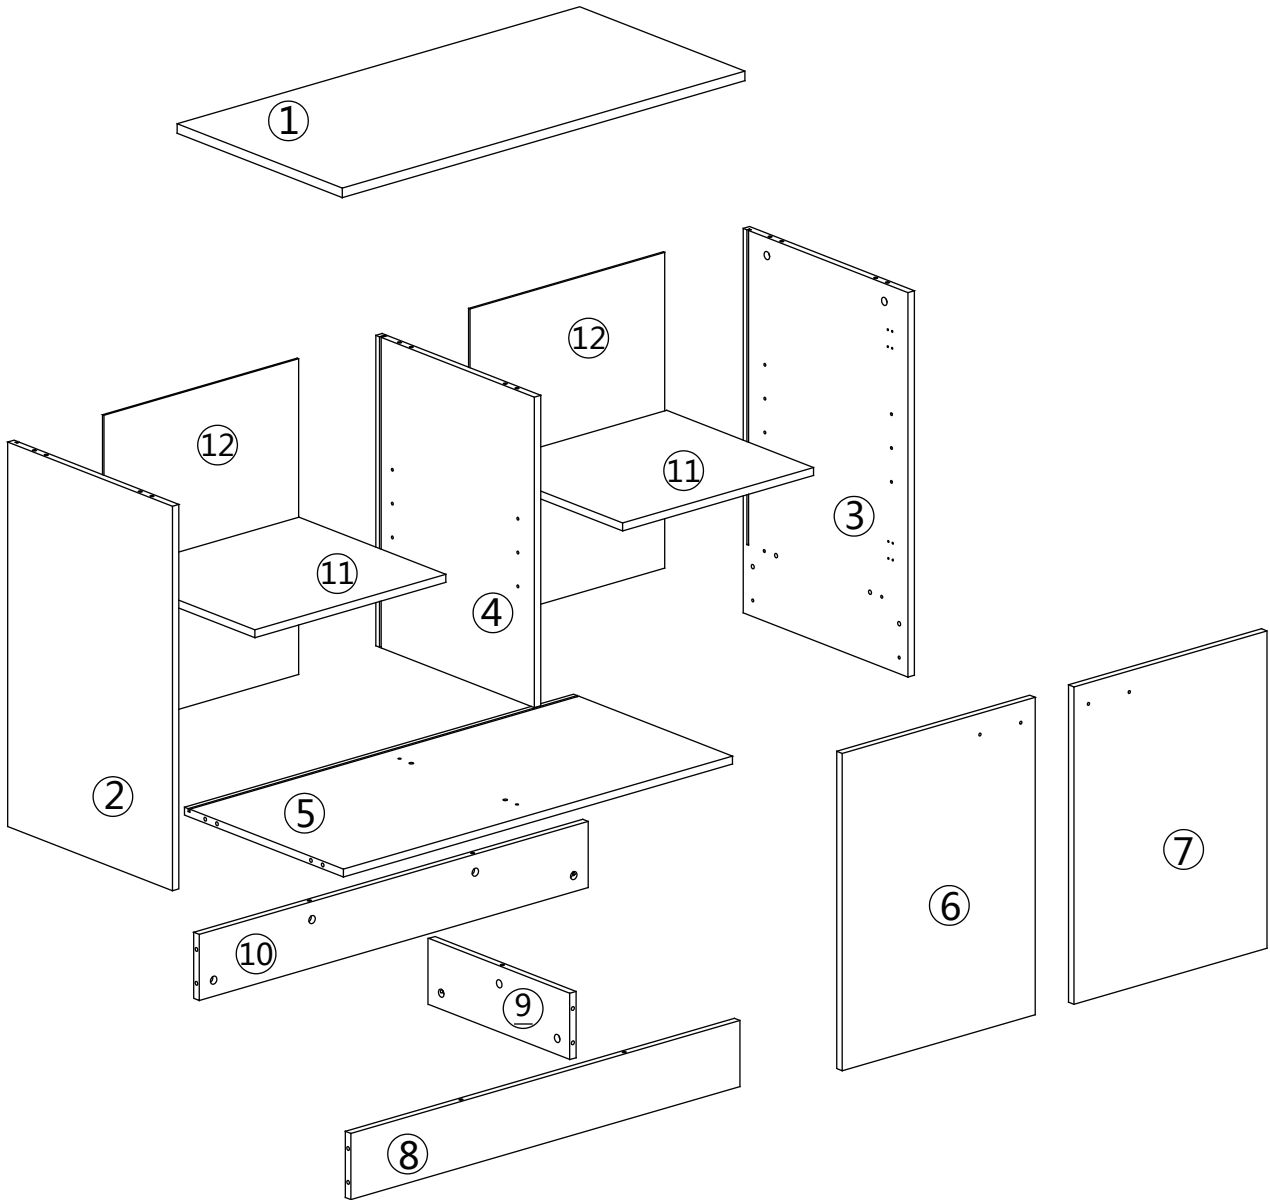

## Part List


Parts located in Carton - JBCONT2DCB

 ①

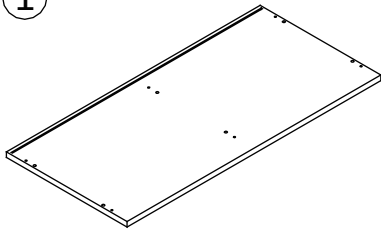


X 1 pc

 ②

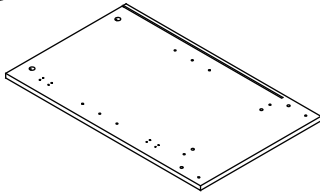


X 1 pc

 ③

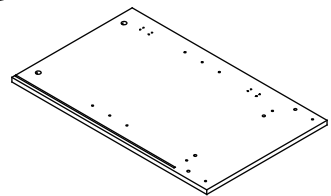


X 1 pc

 ④

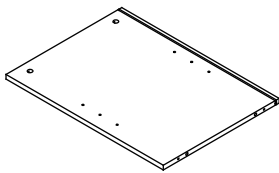


X 1 pc

 ⑤

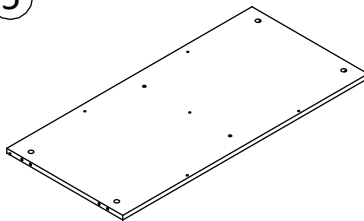


X 1 pc

 ⑥

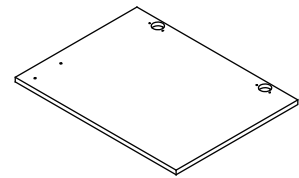


X 1 pc

 ⑦

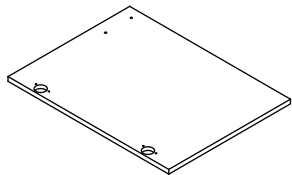


X 1 pc

 ⑧

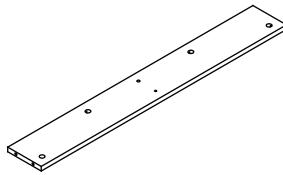


X 1 pc

 ⑨




X 1 pc

 ⑩

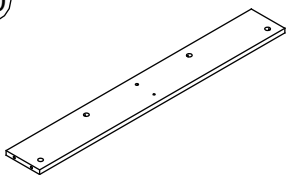


X 1 pc

 ⑪

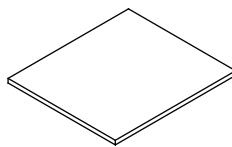

X 2 pcs

  
 
 
 
 
 

 
 
 


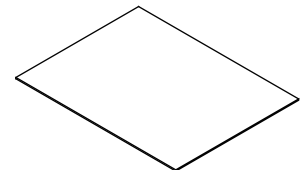
⑫



X 2 pcs

## Hardware List

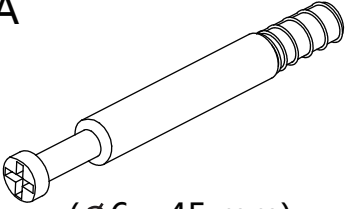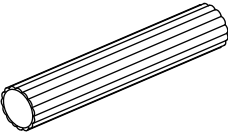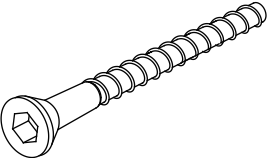 
Hardware Pack located in Carton - JBCONT2DCB

<p><b>A</b></p>  <p>(<math>\varnothing 6 \times 45</math> mm) X 21pcs</p>	<p><b>B</b></p>  <p>(<math>\varnothing 15 \times 12</math> mm) X 21pcs</p>	<p><b>C</b></p>  <p>Shelf Support X 8pcs</p>
<p><b>D</b></p>  <p>(<math>\varnothing 8 \times 30</math> mm) X 18pcs</p>	<p><b>E</b></p>  <p>(<math>\varnothing 7 \times 38</math> mm) X 2pcs</p>	<p><b>G</b></p>  <p>Plastic Cap X 6pcs</p>
<p><b>H</b></p>  <p>(<math>\varnothing 3.5 \times 14</math> mm) X 33pcs</p>	<p><b>J</b></p>  <p>(<math>\varnothing 4 \times 18</math> mm) X 4pcs</p>	<p><b>K</b></p>  <p>X 8pcs</p>
<p><b>L</b></p>  <p>Allen Key M6-size X 1pc</p>	<p><b>M</b></p>  <p>Strap X 1pc</p>	<p><b>N</b></p>  <p>(<math>\varnothing 4 \times 30</math> mm) X 1pc</p>
<p><b>O</b></p>  <p>Washer X 2 pcs</p>		

## Hardware List

 
Other hardware located in Carton - JBCONT2DCB

**F**

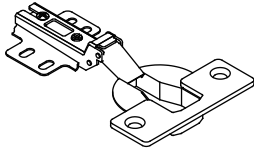

Hinge  
X 4pcs

**I**

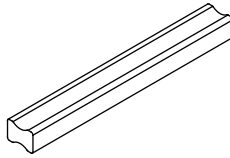 


Handle  
X 2pcs


For missing hardware, please contact Kyvas on (03) 9310 3011 or email [hardware@kyvas.com.au](mailto:hardware@kyvas.com.au)

# Assembly

 
## Step 1

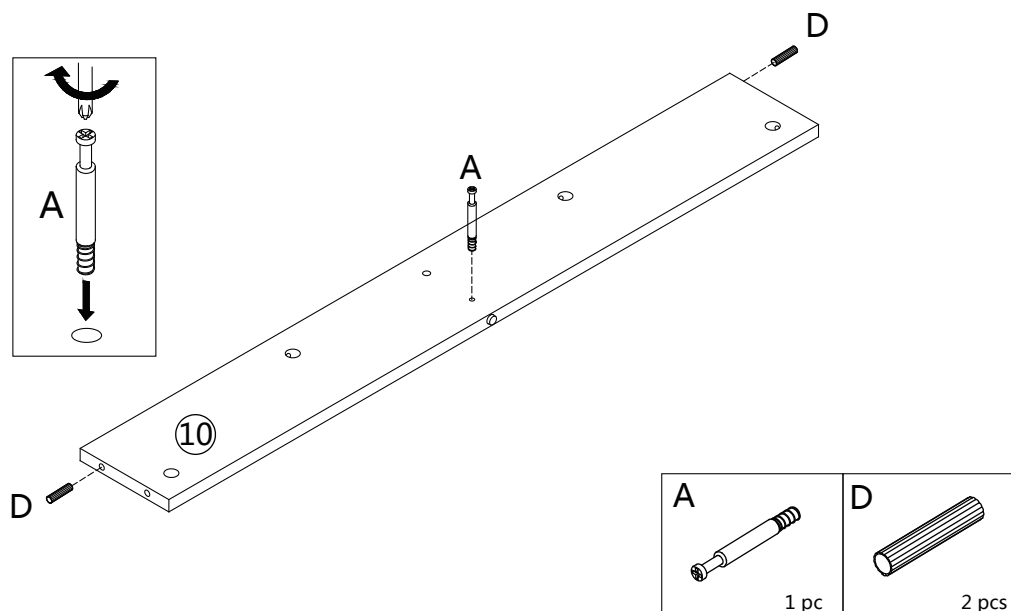


## Step 2

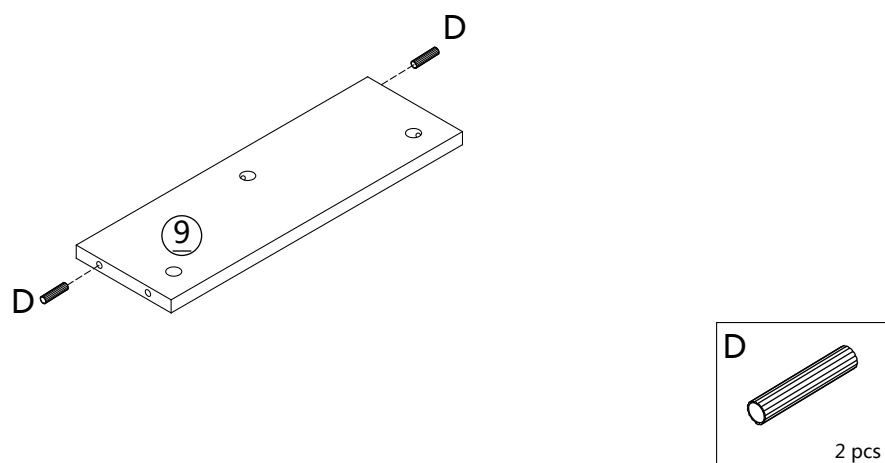 


## Step 3

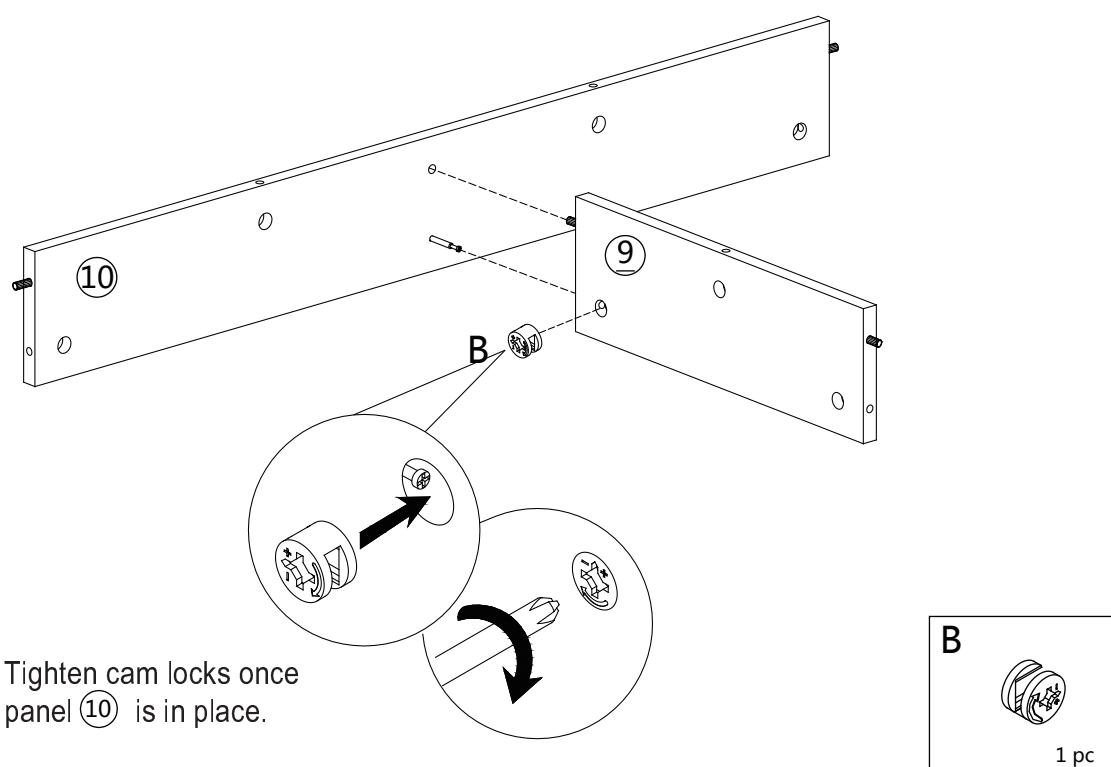 


## Step 4

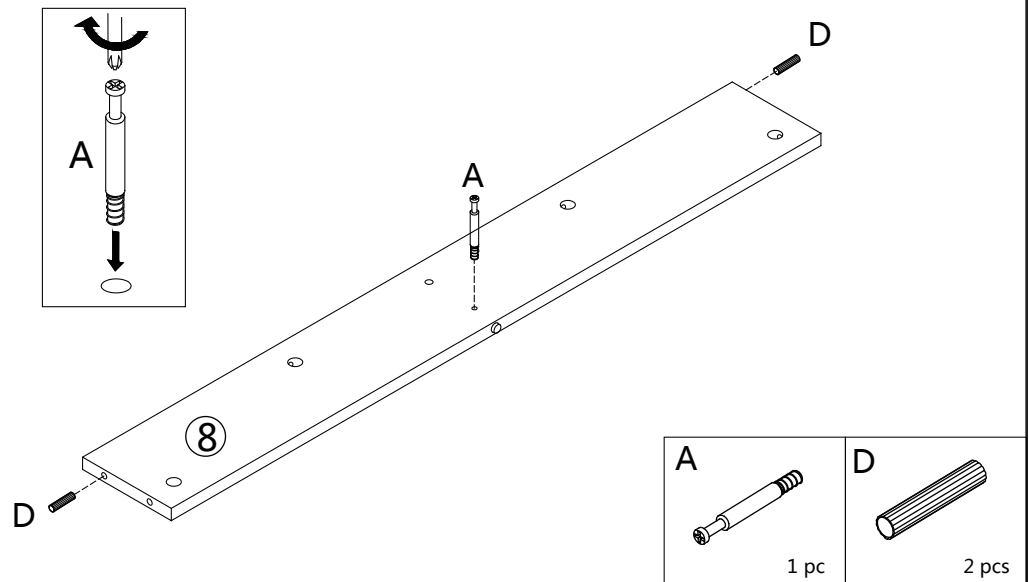 

## Step 5


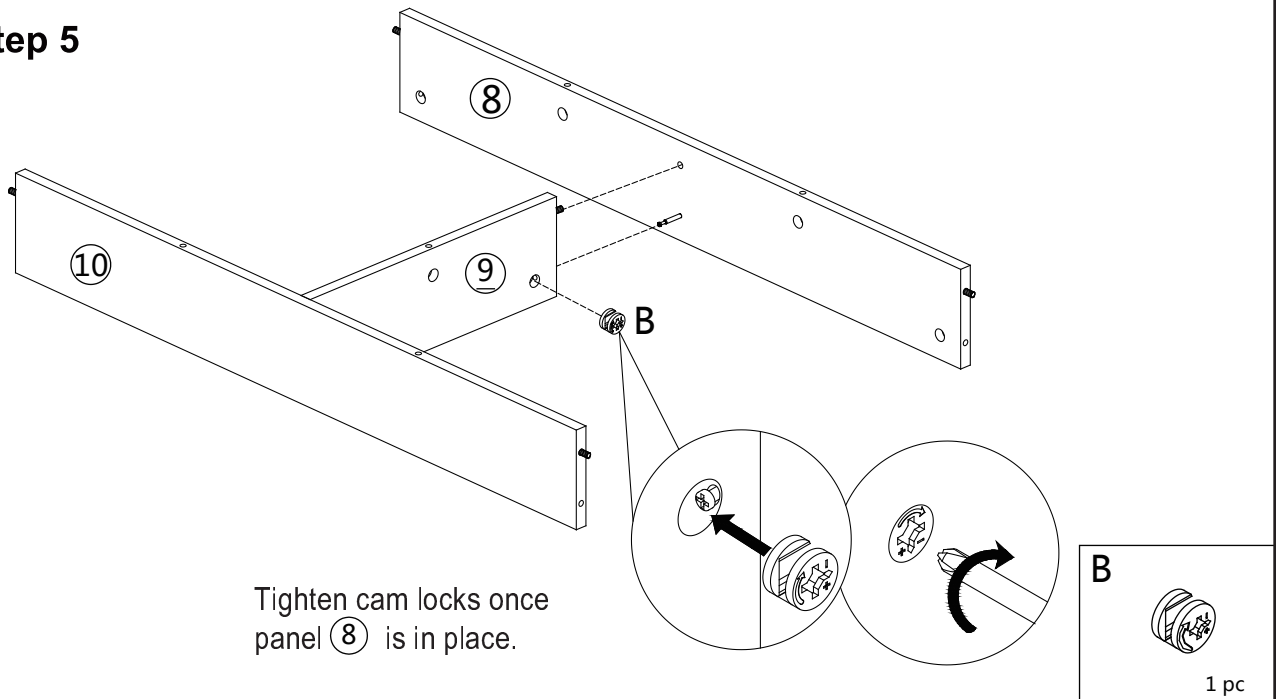 


## Step 6


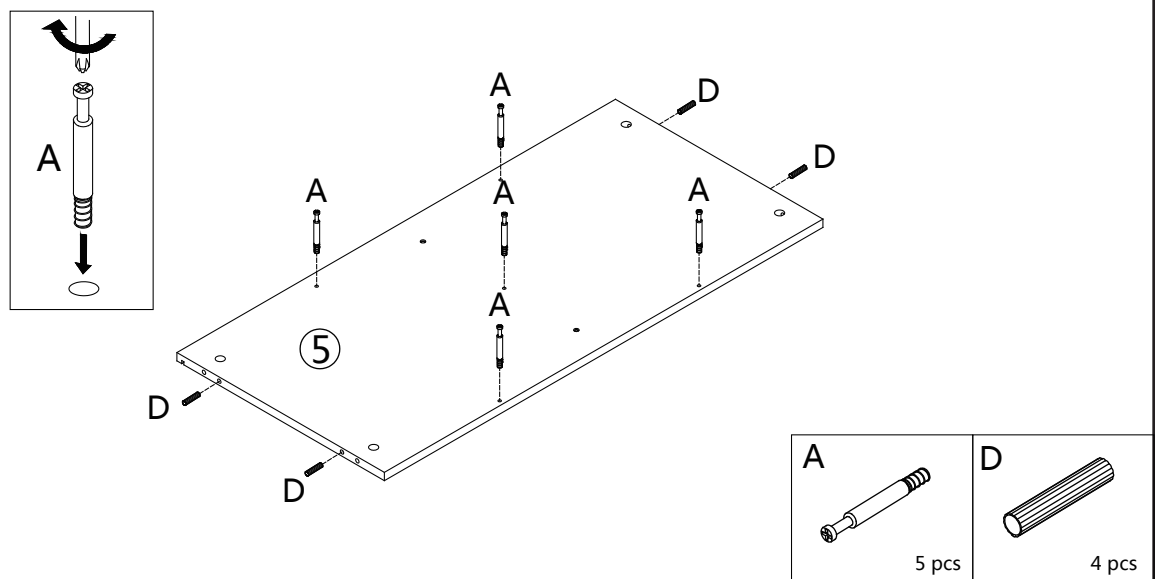 





## Step 7

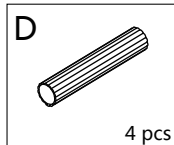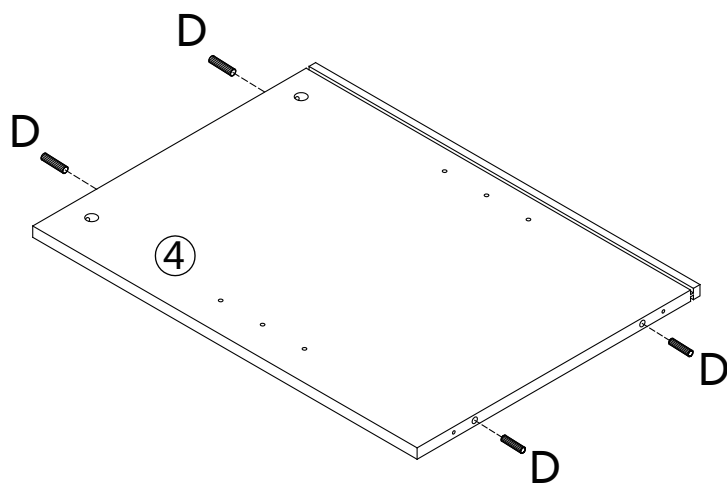  


## Step 8

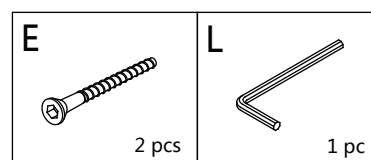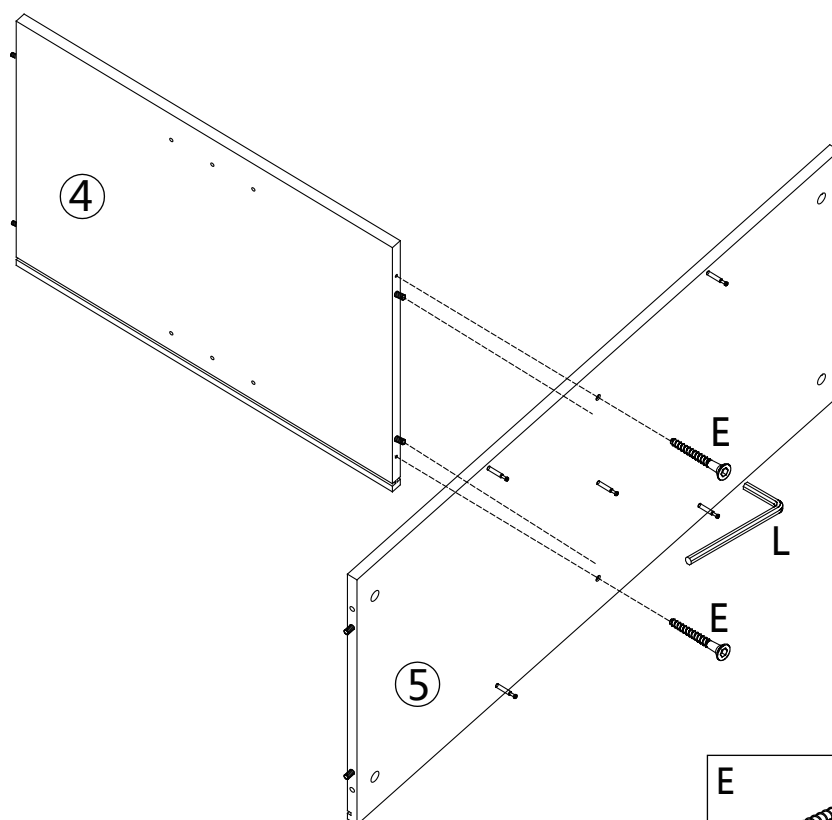  


## Step 9

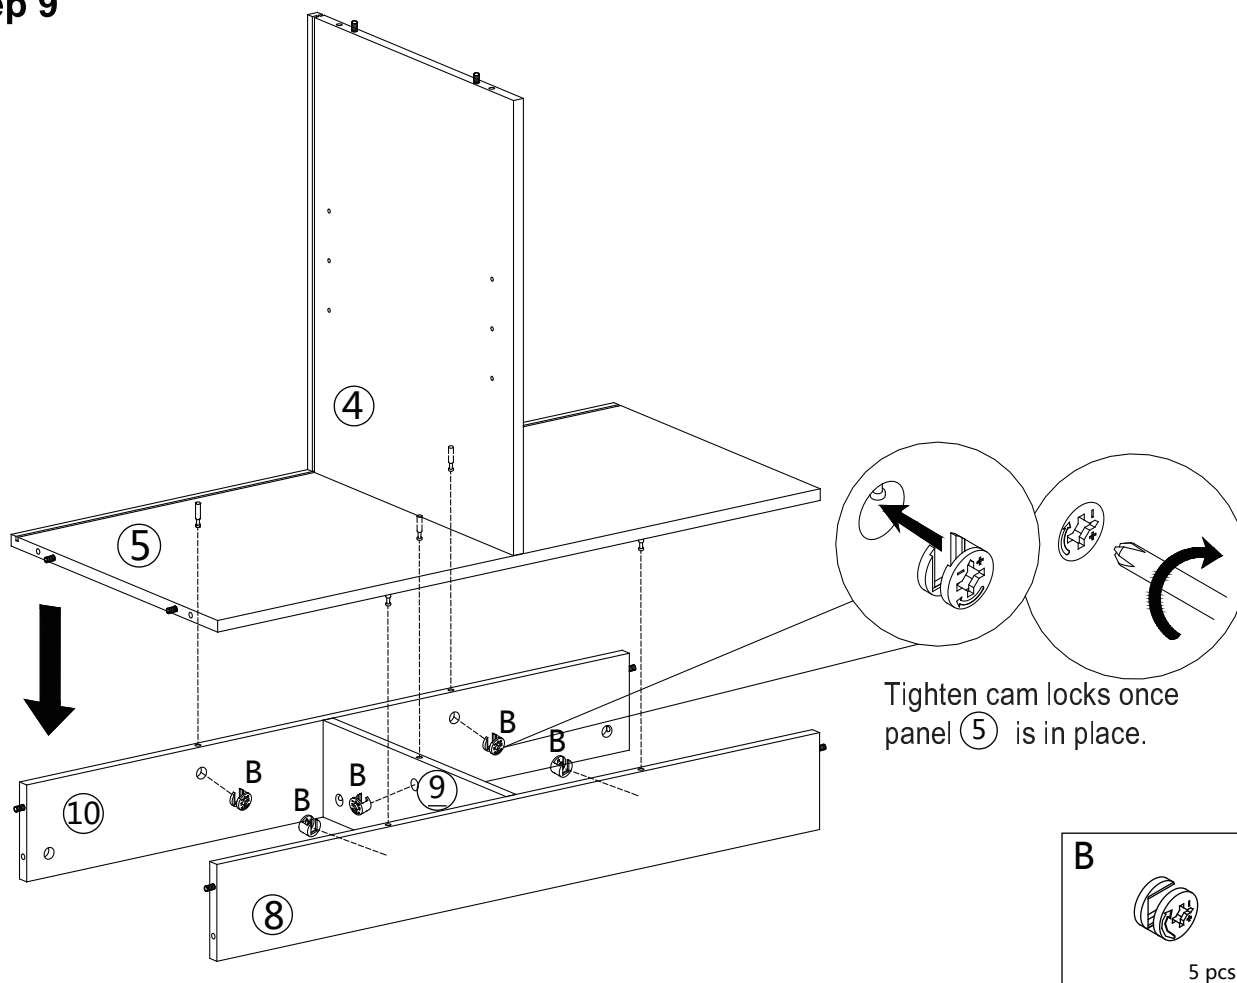 


## Step 10

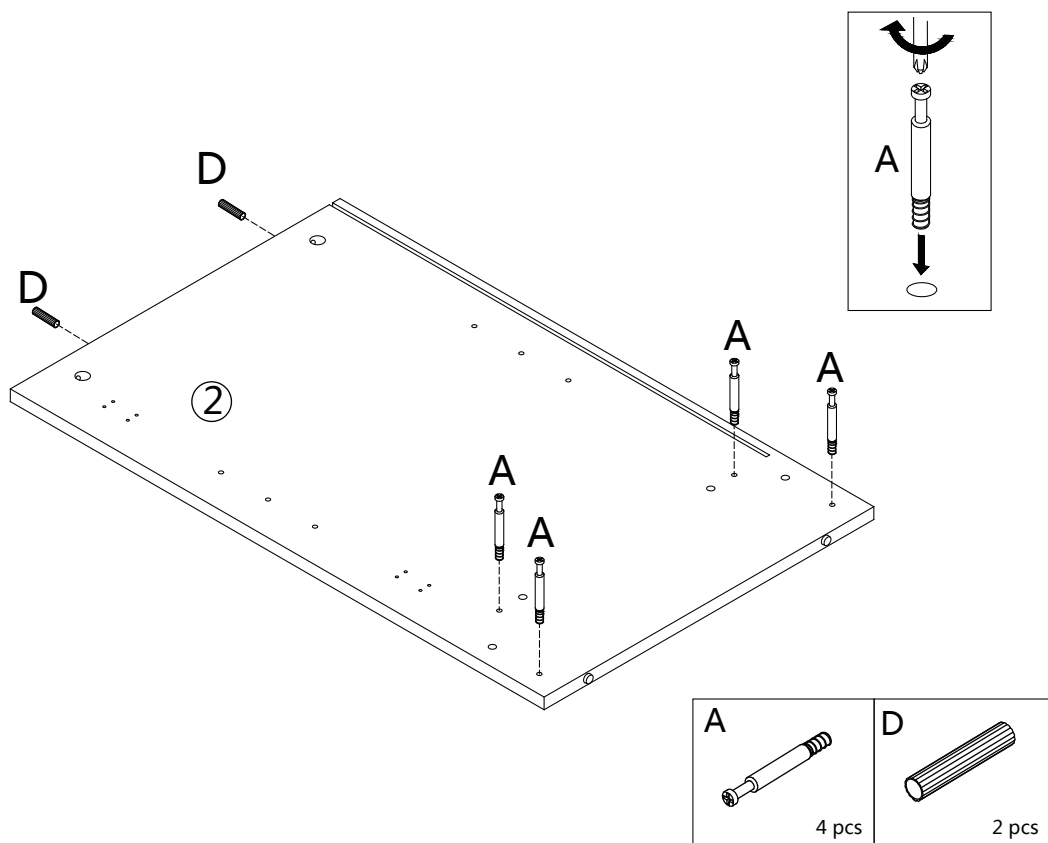 

## Step 11


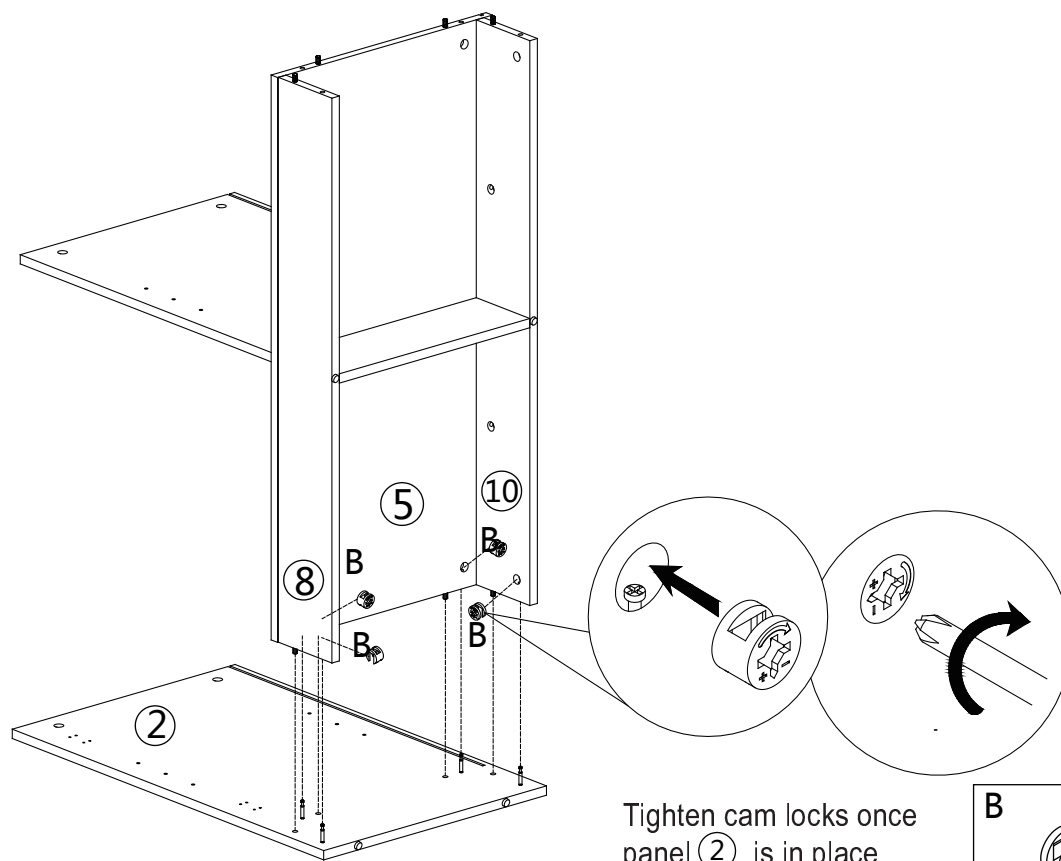 


 Tighten cam locks once panel ② is in place.




4 pcs

## Step 12

 
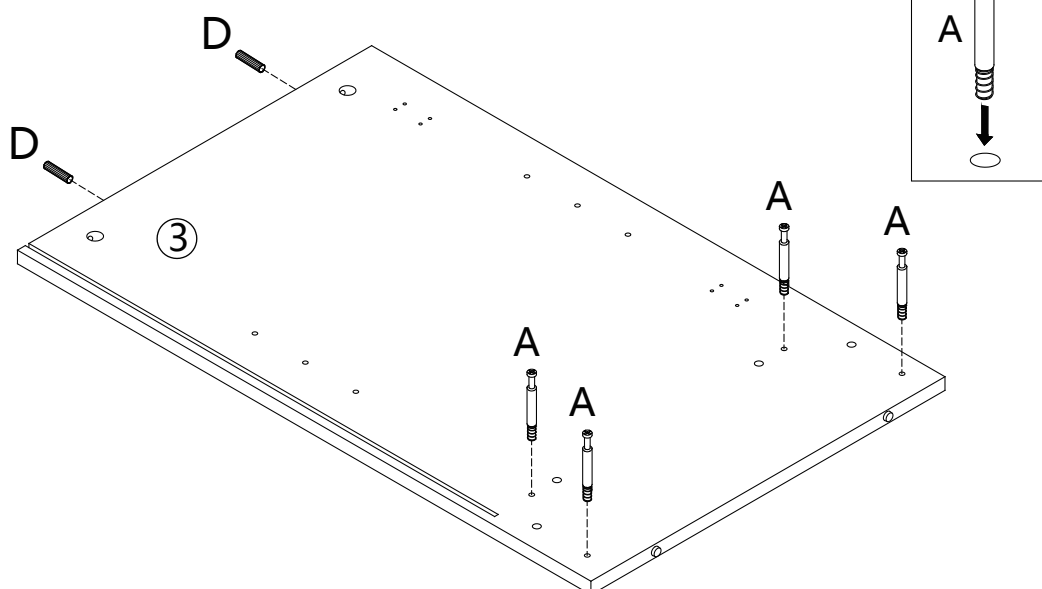 


4 pcs

 


2 pcs

 
 
Step 13

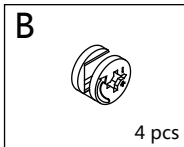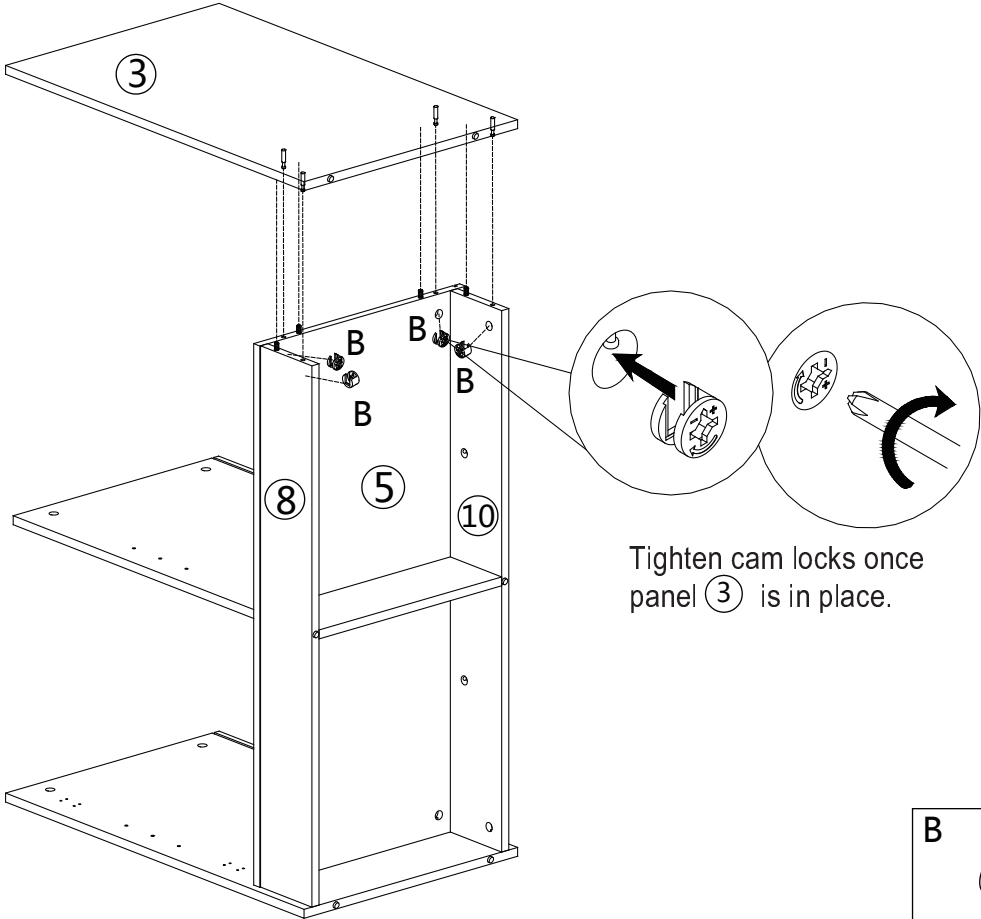


 
Step 14

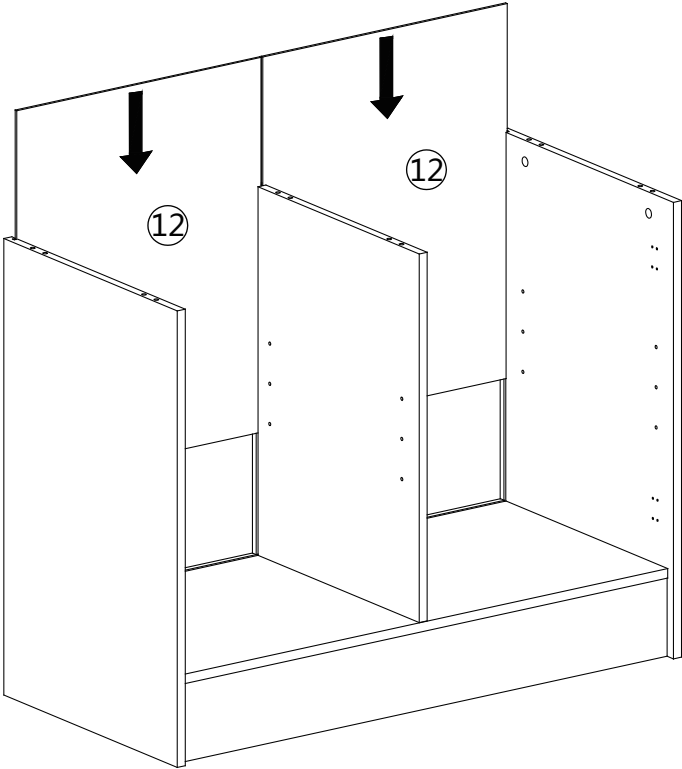

  
Step 15

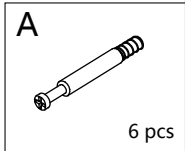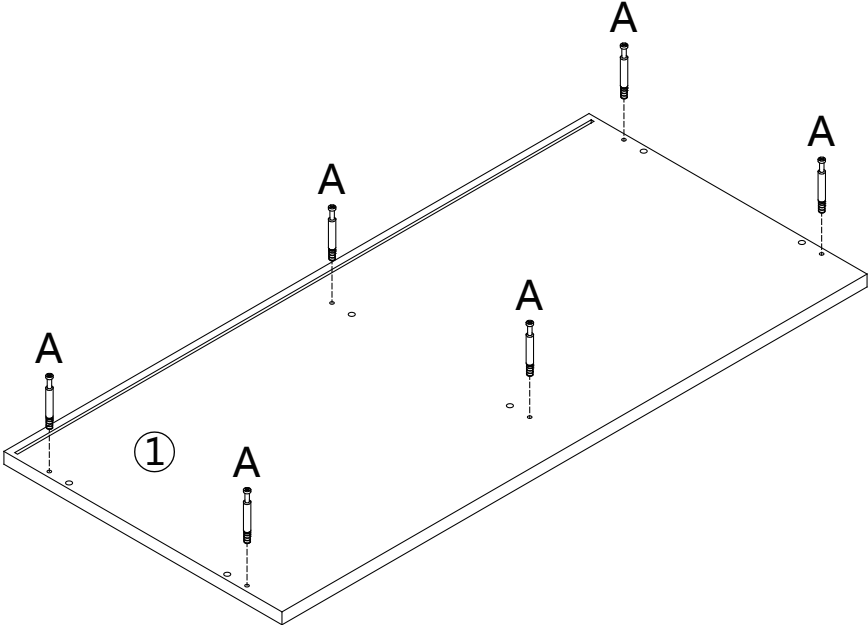

  
Step 16

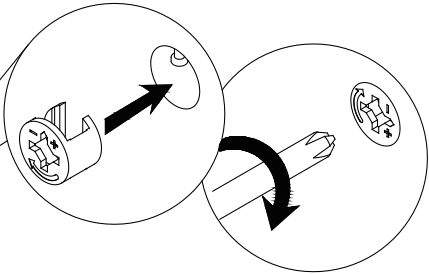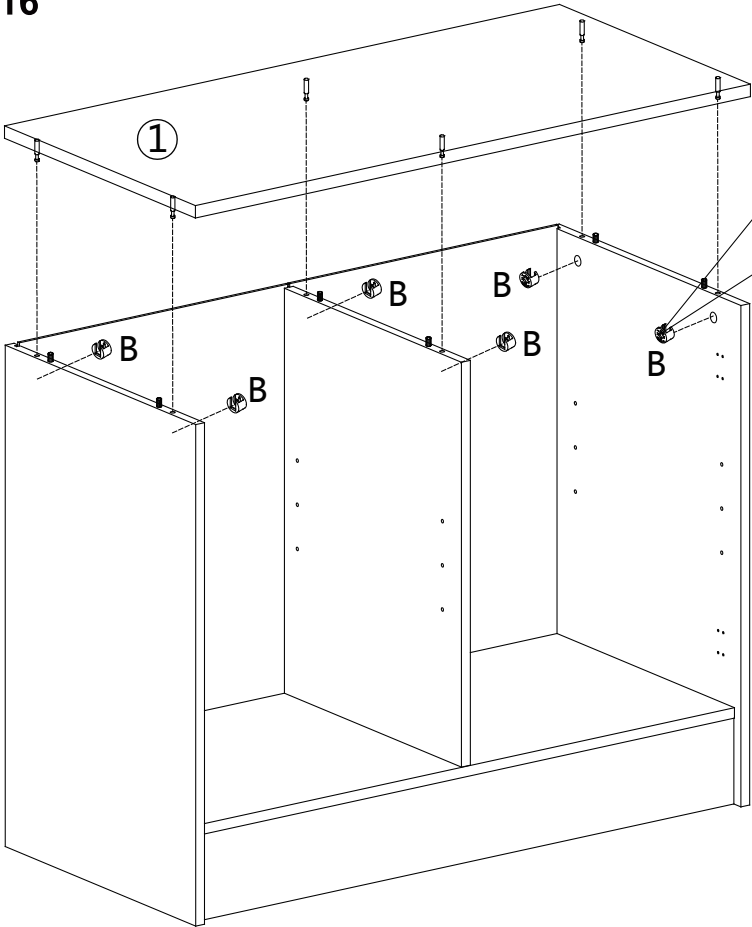

 
Tighten cam locks once panel ① is in place.

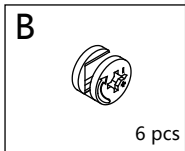


## Step 17

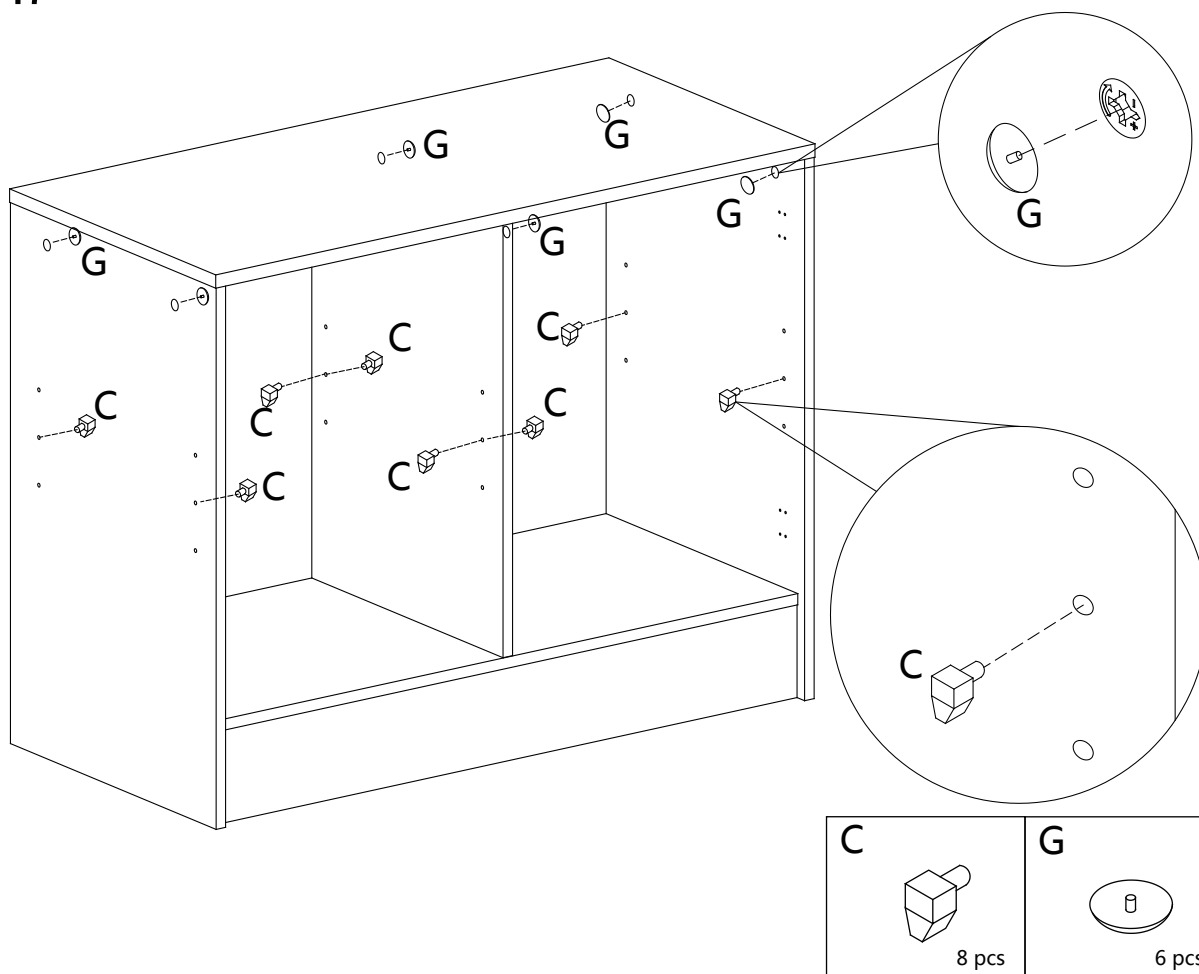 


## Step 18

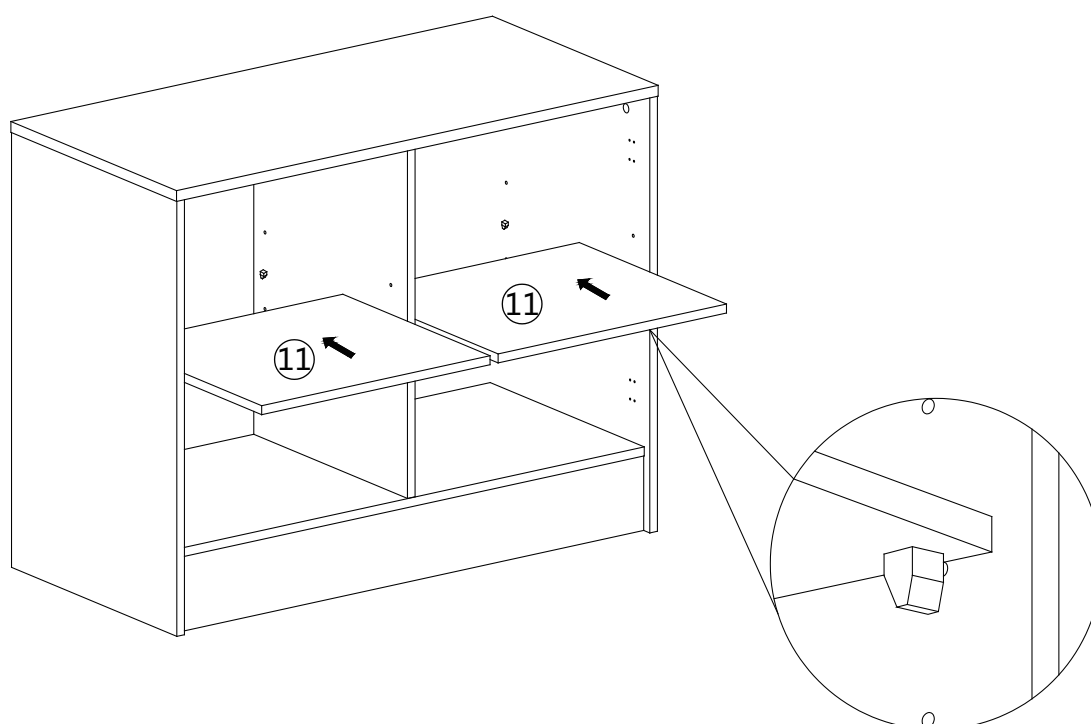 



## Step 19

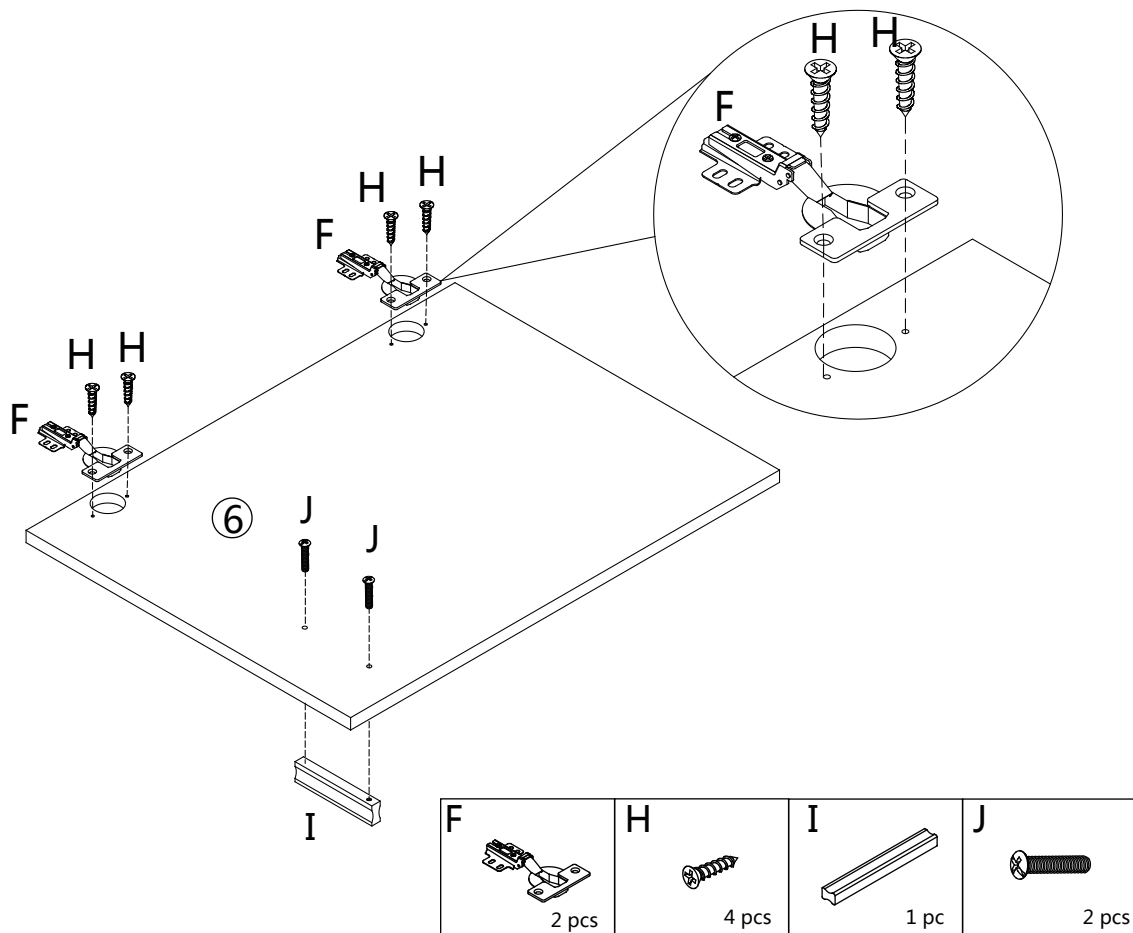 



## Step 20

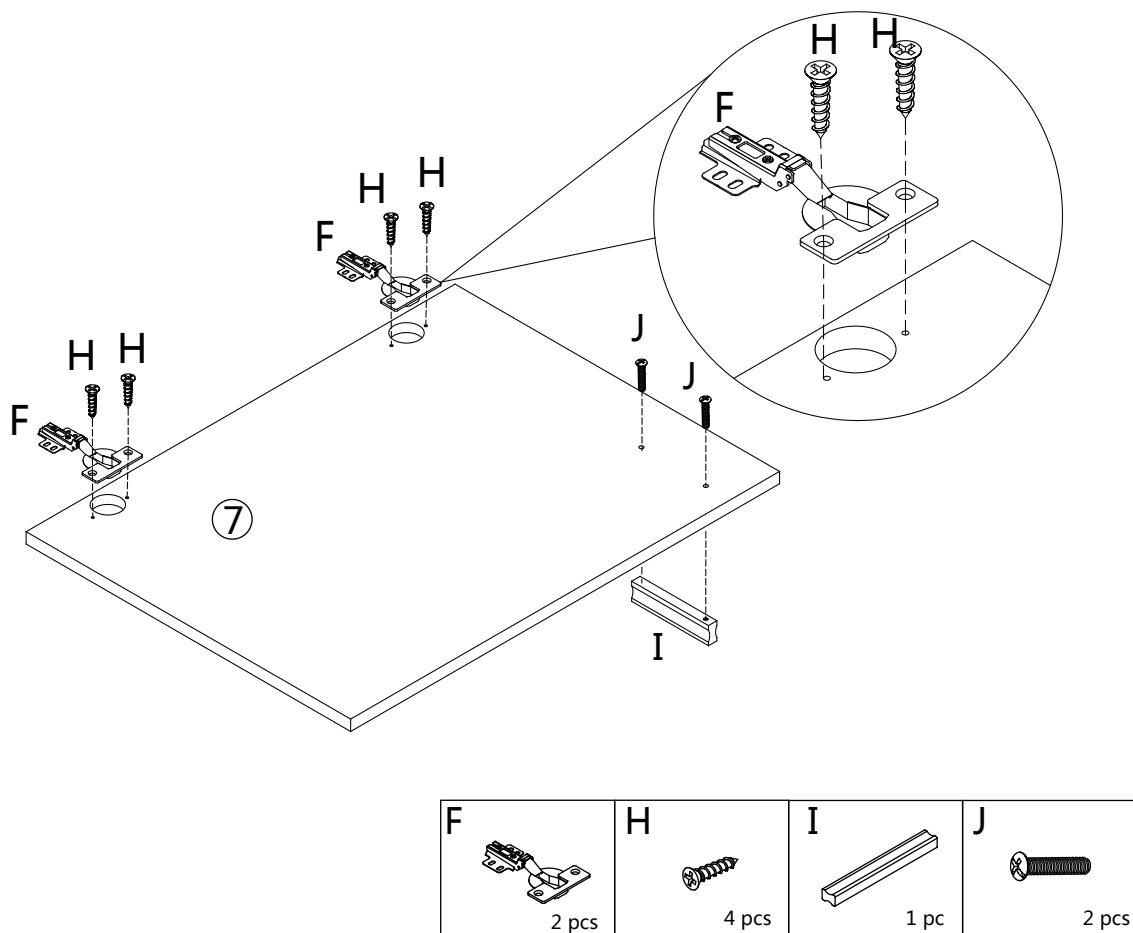 

## Step 21

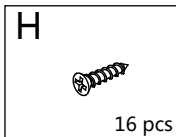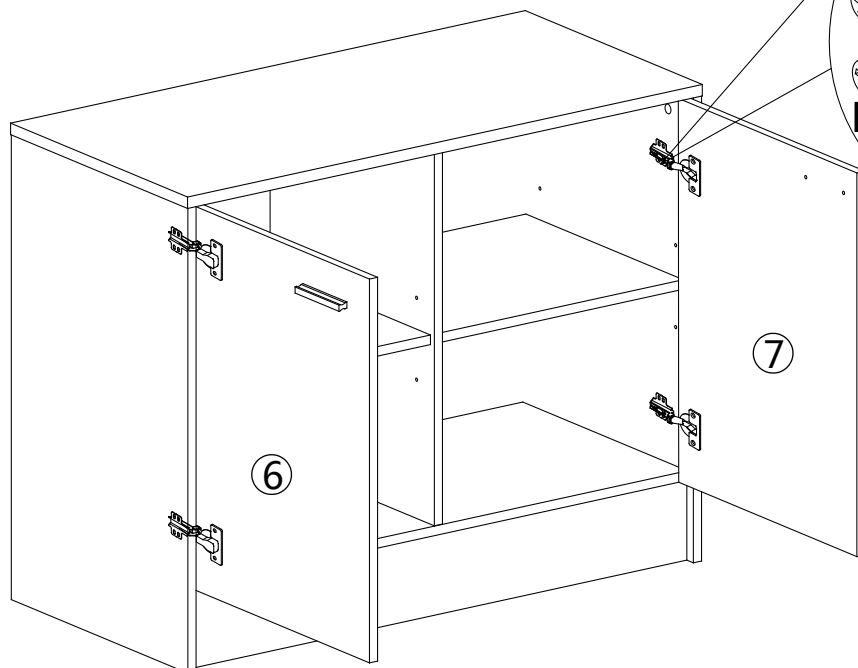  

## Step 22

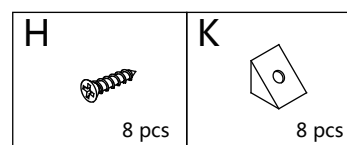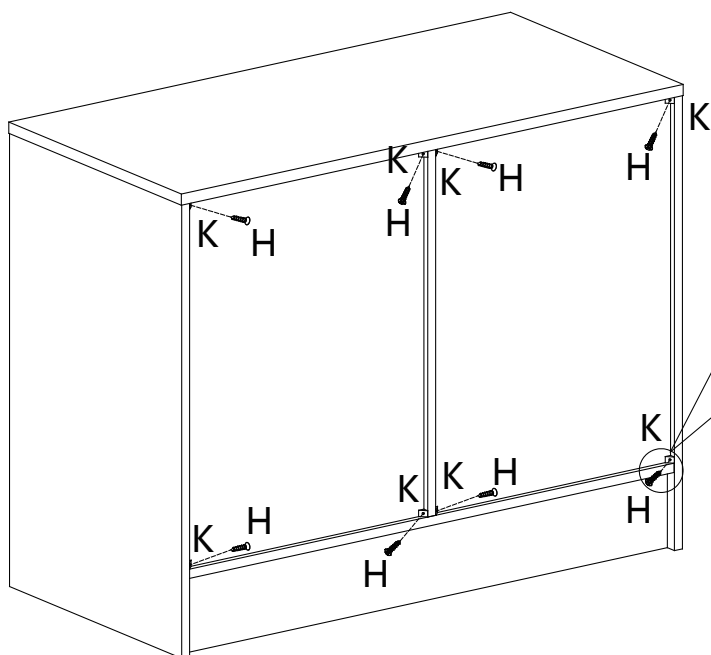  





**IMPORTANT:** To prevent furniture from tilting forward it is recommended that you:

1. Prevent small children from climbing onto cupboard.
2. Securely attach the anti tilt straps provided to your wall.







**IMPORTANT:** For your safety when attaching the anti tilt straps:


1. Check for any electrical wires or plumbing inside the wall before drilling any holes. If you are unsure please seek professional advice.
2. Walls are constructed from different materials such as masonry (solid brick) or plaster board lined cavity walls (hollow). It is important that you use the appropriate wall fixings for your wall type. Your local hardware store will have the necessary drills and fixings and can offer advice if needed.

### Anti-tilt furniture strap installation

 
**IMPORTANT:** The wall fixing hardware supplied is for attaching to wall stud behind plaster board. For fixing directly to plaster board only or masonry please source the appropriate fixings from your local hardware store.

No	Name of Hardware	Q.ty
H	Screw (Ø3.5 x 14 mm) 	1pc
M	Strap 	1pc
N	Screw (Ø4 x 30 mm) 	1pc
O	Washer 	2pcs

1. Fix strap (M) to back frame by using hardware (H) and (O).

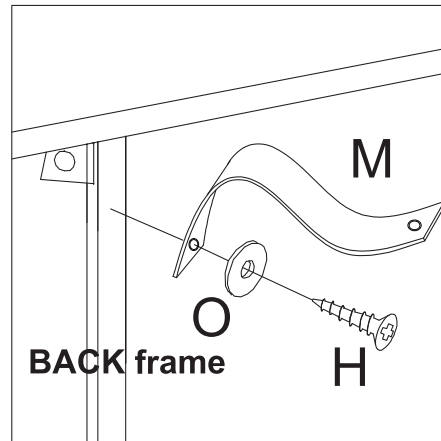

 2. Position wall stud is in same level as back frame. Screw strap (M) into stud using hardware (O) and (N).

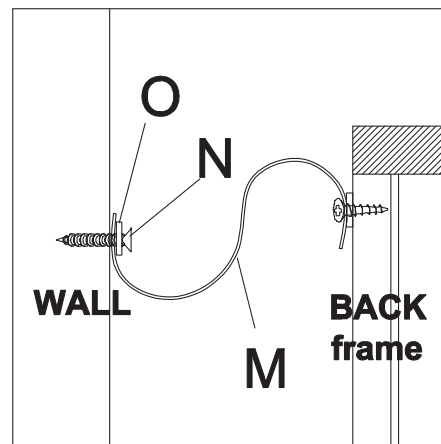


### Important Note

Do not push or pull the cupboard to reposition. This may result in broken legs.





Always lift with a minimum of 2x people. Damage caused by dragging will void warranty.

 Tighten screws and bolts after two weeks of use. Ensure screws and bolts remain tight by checking them several times a year.

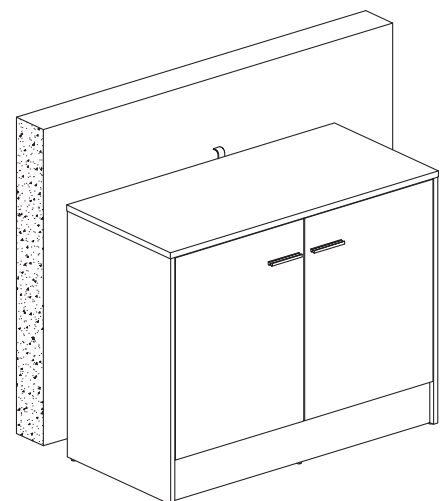


## Hinge adjustment

    If the doors do not appear square or aligned, loosen or tighten the appropriate screws on each case hinge as illustrated.

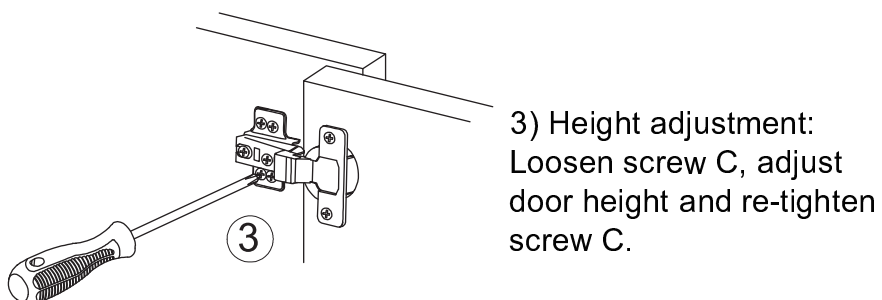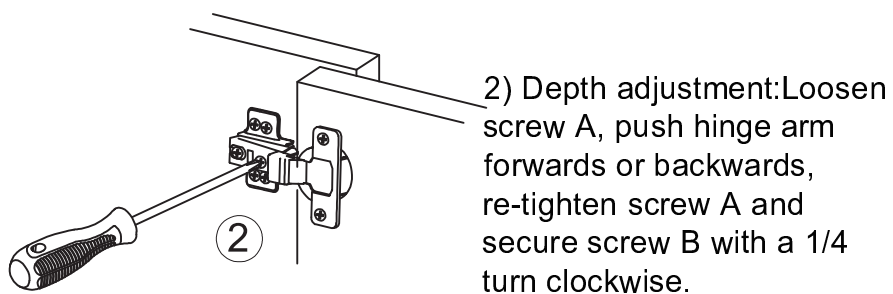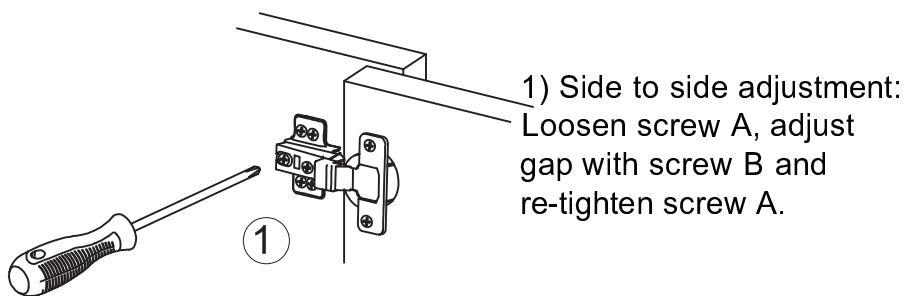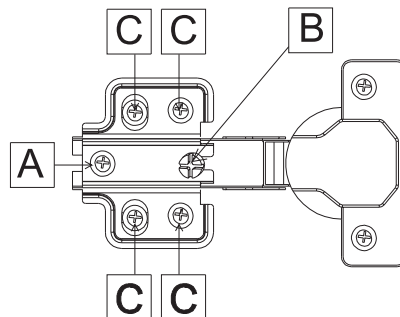

 Maximum Load Capacity:  
Top Surface - 35 kg  
Shelf - 10 kg

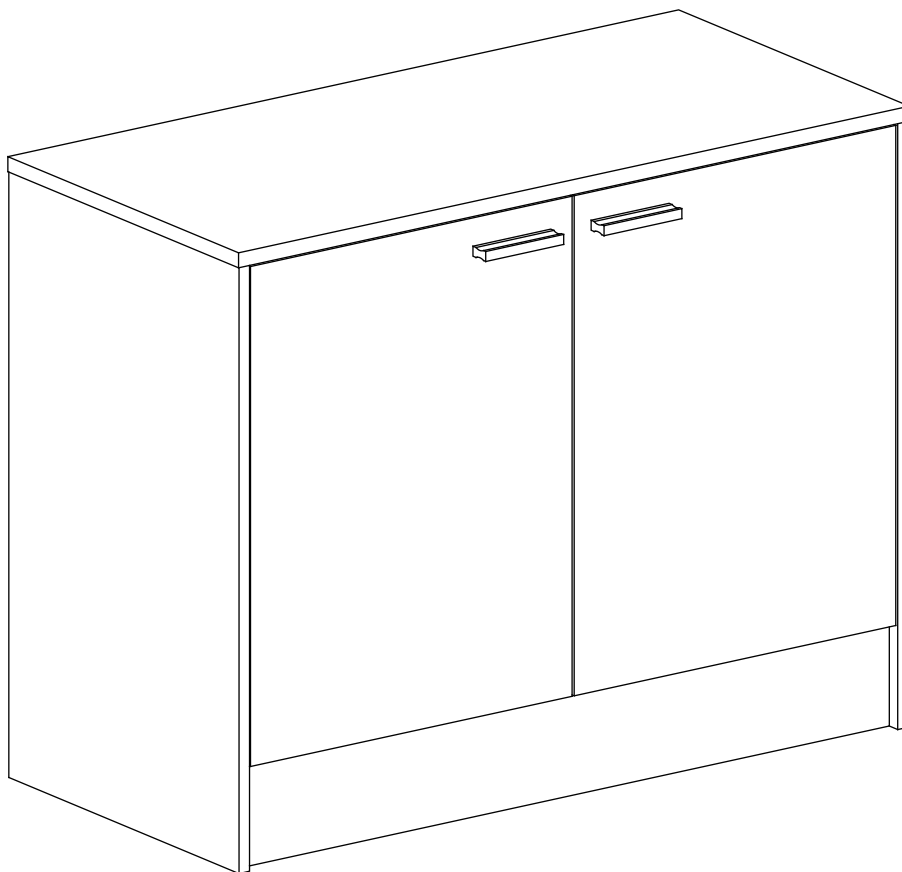

Your CONTOUR 2 DOOR CUPBOARD is now complete and ready for use!

# Care Advice

## Care Instructions - UV Finish CUPBOARD

- Keep away and protect from direct sunlight and heat.
- Do not place sharp materials(knife, fork, etc) directly onto your furniture as sharp material may scrape and damage the finish.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbant cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.
- Clean, check and tighten all parts regularly.

## Safety Warning

- DANGER – To prevent furniture from toppling attach, mount, bolt or otherwise secure to walls and floors. Do not put heavy items on top shelves of bookcases. Do not place unstable furniture near where children play.



- WARNING – This product is intended to hold the maximum weight indicated. Exceeding the maximum weight will result in instability and may cause injury.

## Warranty 3 years

### Product Warranty – valid for Australian customers only

Officeworks Ltd warrants that this product will be free from defects and work as intended for 3 years from the date of purchase by the original customer.

If the product has any defects or does not work as intended during the Warranty Period, Officeworks will, at its election and at its expense, repair or replace the product.

This warranty does not apply:

- to cosmetic damage;
- to damage caused by consumables used in connection with the product (such as cleaning products);
- where the product has not been used in accordance with all provided instructions;
- to damage arising from fair wear and tear;
- where the product has not been subject to reasonable use;
- where the product has been intentionally or negligently damaged; and/or
- if the customer has attempted to repair the product.

To make a claim under this warranty, please return your product with your receipt or proof of purchase to your nearest Officeworks store or contact 1300 633 423.

This warranty is provided in addition to any rights you may be entitled to under the Competitions & Consumer Act 2010.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Thank you for your purchase. Please retain your receipt to validate warranty.  
If you would like to know more about our furniture products, please visit [www.officeworks.com.au](http://www.officeworks.com.au)