

J.BURROWS

.....

ASSEMBLY INSTRUCTIONS

DARLINGTON CHAIR

JBDARLINBK/JBDARLINBR



Weight capacity: 135kgs

This design and instruction booklet is subject to copyright.
www.officeworks.com.au

For spare parts or hardware email hardware@kyvas.com.au

1CTN

KD

Important

 
Estimated Assembly Time: 20min

Assembly Video

- To view an assembly video, go to <https://www.officeworks.com.au>
- Search the product by item code or name:

- Click on the icon to watch the video.

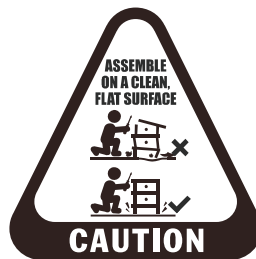

NOTE

- Please check you have all hardware before assembly.
- Missing hardware, please contact Kyvas on 0456 456 547 or hardware@kyvas.com.au
- Please ensure you have the item name, batch number, required part and quantity.
- Please retain your receipt as proof of purchase to validate your warranty.

CAUTION

- Do not tighten screws before all screws are in the right place.
- Do not use this product unless all bolts, screws and knobs are firmly secured.
- Check that all bolts, screws and knobs are securely tightened at least every 4 months.

 
 
 
 
 
 
WARNING

- If parts are missing, broken, damaged or worn stop using the product until all repairs are made using manufacturer authorised parts.
- Failure to follow these warnings could result in serious injury





DANGER

- CHILDREN MUST BE SUPERVISED.


PART LIST

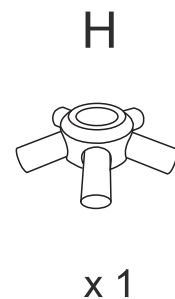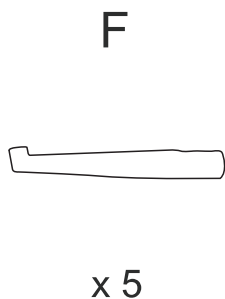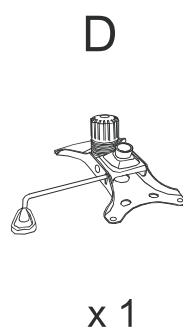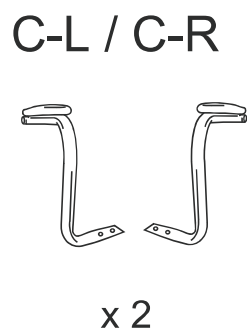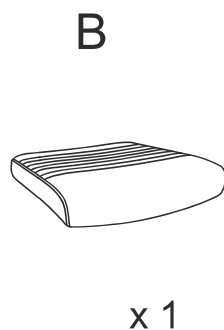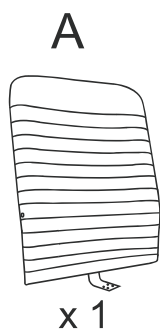

HARDWARE LIST

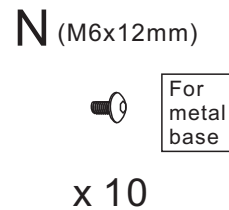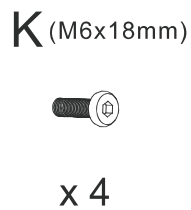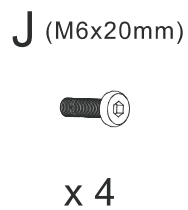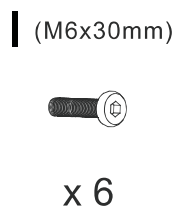    


For
metal
base

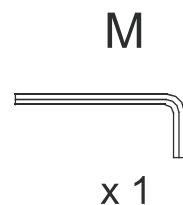 

If you are missing hardware, please contact Kyvas at hardware@kyvas.com.au

 Step 1

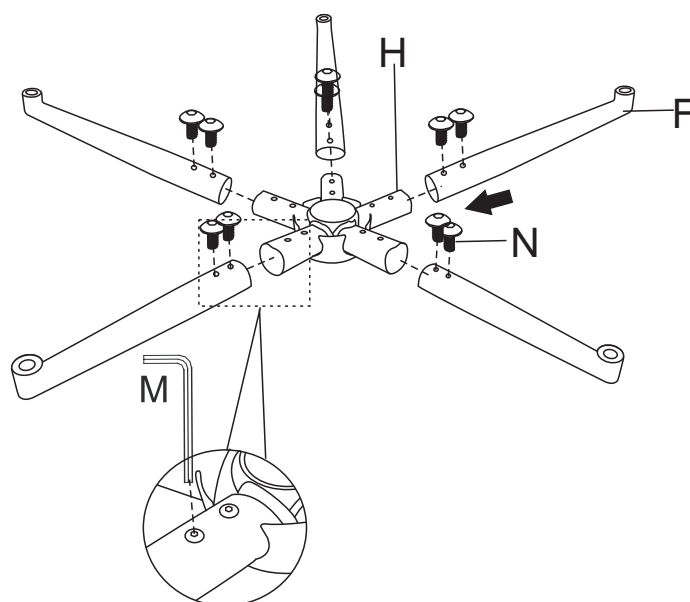


N
10Pcs
M6x12mm Bolt


used to complete
this step.

Step 2

 
Note: Push the castors firmly

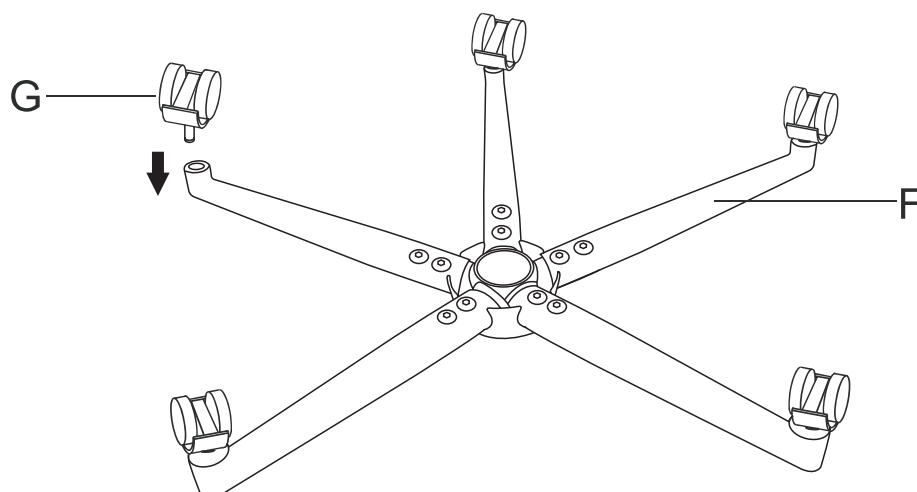

 Step 3

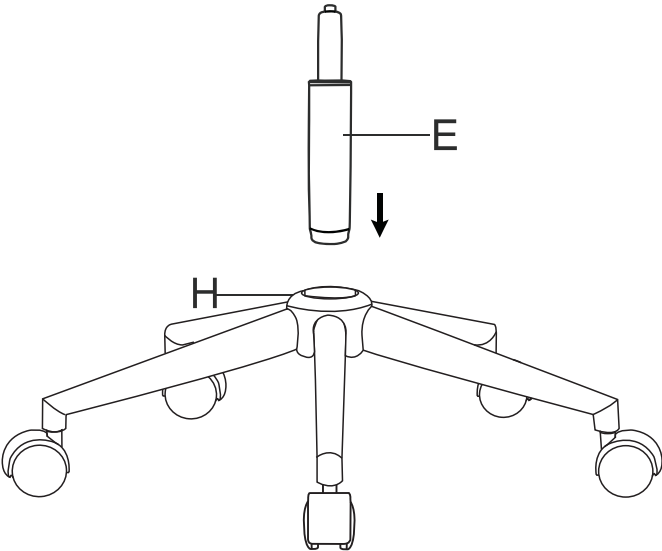

 Step 4

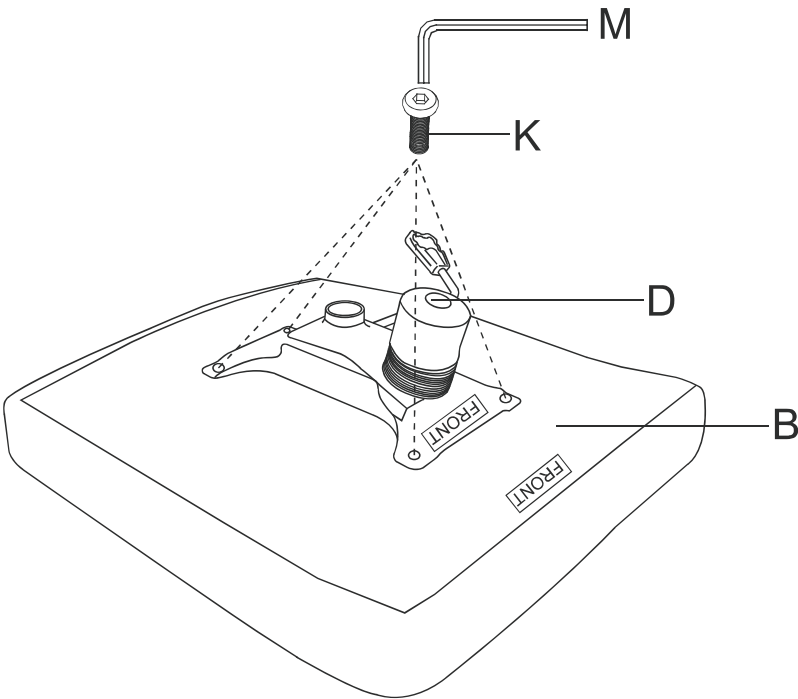


K
4 Pcs
M6x18mm Bolt

used to complete
this step.

Step 5

 
Note:
Part A bar placed over top
of mechanism Part D

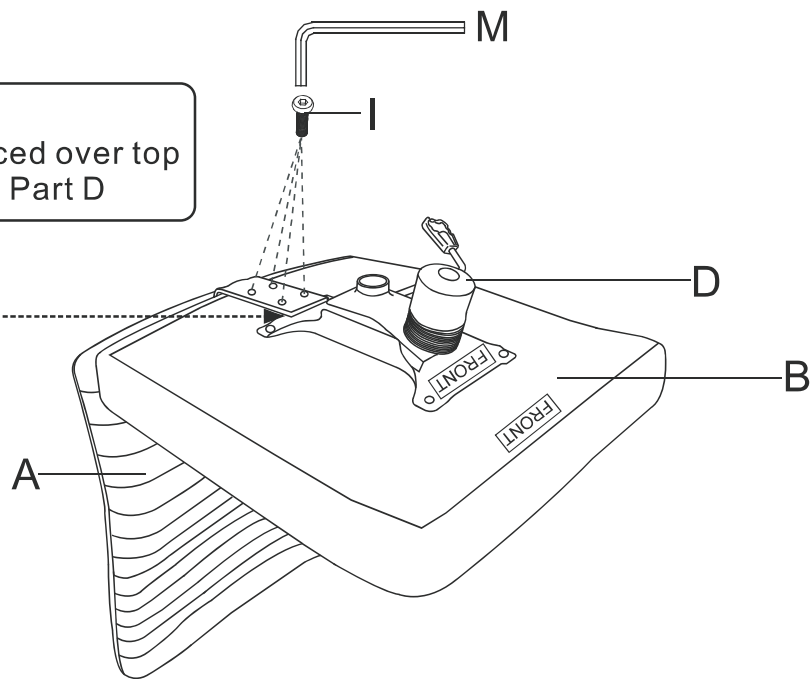

I

4 Pcs
M6x30mm Bolt

 
Step 6

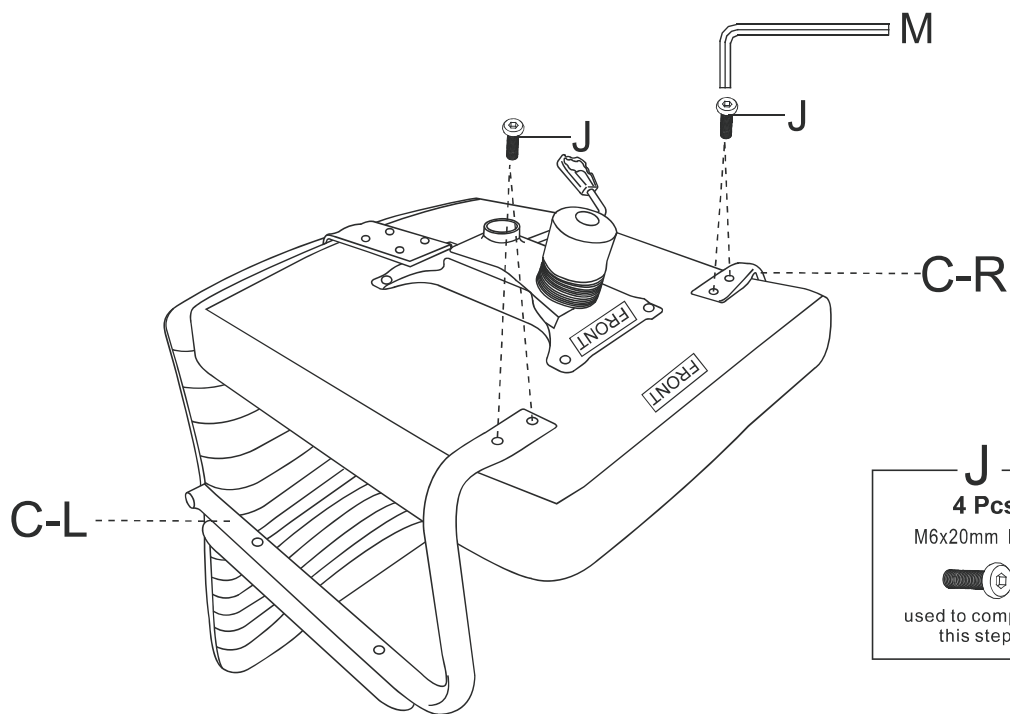

J


4 Pcs
M6x20mm Bolt
used to complete
this step.

 Step 7

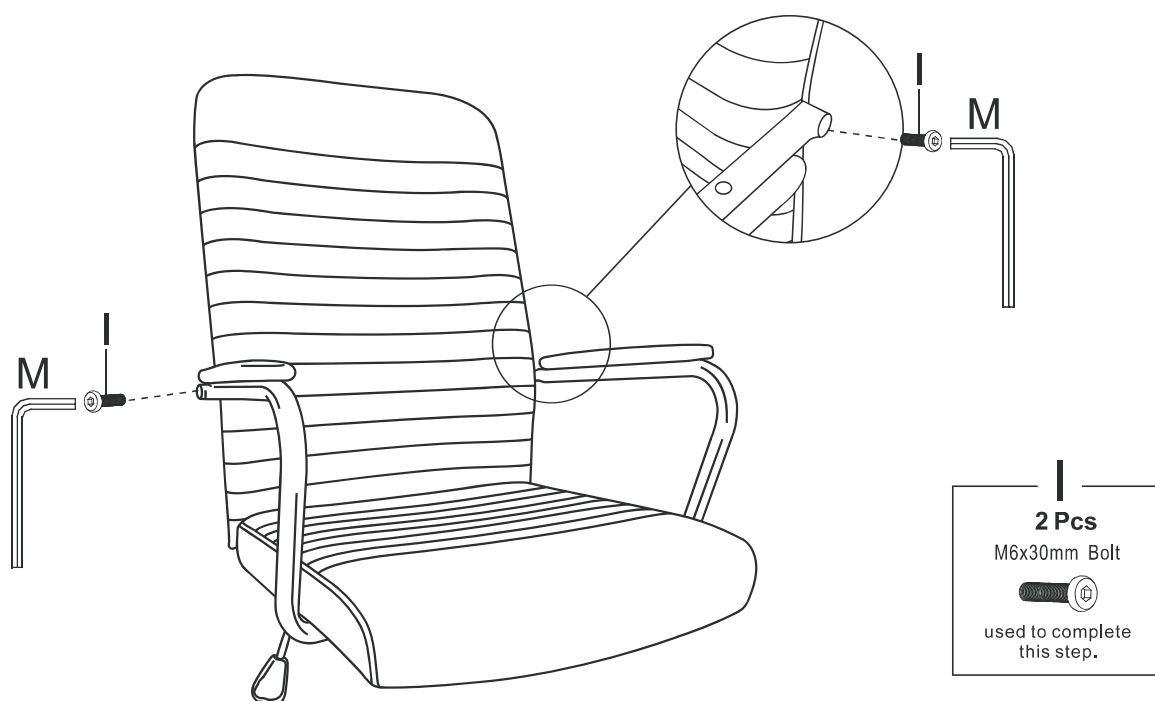

Step 8

 Note: Push down firmly until connection is secure.

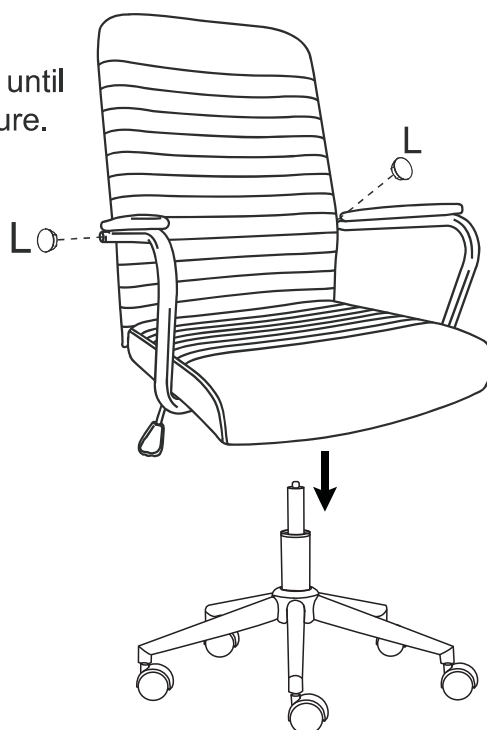



Your Darlington Chair is now complete and ready for use.
IMPORTANT NOTE: Periodically check and re-tighten screws.

Care Instructions for PU leather upholstery

Care Instructions

- Vacuum regularly.
- Wipe with a clean damp cloth and mild soap. Wipe dry immediately with an absorbent dry cloth.
- Treat spills immediately with an absorbent cloth by blotting the spill.
- Do not use detergents, solvents or abrasive cleaners.
- Keep away and protect from direct sunlight and heat.
- Avoid contact with skin, in particular during high temperatures and humidity.
- Clean, check and tighten parts regularly.

Thank you for your purchase. Please retain your receipt to validate warranty.
If you would like to know more about our furniture products, please visit www.officeworks.com.au

DARLINGTON CHAIR

Functionality



* Chair Height Adjustment

 
- To increase chair height pull lever upward while lifting body weight slightly off the seat.
- Release lever at desired height.
- To lower chair height sit fully into the chair and pull lever upward.
- Release lever at desired height.

Your feet should be resting flat on the floor.



* Chair Tilt

- In the upright position pull lever out to unlock & allow chair to tilt back & forth.
- In the upright position push lever to lock. Chair will have slight movement in locked position.

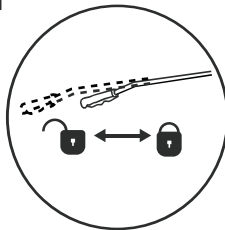


* Adjustable Tilt Tension Control

- Turn continuously to adjust how quickly chair tilts back & forth.

Note: if adjusting while sitting in chair:

Turn knob left to tighten tension

 Turn knob right to loosen tension

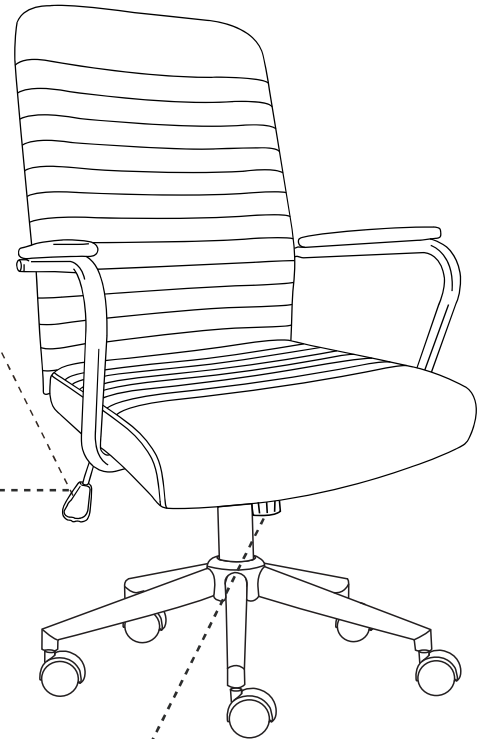

Warranty 3 years

Product Warranty – valid for Australian customers only

Officeworks Ltd warrants that this product will be free from defects and work as intended for 3 years from the date of purchase by the original customer.

If the product has any defects or does not work as intended during the Warranty Period, Officeworks will, at its election and at its expense, repair or replace the product.

This warranty does not apply:

- to cosmetic damage;
- to damage caused by consumables used in connection with the product (such as cleaning products);
- where the product has not been used in accordance with all provided instructions;
- to damage arising from fair wear and tear;
- where the product has not been subject to reasonable use;
- where the product has been intentionally or negligently damaged; and/or
- if the customer has attempted to repair the product.

To make a claim under this warranty, please return your product with your receipt or proof of purchase to your nearest Officeworks store or contact 1300 633 423.

This warranty is provided in addition to any rights you may be entitled to under the Competitions & Consumer Act 2010.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Thank you for your purchase. Please retain your receipt to validate warranty.
If you would like to know more about our furniture products, please visit www.officeworks.com.au