 




ASSEMBLY INSTRUCTIONS

DEAKIN 3 DRAWER 1100MM DESK JBDEAKIN

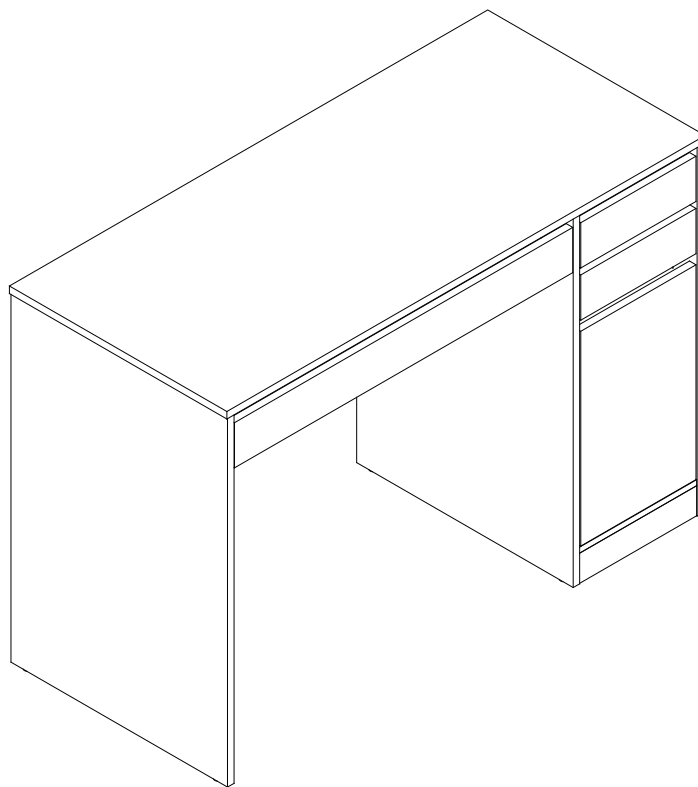

This design and instruction booklet is subject to copyright.
www.officeworks.com.au

1 Carton

For spare parts or hardware call (03) 9310 3011 or email hardware@kyvas.com.au

Important

Estimated Assemble Time: 70min

- To view an assembly video, go to <https://www.officeworks.com.au/>
- Search the product by item code or name:



- Click on the icon to watch the video.



Customer Service Contact Details



 
People Required



General Advice



Tools Required



CAUTION: Do not use tools other than those required, as this can damage your new item.

NOTE

- Please check you have all hardware before assembling.
- If you are missing any hardware, please contact Kyvas on (03) 9310 3011 or email hardware@kyvas.com.au
- Please ensure you have the item, required hardware part and quantity.
- Please retain your receipt as proof of purchase to validate your warranty.

CAUTION

- Do not tighten screws before all screws are in the right place.
- Do not use this product unless all bolts, screws and knobs are firmly secured.
- Check that all bolts, screws and knobs are securely tightened at least every 4 months.

 
WARNING

- If parts are missing, broken, damaged or worn stop using the product until all repairs are made using manufacturer authorised parts.
- Keep children and animals away from the assembly area.
This furniture contains small parts that could cause choking if swallowed.
- Keep all plastic wrapping materials away from babies and children to avoid danger of suffocation.
- This item is not for outdoor use – unless stated otherwise.
- Failure to follow these warnings could result in serious injury.

DANGER























- CHILDREN MUST BE SUPERVISED.

Part Overview

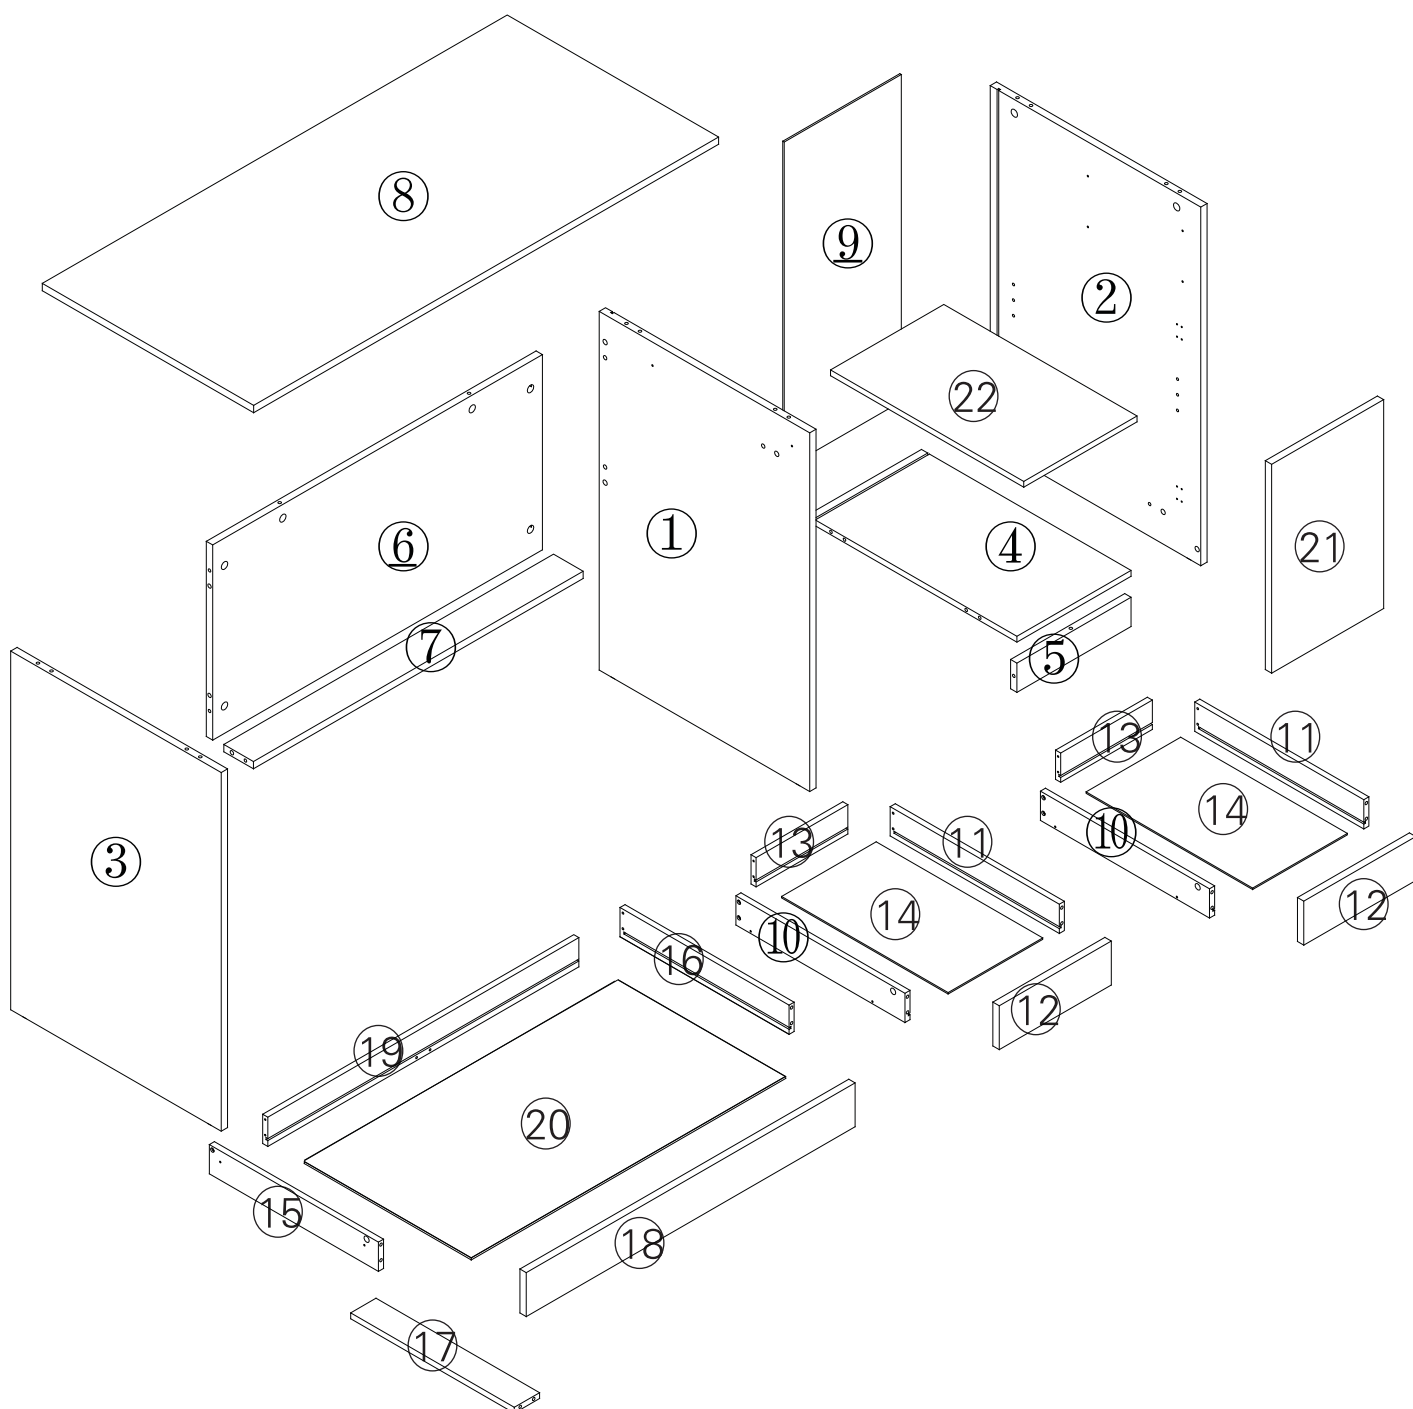









Part List

                      Parts located in Carton - JBDEAKIN

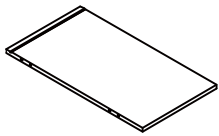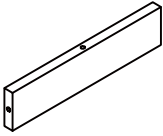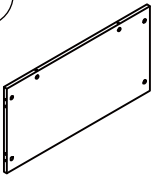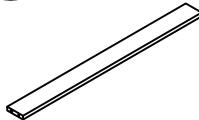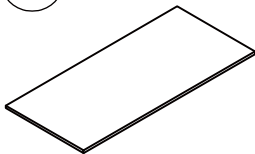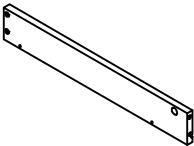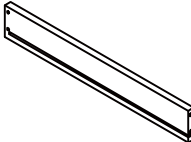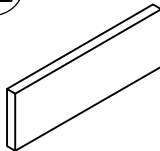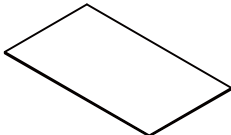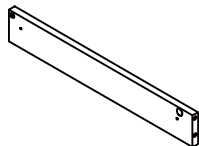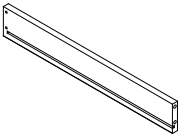
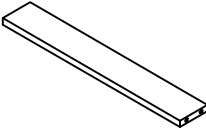
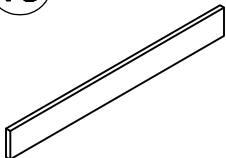
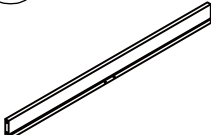
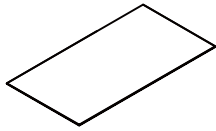

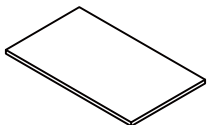
1  X1	2  X1	3  X1	4  X1
5  X1	6  X1	7  X1	8  X1
9  X1	10  X2	11  X2	12  X2
13  X2	14  X2	15  X1	16  X1
17  X1	18  X1	19  X1	20  X1
21  X1	22  X1		

Hardware List

        Hardware Pack located in Carton - JBDEAKIN

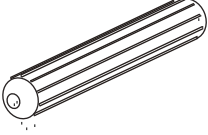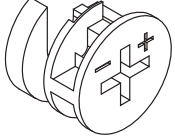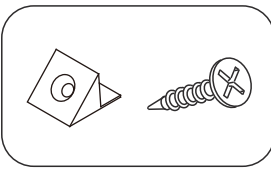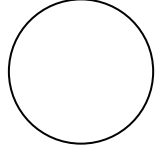A  (Ø5.8 x 30mm) X 24pcs	B  (Ø15 x 12mm) X 16pcs	C  (Ø6 x 35mm) X 27pcs	E  (Ø3.5 x 12mm) X 36pcs	I  (Ø12 x 10mm) X 11pcs
J  (Ø4 x 25mm) X 14pcs	N  (Ø4 x 14mm) X 12pcs	O  Shelf Support X 4pcs	P  Back Support X 4sets	Q  Sticker X 12pcs

      
 
Other Hardware located in Carton - JBDEAKIN

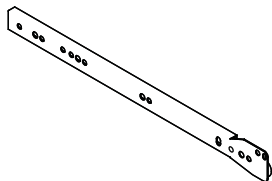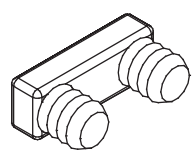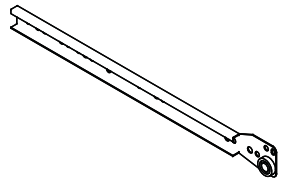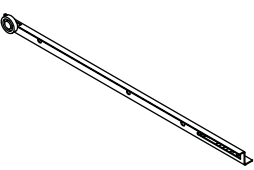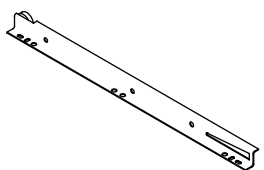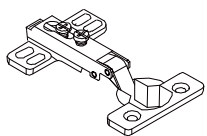D  2 Setion Runner X 2sets	F  Runner X 2pcs	G  Door Stopper X 1pc	H  Runner X 2pcs
K  Runner X 2pcs	L  Runner X 2pcs	M  Hinge X 2pcs	



For missing hardware, please contact Kyvas on (03) 9310 3011 or email hardware@kyvas.com.au

Assembly

  
Step 1

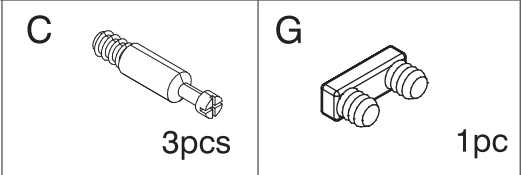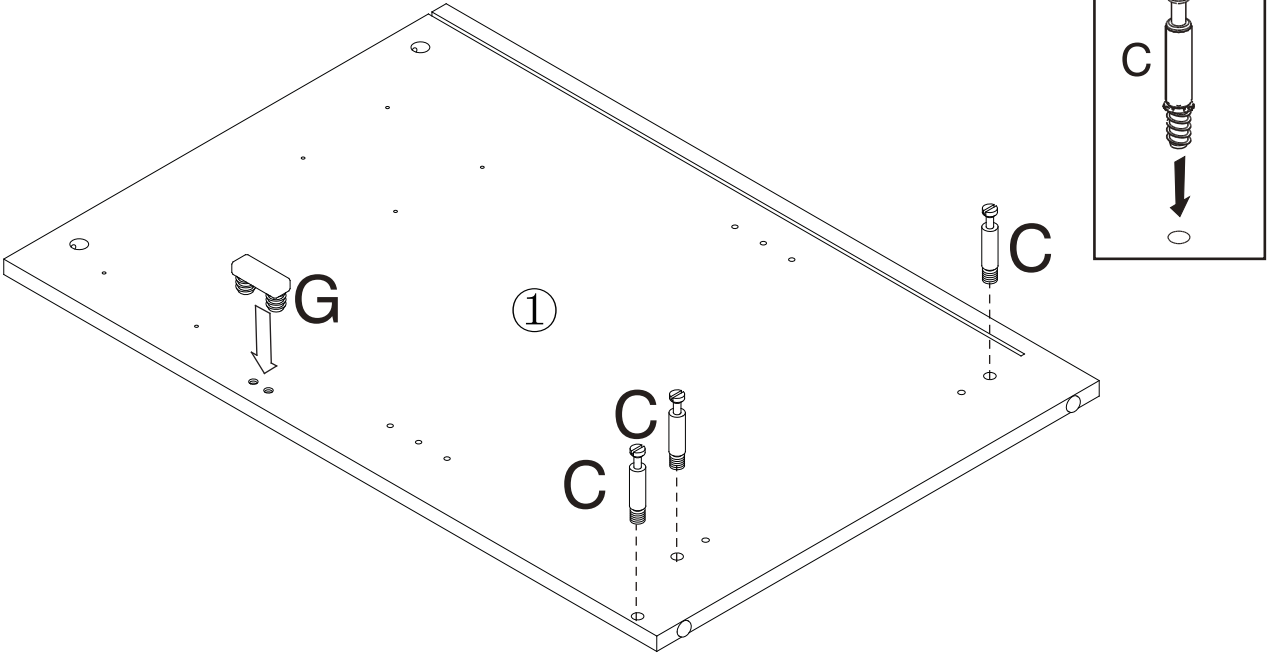

  
Step 2

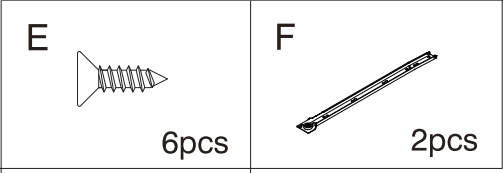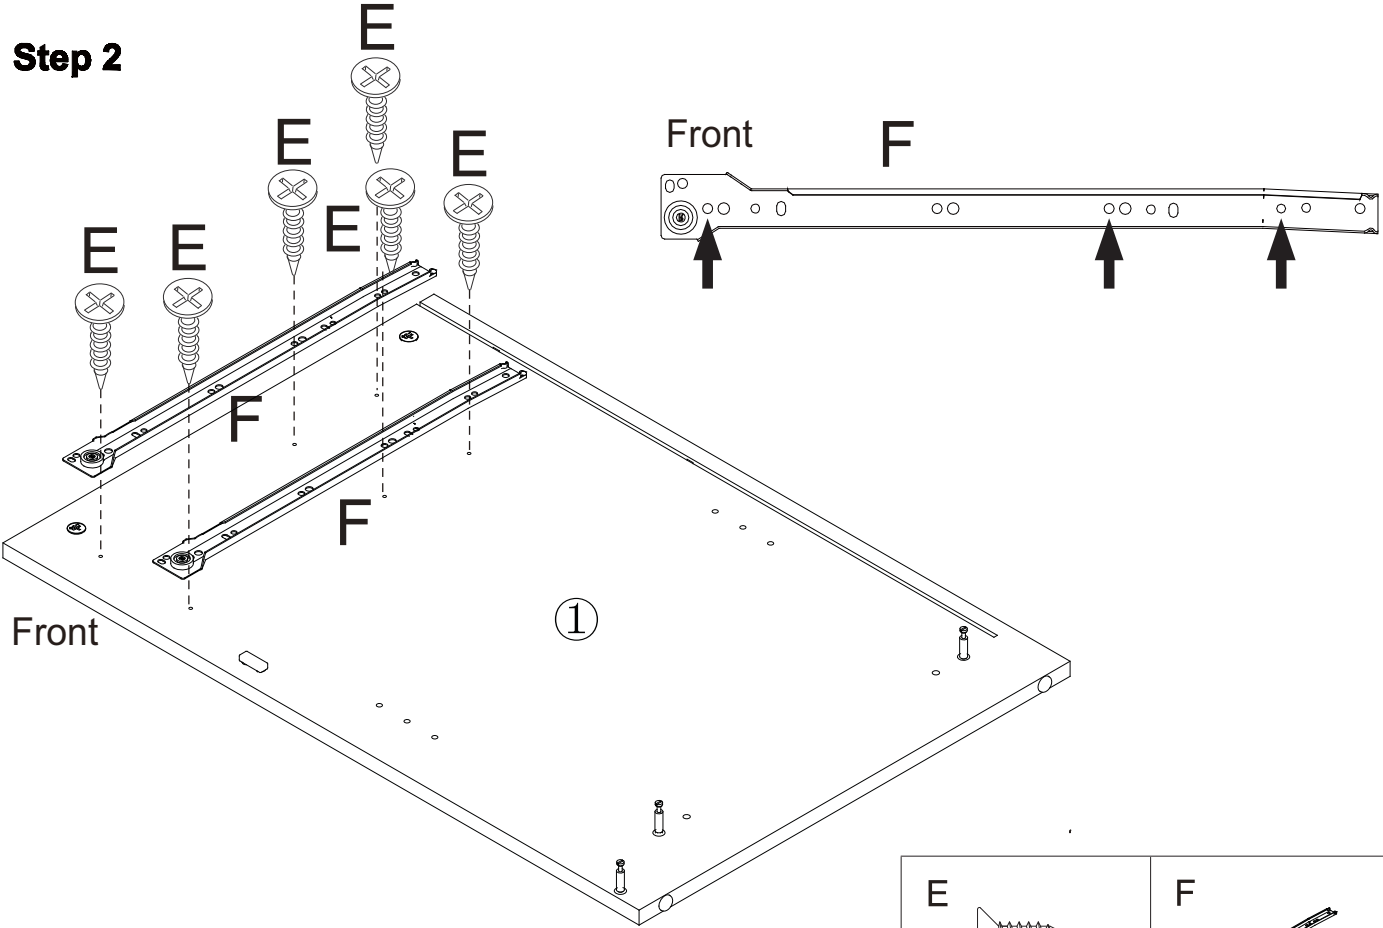

 
Step 3

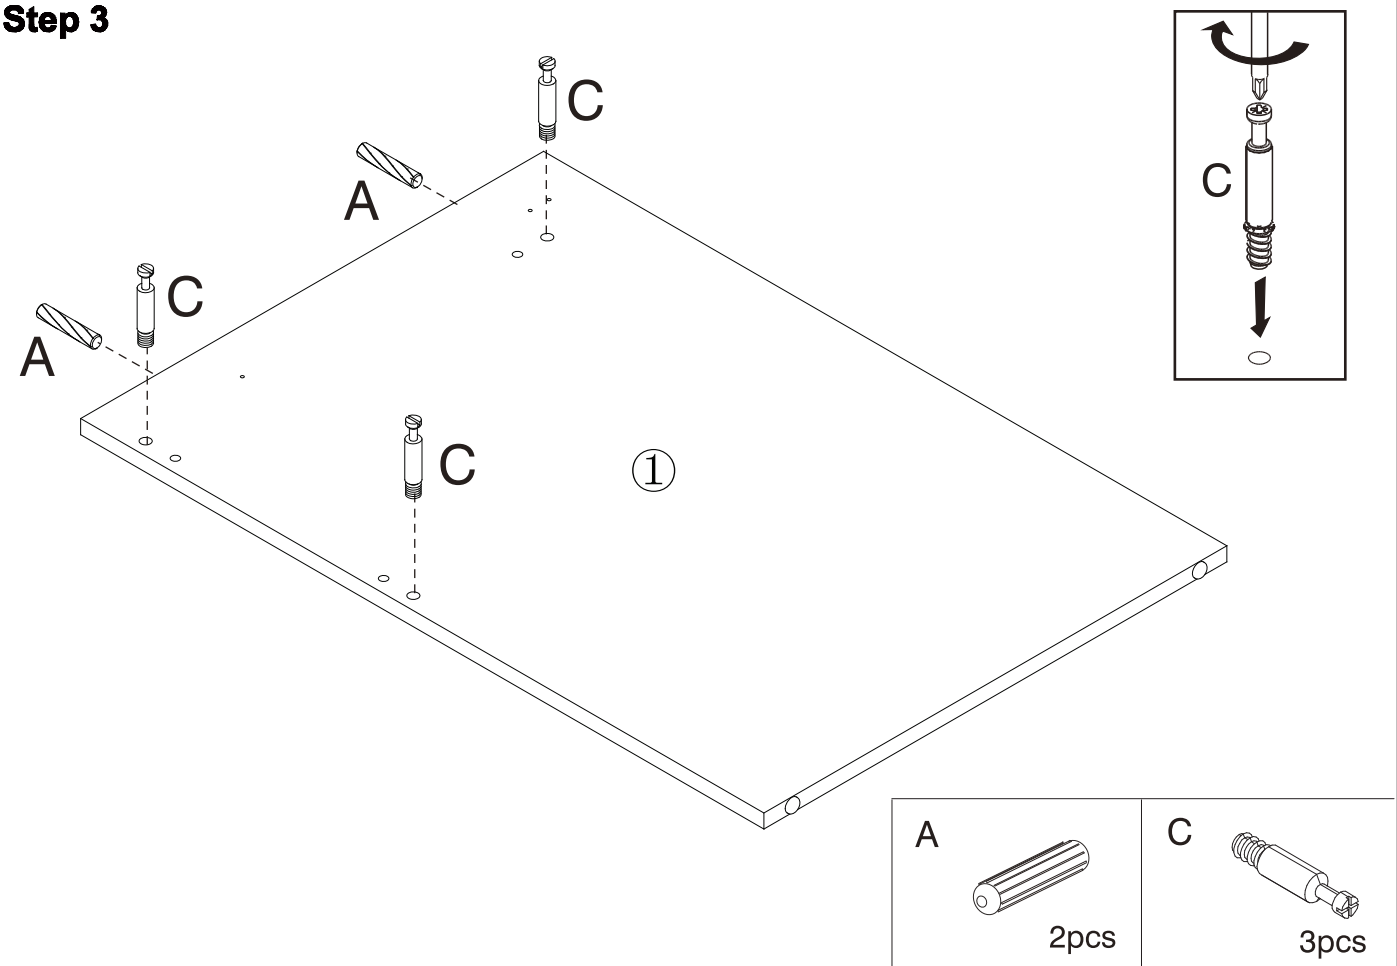

 
Step 4

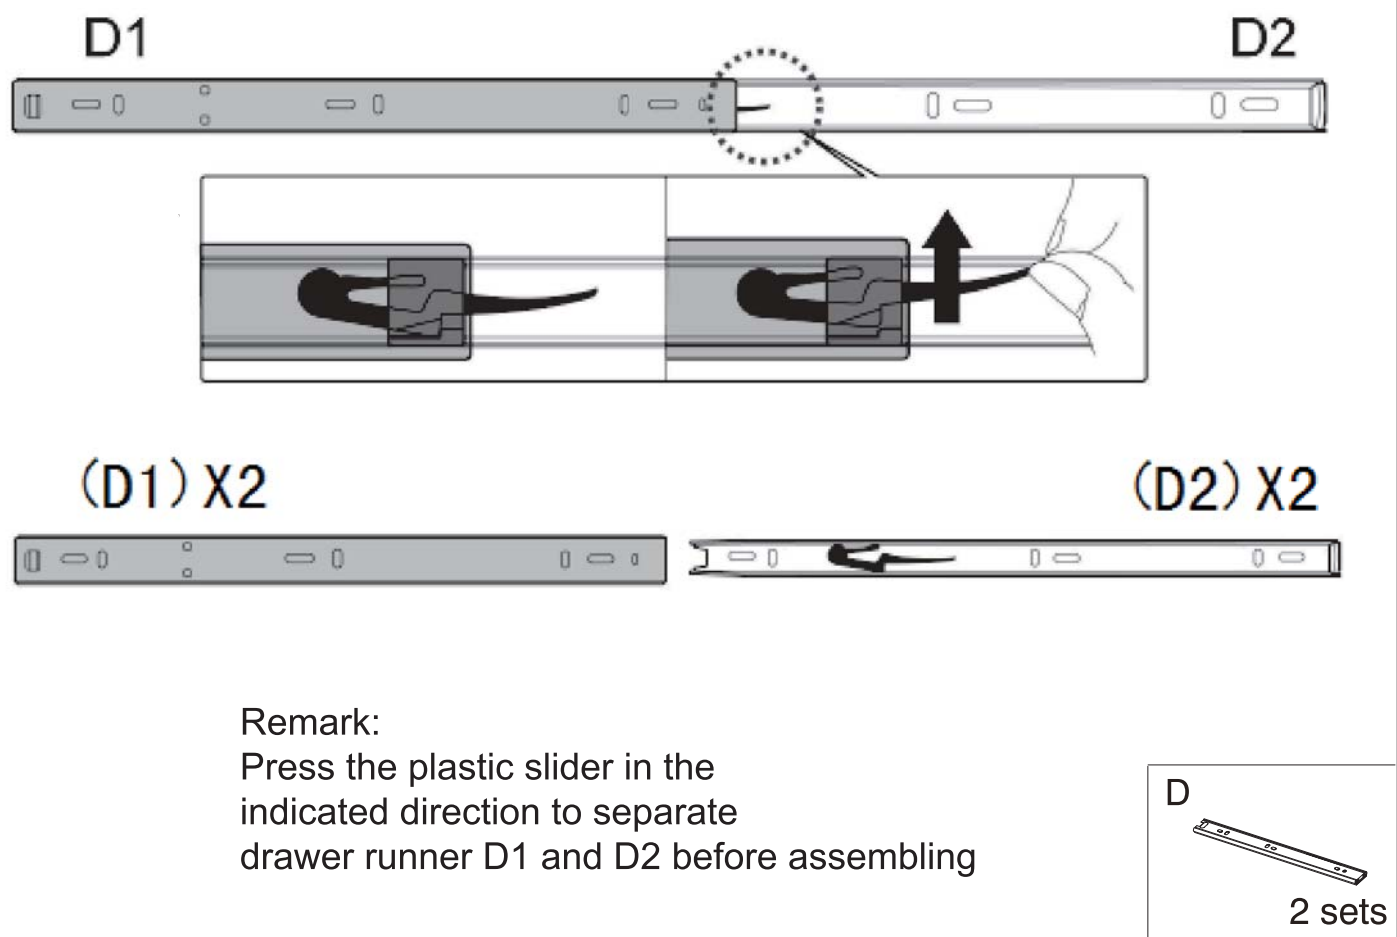

 
Step 5

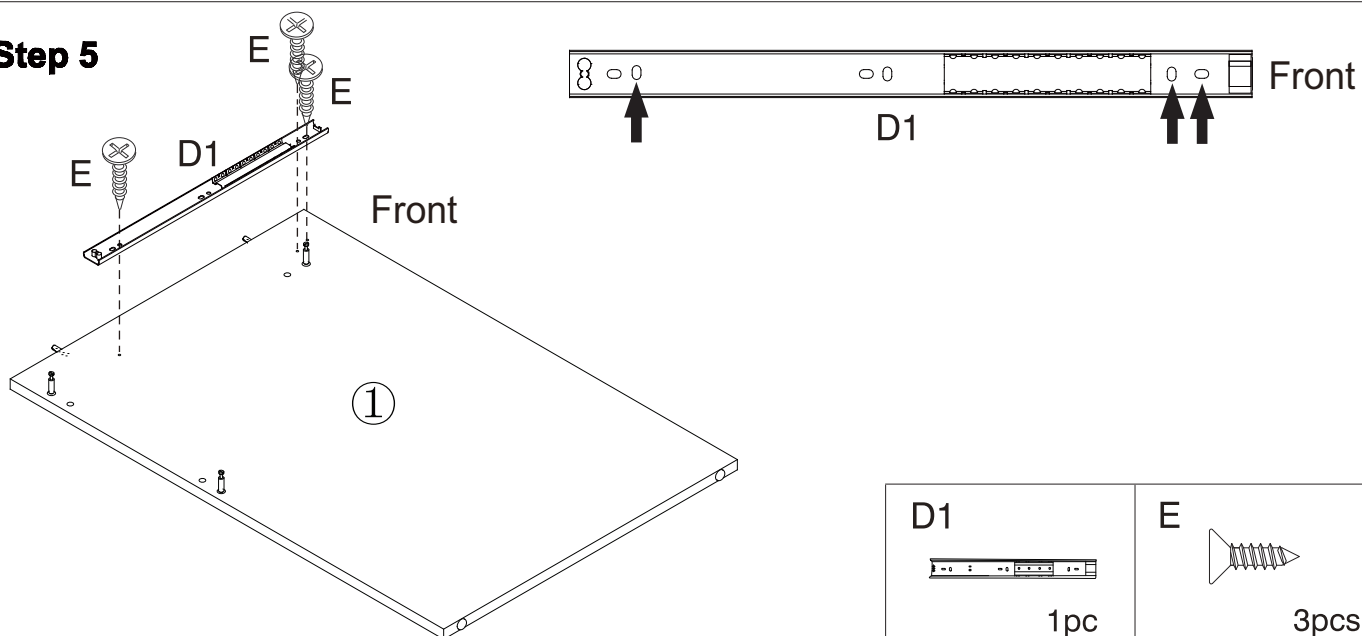

 
Step 6

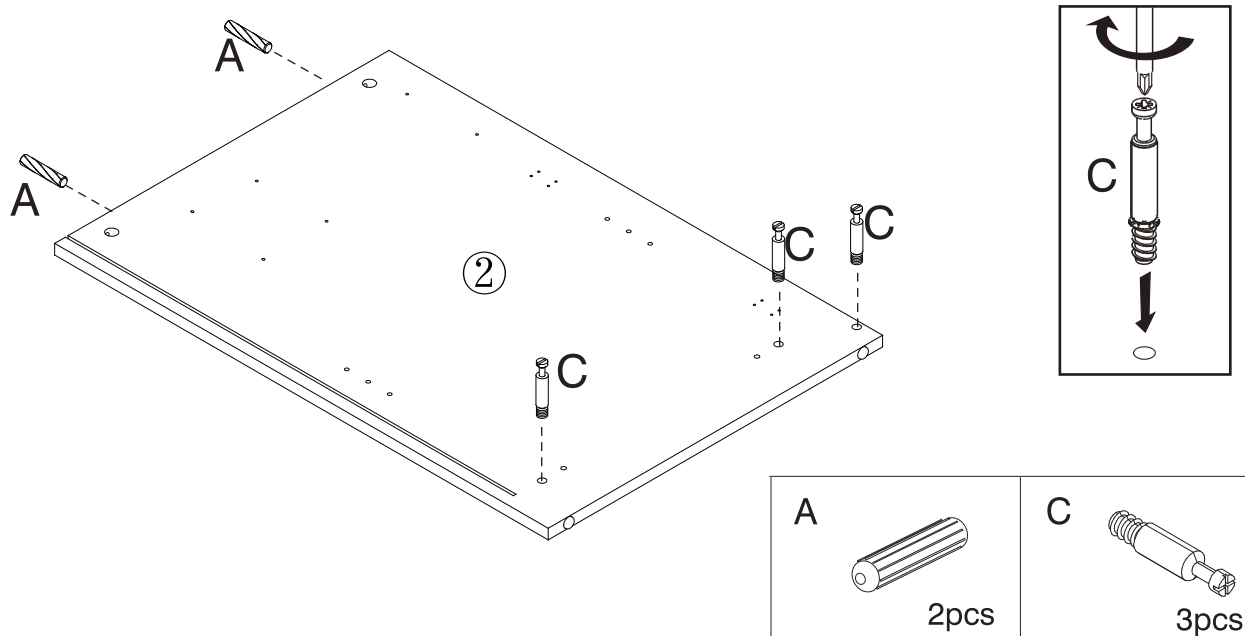

 
Step 7

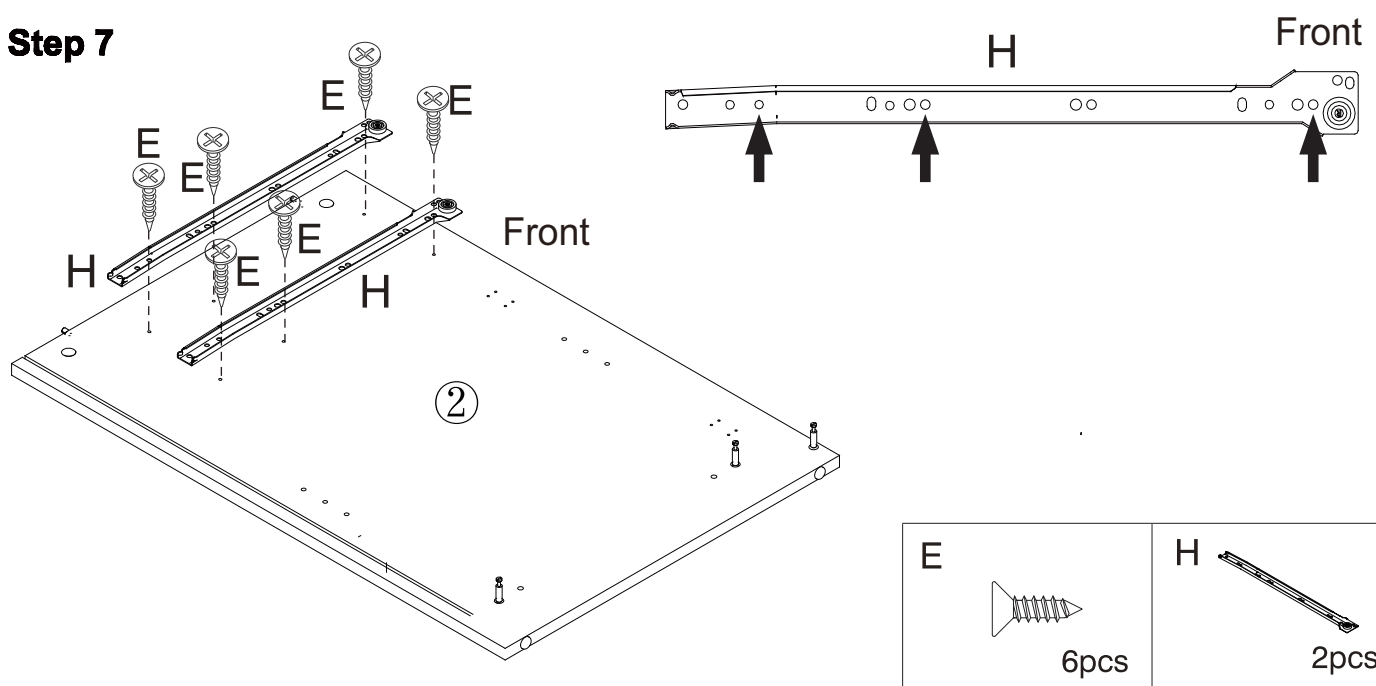


 
Step 8

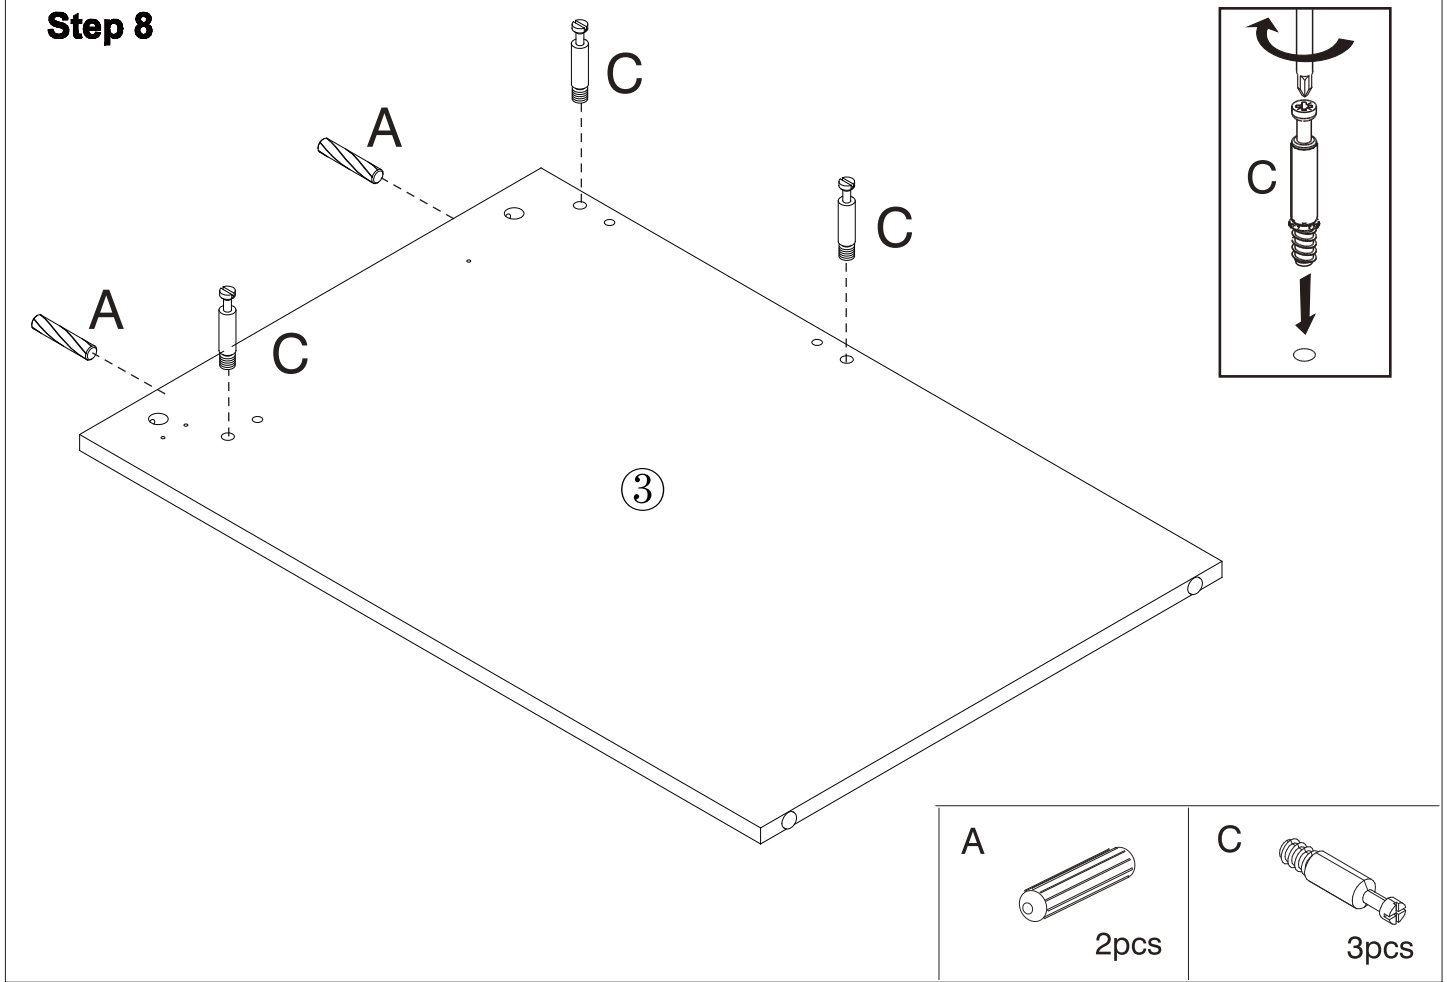


 
Step 9

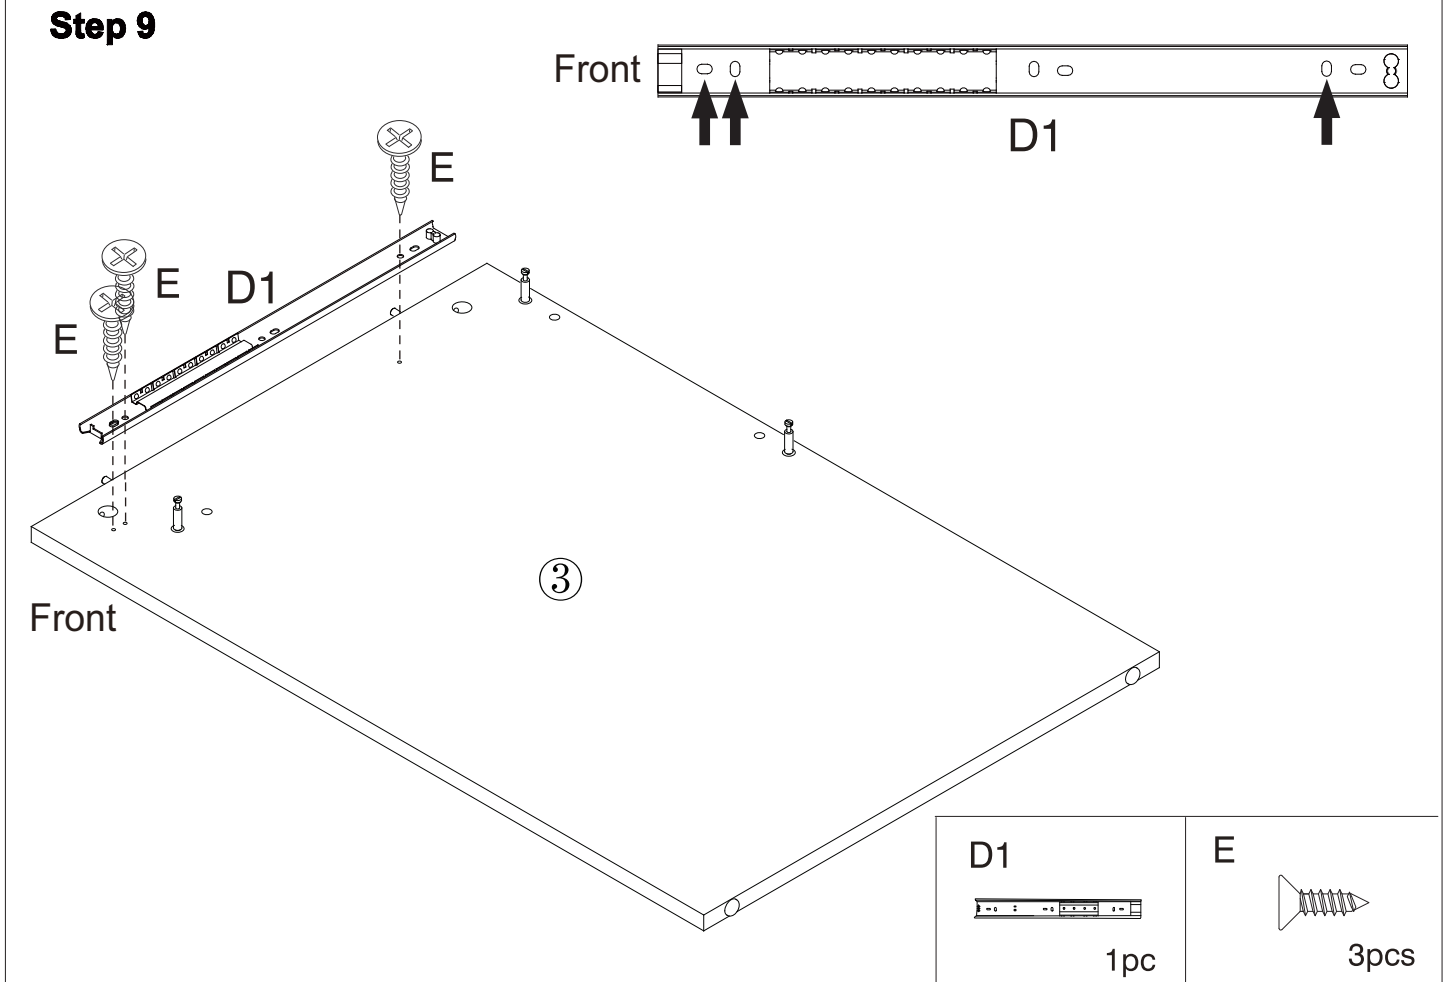

  
Step 10

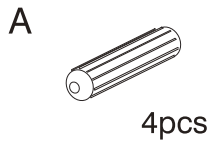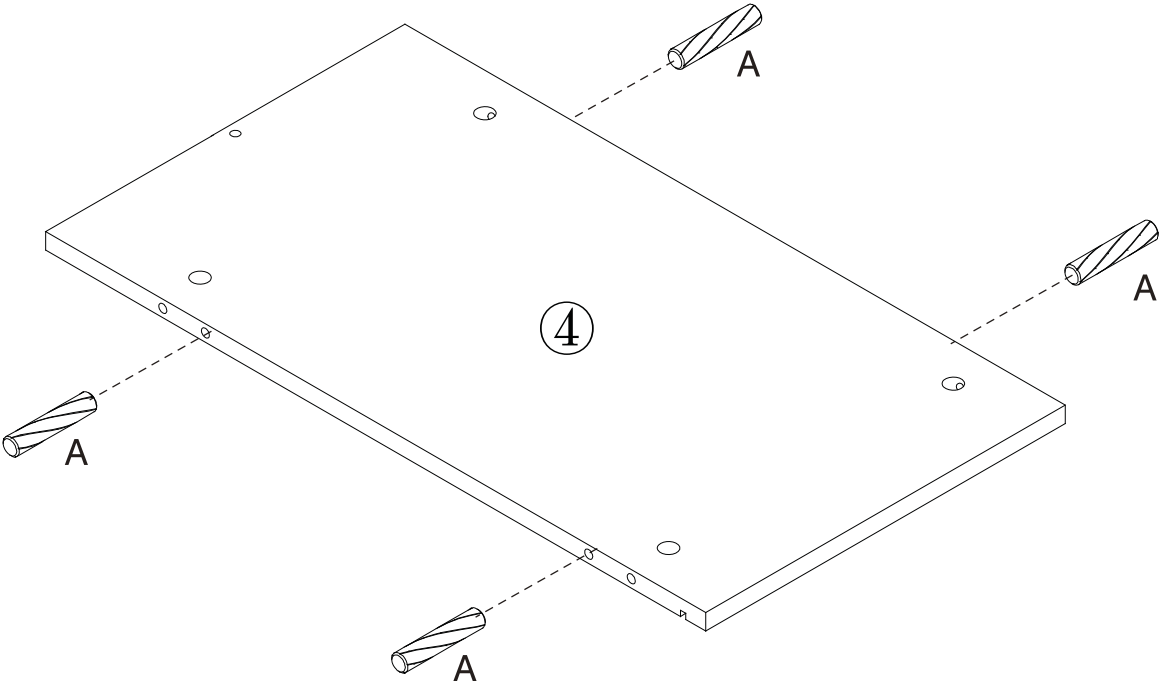

  
Step 11

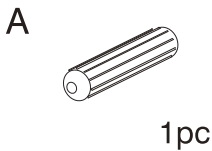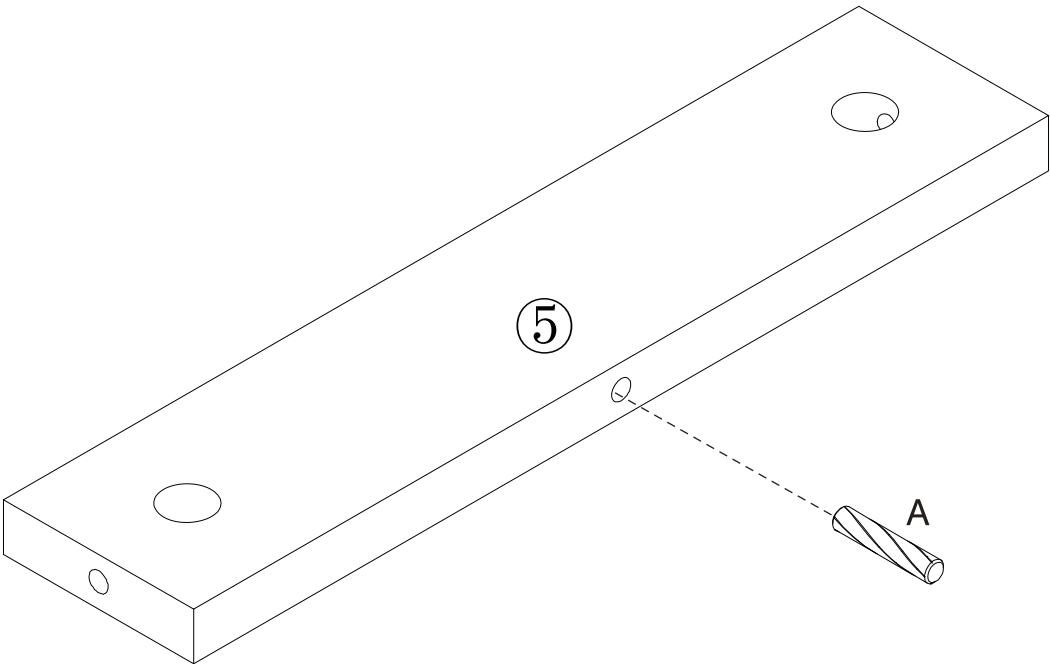


 
Step 12

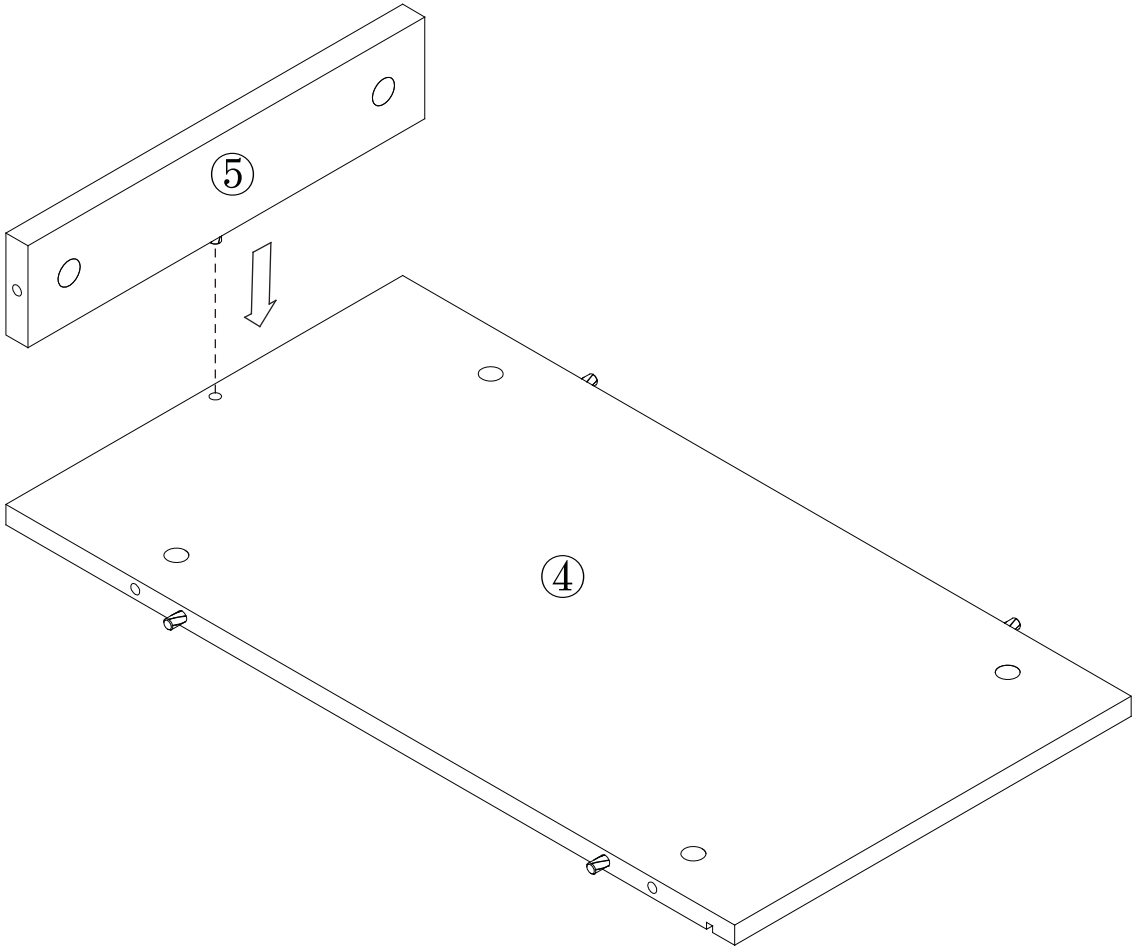


 
Step 13

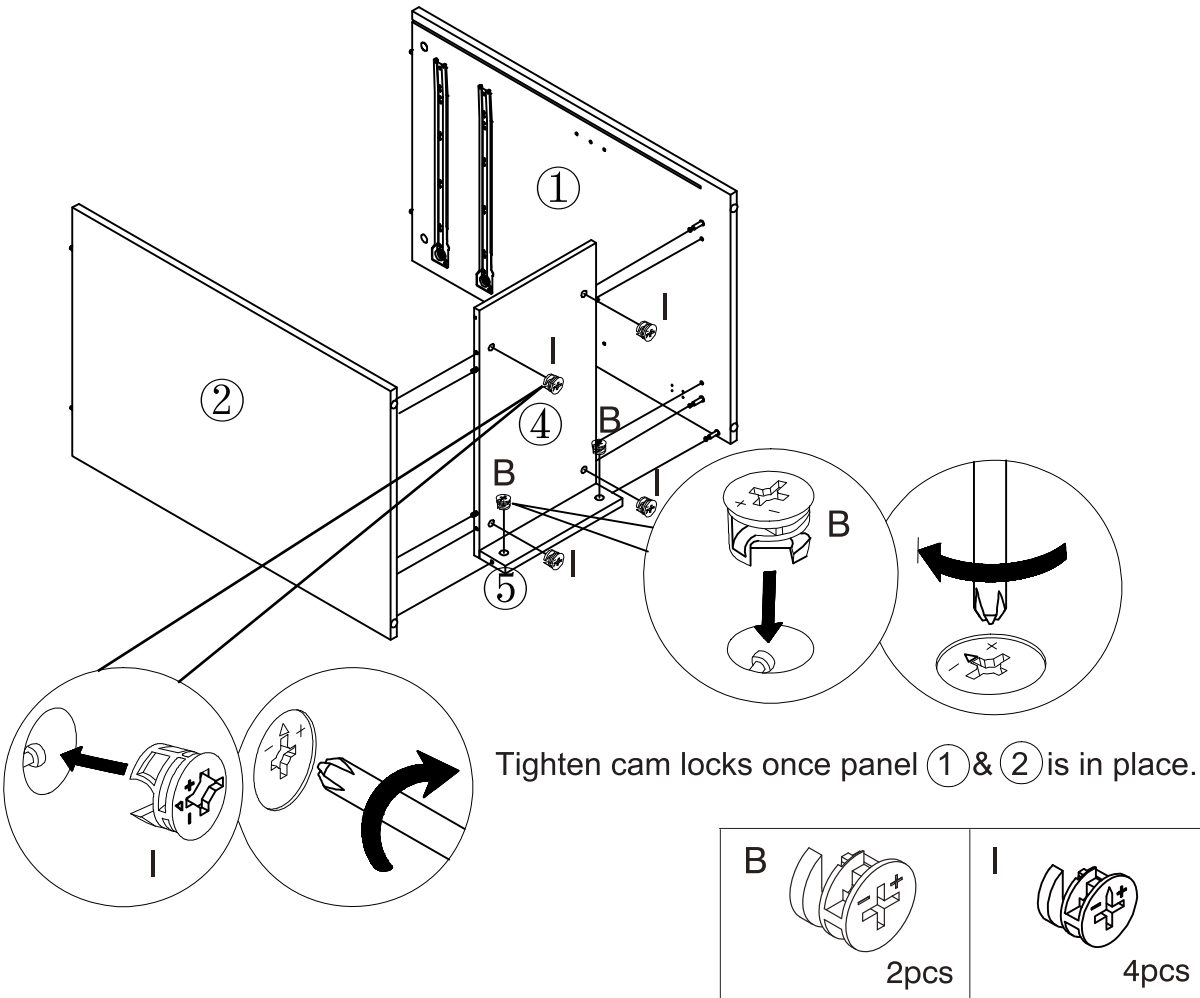

 
 
Step 14

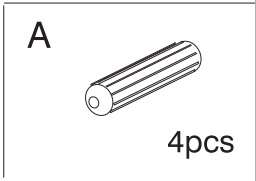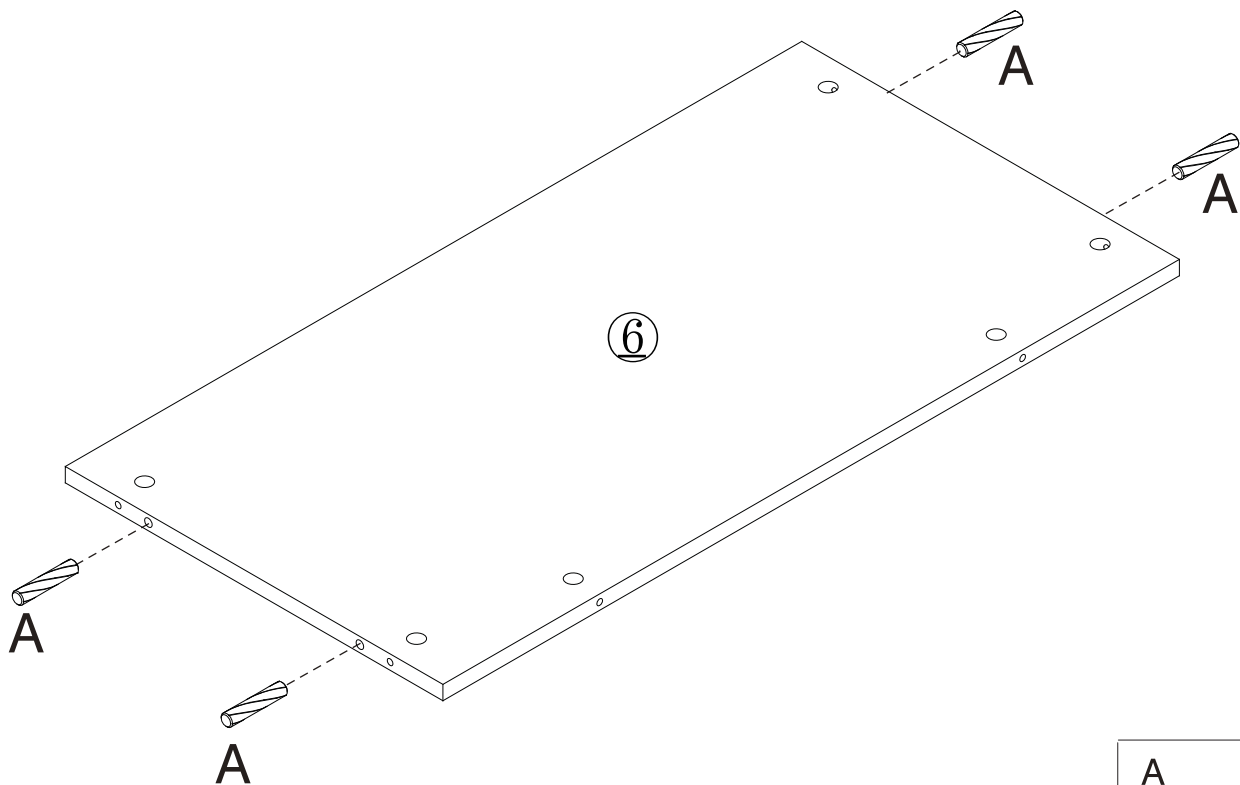


 
 
Step 15

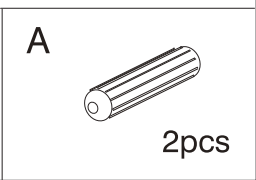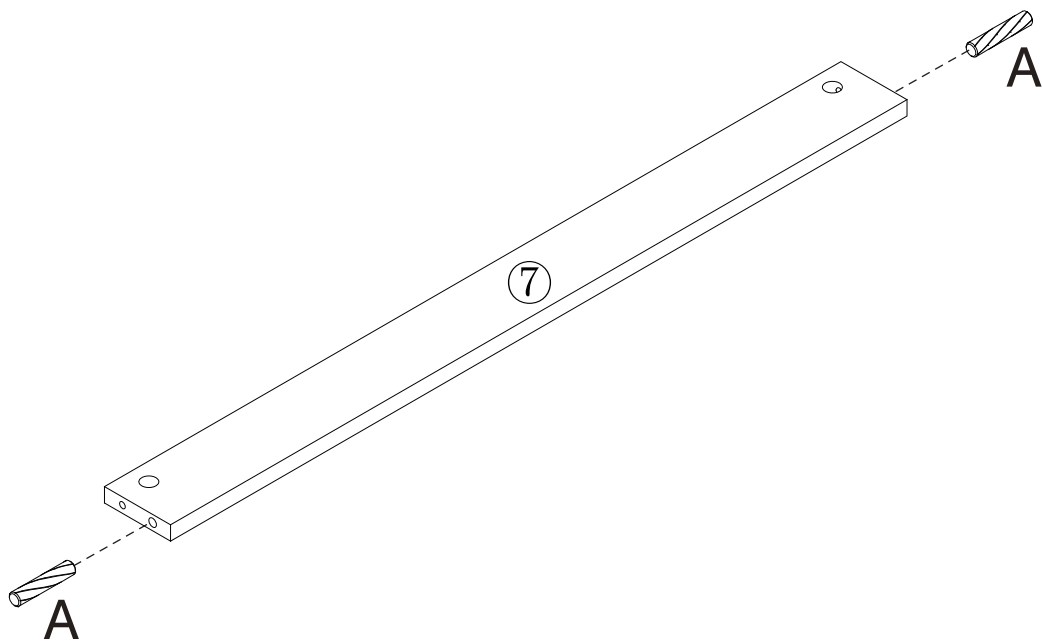

  
Step 16

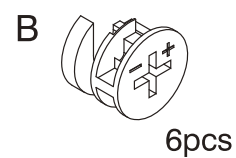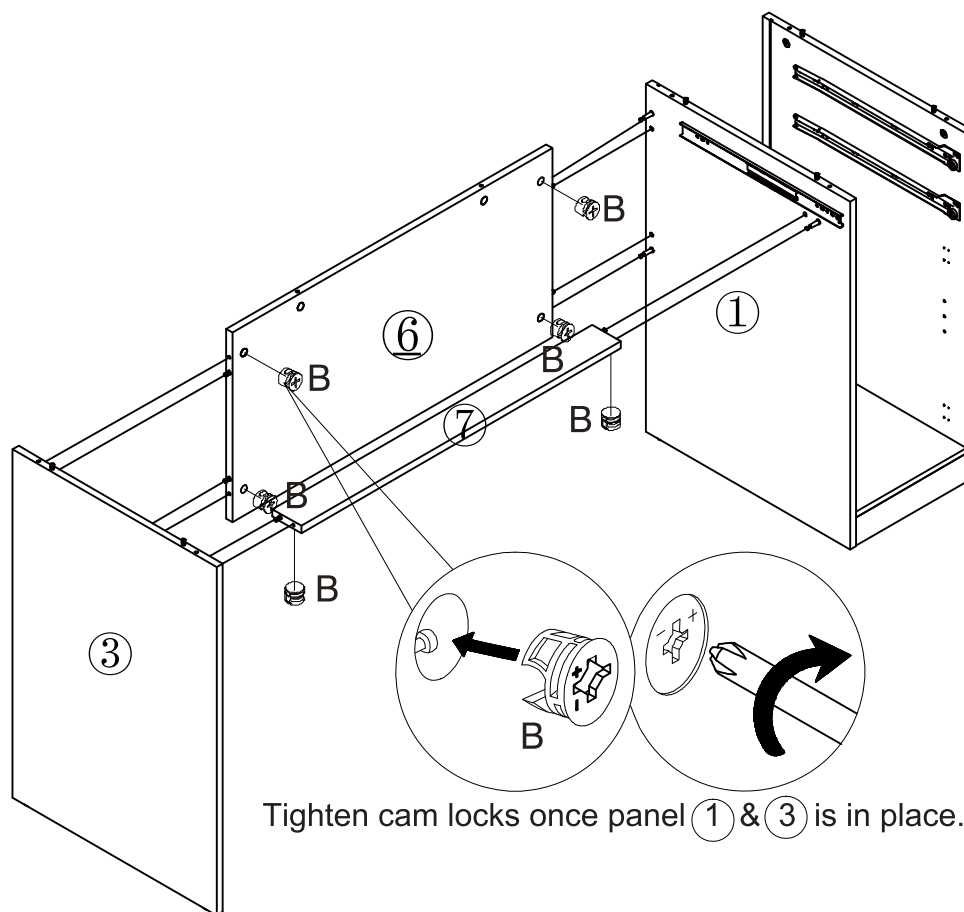

  
 
Step 17

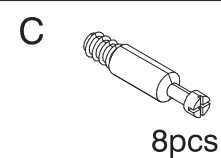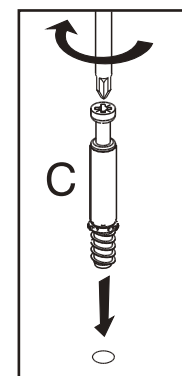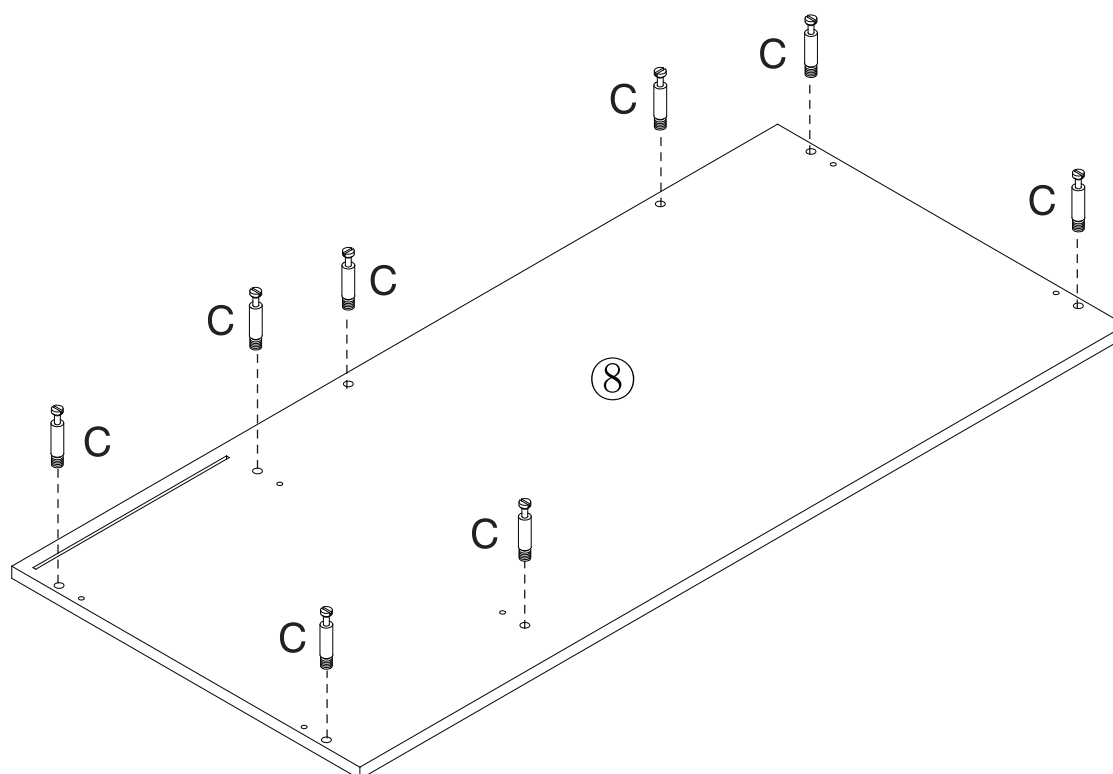

 
Step 18

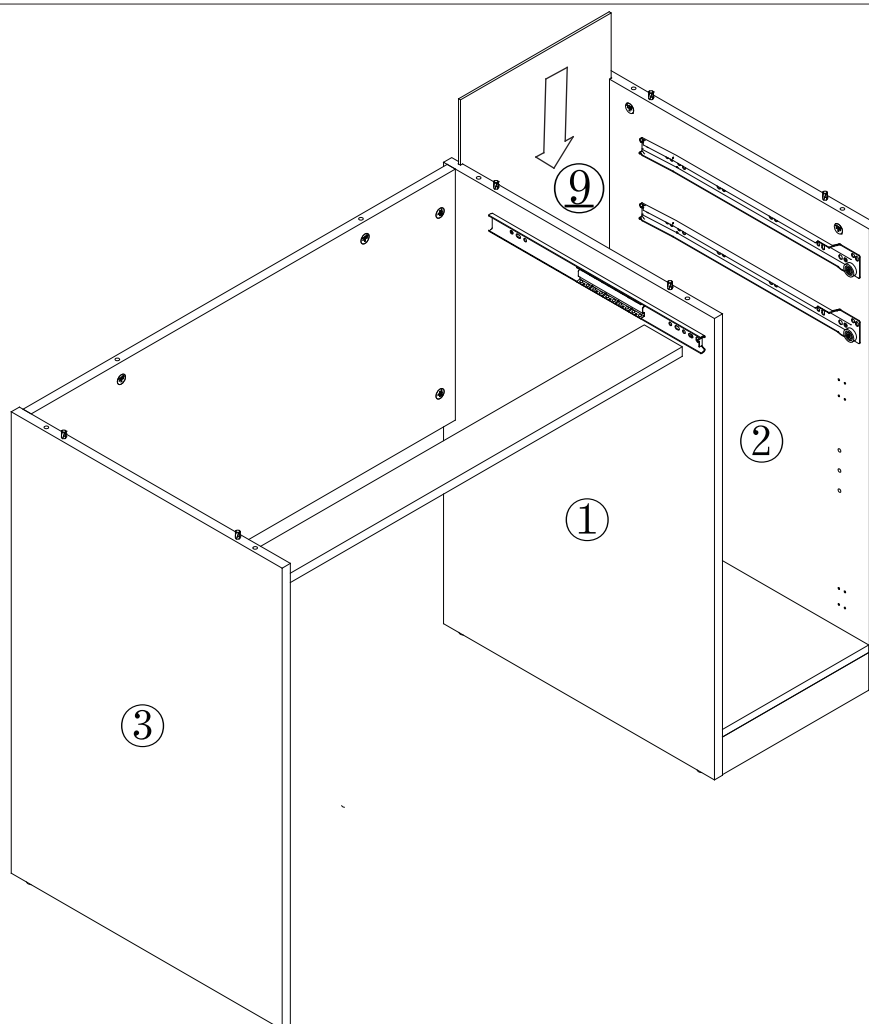

  Step 19

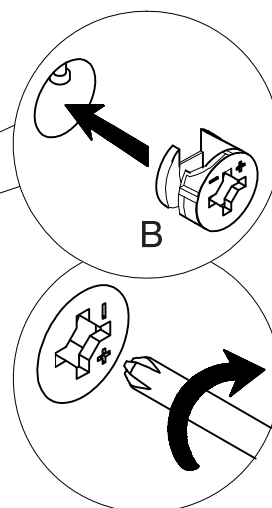
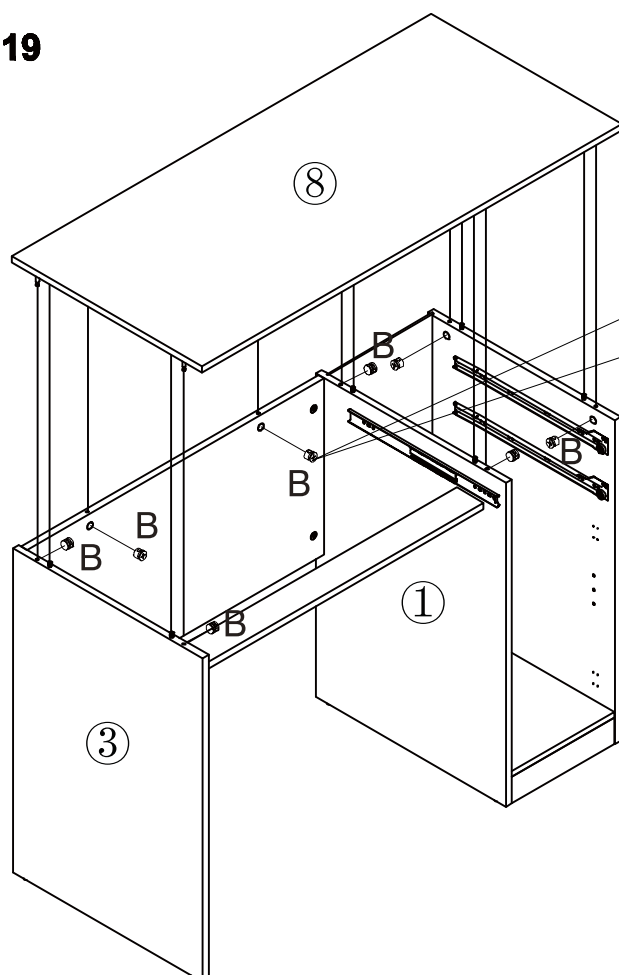


 Tighten cam locks once panel ⑧ is in place.

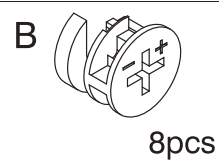




Step 20

  X 2

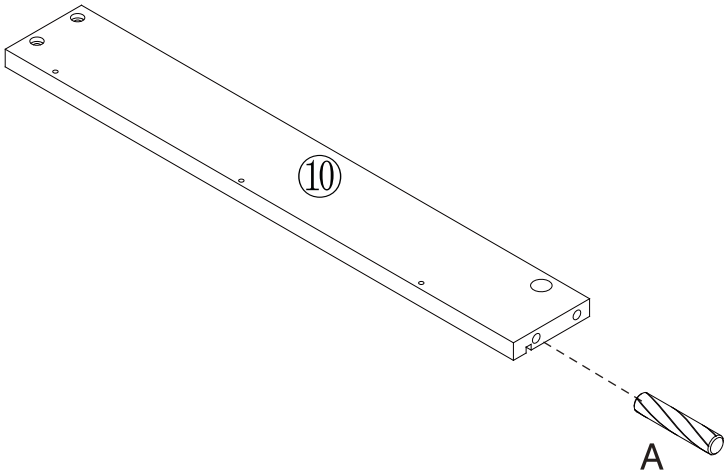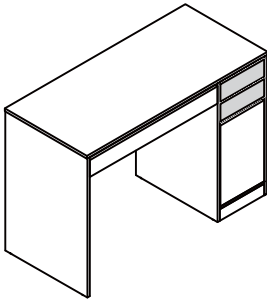





Step 21

   X 2

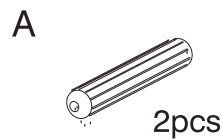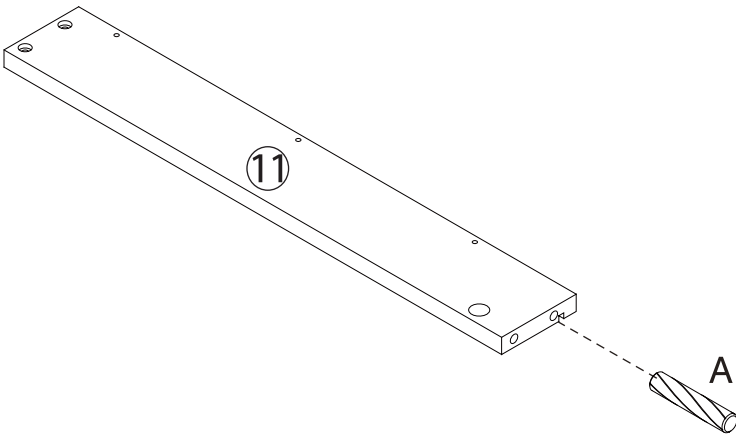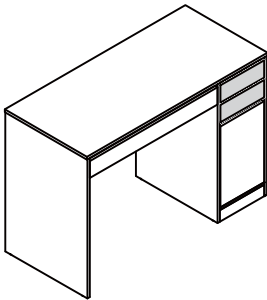




Step 22

    X 2

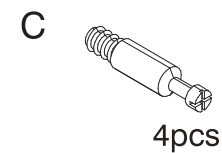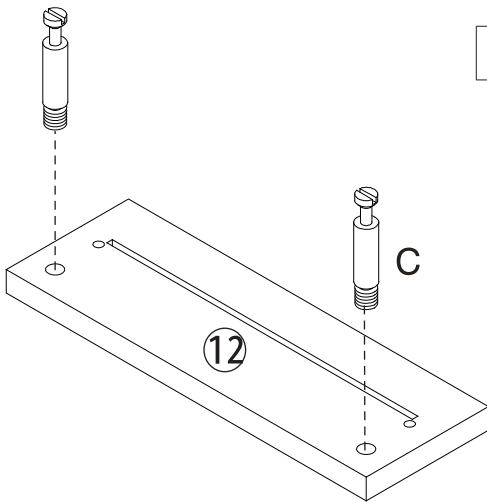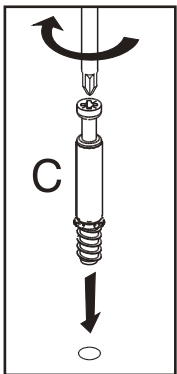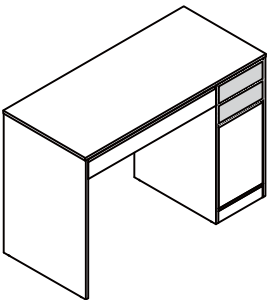



Step 23

   X 2

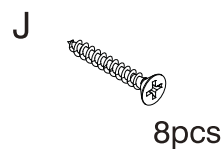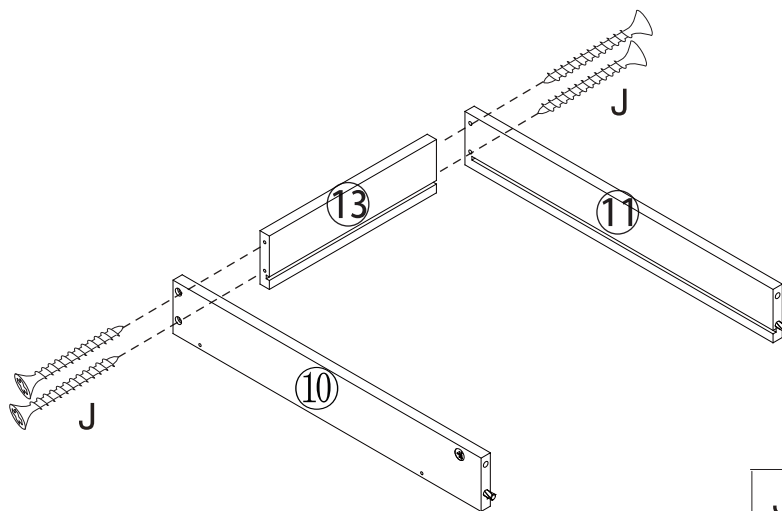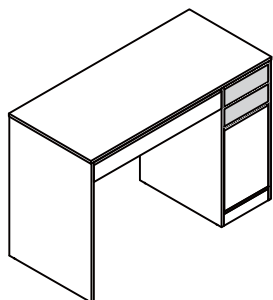



Step 24

  X 2

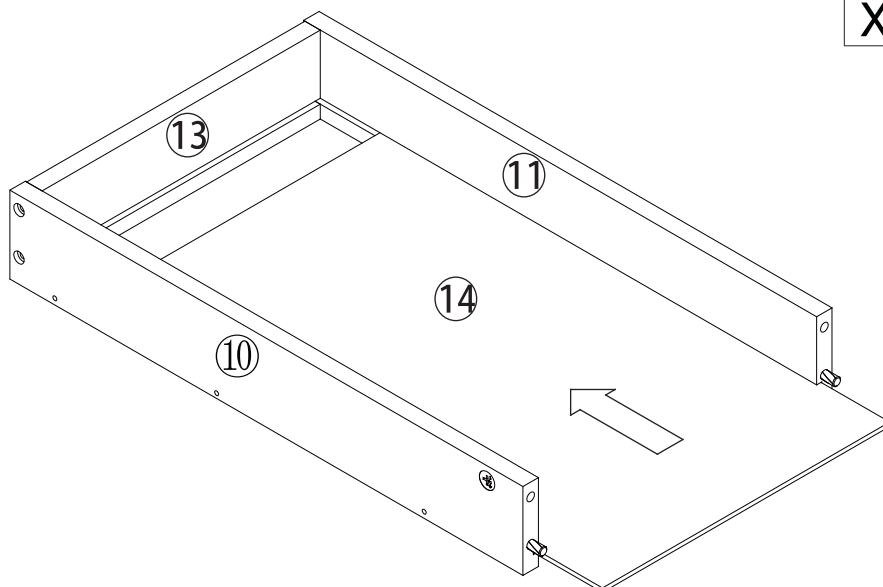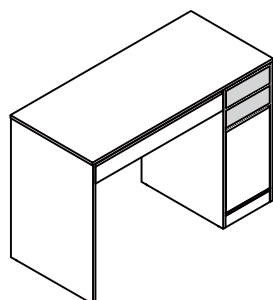

Step 25

  X 2

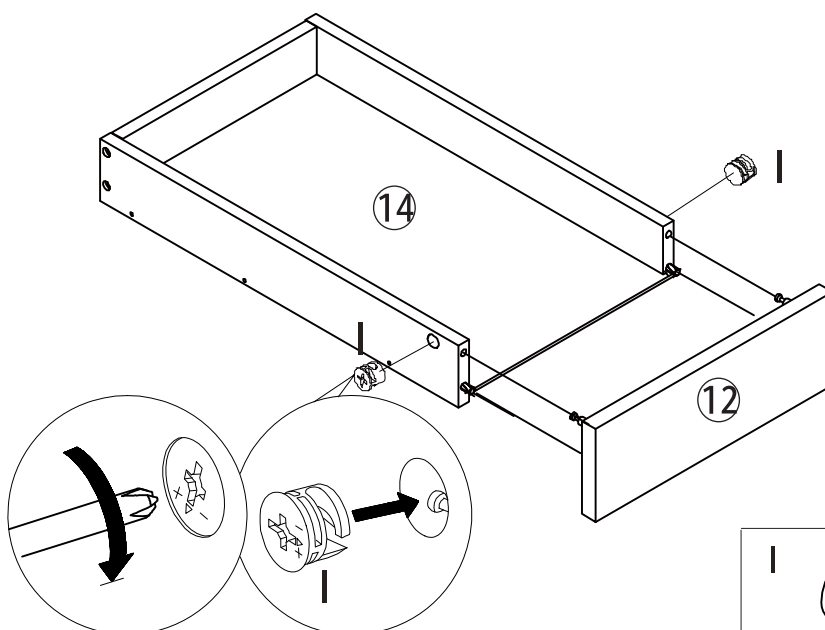
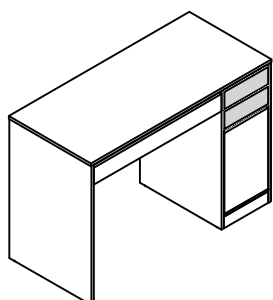


Tighten cam locks once panel 12 is in place.




Step 26

  X 2

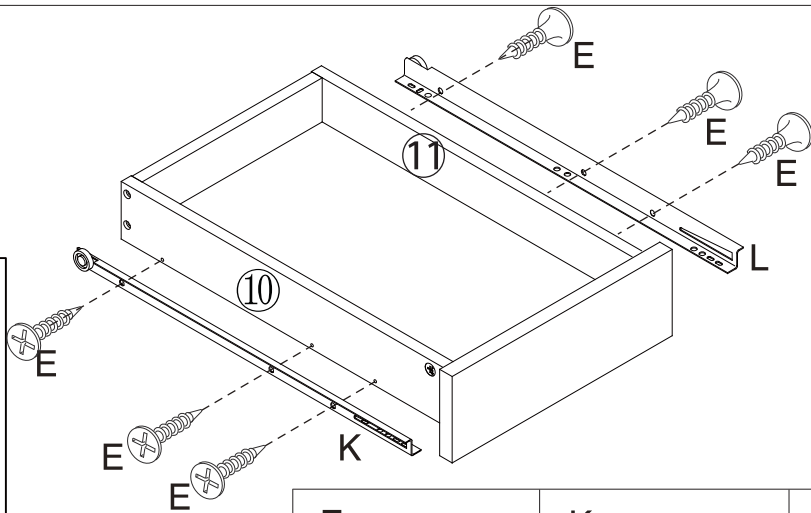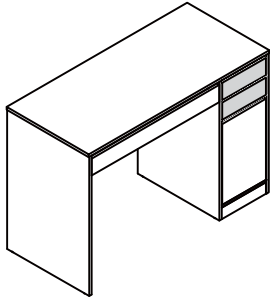


E

 


12pcs

 K






2pcs

 L





2pcs

   
Step 27

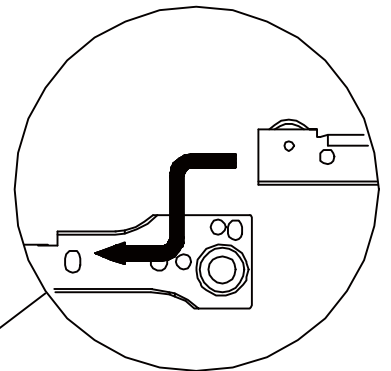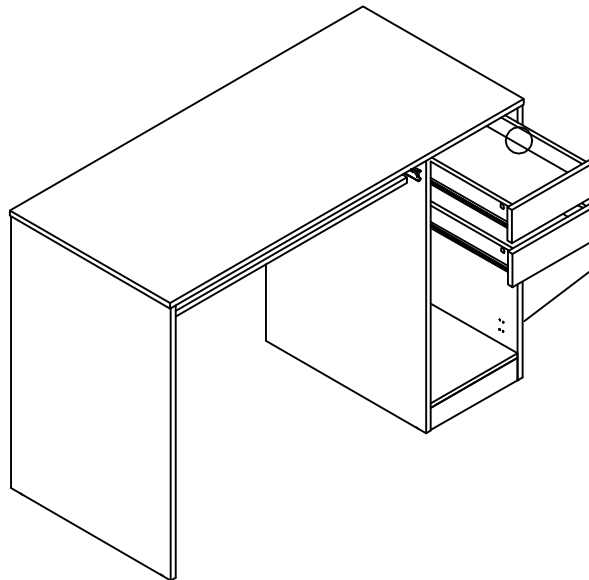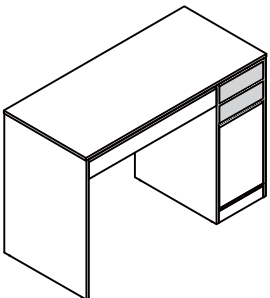

  Step 28

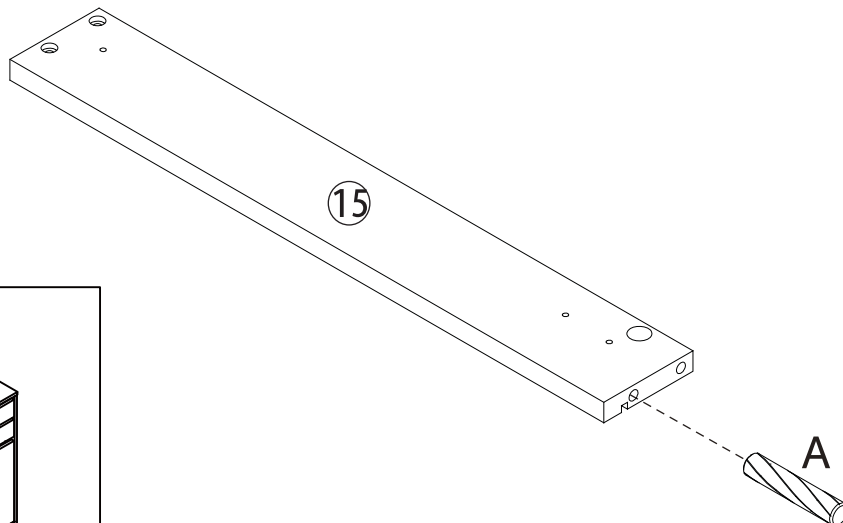
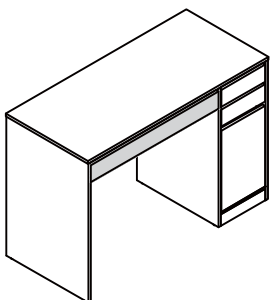


A

 


1pc

 
 
Step 29

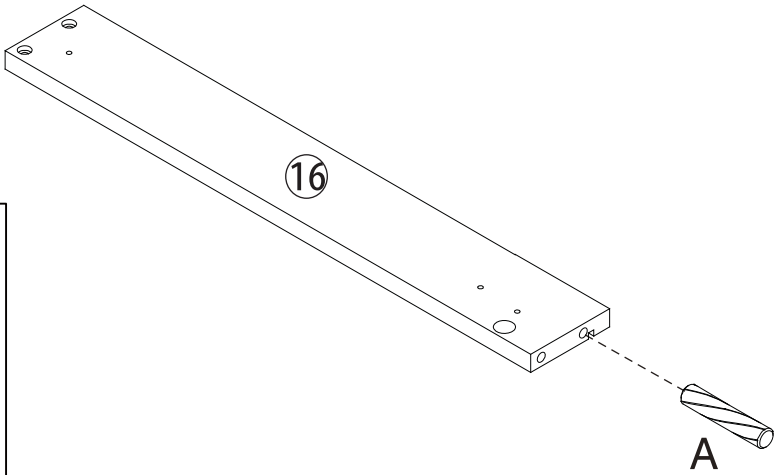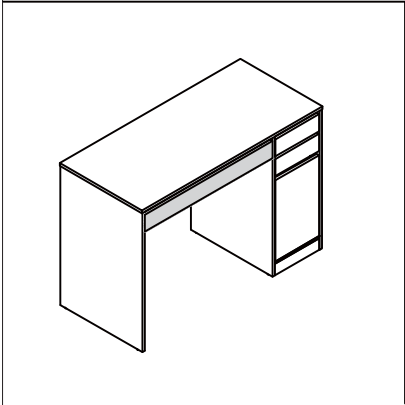


A

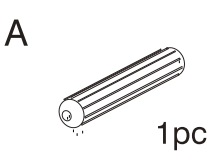 

 
 
Step 30

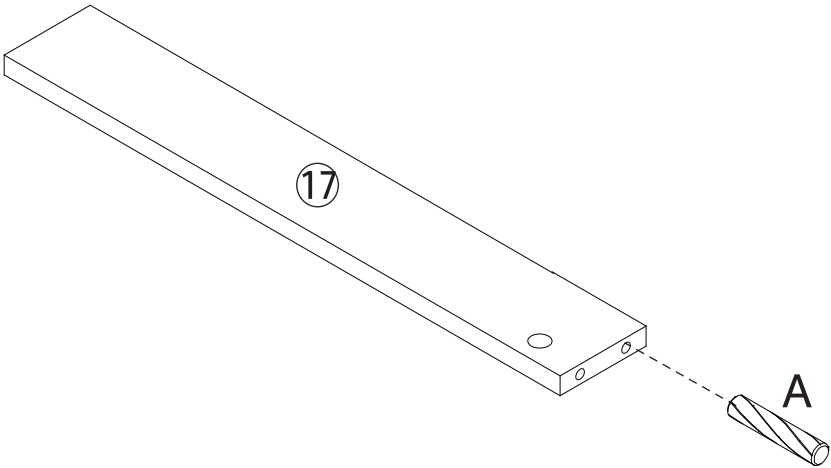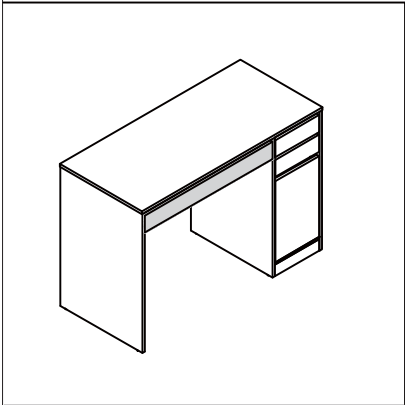

A

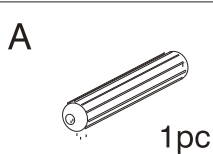 

 
 
Step 31

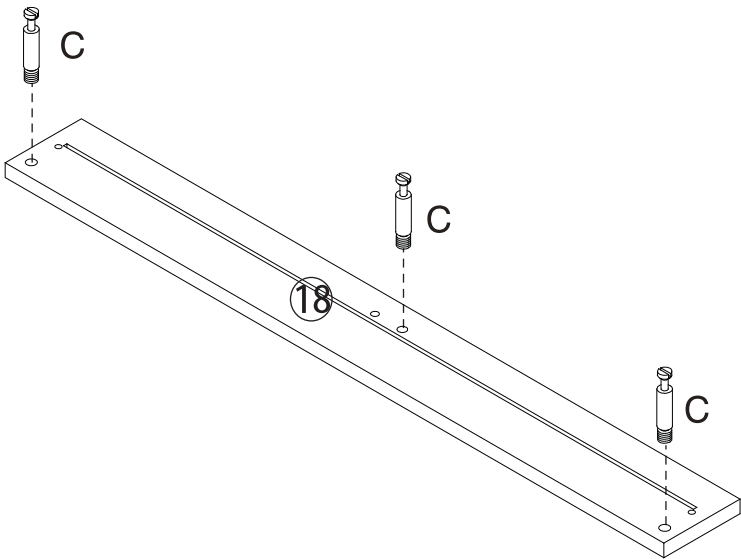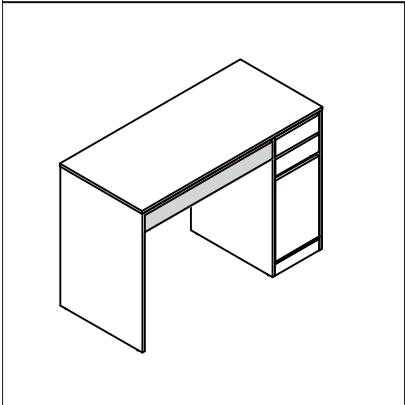



C

C

 
 
C

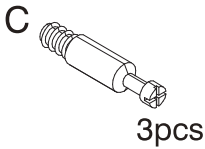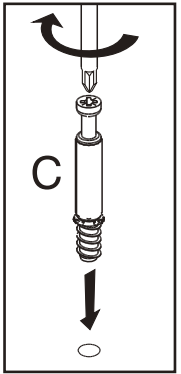

 
 
Step 32

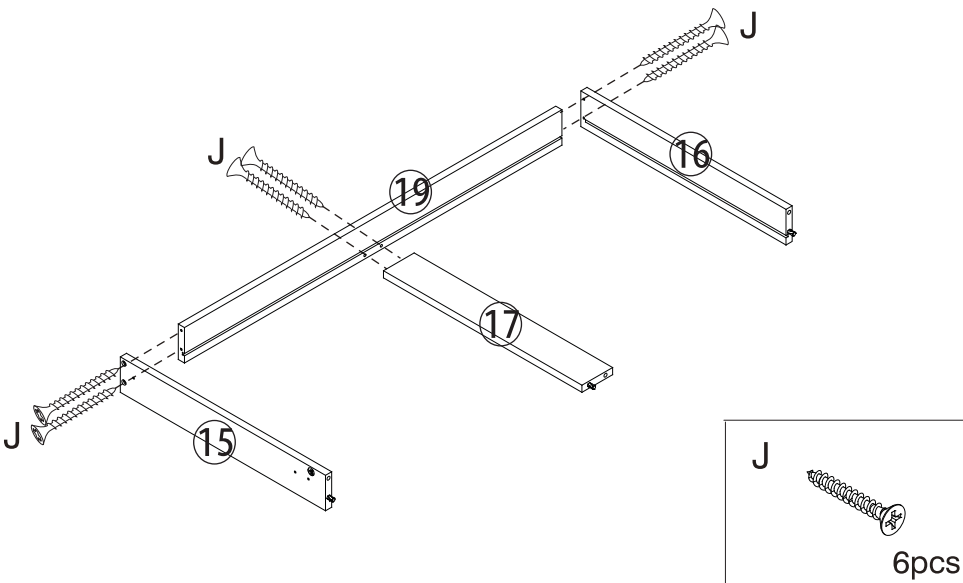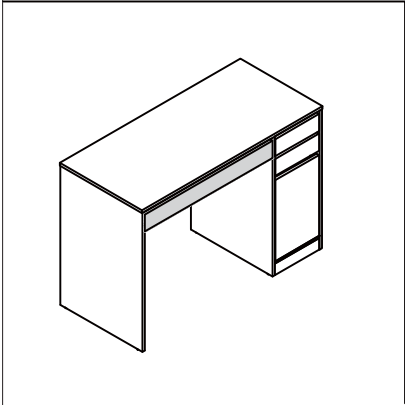

  Step 33

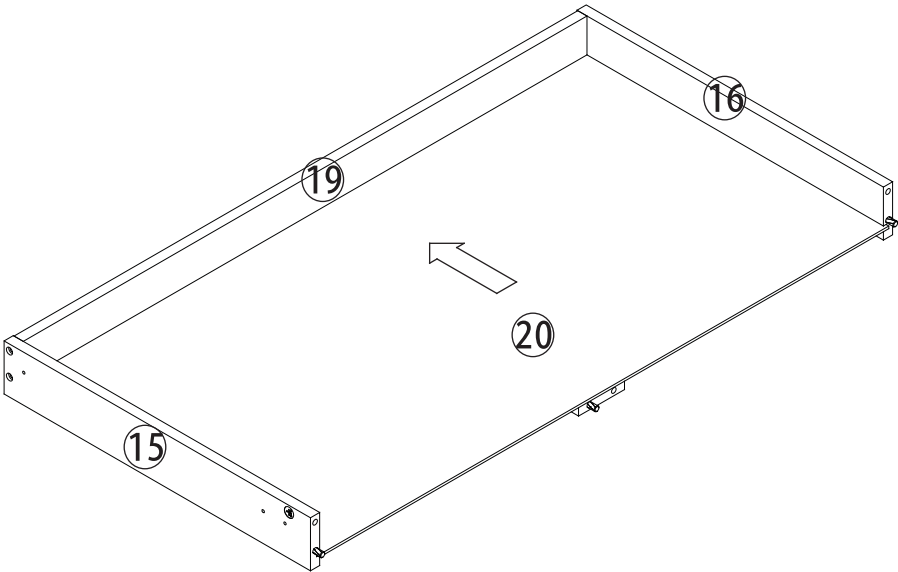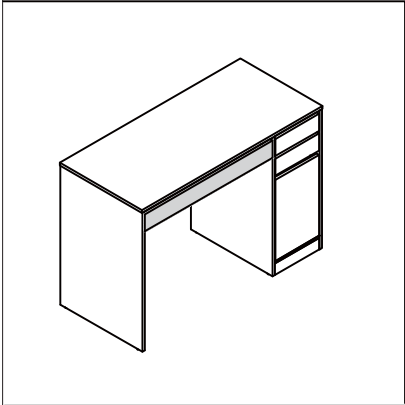


  Step 34

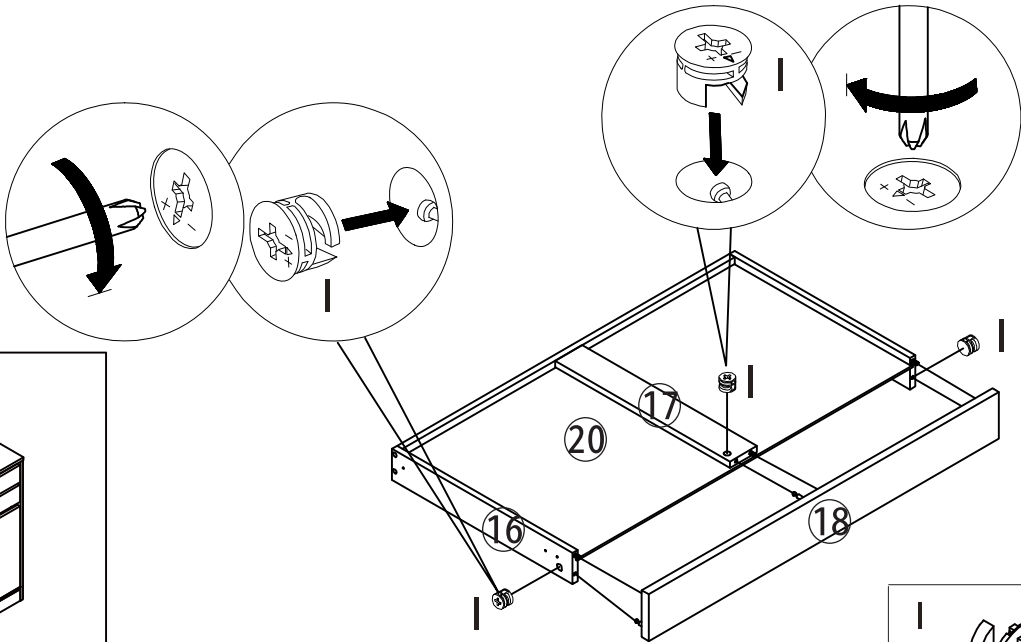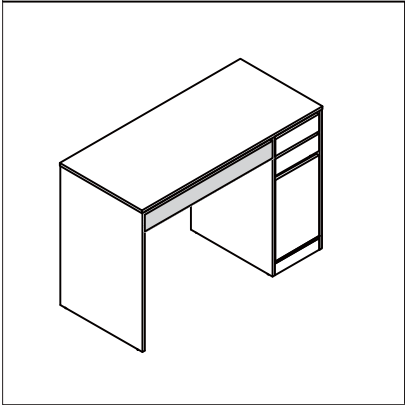


Tighten cam locks once panel 18 is in place.

 
Step 35

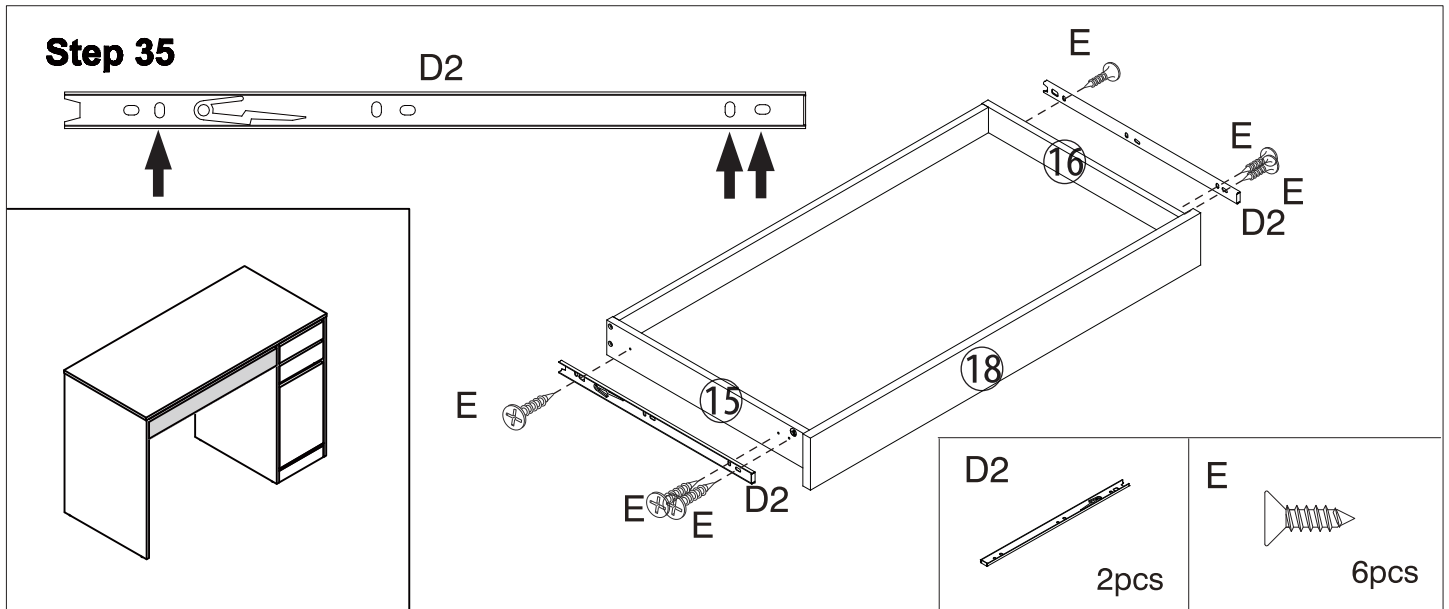

 
Step 36

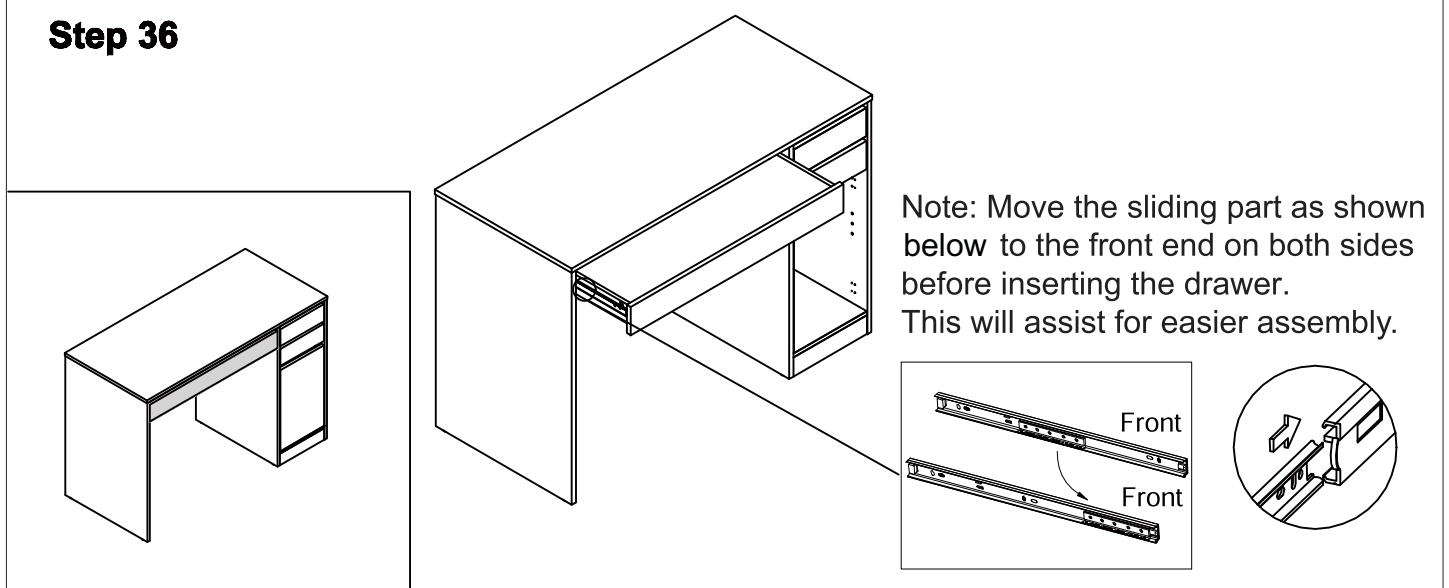

 Step 37

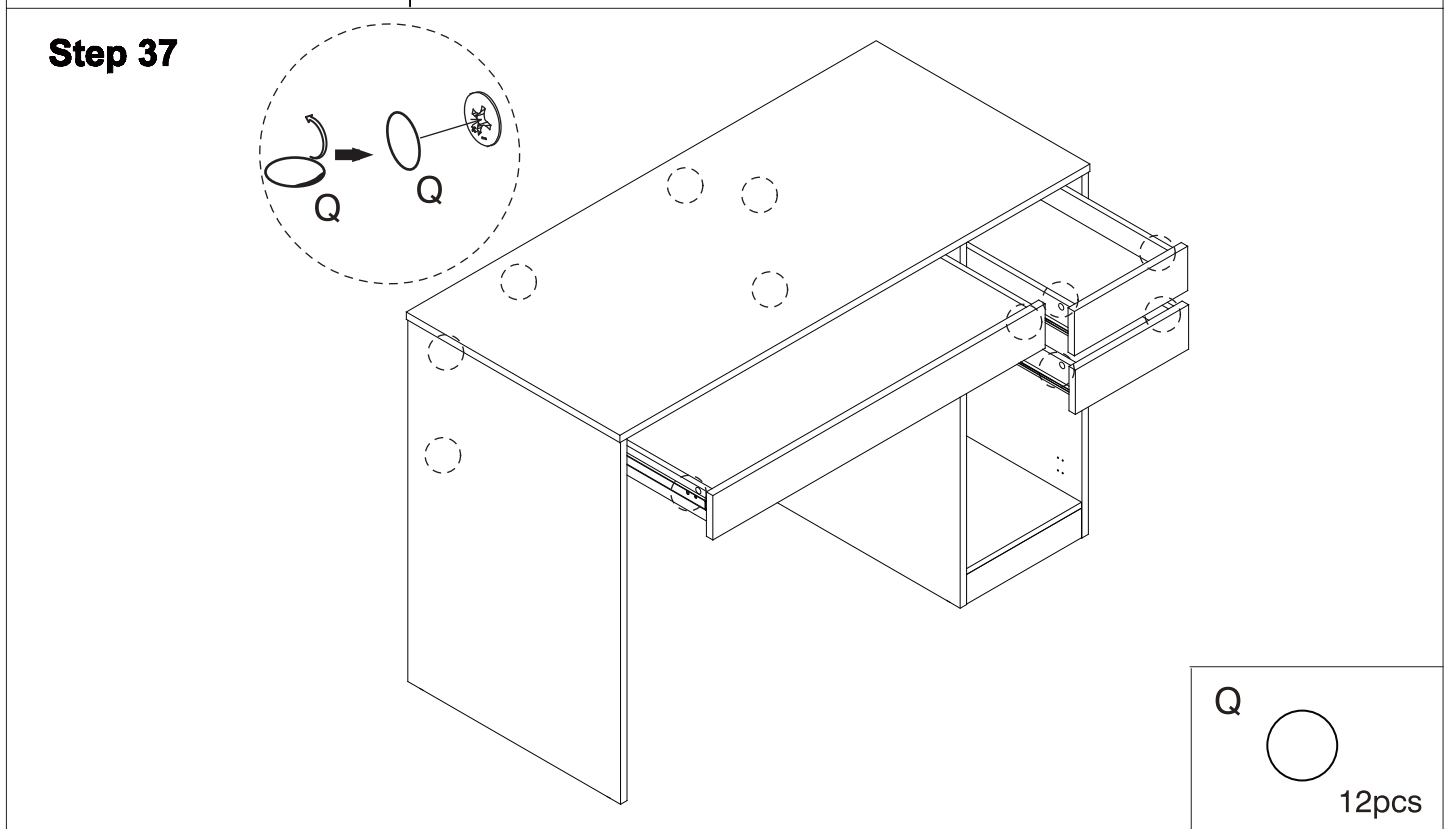


 Step 38

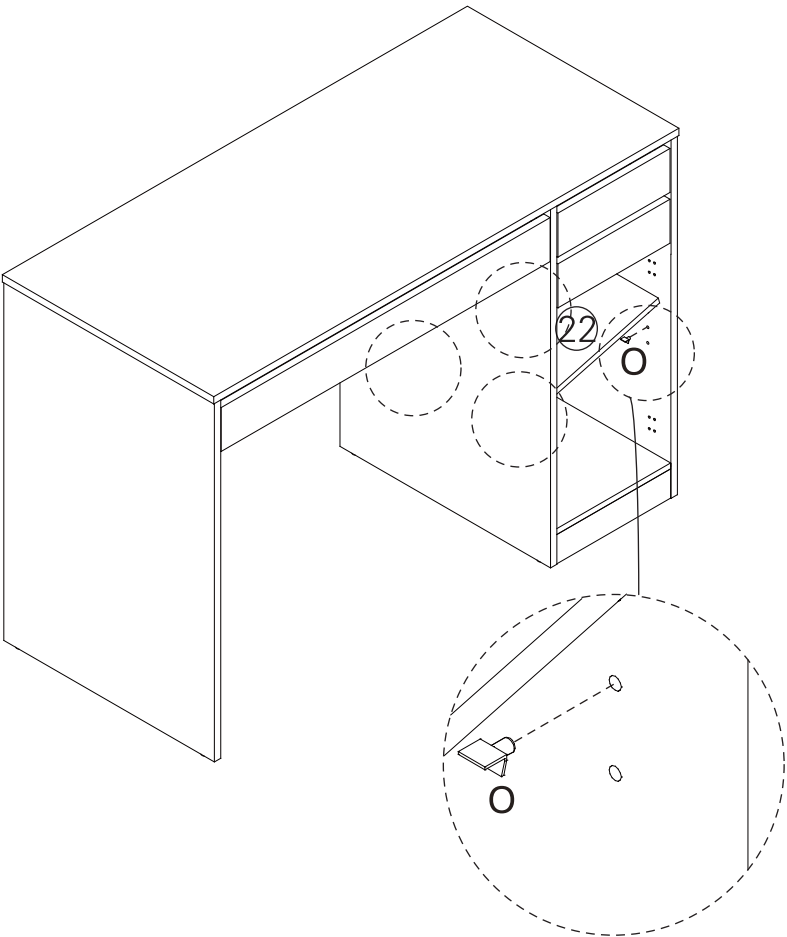

O 4pcs


 
Step 39

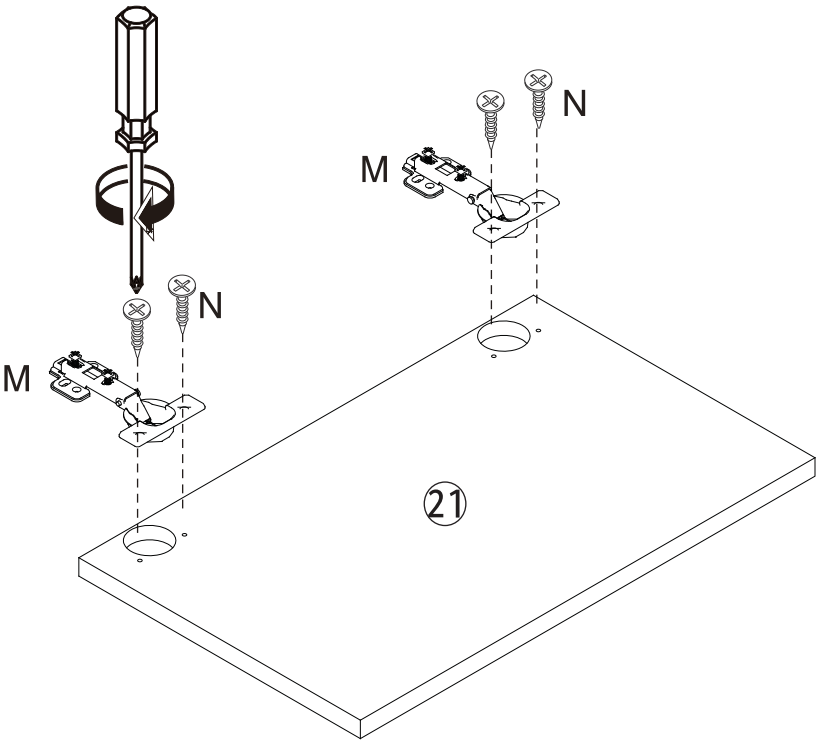

M 2pcs


N 4pcs

  Step 40

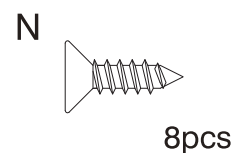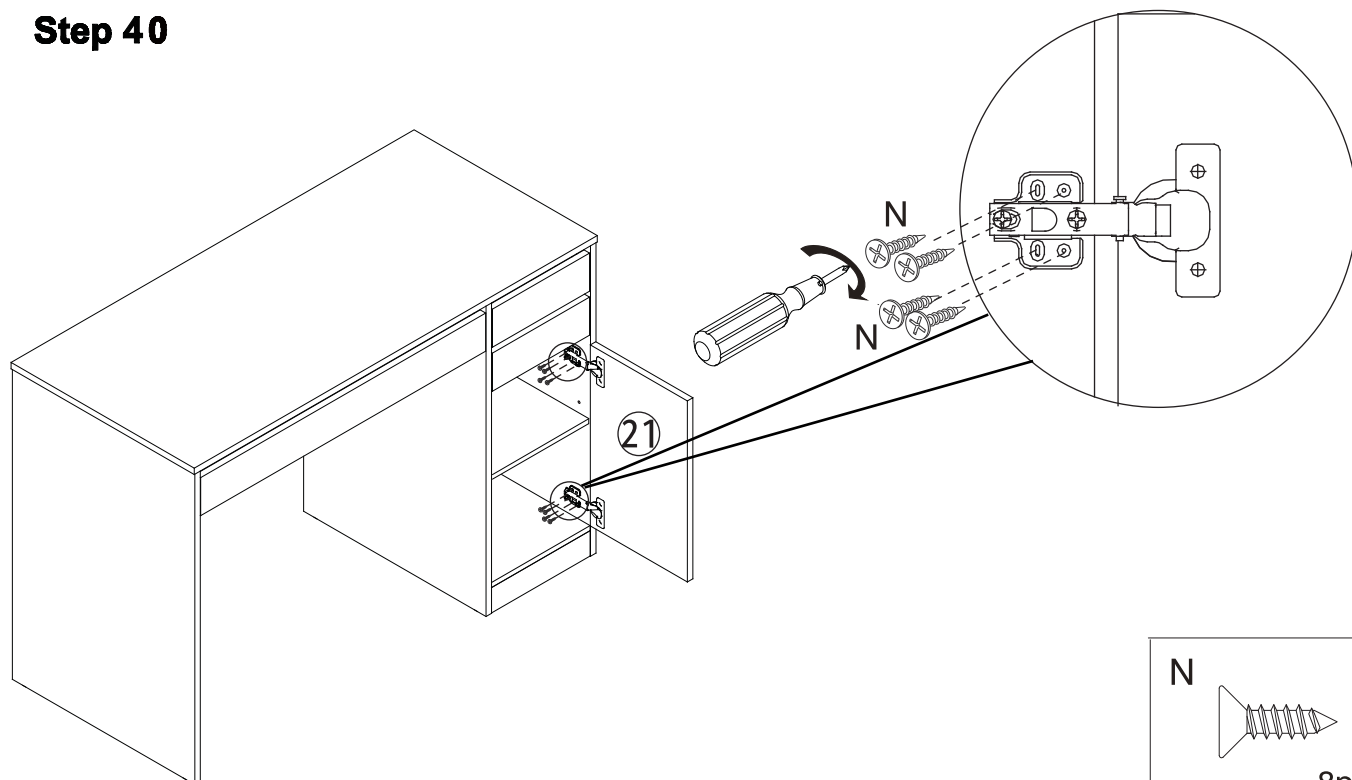


Hinge adjustment

 If the doors do not appear square or aligned, loosen or tighten the appropriate screws on each case hinge as illustrated.

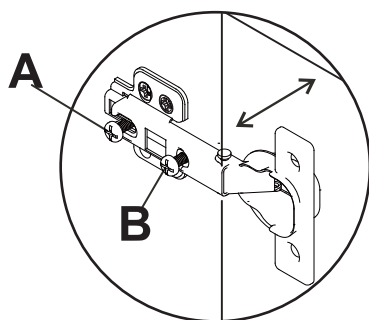


1) Side to side adjustment:

 Loosen screw **A**, adjust gap with screw **B** and re-tighten screw **A**.

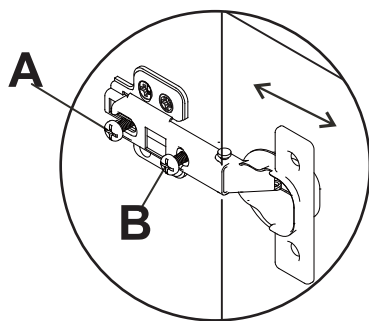

2) Depth adjustment:


 
Loosen screw **A**, push hinge arm forwards or backwards, re-tighten screw **A** and secure screw **B** with a 1/4 turn clockwise.

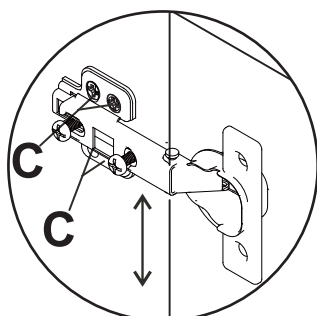

3) Height adjustment:

Loosen screw **C**, adjust door height and re-tighten screw **C**.

  Step 41

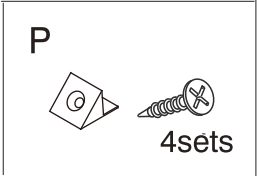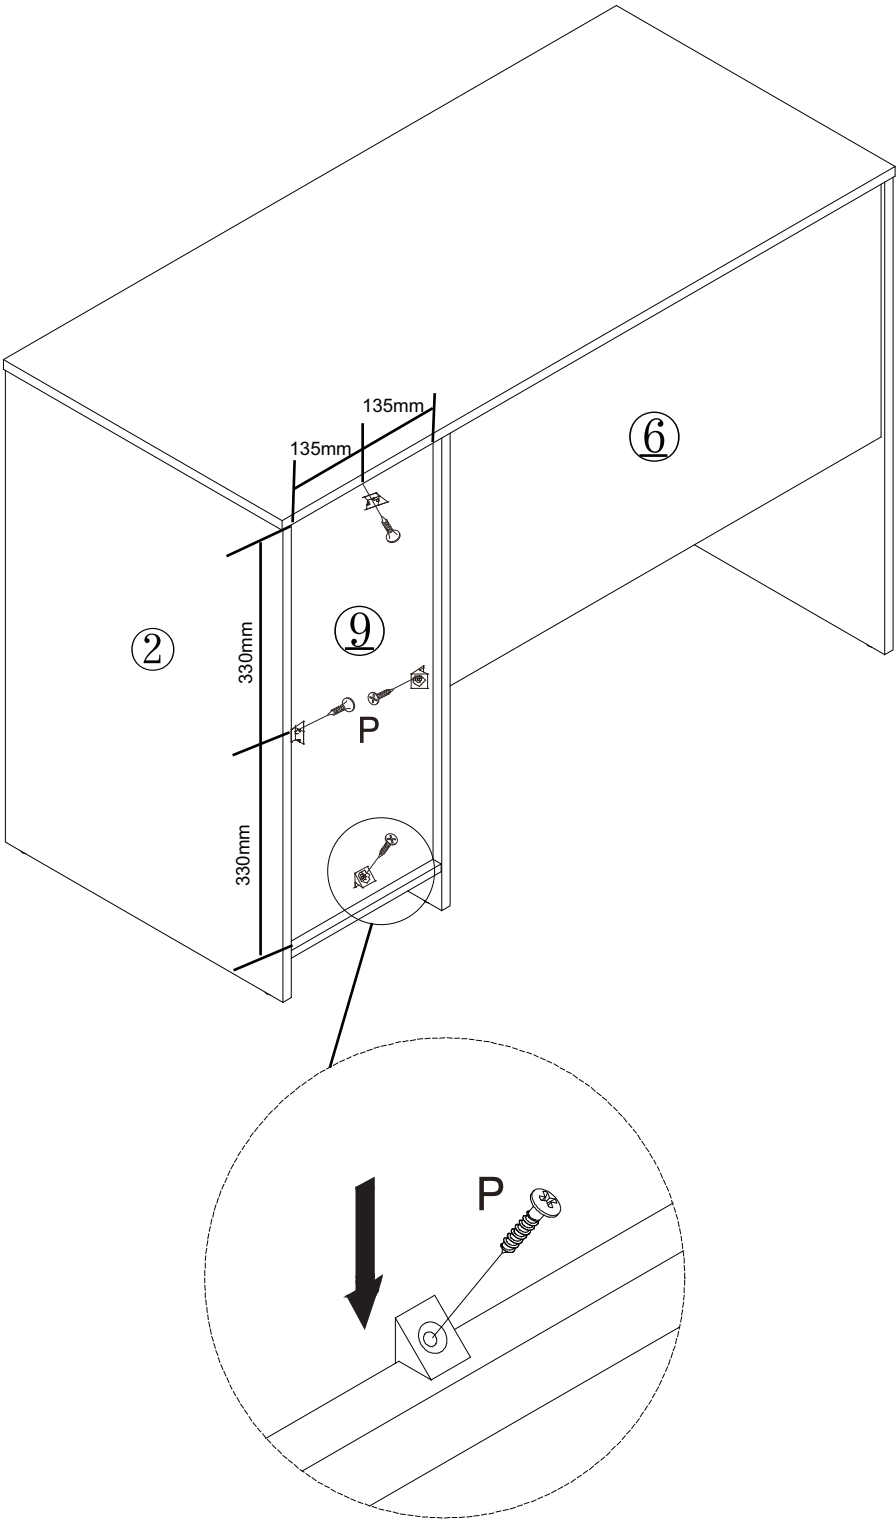


Maximum Load Capacity:

Desk Top-40kg

Each Drawer-5kg

 Shelf-10kg

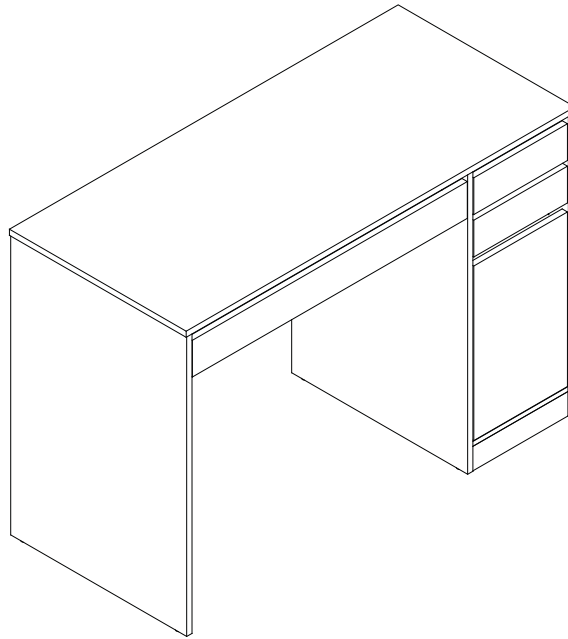

Your DEAKIN 3 DRAWER 1100MM DESK
is now complete and ready for use!

Care Advice

Care Instructions - PVC/ Melamine Finish Desk

- Keep away and protect from direct sunlight and heat.
- Do not place sharp materials(knife,fork,etc) directly onto your furniture as sharp material may scrape and damage the finish.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbant cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.
- Clean, check and tighten all parts regularly.

Safety Warning

- **WARNING** – Put locking devices on all drawers to prevent children opening them and using them as steps.
- **CAUTION** – This product is intended to hold the maximum weight indicated. Exceeding the maximum weight will result in instability and may cause injury.

Warranty 3 years

Product Warranty – valid for Australian customers only

Officeworks Ltd warrants that this product will be free from defects and work as intended for 3 years from the date of purchase by the original customer.

If the product has any defects or does not work as intended during the Warranty Period, Officeworks will, at its election and at its expense, repair or replace the product.

This warranty does not apply:

- to cosmetic damage;
- to damage caused by consumables used in connection with the product (such as cleaning products);
- where the product has not been used in accordance with all provided instructions;
- to damage arising from fair wear and tear;
- where the product has not been subject to reasonable use;
- where the product has been intentionally or negligently damaged; and/or
- if the customer has attempted to repair the product.

To make a claim under this warranty, please return your product with your receipt or proof of purchase to your nearest Officeworks store or contact 1300 633 423.

This warranty is provided in addition to any rights you may be entitled to under the Competitions & Consumer Act 2010.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Thank you for your purchase. Please retain your receipt to validate warranty.
If you would like to know more about our furniture products, please visit www.officeworks.com.au