


# DEGREE° | WALL CLOCK

## OPERATING INSTRUCTIONS

---

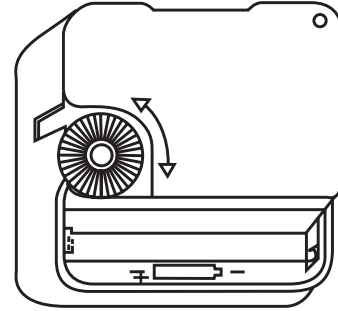


- Insert one 'AA' battery as indicated in the battery holder. The movement will be damaged if the battery is inserted incorrectly.
- Set time by turning knob on left side.
- Replace battery once a year even if clock is still running.
- Remove battery when clock is not in use.
- Use 1.5V AA battery - not included.

# DEGREE°

## LCD DISPLAY OPERATING INSTRUCTIONS

---

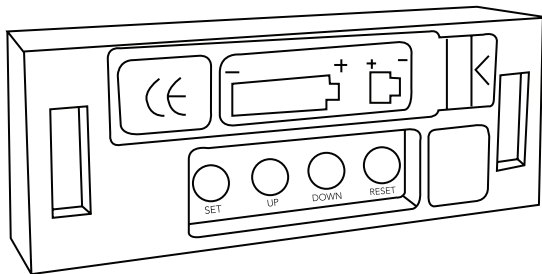

### SETUP

- Insert one 'AA' battery as indicated in the battery holder. The movement will be damaged if the battery is inserted incorrectly.
- Replace battery once a year even if clock is still running.
- Remove battery when clock is not in use.
- Use 1.5V AA battery - not included.

### BUTTON FUNCTIONS

'SET': Used to set time & date.

'UP': Scroll up in settings mode. Switch between °C/°F in normal mode.

'DOWN': Scroll down in settings mode. Switch between time and date in normal mode.

'RESET': To reset the clock.

### ADJUST TIME & DATE

- Press and hold 'SET' until the display flashes. Press 'SET' to scroll through the settings. In order they are:  
Year – Month – Date – Language – 12/24 Hour – Hour – Minute – Return
- While the desired setting is flashing, use the 'UP' and 'DOWN' buttons to adjust display. Press 'SET' when correct, and continue to press 'SET' to scroll through additional settings.

### ADJUST TEMPERATURE

- In normal mode, press the 'UP' key to adjust between °C and °F.

### SWITCH BETWEEN TIME & DATE

- In normal mode, press the 'DOWN' key to switch display from time to date.

### ADJUST LANGUAGE

- Press and hold 'SET' until the display flashes. Press 'SET' 4 times to reach language. Use 'UP' and 'DOWN' buttons to scroll through available languages. In order these are: English, French, German, Italian, Spanish.