

J.BURROWS

• • • • •

ASSEMBLY INSTRUCTIONS

DONCASTER HIGH BACK MESH CHAIR JBDONCASKB



Weight capacity: 135kg

This design and instruction booklet is subject to copyright .
www.officeworks.com.au

1 CTN

For spare parts or hardware call 1300 OFFICE (1300 633 423)

Estimated Assembly Time: 15 minutes

Assembly Video

- To view an assembly video, go to <https://www.officeworks.com.au/>
- Search the product by item code or name:



- Click on the icon to watch the video.



Customer Service Contact Details



Spare Parts & Hardware
1300 OFFICE(1300 633 423)

People Required



General Advice



NOTE

- Please check you have all hardware before assembling.
- If you are missing any hardware, please contact 1300 OFFICE(1300 633 423).
- Please ensure you have the name of the item, required hardware part and quantity.
- Please retain your receipt as proof of purchase to validate your warranty.

CAUTION

- Do not tighten screws before all screws are in the right place.
- Do not use this product unless all bolts and screws are firmly secured.
- Check that all bolts and screws are securely tightened at least every 4 months.

 
 
 


 




WARNING

- If parts are missing, broken, damaged or worn, stop using the product until all repairs are made using manufacturer authorised parts.
- Failure to follow these warnings could result in serious injury.

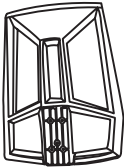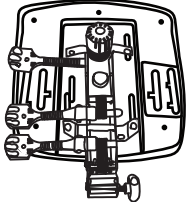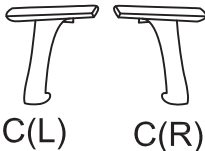DANGER

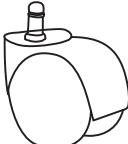


 



 
- CHILDREN MUST BE SUPERVISED.

Part List

 




 
Ax1 	Bx1 	Cx1(L&R) 	Dx1 
Ex1 	Fx5 	Gx1 	Ox1 
Px1 	Rx1 		

Hardware List

Hardware Spare Parts number - HWJBDONCHB

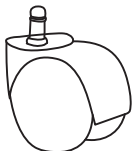 
Ix1 	Jx2  M4x45mm	Kx3  M6x20mm	Lx6  M6x55mm
M1x6 	M2x3 	Nx1 	Qx1 

Spare Parts Number-

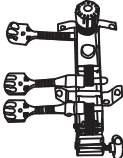 
HWDONCASC  FX5	HWDONCASGL  EX1	HWDONCASBS  Dx1	HWDONCASAR  C(L) C(R) Cx1(L&R)
HWDONCASCV  Px1	HWDONCASME  Sx1		

Assembly

 
Step 1

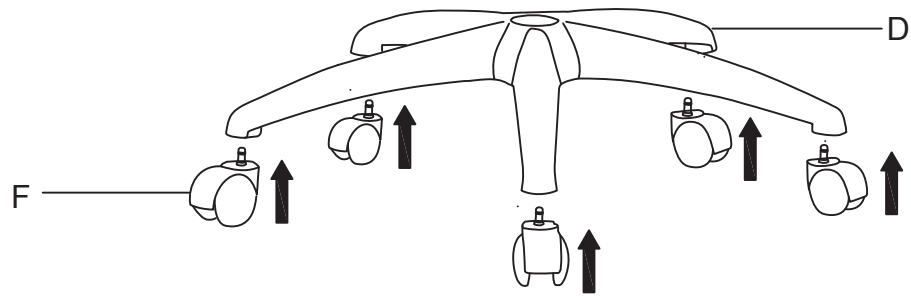

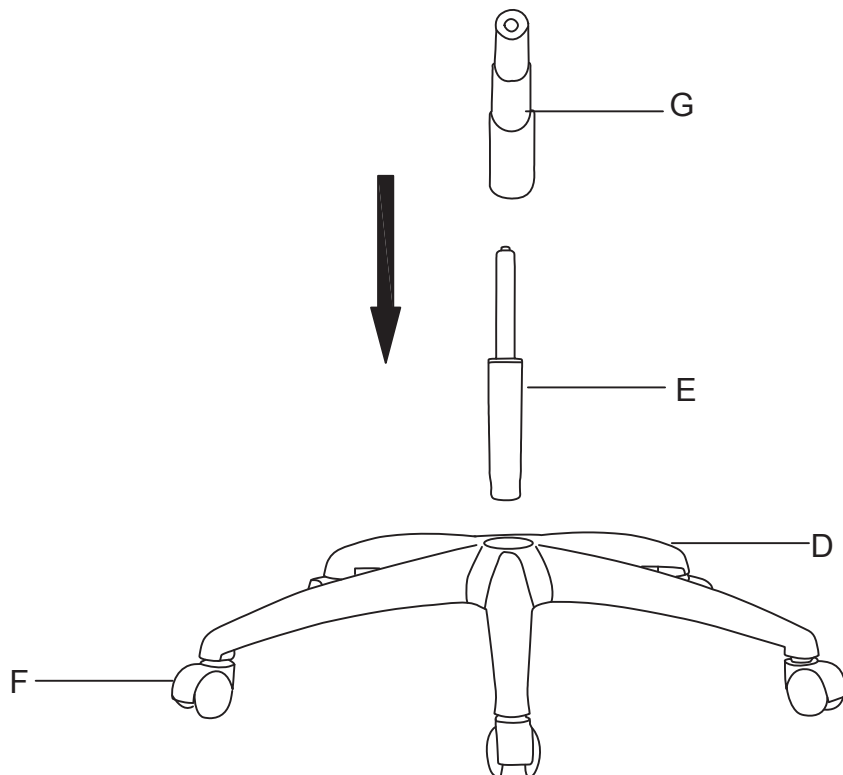 


Step 2

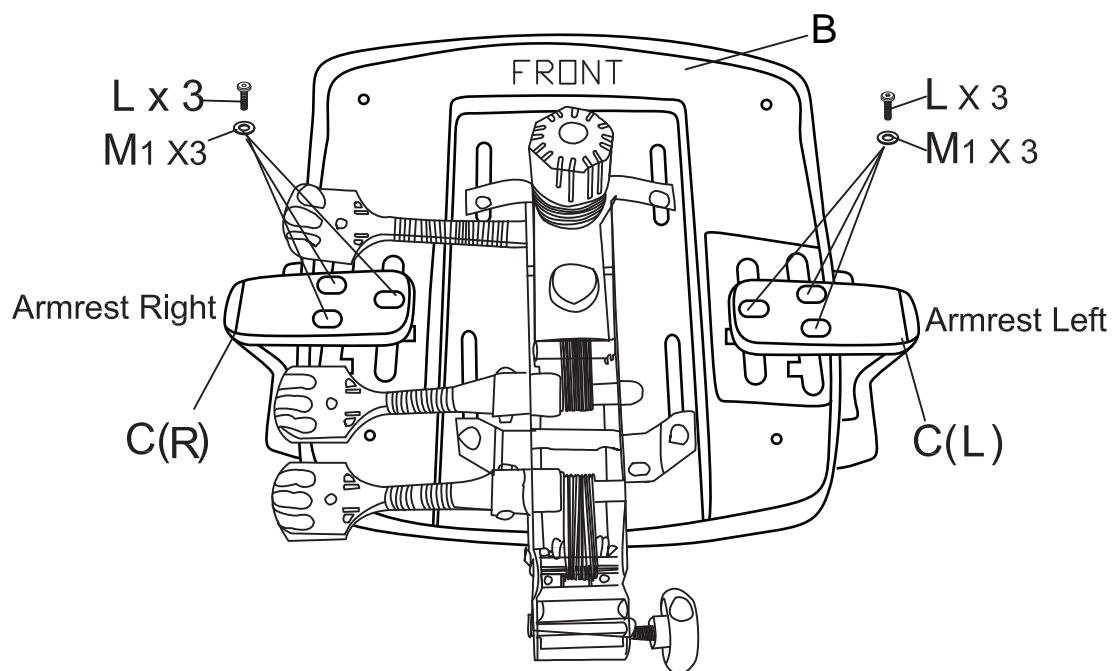 


Step 3

 


L x 6	M1 x 6	N x 1
		



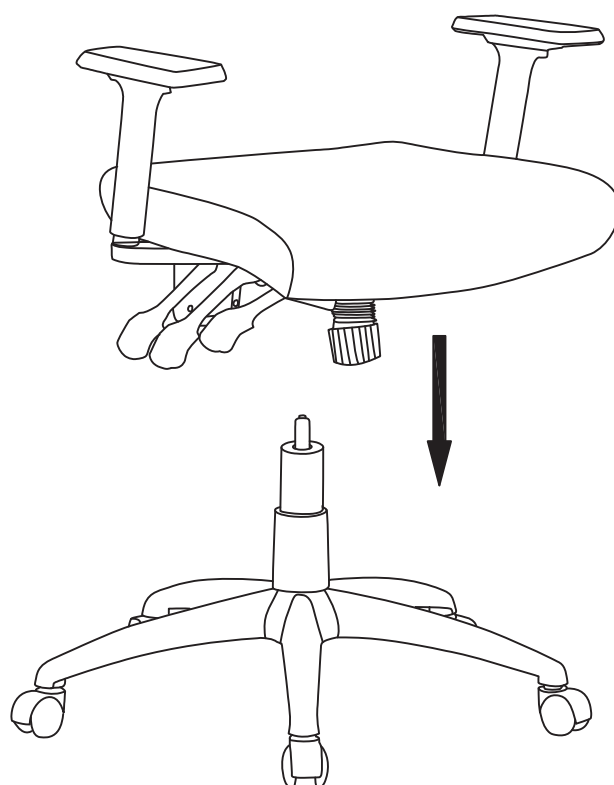

Step 4

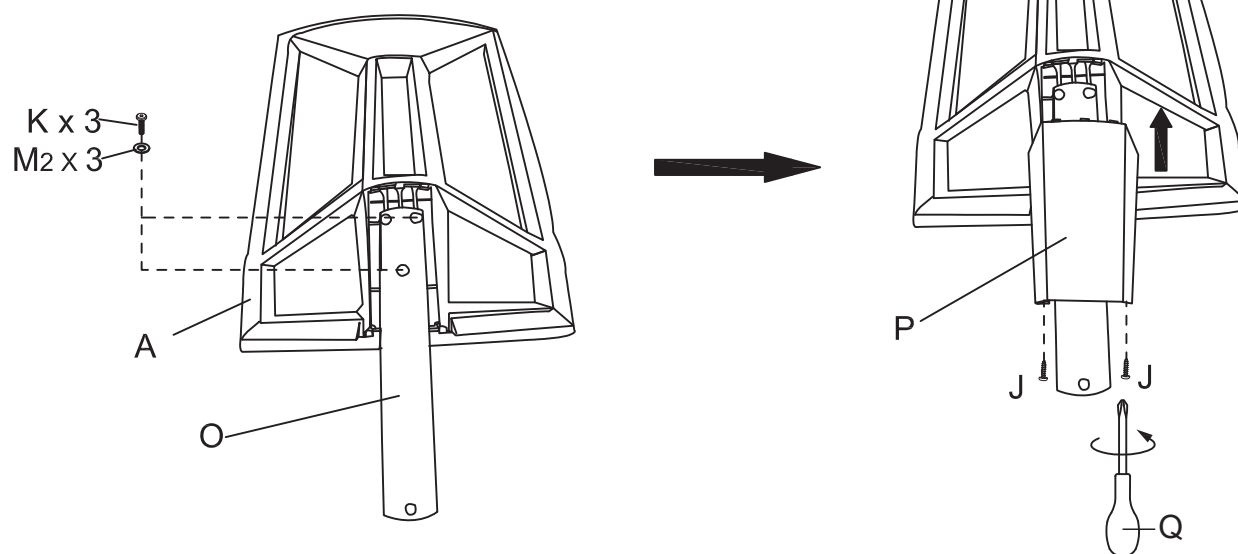

 
Step 5



 
There are screw holes under the cover P.
Please pay attention during assembly

K x 3	J x 2	M2 x 3	N x 1
			

Step 6

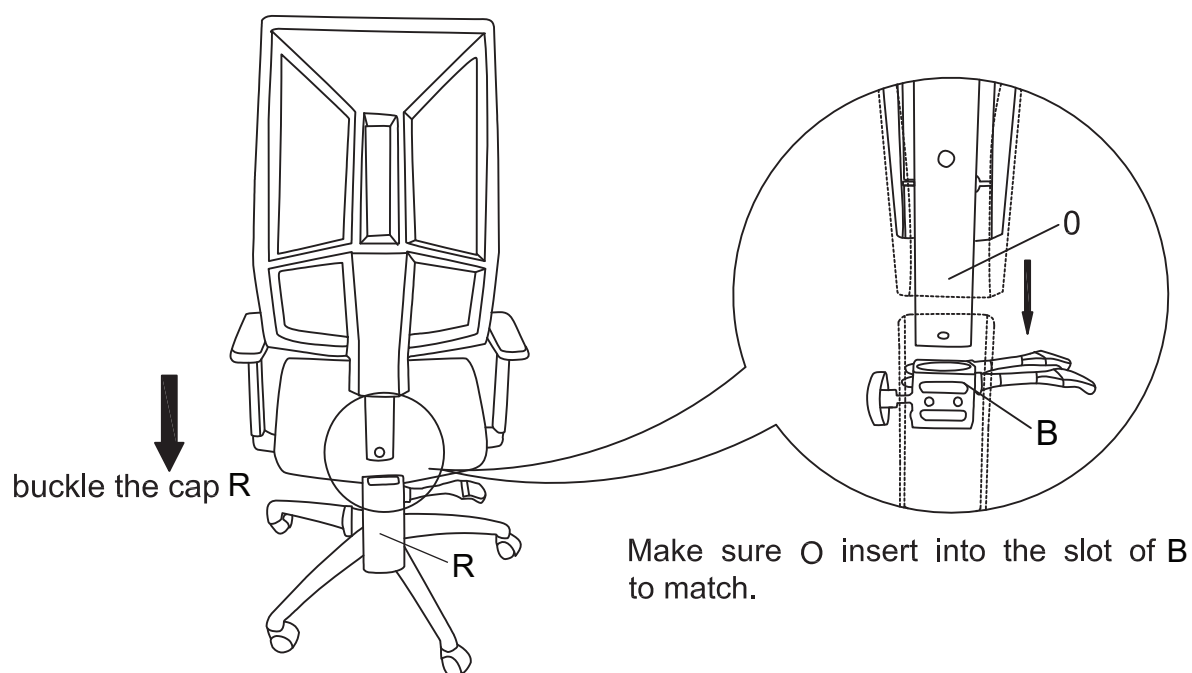

 
Step 7

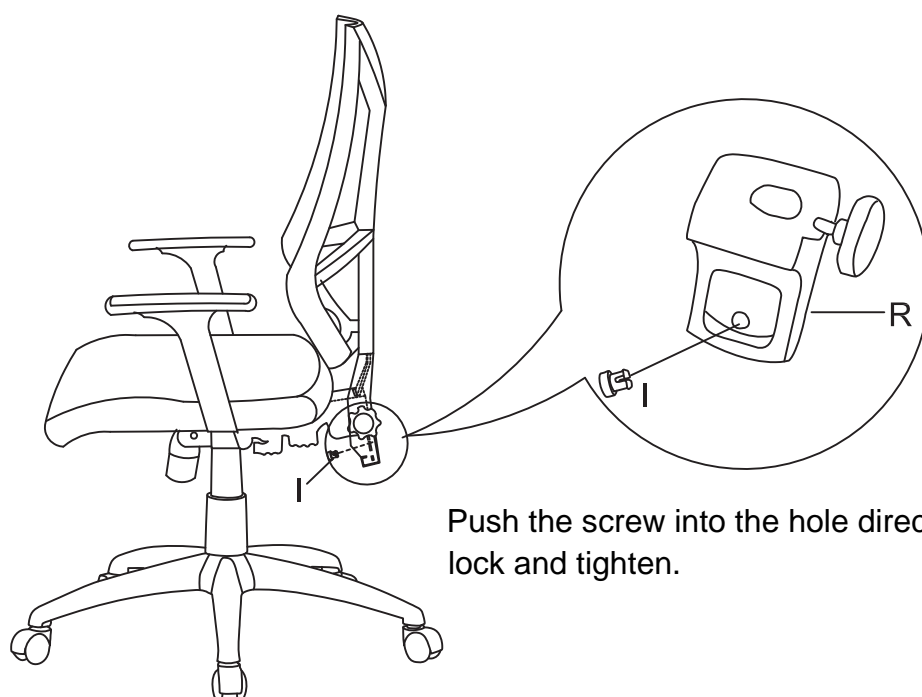

I x 1



Step 8

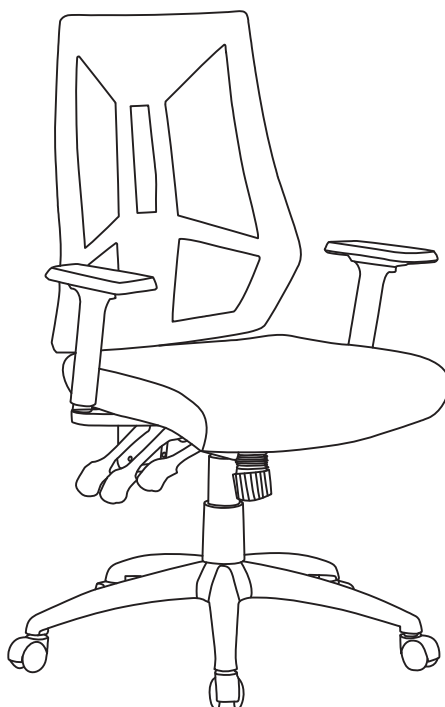

Back Tilt

Sitting in the chair pull lever up. Move your upper body back and forth to a comfortable position. When comfortable lock the position by pushing the lever down.

Seat Tilt

Sitting in the chair pull lever up. Move your body to a comfortable position. Lock the position by pushing the lever down.

 
 
Chair Height Adjustment

To increase chair height pull lever upward while lifting body weight slightly off the seat.

Release lever at desired height.

To lower chair height sit fully into the chair and pull lever upward. Release lever at desired height.

Your feet should be resting flat on the floor.

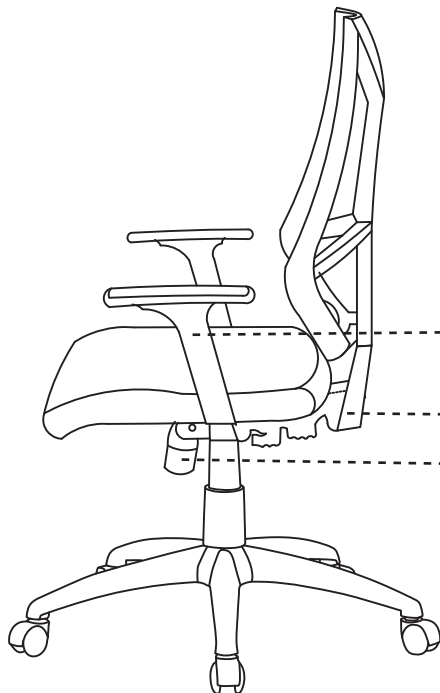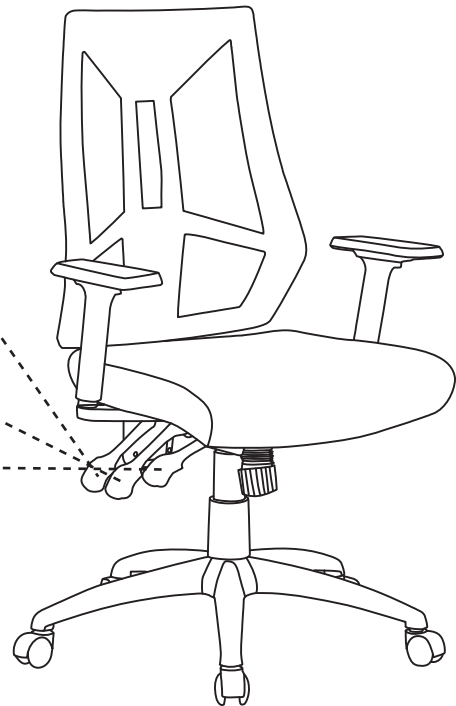

Back Height Adjustment

Turn the handwheel to adjust the back height

Arm Height Adjustment

Pull lever up whilst moving the arm up or down. Release lever at desired height.

Adjustable Chair Tension Speed

Turn continuously to adjust how quickly chair tilts back & forth.

Note: if adjusting while sitting in chair:

Turn knob left to tighten tension.

Turn knob right to loosen tension.

Care Instructions-Fabric Chairs

- Dust & vacuum chair fabric to remove dust & dirt.
- Wipe over surfaces with damp cloth rinsed in warm water & mild detergent.
- If any stains persist, use a water-based cleaner. Ensure a spot test is completed first to ensure it does not affect the fabric colour.
- Do not use harsh detergents, solvents or abrasive cleaners.
- Clean, check & tighten all parts regularly.

Warranty 8 years

Product Warranty – valid for Australian customers only

Officeworks Ltd warrants that this product will be free from defects and work as intended for 8 years from the date of purchase by the original customer.

If the product has any defects or does not work as intended during the Warranty Period, Officeworks will, at its election and at its expense, repair or replace the product.

This warranty does not apply:

- To cosmetic damage;
- To damage caused by consumables used in connection with the product (such as cleaning products);
- Where the product has not been used in accordance with all provided instructions;
- To damage arising from fair wear and tear;
- Where the product has not been subject to reasonable use;
- Where the product has been intentionally or negligently damaged; and/or if the customer has attempted to repair the product.

To make a claim under this warranty, please return your product with your receipt or proof of purchase to your nearest Officeworks store or contact 1300 633 423.

This warranty is provided in addition to any rights you may be entitled to under the Competitions & Consumer Act 2010.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Thank you for your purchase. Please retain your receipt to validate warranty. If you would like to know more about our furniture products, please visit www.officeworks.com.au