


INSTALLATION INSTRUCTIONS


Product Name: Flick Model #: AUL1075


Description: LED Task Lamp
Driver Input: 100-240V ~ 50Hz
Driver Output: 15VDC, Max 1A
Lamp Power Consumption: 7.5W

Globe Type: LED USB Output: 5VDC, 1A

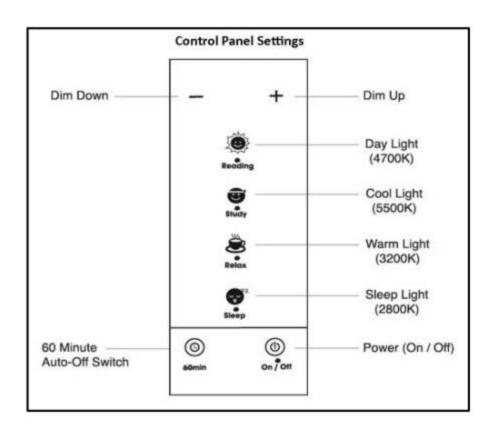

- 1 Place lamp into base.
- 2 Ensure the lamp is aligned correctly.
- Sin
- 3 Fasten screw.

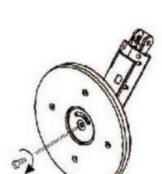

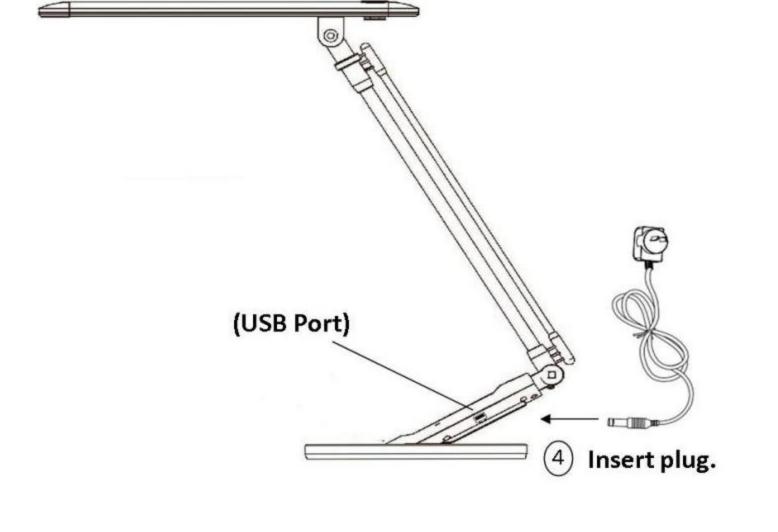

- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
 Young children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The bulb, lamp holder or shade may get hot when the lamp is operating, do not touch them to avoid a hazard.
- To prevent damage to the appliance do not use alkaline cleaning agents when cleaning. Use a soft cloth and a mild detergent. Always switch off before cleaning.
- Failure to maintain the lamp in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation

WARNING: FIRE RISK EXISTS IF THE LAMP IS COVERED BY OR POSITIONED CLOSE TO CURTAINS OR OTHER COMBUSTIBLE MATERIALS

WARNING: THE USB PORT ON THIS PRODUCT IS NOT COMPATIBLE WITH IPAD'S OR OTHER TABLET DEVICES.

