
J.BURROWS

INSTRUCTION MANUAL

Rechargeable Wireless Mouse JBWM717EBK

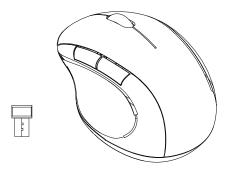

Product Specifications


High precision 4D rechargeable wireless mouse with comfortable hand feeling compatiable with computers of various systems and brands.

| Model | JBWM717EBK |
|------------------|------------------------|
| Dimensions | 102.6x76x49mm |
| Resolution | 1000/1600DPI switching |
| Battery capacity | 300 mAh |


Installation Guide

- 1. Find the receiver on bottom of mouse
- 2. Connect receiver to USB port of your computer
- 3. Turn on your mouse and start to play

1. Find the receiver 2. Connect receiver to your computer

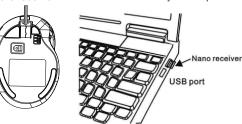

Switch between standard and multi-media mode

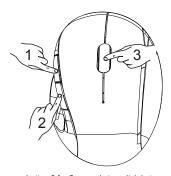

Keep press button 2 for 5 seconds to switch between standard and multi-media mode, please see below instruction for different function under different mode.

| Button/Mode | Standard mode | Multi-media mode |
|-------------|-------------------------------|------------------|
| Button 1 | Windows button | Next song |
| Button 2 | DPI button | Pause/Play music |
| Button 3 | switch to left/right in excel | Volume up/down |

Battery charging

- 1. Find the micro USB cable in packaging
- 2. Connect the micro plug to mouse and USB plug to computer
- 3. Recharge the mouse around 2 hours

