

IMPORTANT SAFETY WARNINGS

When using the electrical appliances, basic safety precautions should always be observed including the following :


- Read all the instructions carefully before using.
- To protect against electric shock, do not immerse the machine in water or any other liquid.
- Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service centre.
- Remove any pins or paper clips from paper before shredding.
- Do not shred film, label paper, clothing or plastic.
- Not intended for use by children.
- Always operate shredder on a flat surface.
- A full waste bin may lead to a paper jam, empty waste bin before it is full.
- Retain this instruction manual for further reference.

J.BURROWS



Instruction Manual PAPER SHREDDER

Model: JBSHS360A

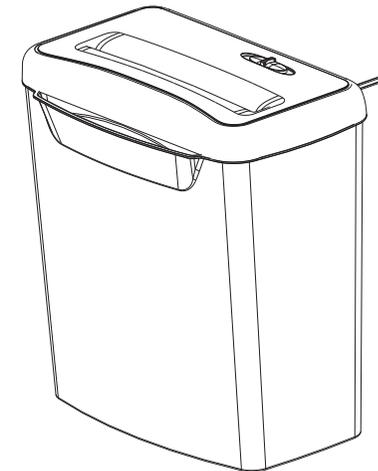

 WARNING			
	Safety First		Keep children away from the machine. This machine should be operated by adults only.
	Never insert fingers into opening.		Please keep soft cloths, ties far away from the paper entry.
	Please keep your hair far away from the shredder		Please do not spray onto or shred near any flammable materials as it may cause a fire. shred in a well ventilated area.
	Please do not shred carbon paper, thermal paper, wet paper, adhesive paper, newspaper, film, clothing or plastic as it may cause machine failure.		Operation, maintenance, and service requirements are covered in the instruction manual. Read the entire instruction manual before operating shredders.


Please read the following instructions carefully before using, and keep it for future use.

KNOW YOUR APPLIANCE

Function switch (Rev / Off / Auto)

REV: the machine will reverse paper when you place the switch on this position
OFF: the machine will stop working
AUTO: When you place the switch on this position

Shredder head

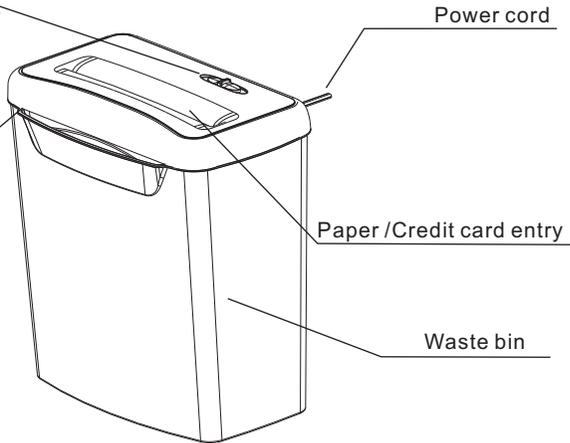

Power cord

Paper / Credit card entry

Waste bin

PAPER JAM

1. Turn the function switch to "REV" position to let the cutting blade run in the reverse direction. The paper will reverse out from the throat.
2. Pull out the paper carefully to clear the throat.
3. Once the jammed paper is removed, turn the function switch to "AUTO" position for normal operation.

DISPOSE OF WASTE

1. Ensure power is off at mains.
2. Dispose of shredder waste.
3. Re-assemble shredder correctly before shredding.

MOTOR OVERHEAT SAFETY DEVICE

Your shredder is fitted with a safety device that switches off in the unit in event of an overload. During an overload situation, the unit will stop automatically, and the overheat protection indicator will light up. Turn the unit off and unplug from the mains. Allow the motor to cool down to room temperature before resuming operation. If the unit fails to operate or the safety device switches the unit off again, return the unit.

USING YOUR SHREDDER

SETTING UP THE SHREDDER

1. Remove the shredder from its carton and unwind the cord to its full length.
2. Place the waste bin on a firm level surface in a stable upright position.
3. Take the main shredder unit and put it onto the waste bin.
4. Make sure the function switch is in the "OFF" position.
5. Connect the plug to the 220-240V AC mains.

AUTO MODE

1. To use this mode, turn the function switch to "AUTO".
2. Feed the paper / credit card into the paper throat, the shredder will operate to shred the paper.
3. Once all the papers / credit cards have been shredded, it will stop itself.

OFF MODE

To switch the shredder off, turn the function switch to the "OFF" position.

REVERSE MODE

1. To switch the shredder to this mode, switch the function switch to "REV" position.
2. The cutting blade in the shredder will run in the reverse direction.

PRODUCT SPECIFICATION

Model:	JBSHS360A
Dimension:	310x190x325mm
Net weight:	3.2kg
Paper entry width:	220mm
Duty cycle:	2 min ON 40min OFF
Waste bin volume:	13 Litre
Shred paper capacity:	7 sheets(A4 80g)
Featrues	Shreds paper, credit cards
Shred size:	4x40mm
Noise level:	73 dB around
Voltage:	220-240V~ 50HZ
Current:	1.0A

CLEANING

The paper shredder requires regular cleaning.

1. Before cleaning ensure power is switched off at mains and plug has been removed.
2. Clean the outer surface with a soft damp cloth only.
3. Ensure the unit is dry before connect to the mains.