# **FRONT SIDE**

## **J.BURROWS**

## **User Manual**



USB-C 120W 10PORT POWER STATION Model Number: 10DOCK120W

#### 1.0 INTRODUCTION

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully before connecting operating or using this product. Please keep this manual for future reference.

## 2.0 FEATURES

- Internal chip allows the 19-21DC of input voltage.
- Intelligent LED power indicators.
- USB-C120W DC Multiple Port Power Station Model: PD120-10UTGA Input: 21.0V==7.1A

Output Single Port:

Output Single Port:
USB-A1/(22/G4/E5/G6: PD 5V=3A(15W),
9V=3A(27W), 15V=2A(30W)
USB-A1/A2: QC3 3.6-6V=3A, 6-9V=2A, 9-12V=1.5A 18W Max Tot
USB-A3/A4:5V=2.4A(12W)
Output Multi Port:
USB-C1/(22+C3/C4+C5/C6+USB-A1/A2+USB-A3/A4:
20W-20W-20W-30W-30W-30W

30W+30W+30W+18W+12W

30W+30W+30W+30W+3W+12W+12W+12S-C1+C2: 5V=-4.8A(24W Max)
USB-C3+C4: 5V=-4.8A(24W Max)
USB-C3+C6: 5V=-3.6A(18W Max)
USB-A1+A2: 5V=-3.6A(18W Max)
USB-A3+A4: 5V=-2.4A(12W)
Total: 120W Max

- · Short circuit protection.
- Over current protection.
- Over temperature protection.

### 3.0 SPECIFICATIONS

Input Connection			DC x1 5.5*2.1mm	
Outpu	ut Connector			
Output Port Type		ICON on Device	Specification	
Data	USB A		USB-A charging x4	
		USB-A1		
	USB C		USB-C charging x6	
		USB-C1		
Envir	omental			
Operating Temperature			0~30°C	
Operating Humidity			30% ~ 90% RH	
Storage Temperature			-20℃ ~60℃	
Storage Humidity			10% ~ 90% RH	
Electi	onic Parame	ter		
Working Voltage			120W-240VAC	
Working Current			3A	
Standby Power Consumption			0.21W	
Dime	nsions and W	/eight	•	
Size			210*140*29.5mm	
Weight			426g	

# **BACK SIDE**

## **4.0 PACKAGE CONTENTS**

Before attempting to use this unit, please check the packaging and make sure the following items are contained in the box:

- Main unit×1
- User Manual×1

## 5.0 OPERATION

- 1. Plug the AC connector of power adapter into the power station; then plug the other connector of power adapter into the wall power socket. 2. Using a USB Cable, Plug one end of the cable into the charger, then plug the other end of the cable into the electronic device (Smartphone, Tablet, Laptop)
- 3. Please remove the USB Cable after the electronic equipment's fully charged or when finished using.

the user manual, if it is unable to charge, please refer to your product specifications to check charging requirements.

- Do not apply external force on any connected cable
- 2. Do not unplug by pulling the cable
- 3. Do not place the power cable or device near heating elements
- 4. Do not bend the pins of the power cable
- 5. If there are any strange sounds, smoke or ordour, disconnect the power
- 6. If the power station stops working due to under over-current, over- temperature or short-circuit protection, please unplug the device then check whether the device being charged is compatible with this Product specifications.

- 7. Do not disassemble (it may cause fire or electric shock)
- 8. Do not put any sharp objects into the venting holes of the product (it may cause fire or electric shock)
- 9. Ensure to plug the cable firmly into the socket
- 10. Do not use any cable that is damaged (it may cause fire or electric shock)
- 11. Do not operate the product on a bed, sofa or inside a closed space 12. If dirty, wipe the product with a soft dry cloth (do not use water as it
- may cause electric shock)
- 13. Keep the power plug clean (dirt may cause a short circuit or fire) 14. Do not wash the power station with corrosive cleaner.
- 15. Keep the product out of reach of small children
- 16. Don't unplug the power cable with wet hands (it may cause electric shock)
- 17. If you do not intend to use the product for an extended period of time, unplug the power cable from the wall socket to avoid any chance of over heating or unwanted damage
- 18. If the power station does not work as per manual instructions, please contact the store where purchased

## **6.0 CONNECTION DIAGRAM**



105g 双铜 180\*95mm 彩色 双面印刷 风琴折 折后尺寸: 60\*95mm