

WIRELESS KEYBOARD

Instruction Manual

KB100





OFFICEWORKS LTD 236-262 EAST BOUNDARY ROAD EAST BENTLEIGH VIC 3165 AUSTRALIA MADE IN CHINA Compatible with: Windows® 10 or later Mac OS X 10.10 or later

Contents



- 1. Keyboard
- 2. USB Receiver
- Instruction Manual
 AAA batteries x2

Instructions

1. Retrieve batteries from battery compartment. Remove the protective film from the batteries and reinstall.



2. Turn on the switch of the keyboard, and plug the receiver into computer USB port.



The computer will install drivers automatically. Once completed the keyboard is ready to use.

Specifications

- Product Model: KB100
- Officeworks Product Code: JBCK340GKB
- Working Frequency: 2.4GHz
- Rating: 3V == 5mA
- Dimensions: 435 x 126 x 22 mm
- System requirements: Windows® 10 or later, Mac OS 10.10 or later

Combined Multimedia Functions

Fn+F1	Fn+F2	Fn+F3	Fn+F4	Fn+F5	Fn+F6
Player	Volume -	Volume +	Mute	Previous Track	Next Track
Fn+F7	Fn+F8	Fn+F9	Fn+F10	Fn+F11	Fn+F12
Play/Pause	Stop	Homepage	Email	My Computer	Favorites

Note

Multimedia function of keyboard is not available on Mac OS system.

Windows is a trademark of the Microsoft Corporation in the United States and other countries. Mac and MacOS are trademarks of Apple Inc., registered in the U.S. and other countries.

Product Warranty-valid for Australian customers only

Officeworks Ltd warrants that this product will be free from defects and work as intended for 3 years from the date of purchase by the original customer.

If the product has any defects or does not work as specified during the Warranty Period, Officeworks will, at its election and at its expense, repair or replace the product.

This warranty does not apply:

- to cosmetic damage;
- to damage caused by consumables used in connection with the product (such as batteries);
- where the product has not been used in accordance with all provided instructions;
- to damage arising from fair wear and tear;
- where the product has no been subject to reasonable use;
- where the product has not been intentionally or negligently damaged and/or;
- if the customer has attempted to repair the product.

To make a claim under this warranty, please return your product with your receipt or proof of purchase to your nearesst Officeworks store or contact 1300 633 423.

This warranty is provided in addition to any rights you may be entitled to under the Competition & Consumer Act 2010. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.