

 
J.BURROWS

.....

ASSEMBLY INSTRUCTIONS

WASHINGTON 1500 x 1500MM CORNER
WORKSTATION OPTION1

JBWASHWSWK / JBWASHWSBK

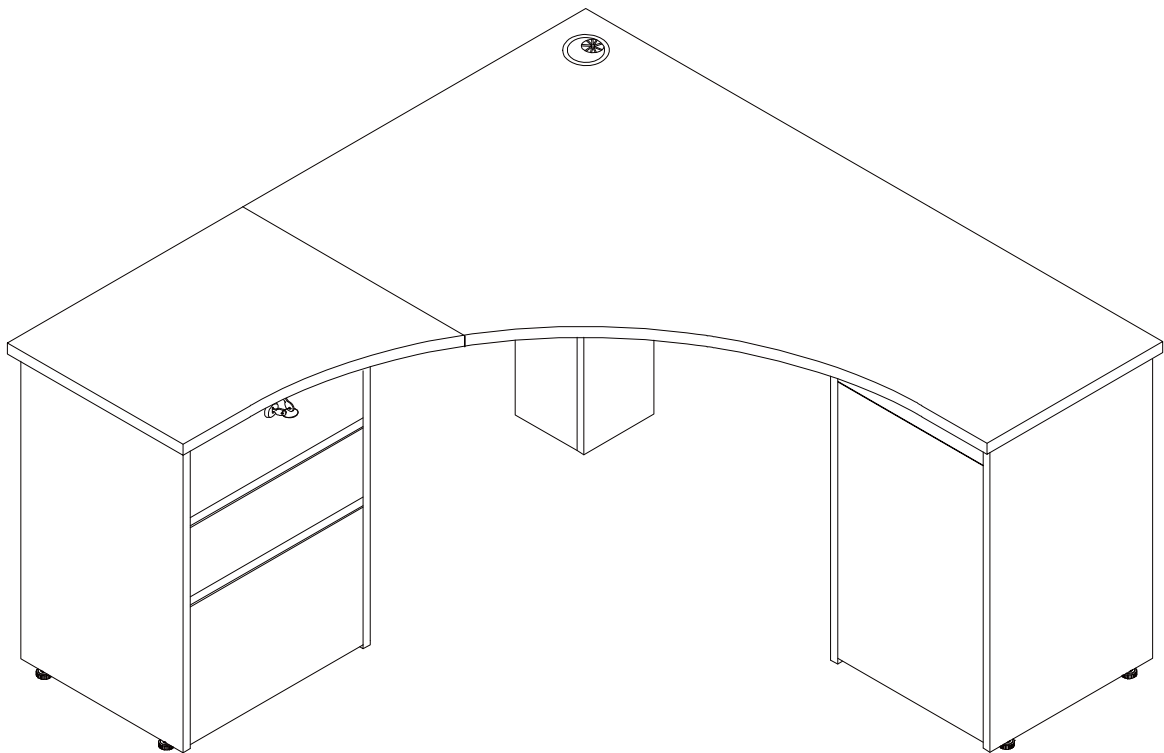

This design and instruction booklet is subject to copyright.
www.officeworks.com.au

 
3 Cartons

For spare parts or hardware call (03) 9310 3011 or email hardware@kyvas.com.au

Important

Estimated Assemble Time: 110min

- To view an assembly video, go to <https://www.officeworks.com.au/>
- Search the product by item code or name:



- Click on the icon to watch the video.



Customer Service Contact Details



Spare Parts & Hardware
(03) 9310 3011

People Required



 
More Than One Person Is Required
To Safely Assemble The Item

General Advice



Assemble On A Clean Flat
Surface

Tools Required



CAUTION: Do not use tools other than those required, as this can damage your new item.

NOTE

- Please check you have all hardware before assembling.
- If you are missing any hardware, please contact Kyvas on (03) 9310 3011 or email hardware@kyvas.com.au
- Please ensure you have the item, required hardware part and quantity.
- Please retain your receipt as proof of purchase to validate your warranty.

CAUTION

- Do not tighten screws before all screws are in the right place.
- Do not use this product unless all bolts, screws and knobs are firmly secured.
- Check that all bolts, screws and knobs are securely tightened at least every 4 months.

 
WARNING

- If parts are missing, broken, damaged or worn stop using the product until all repairs are made using manufacturer authorised parts.
- Keep children and animals away from the assembly area.
This furniture contains small parts that could cause choking if swallowed.
- Keep all plastic wrapping materials away from babies and children to avoid danger of suffocation.
- This item is not for outdoor use – unless stated otherwise.
- Failure to follow these warnings could result in serious injury.

DANGER




- CHILDREN MUST BE SUPERVISED.

Part Overview










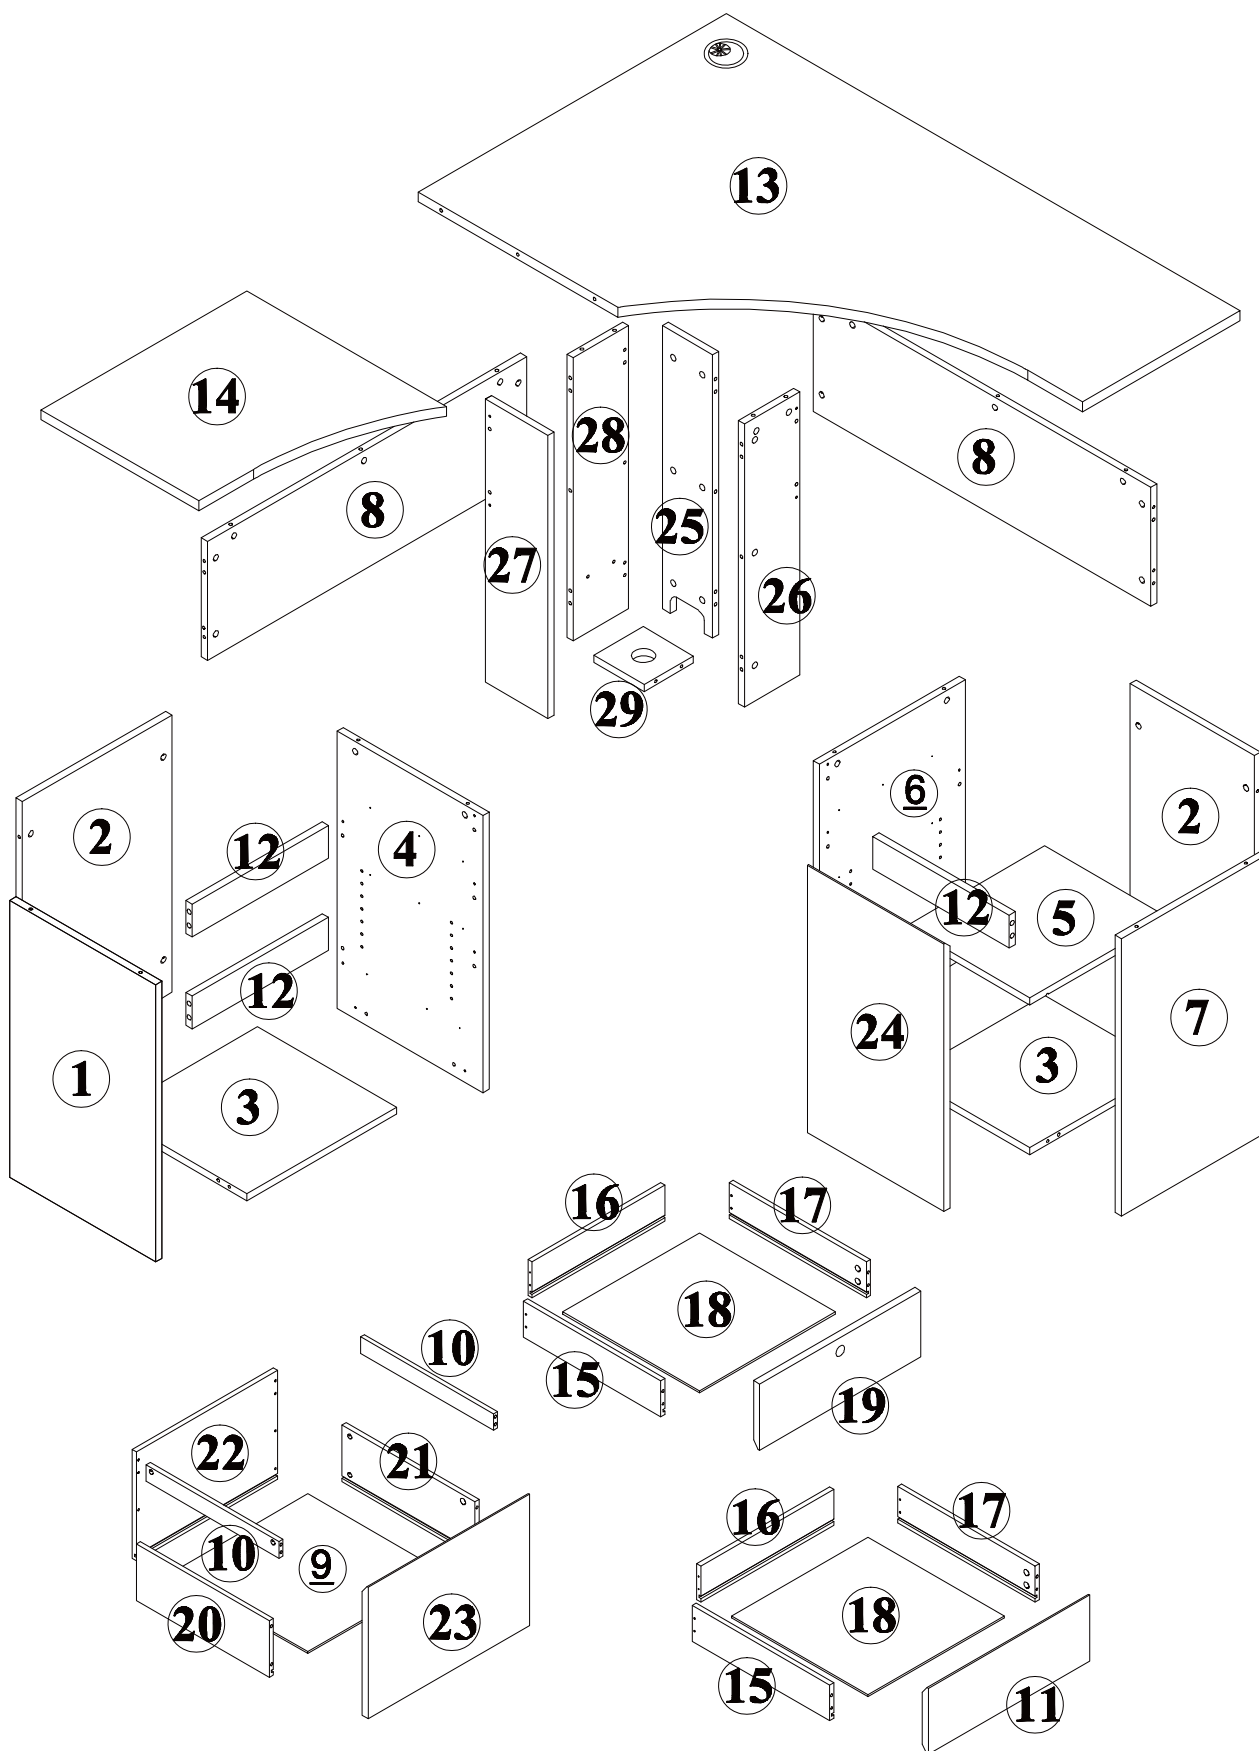


Part List















 
 
 
Parts located in Carton - JBWASHWSB1 / JBWASHWSO1

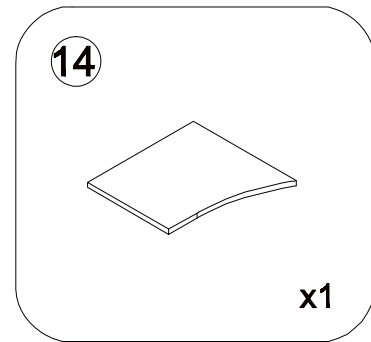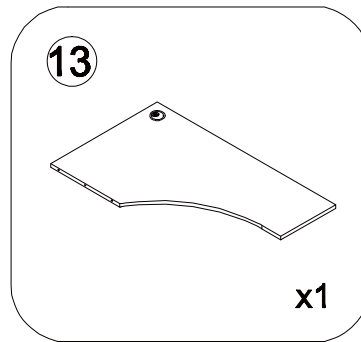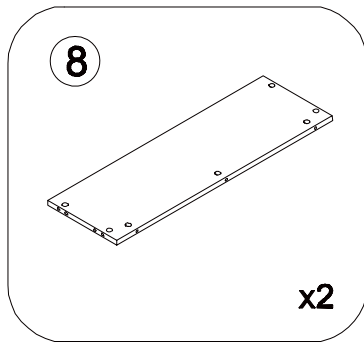

                           Parts located in Carton - JBWASHWSB2 / JBWASHWSO2

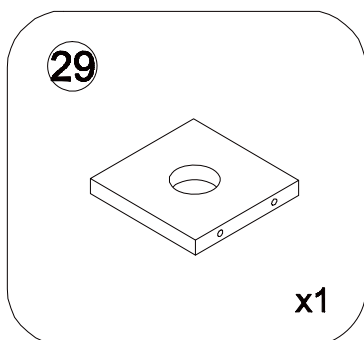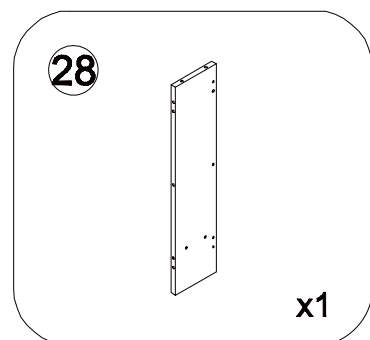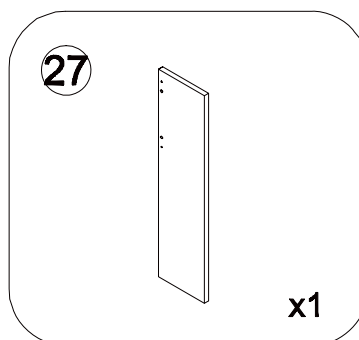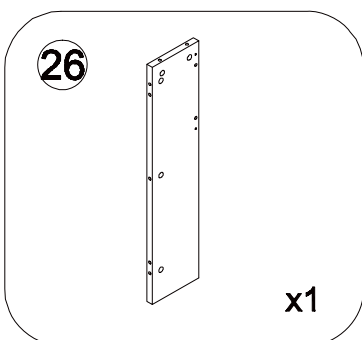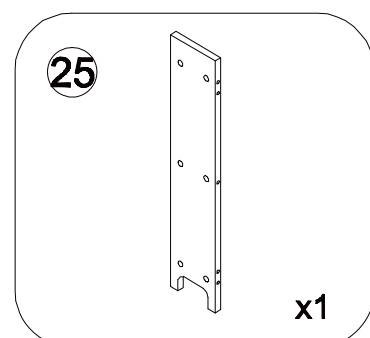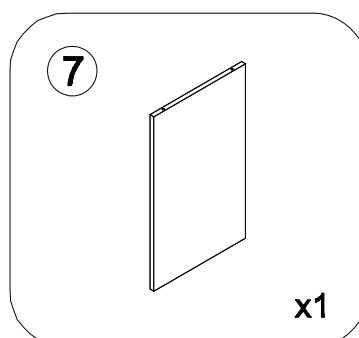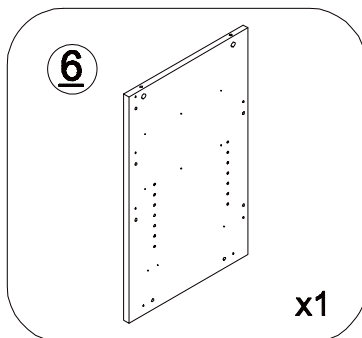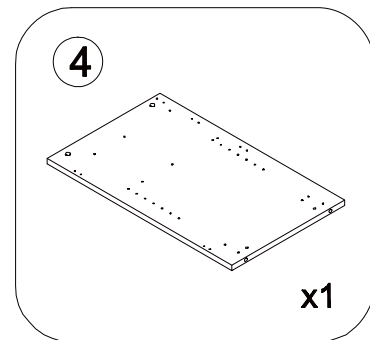
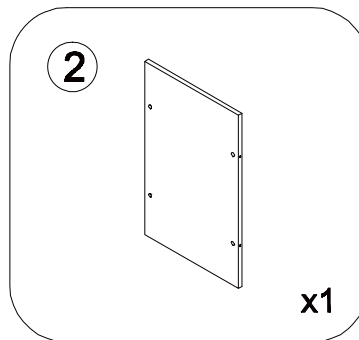
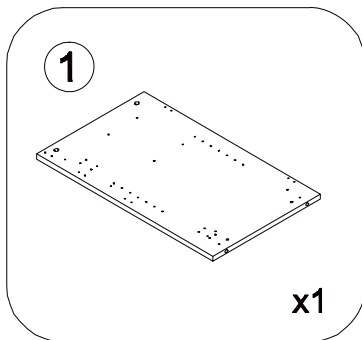






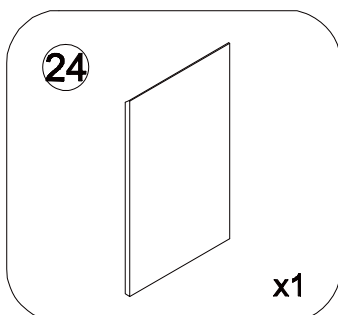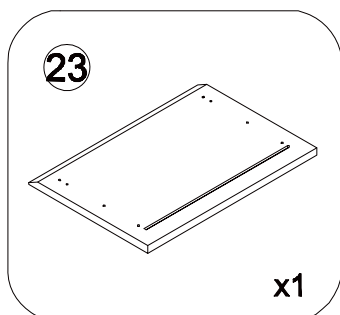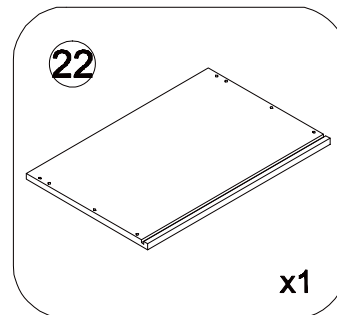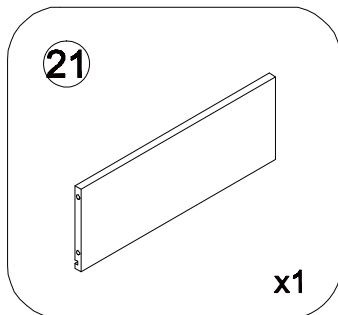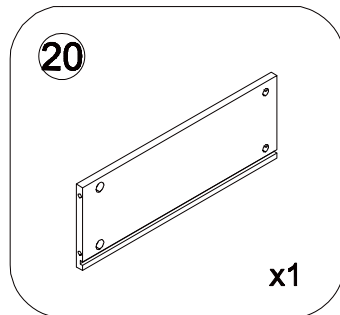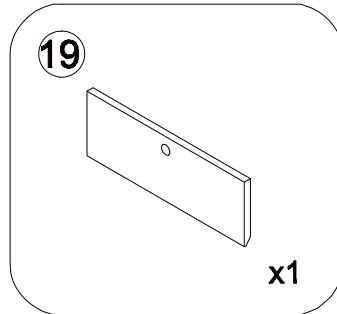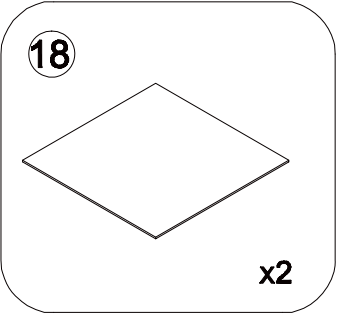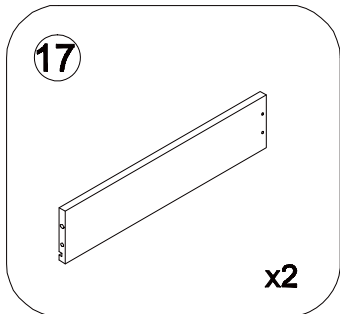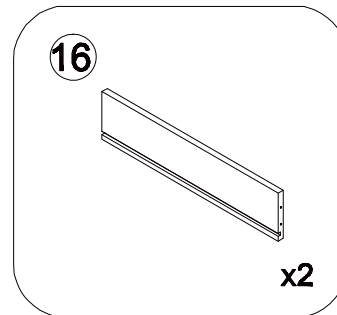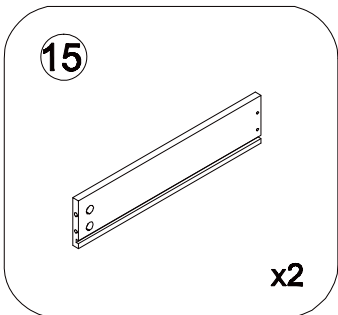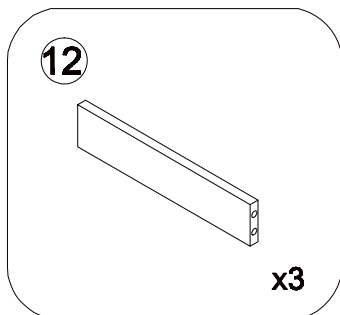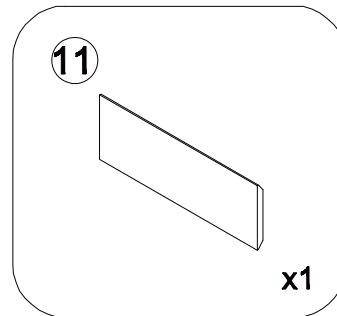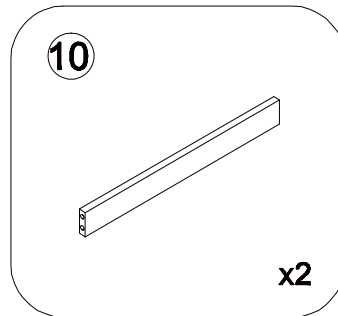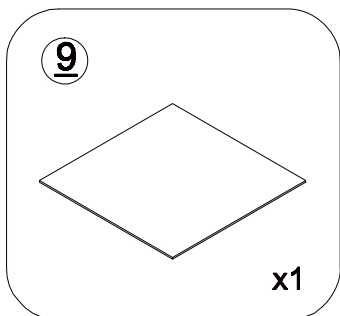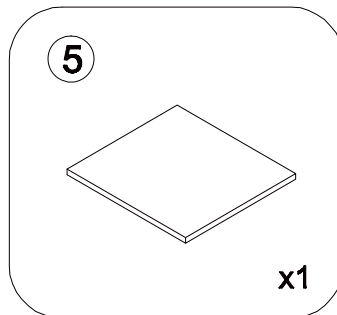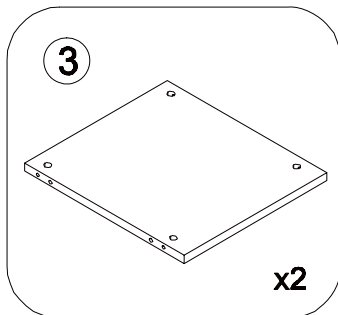
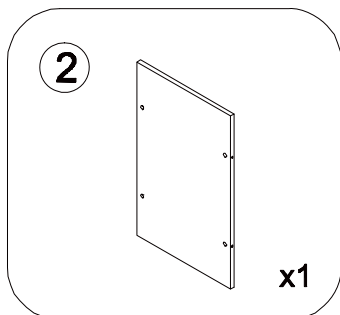


Parts located in Carton - JBWASHWSB3 / JBWASHWSO3





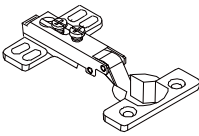
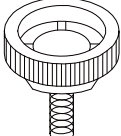
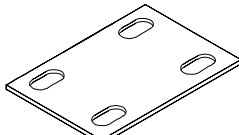
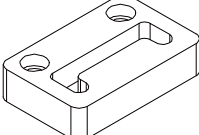


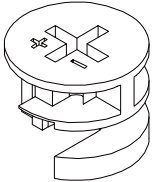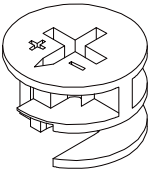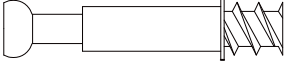Hardware List

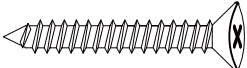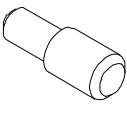Hardware Pack located in Carton - JBWASHWSB3 / JBWASHWSO3

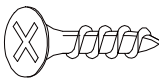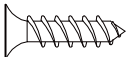
A  (Ø15 x 12mm) X 61pcs (Extra 1pc)	B  (Ø12 x 10mm) X 21pcs (Extra 1pc)	C  (Ø6 x 35mm) X 81pcs (Extra 1pc)	E  (Ø7.8 x 30mm) X 46pcs (Extra 1pc)
F  (Ø5.8 x 30mm) X 4pcs	I  (Ø4 x 30mm) X 8pcs	K  Shelf Support X 4pcs	M  (Ø4 x 16mm) X 16pcs
P  Sticker X 24pcs	R  (Ø3.5 x 18mm) X 12pcs	S  (Ø3.5 x 12mm) X 37pcs (Extra 1pc)	

Other Hardware located in Carton - JBWASHWSB3 / JBWASHWSO3

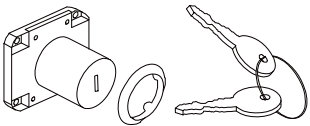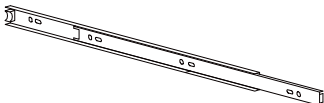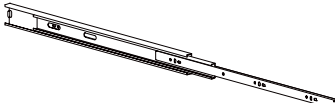D  Locker Set X 1set	G  2 Setion Runner X 4sets	H  3 Setion Runner X 2sets
J  Filing Rail X 2pcs	L  Hinge X 2pcs	N  Adjust Feet X 8pcs
O  Metal Connector X 1pc	Q  PP Filing Part X 4pcs	


For missing hardware, please contact Kyvas on (03) 9310 3011 or email hardware@kyvas.com.au

  Step 1

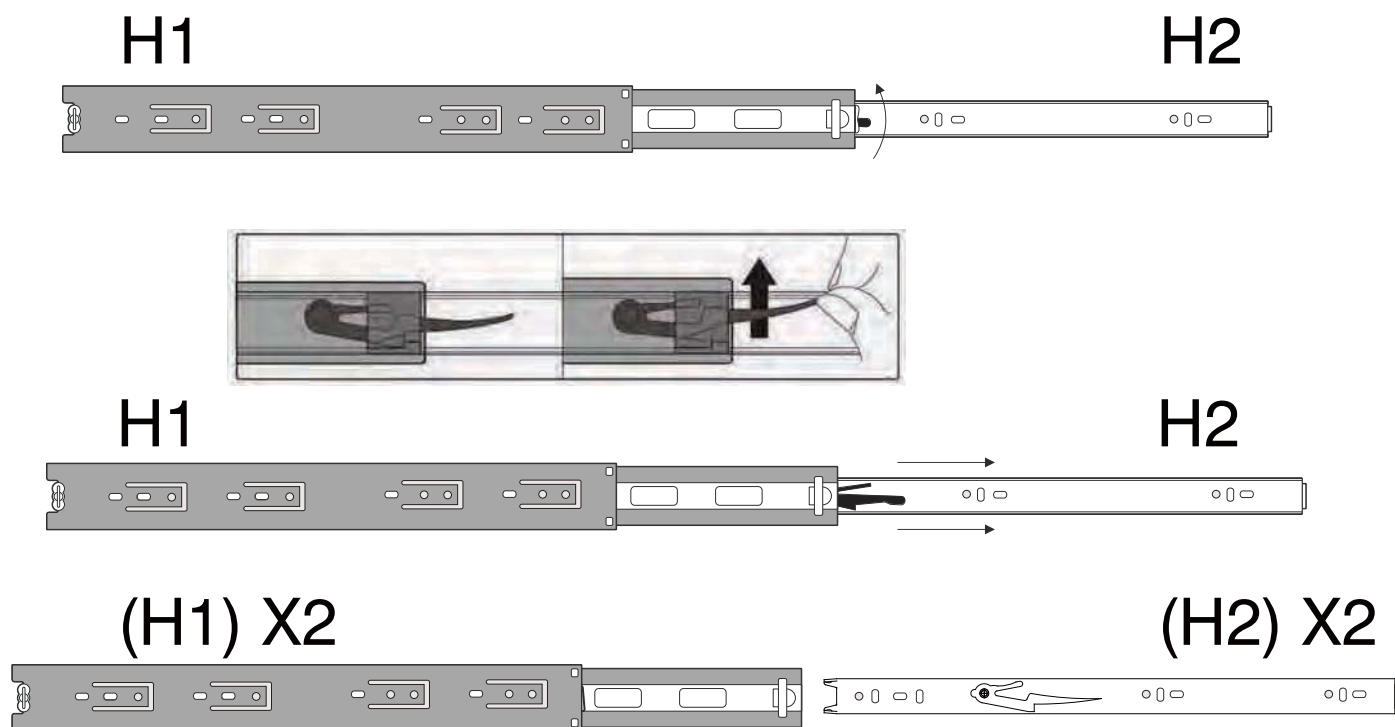 



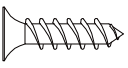
Remark:

Press the plastic slider in the indicated direction to separate drawer runner H1 and H2 before assembling

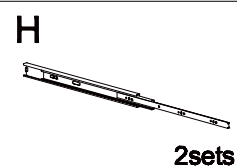


Step 2

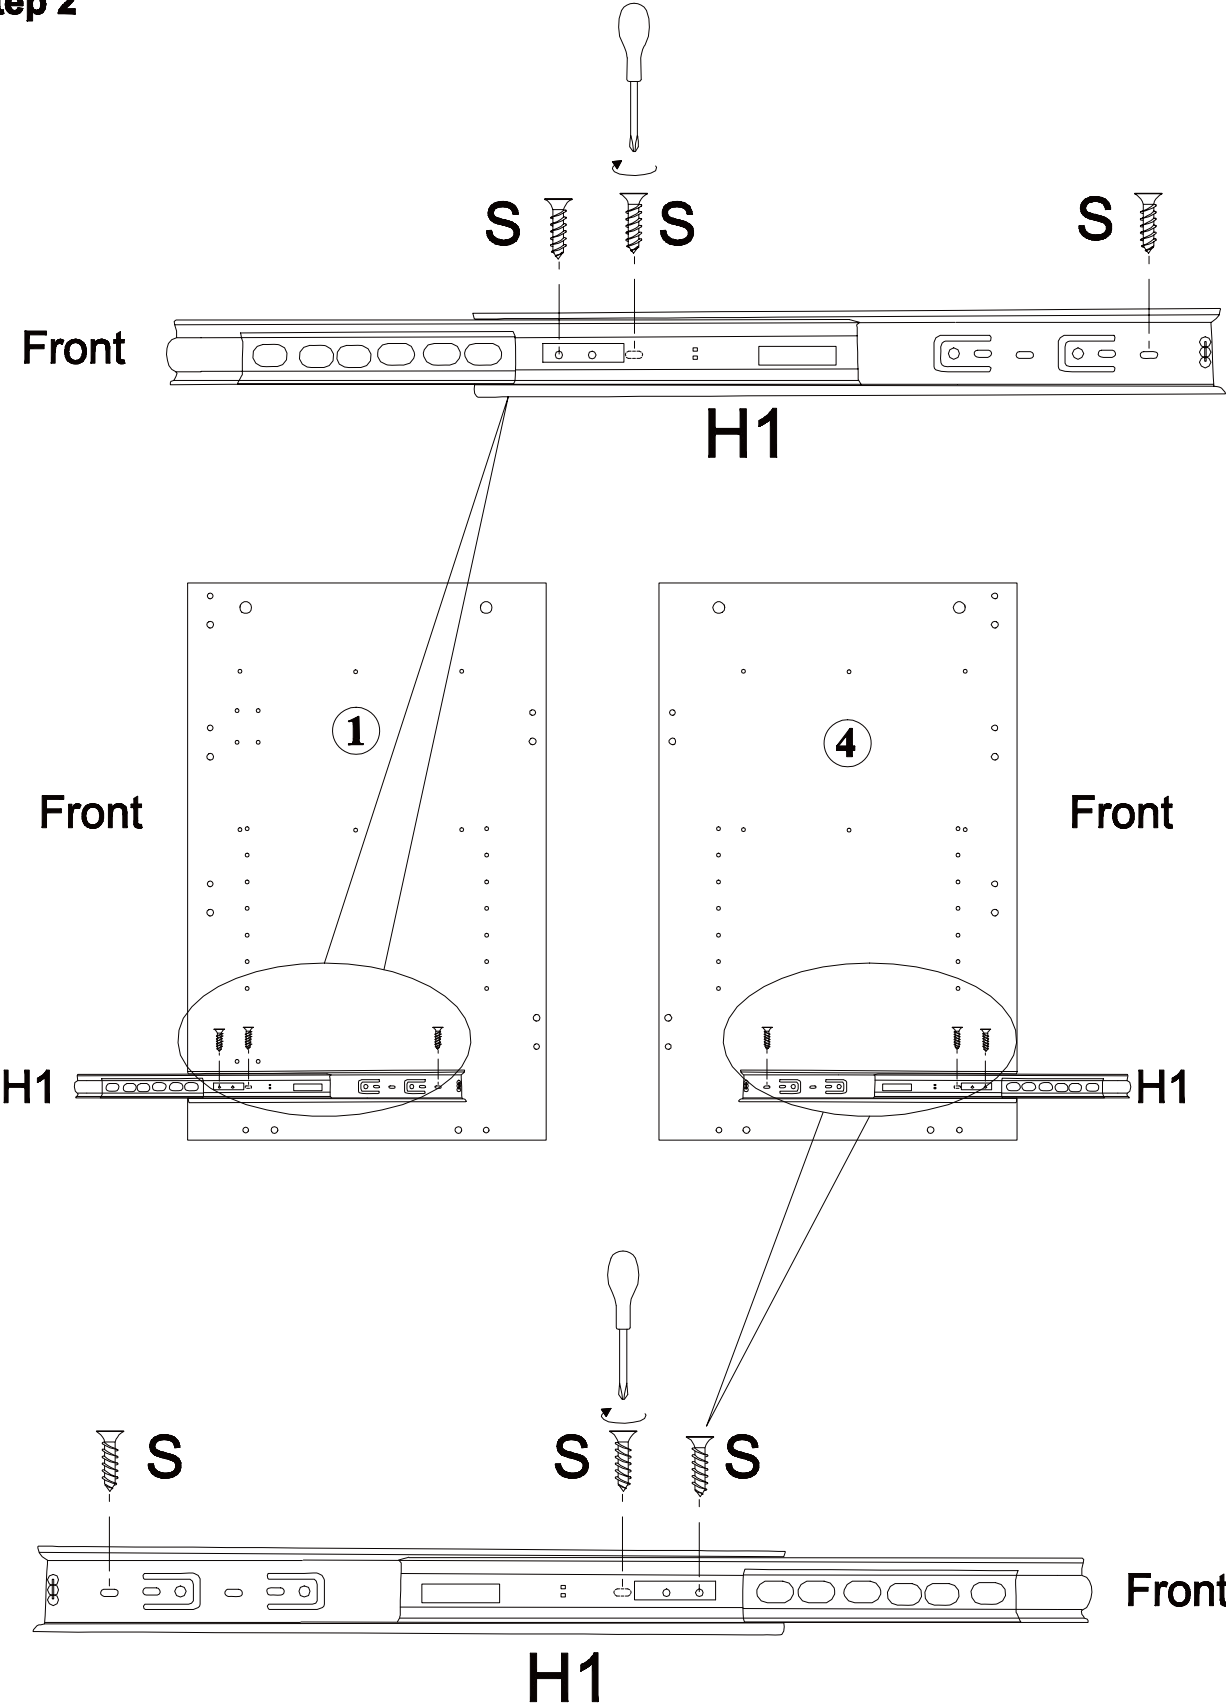


H1  2pcs	S  6pcs
---	---

  Step 3

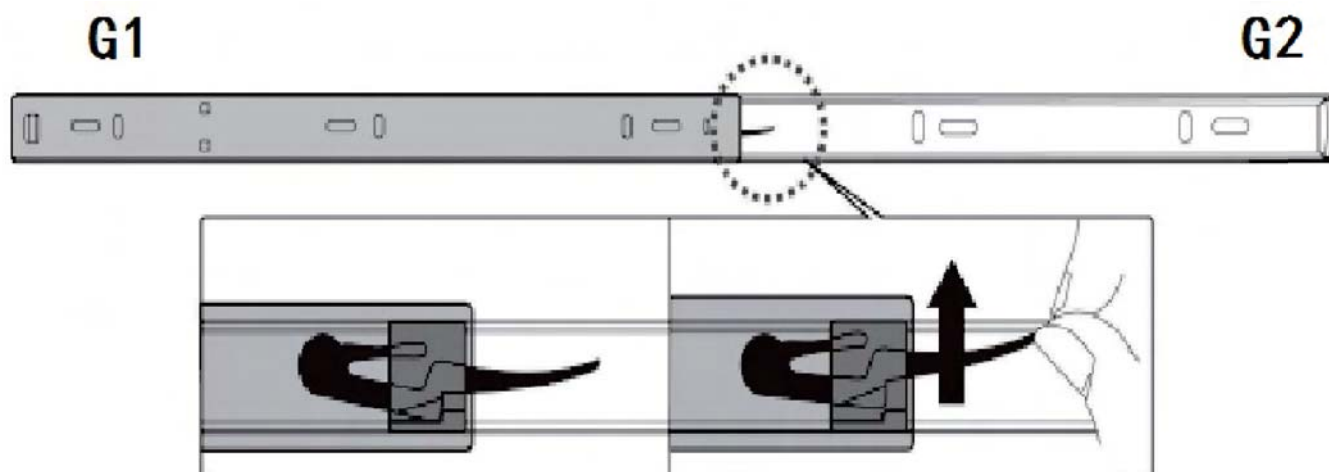 



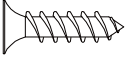
Remark:

Press the plastic slider in the indicated direction to separate drawer runner G1 and G2 before assembling

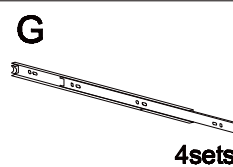


Step 4

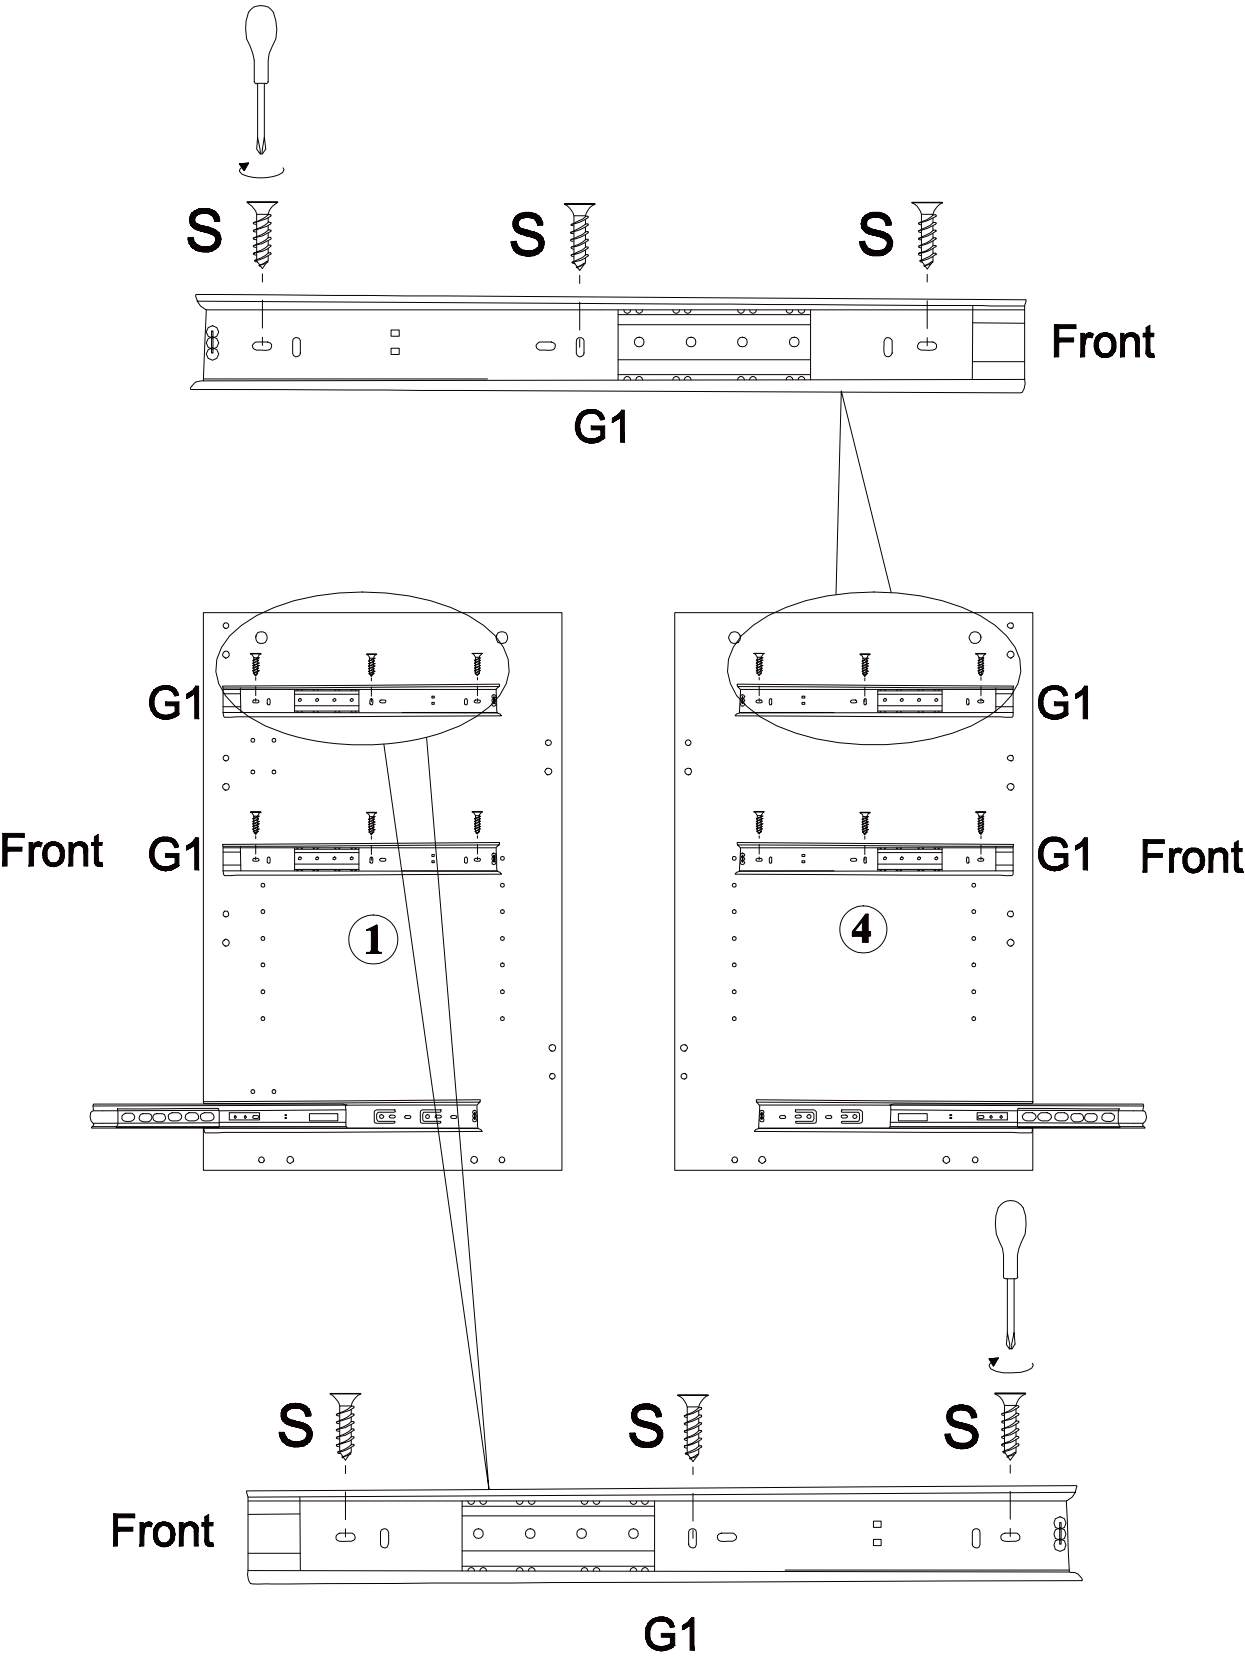


G1  4pcs	S  12pcs
--	---

Step 5

 2X

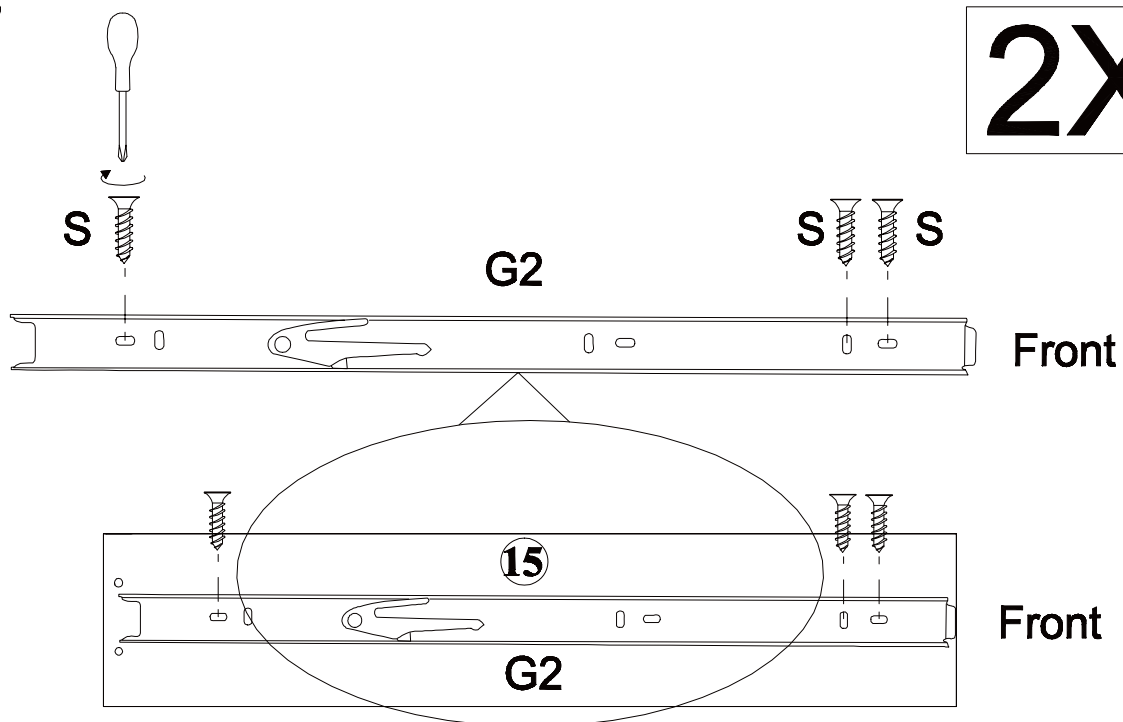


G2

 

2pcs

 
S




6pcs

Step 6

 2X

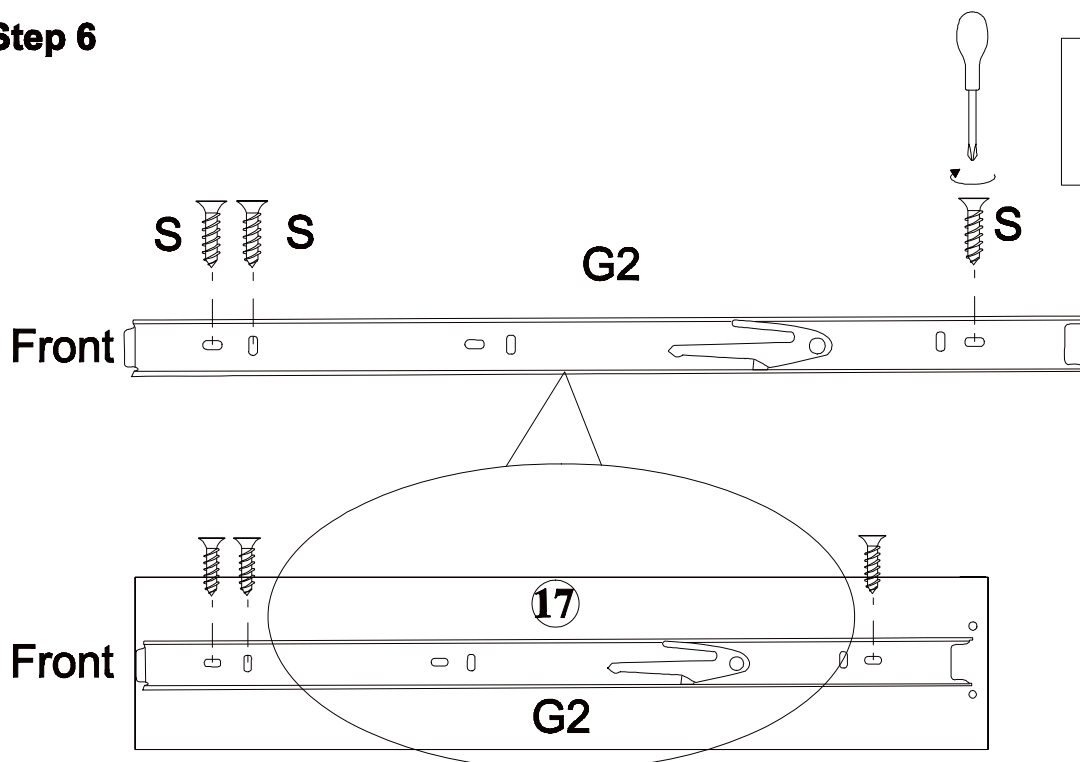


G2

 

2pcs



 
S





6pcs

Step 7

   
2X

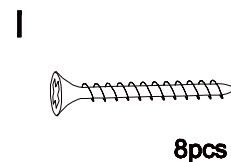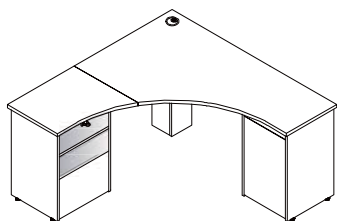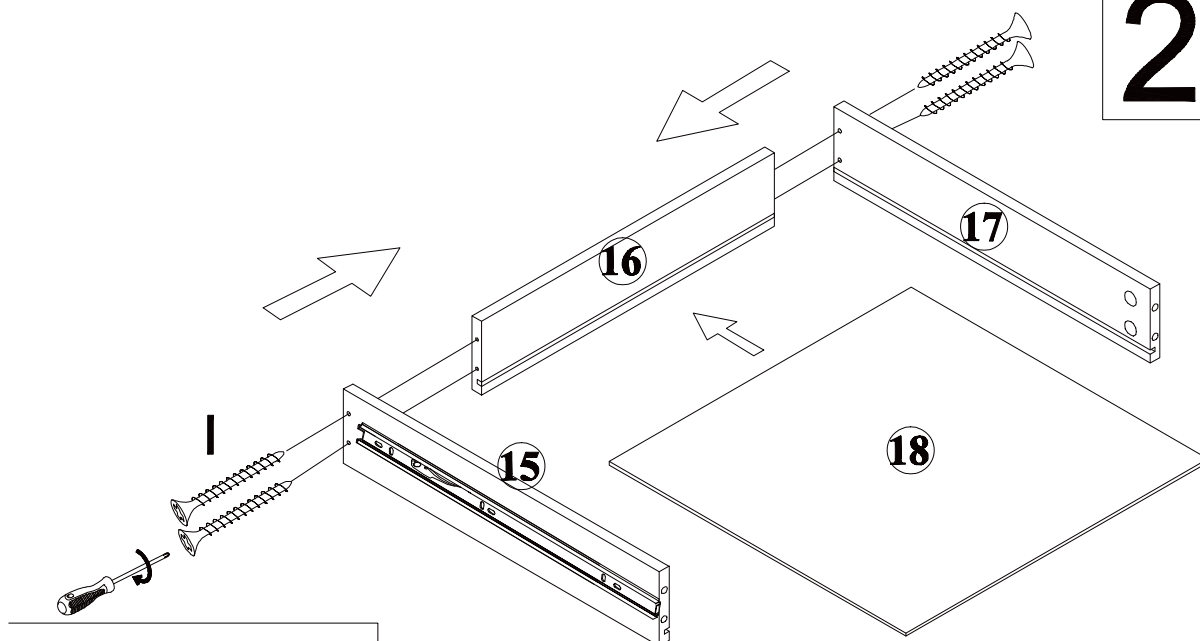

 
 
Step 8

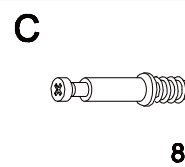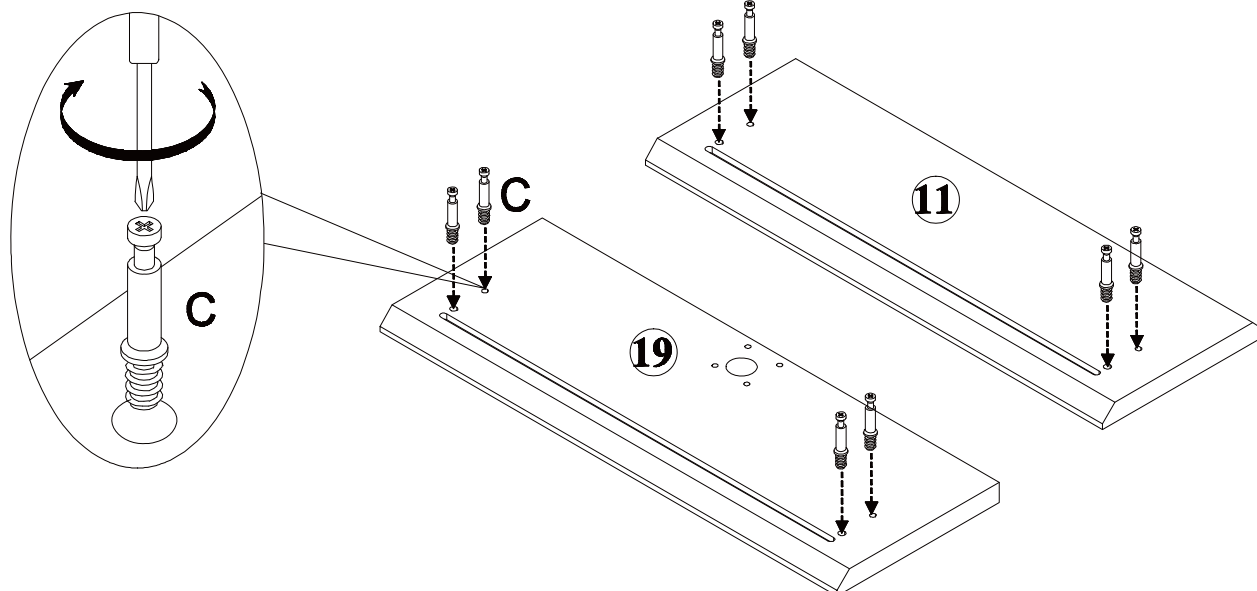

 
Step 9

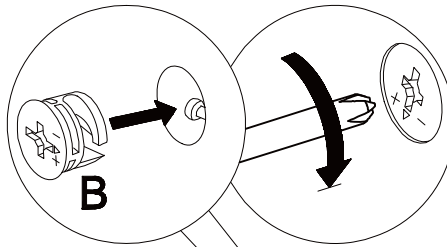

  Tighten cam locks once panel ①⑨ is in place.


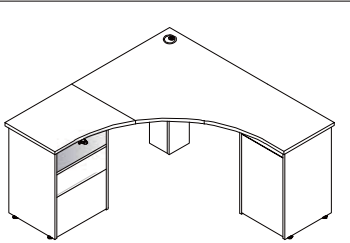
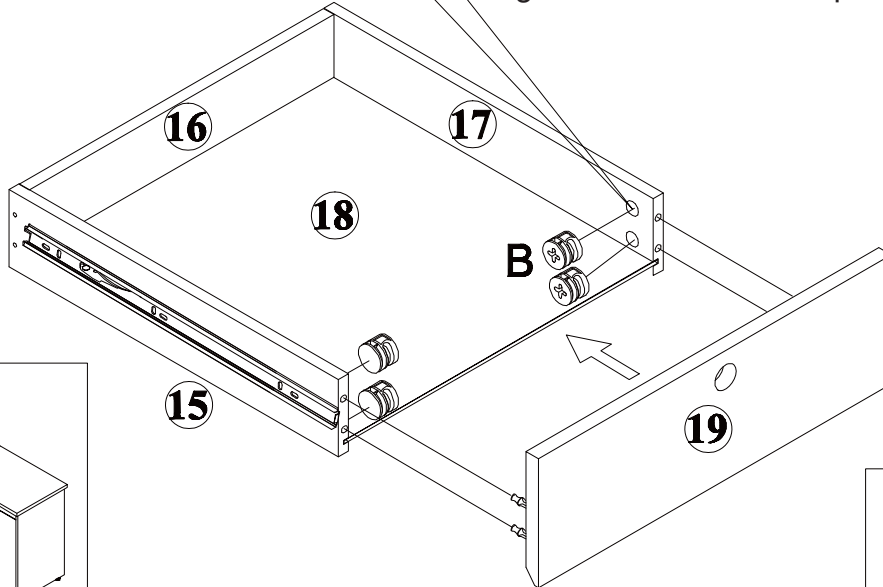


B

 


4pcs

   Step 10

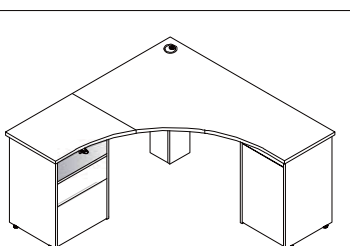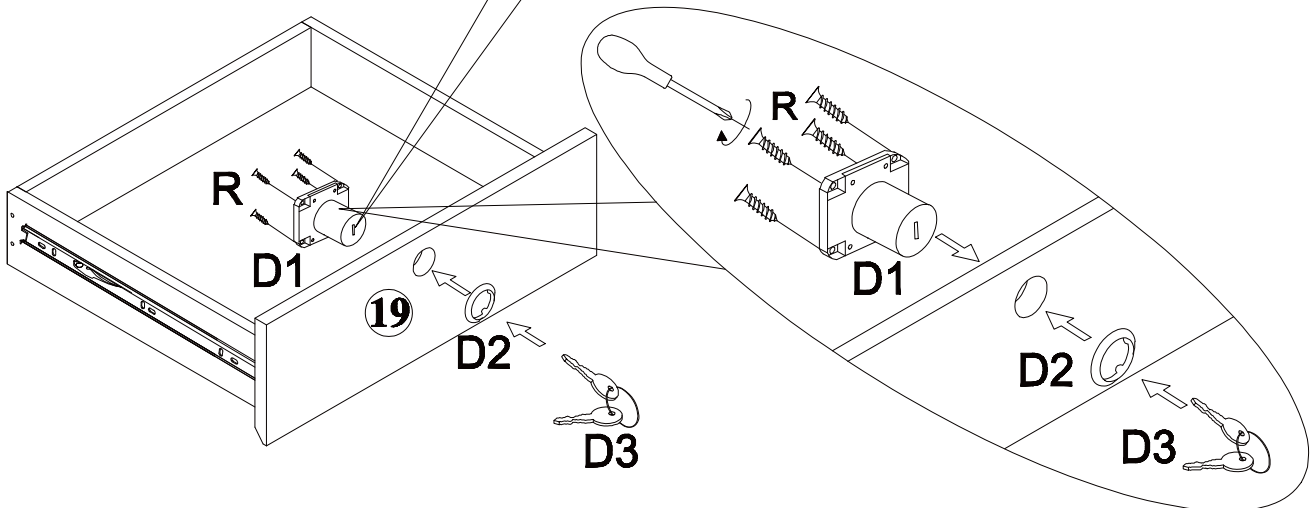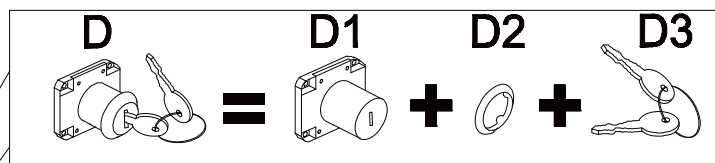

D

 


1set

R





4pcs


 
Step 11

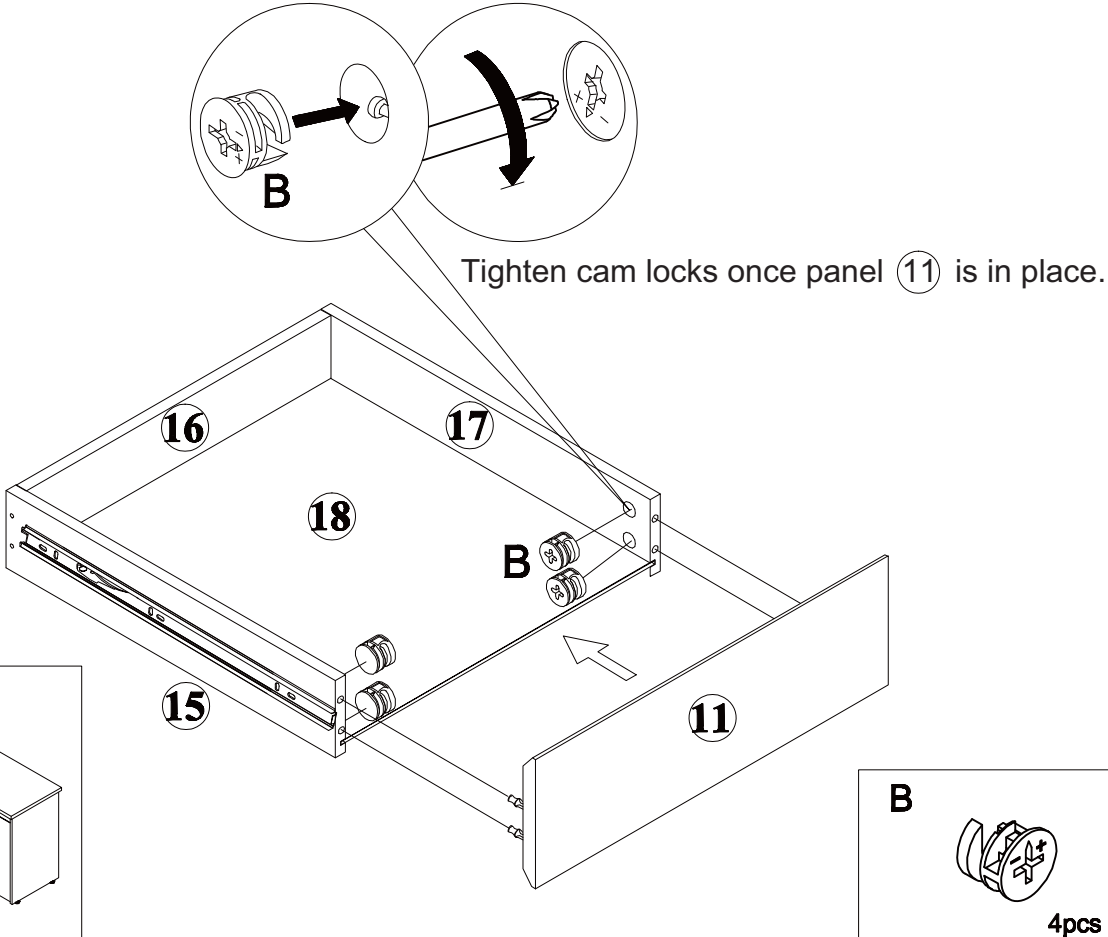

  Step 12

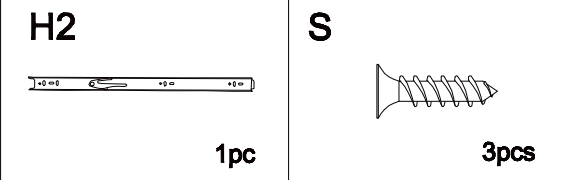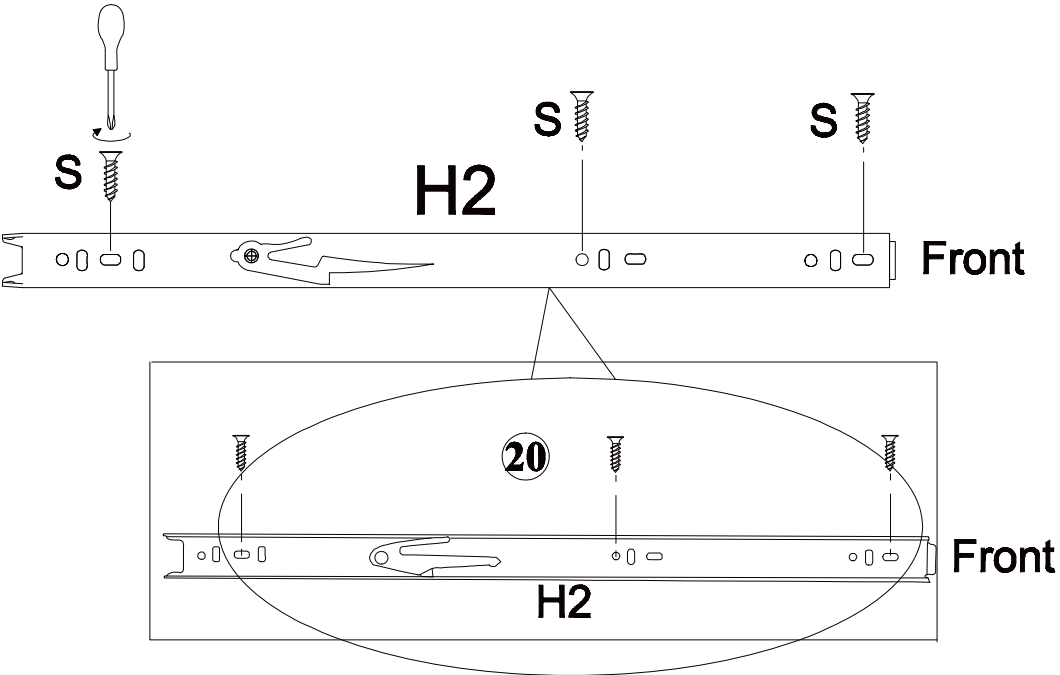

  Step 13

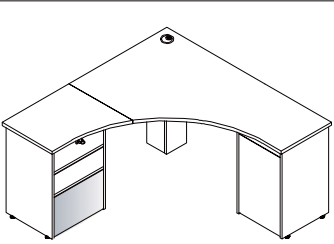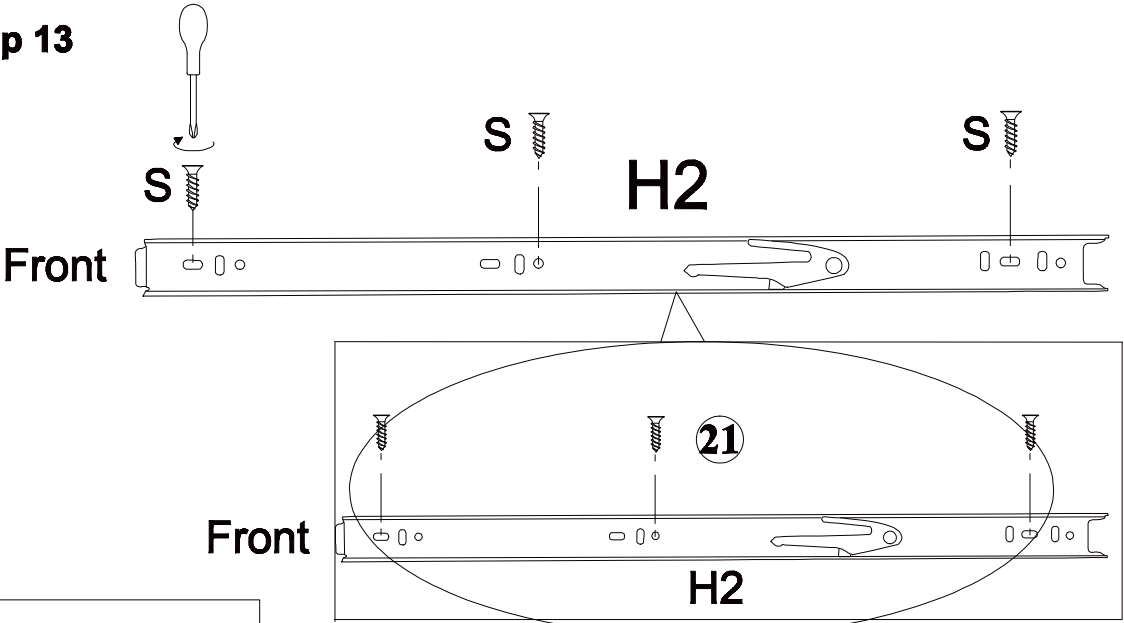


H2





1pc

 S



3pcs

  Step 14

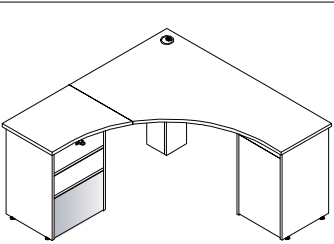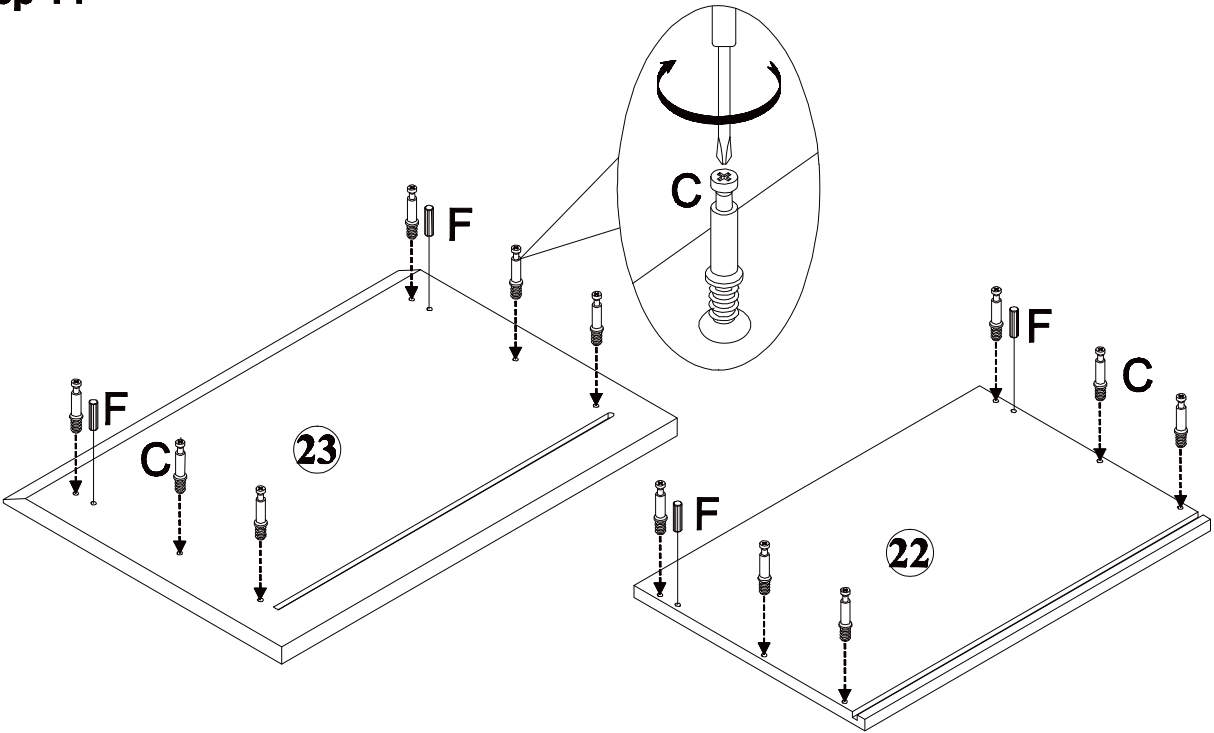

C



 
12pcs

F



4pcs

Step 15

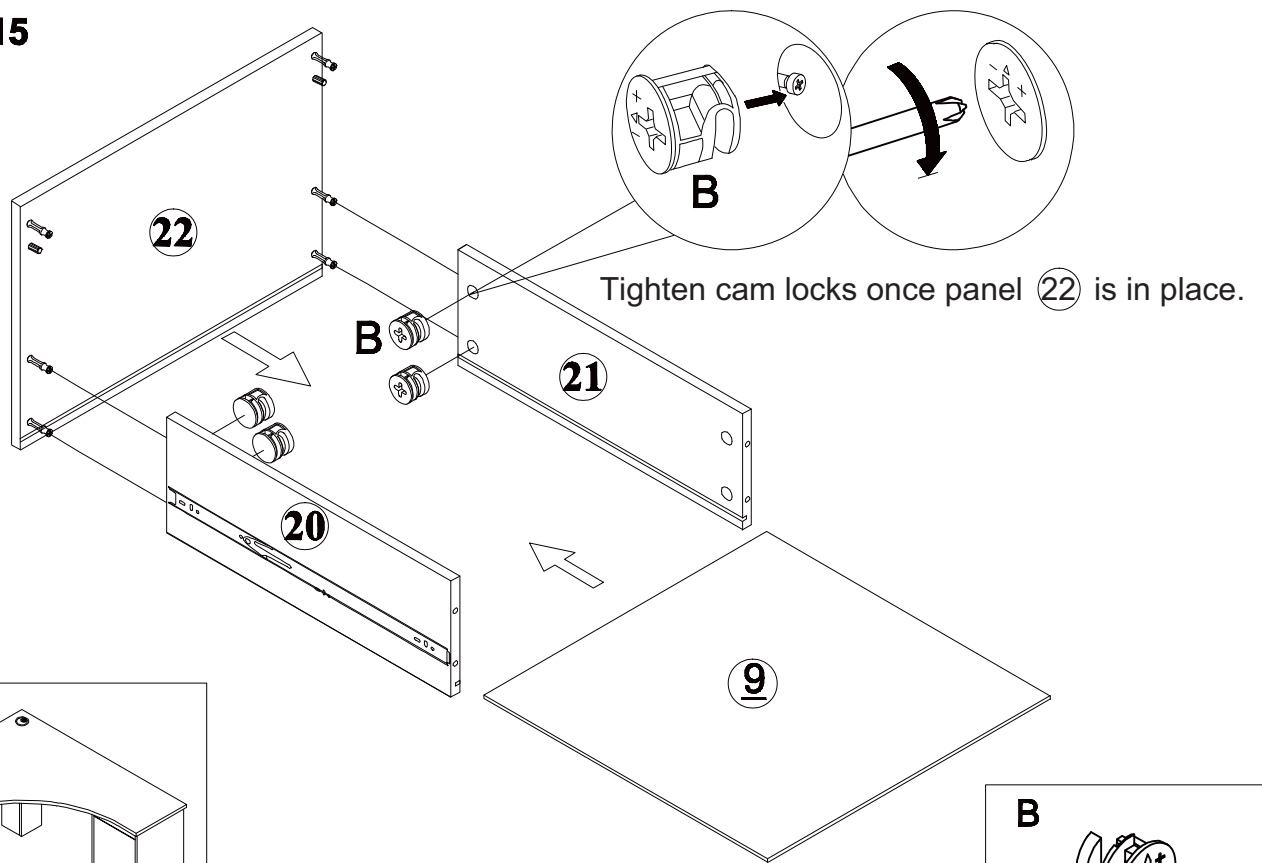


B




4pcs

 Step 16

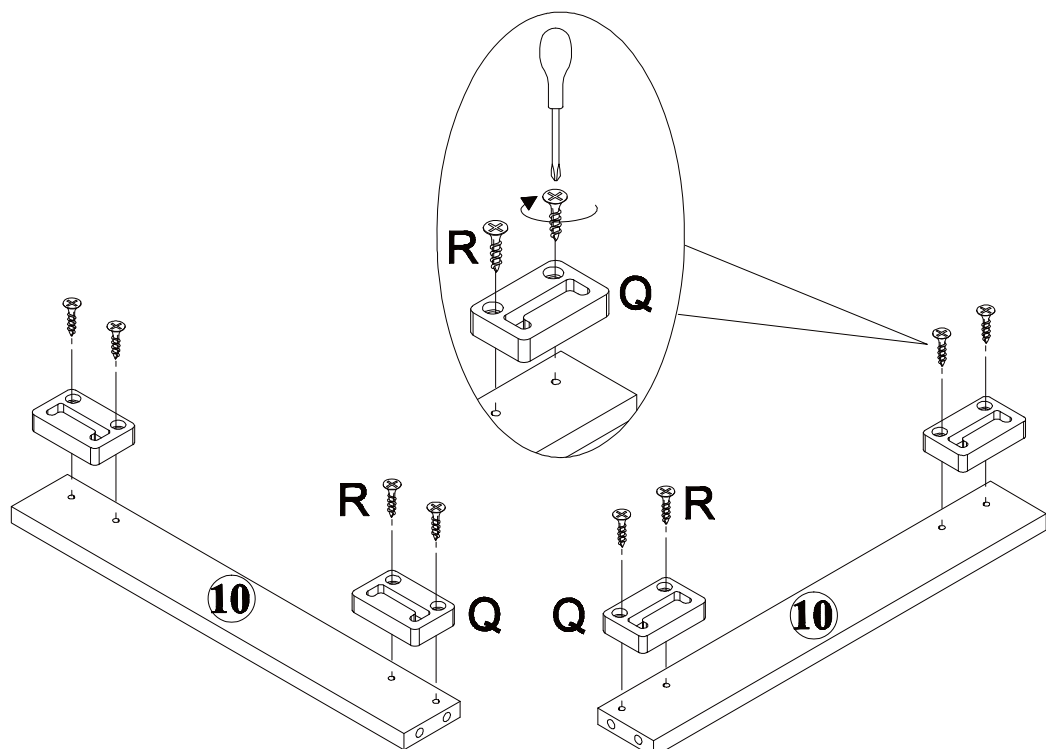


Q

 



4pcs

 R




8pcs

  Step 17

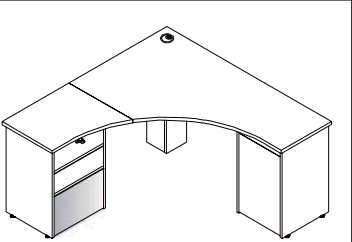
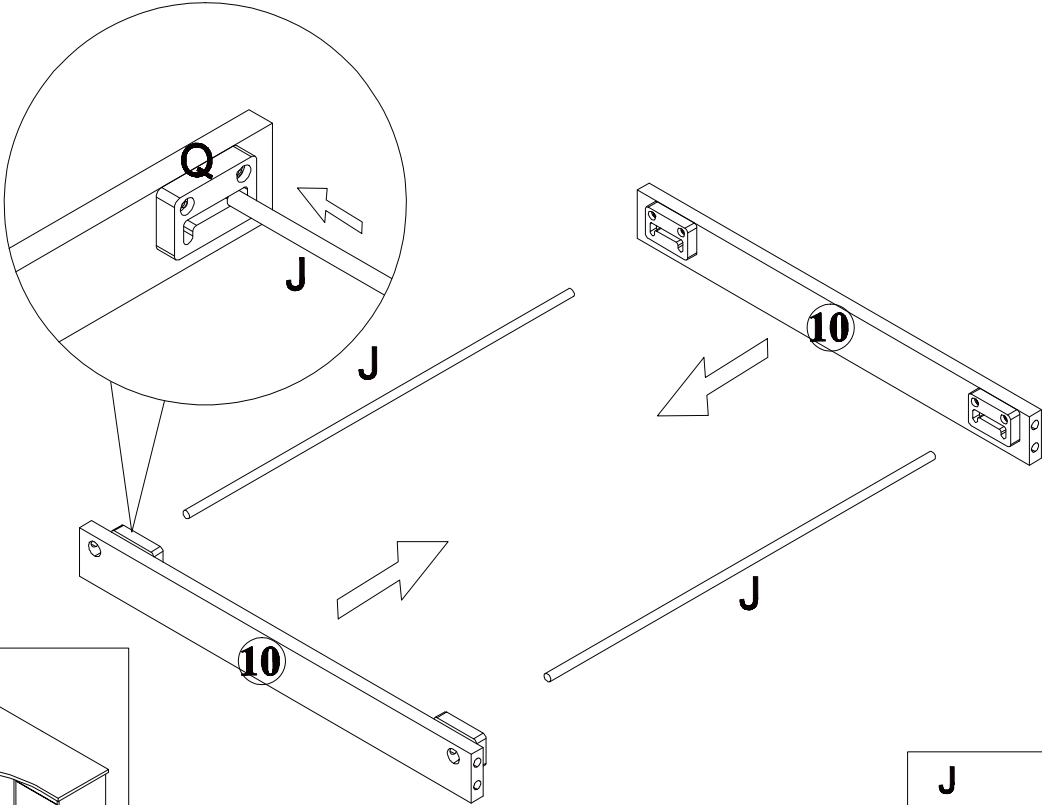


J
2pcs

 Step 18

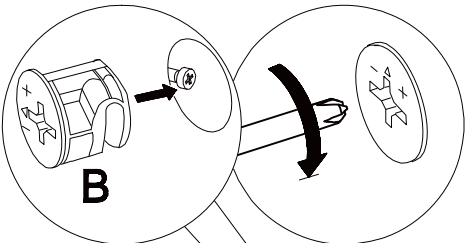


  Tighten cam locks once panel 22 is in place.

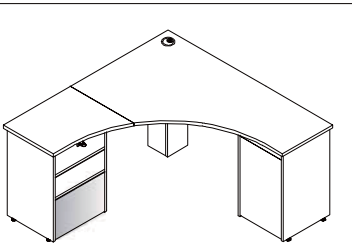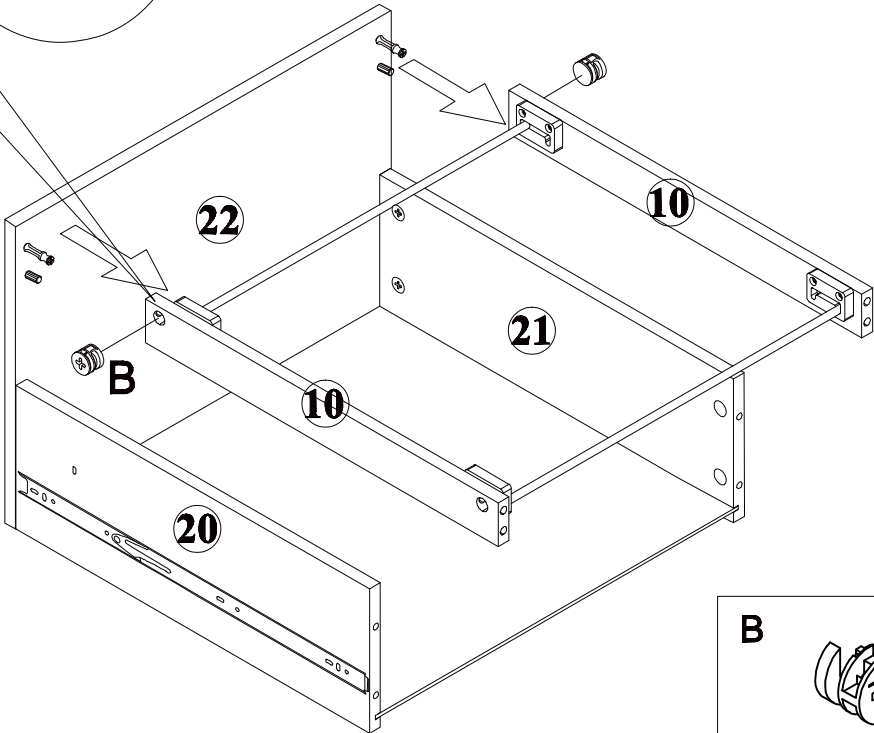

B
2pcs

 Step 19

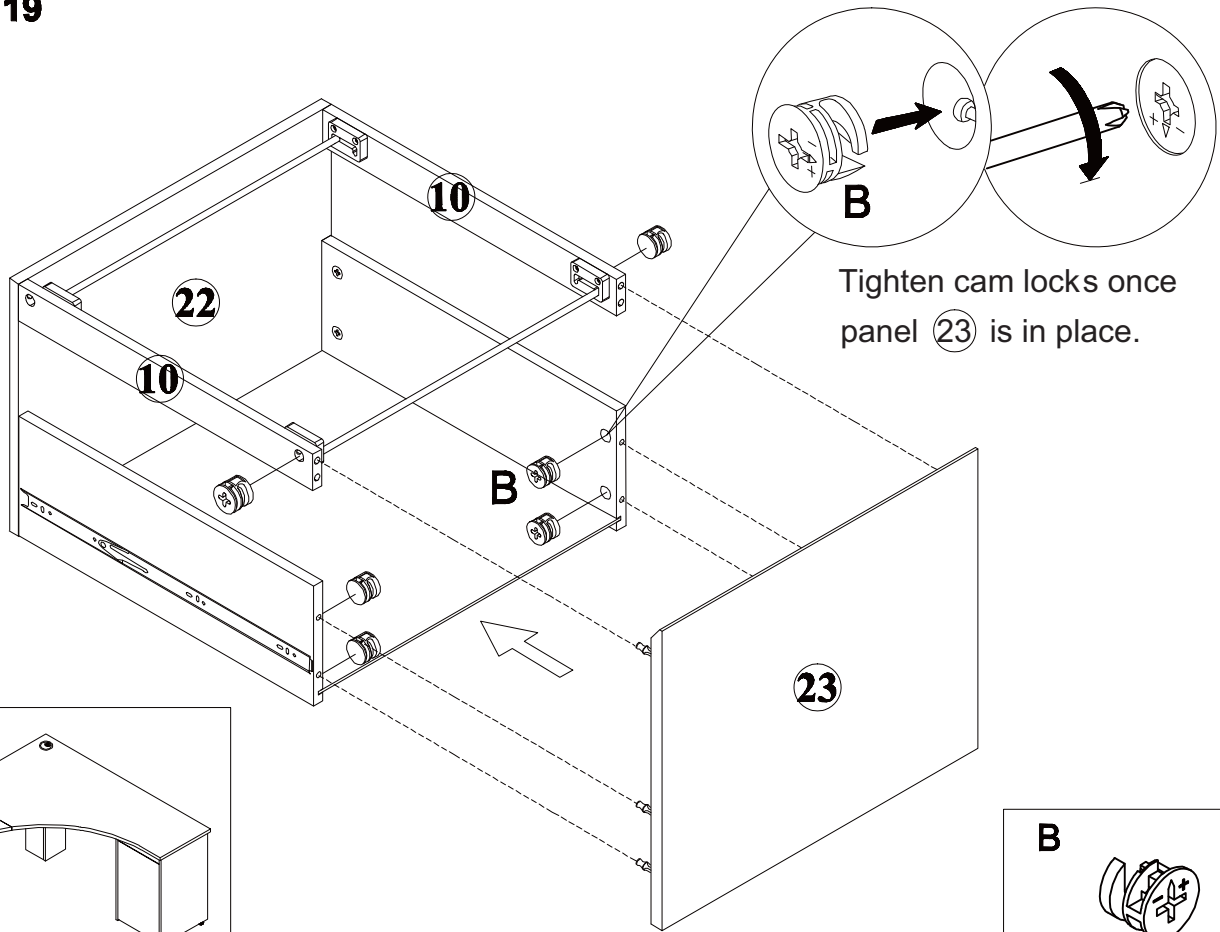


B




6pcs

 Step 20

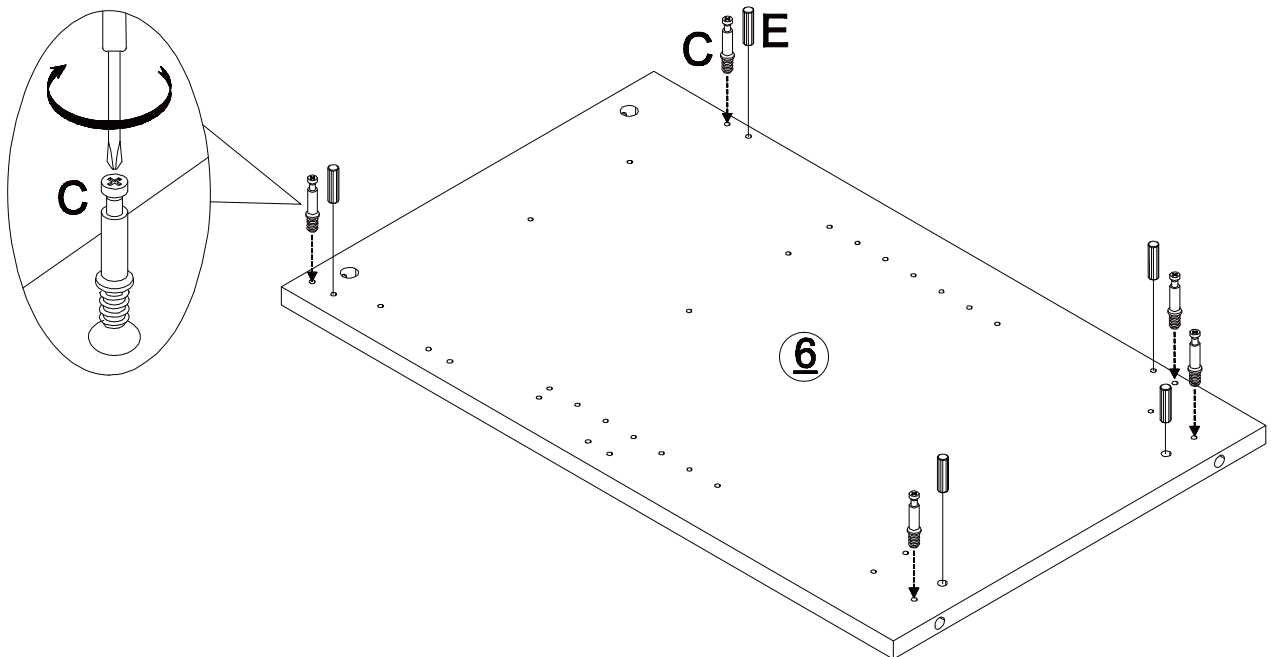

C

 



5pcs

E



5pcs

  Step 21

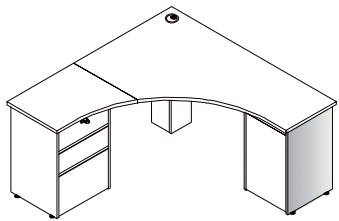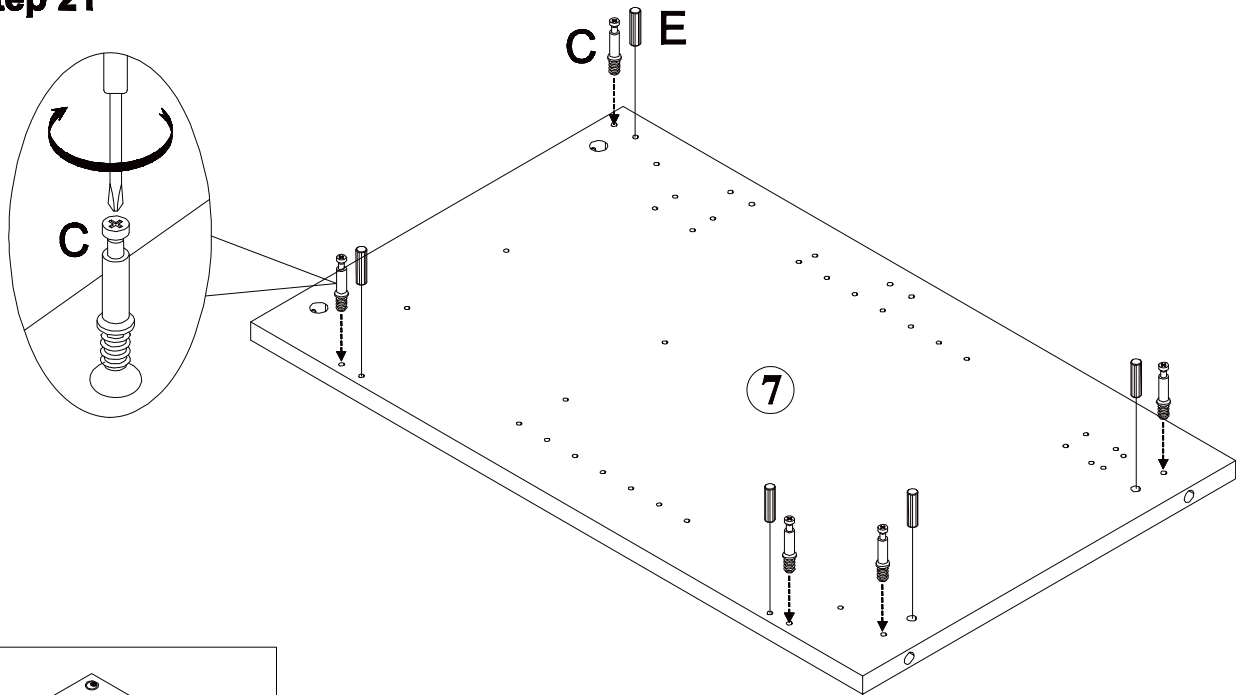

C



 
5pcs

E




5pcs


Step 22

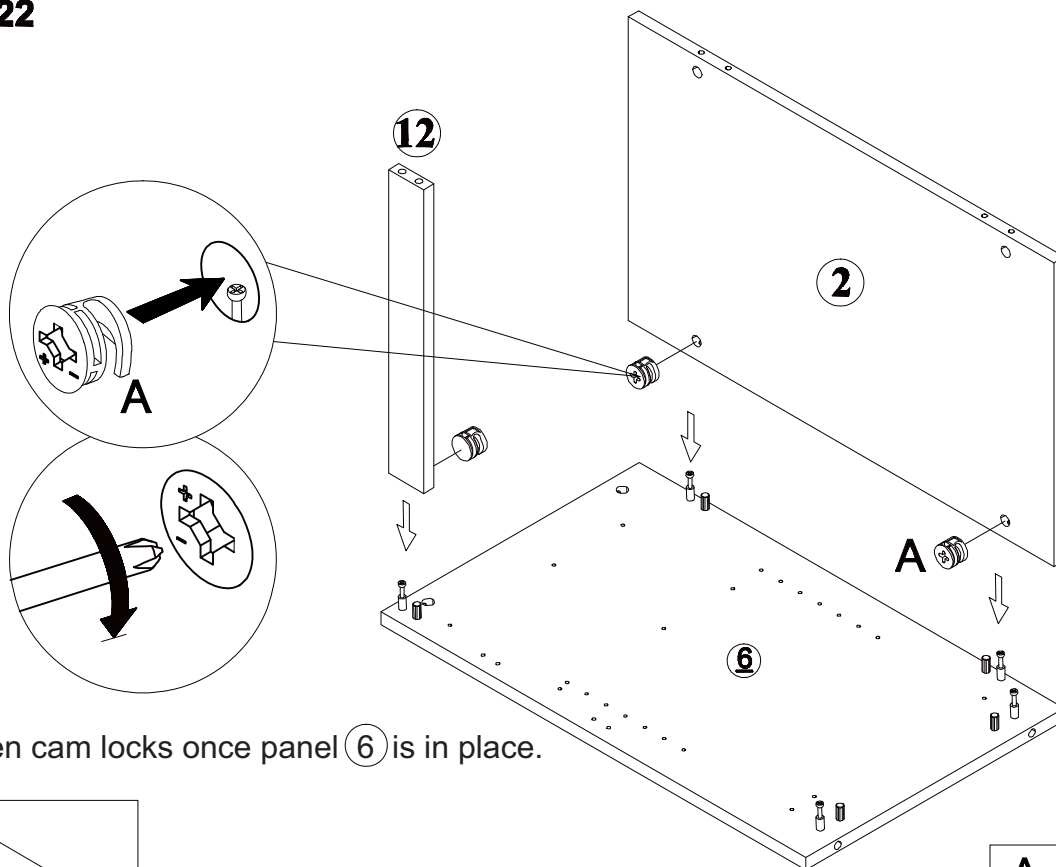

 Tighten cam locks once panel ⑥ is in place.

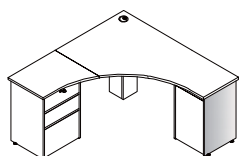


A

 


3pcs

 
Step 23

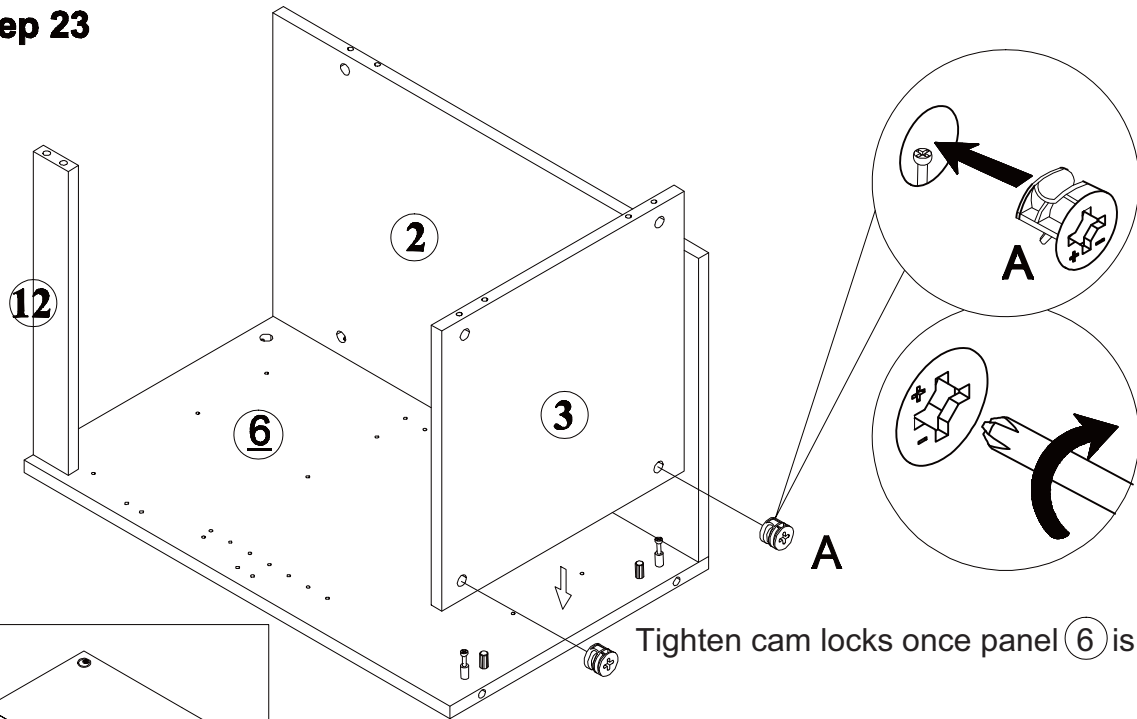

 Tighten cam locks once panel ⑥ is in place.

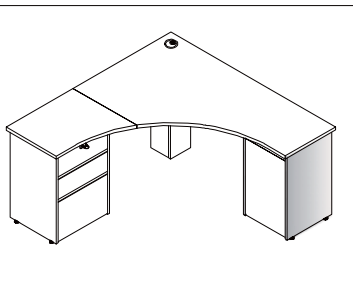


A

 


2pcs

 
Step 24

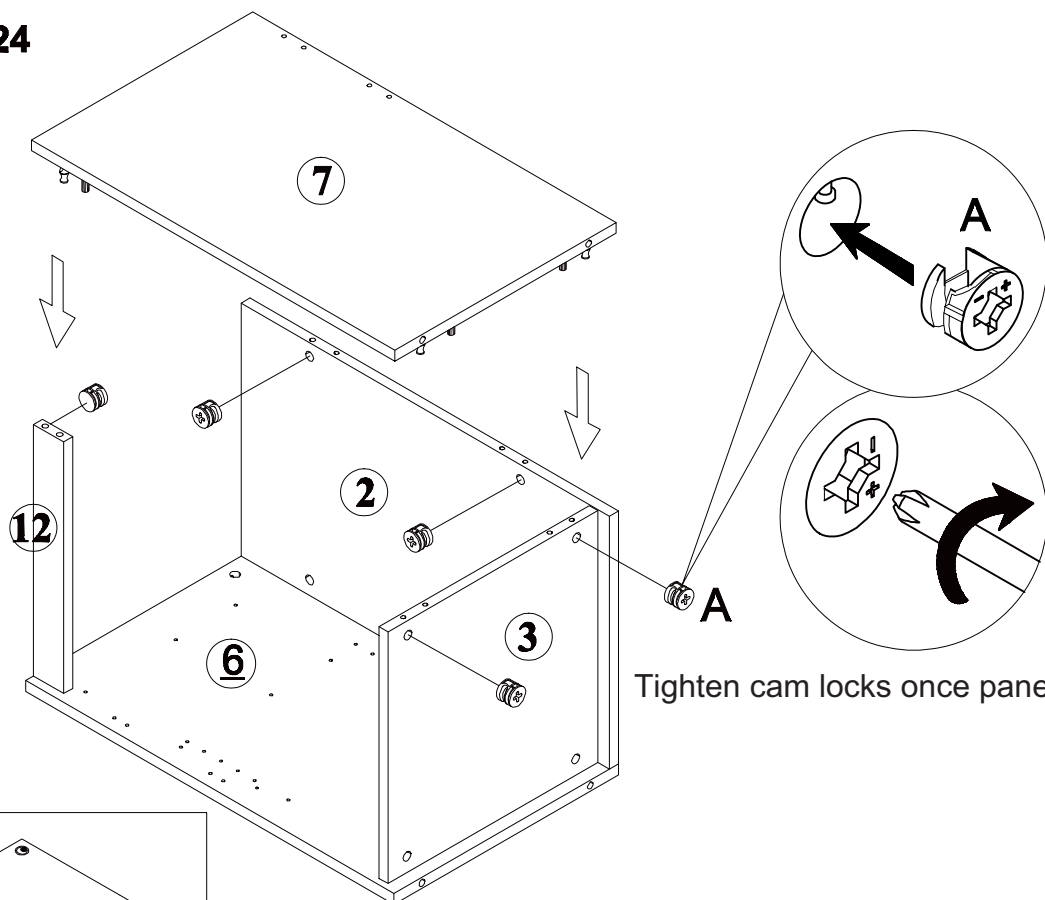

 Tighten cam locks once panel ⑦ is in place.


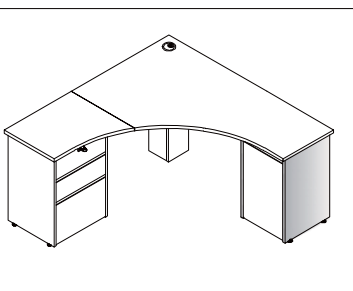


A

 


5pcs

  Step 25

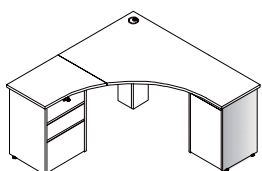
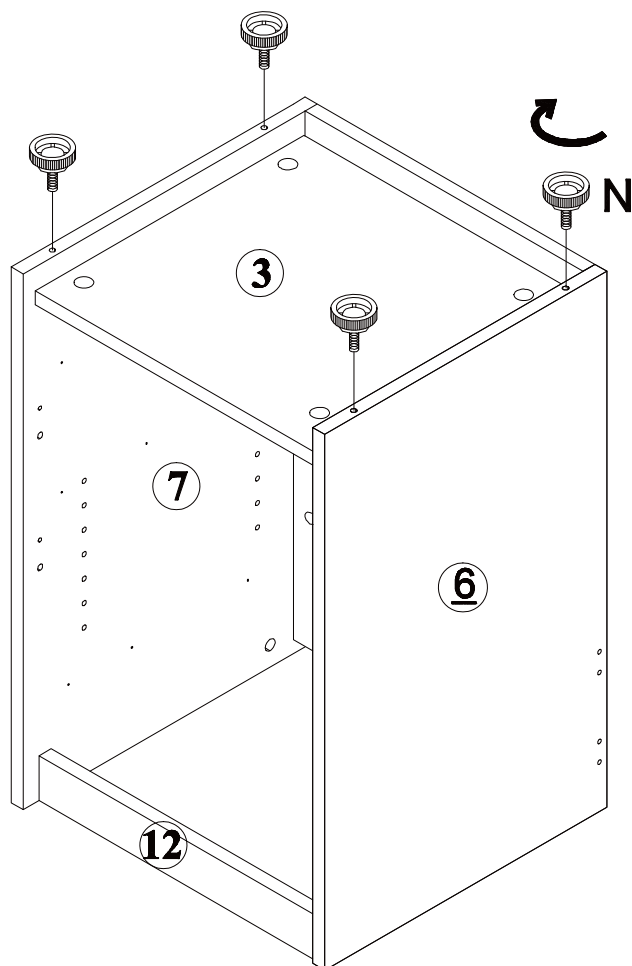


N

 

4pcs

  Step 26

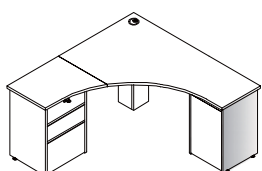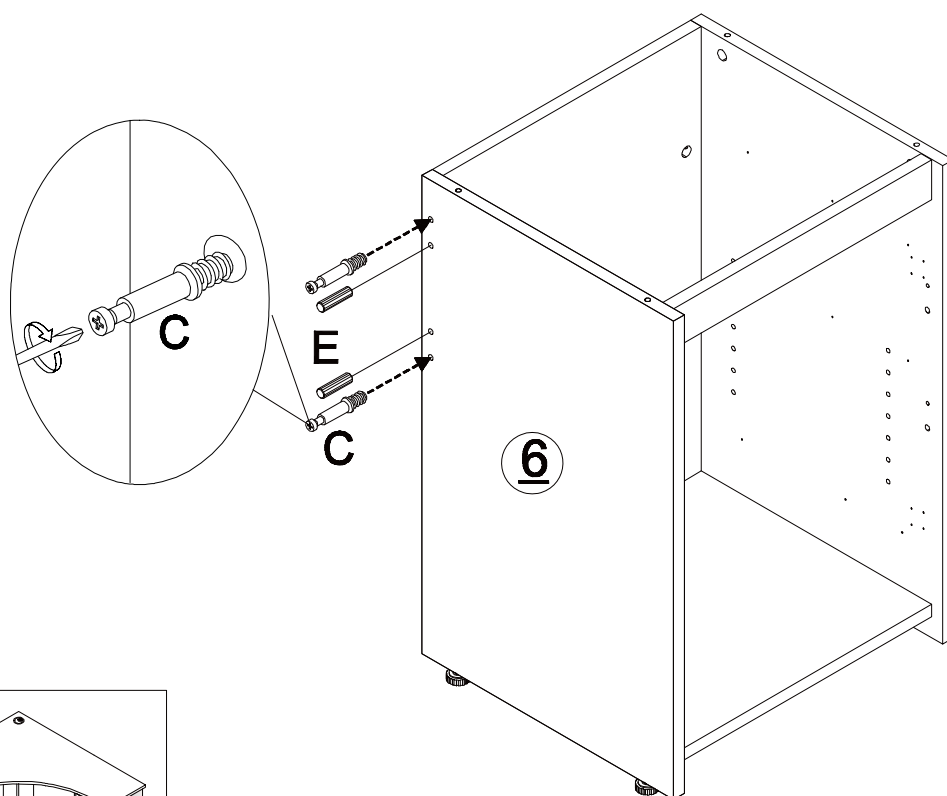

C



 
 
2pcs

E




2pcs

Step 27

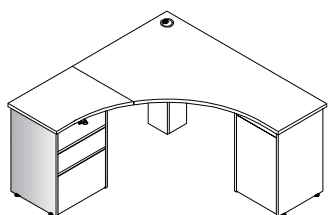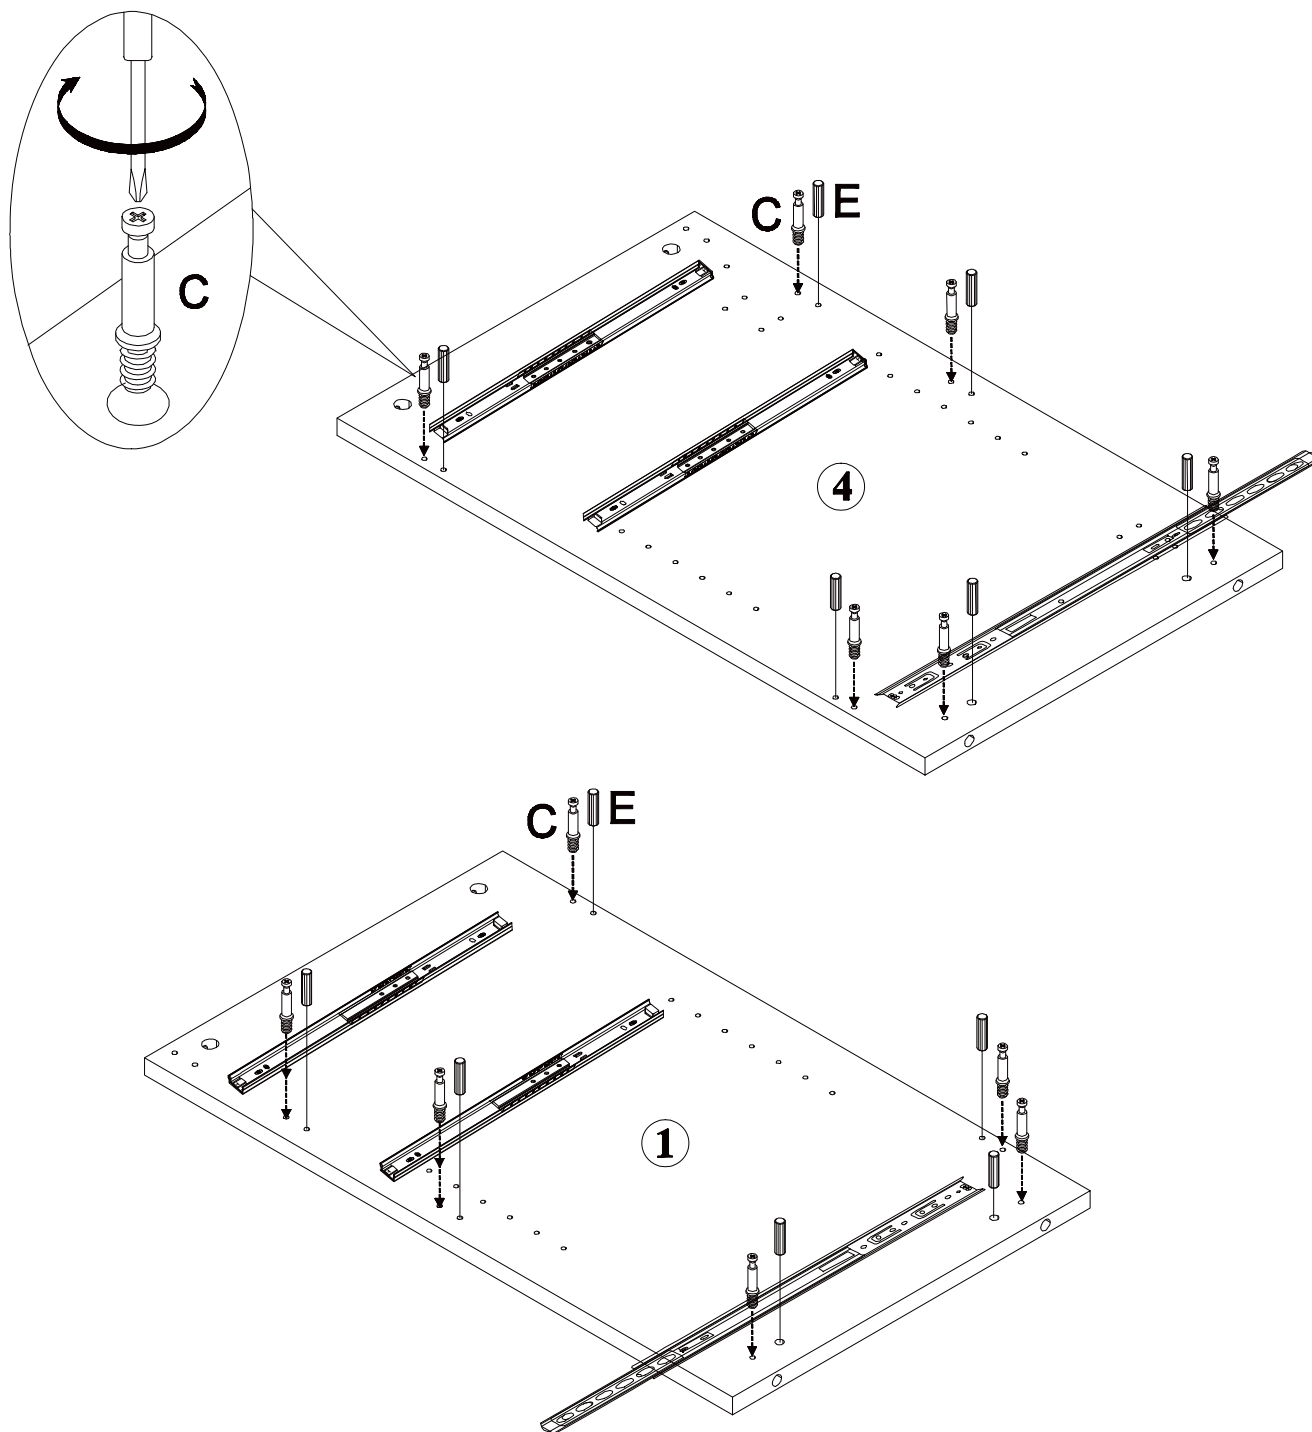

C

 


12pcs

E





12pcs

 
Step 28

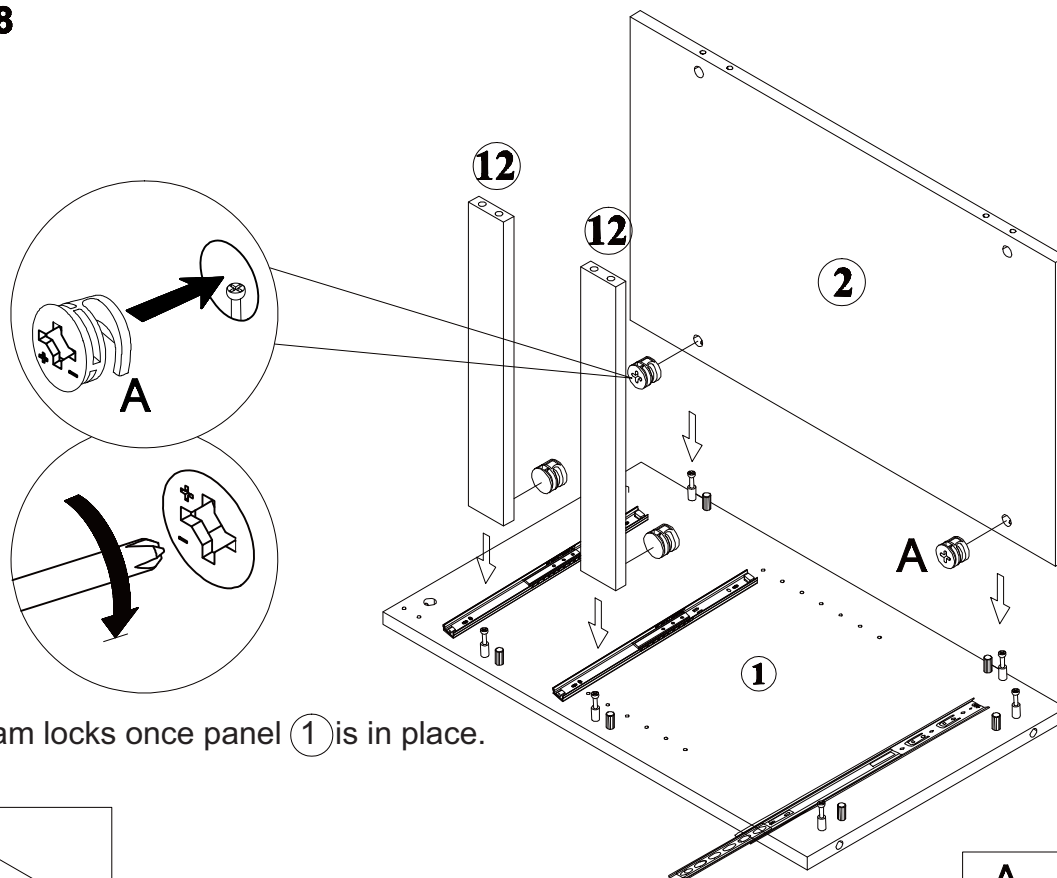

 
 
Tighten cam locks once panel ① is in place.

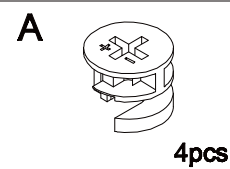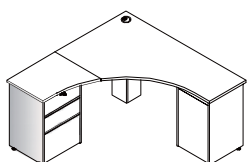


 
Step 29

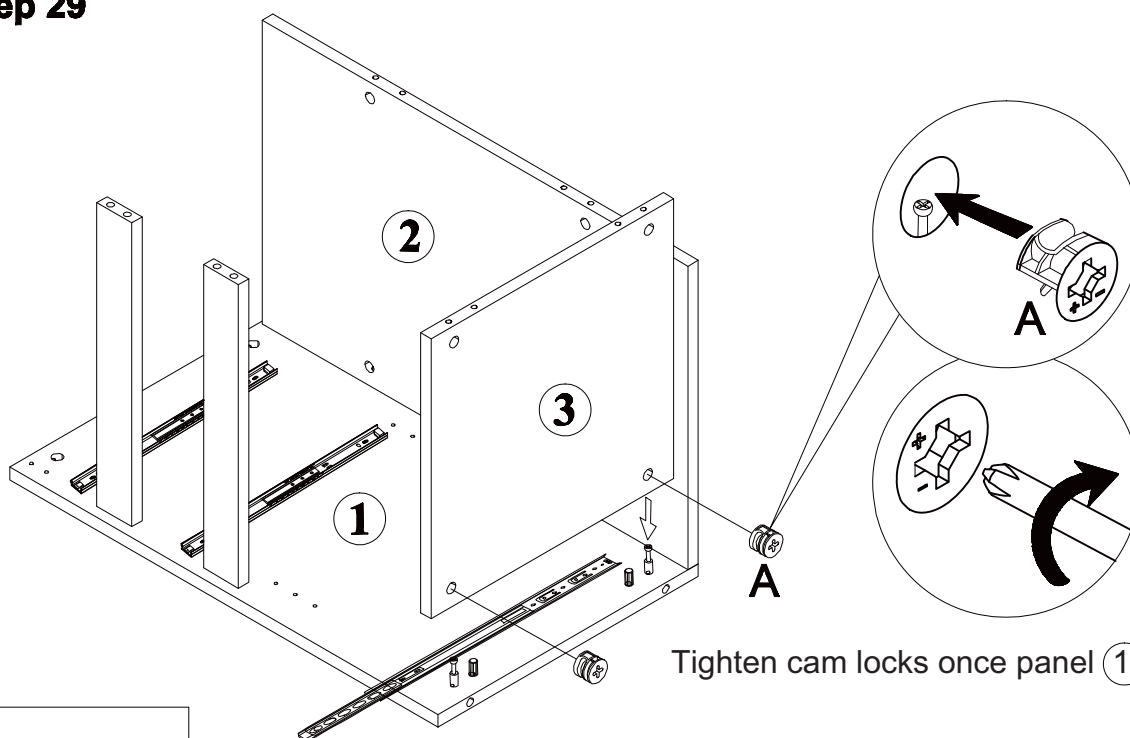

  
Tighten cam locks once panel ① is in place.

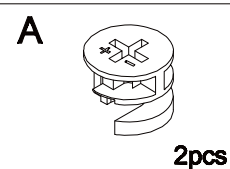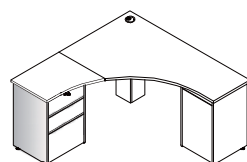

  Step 30

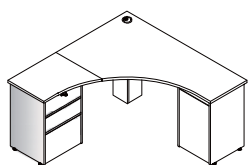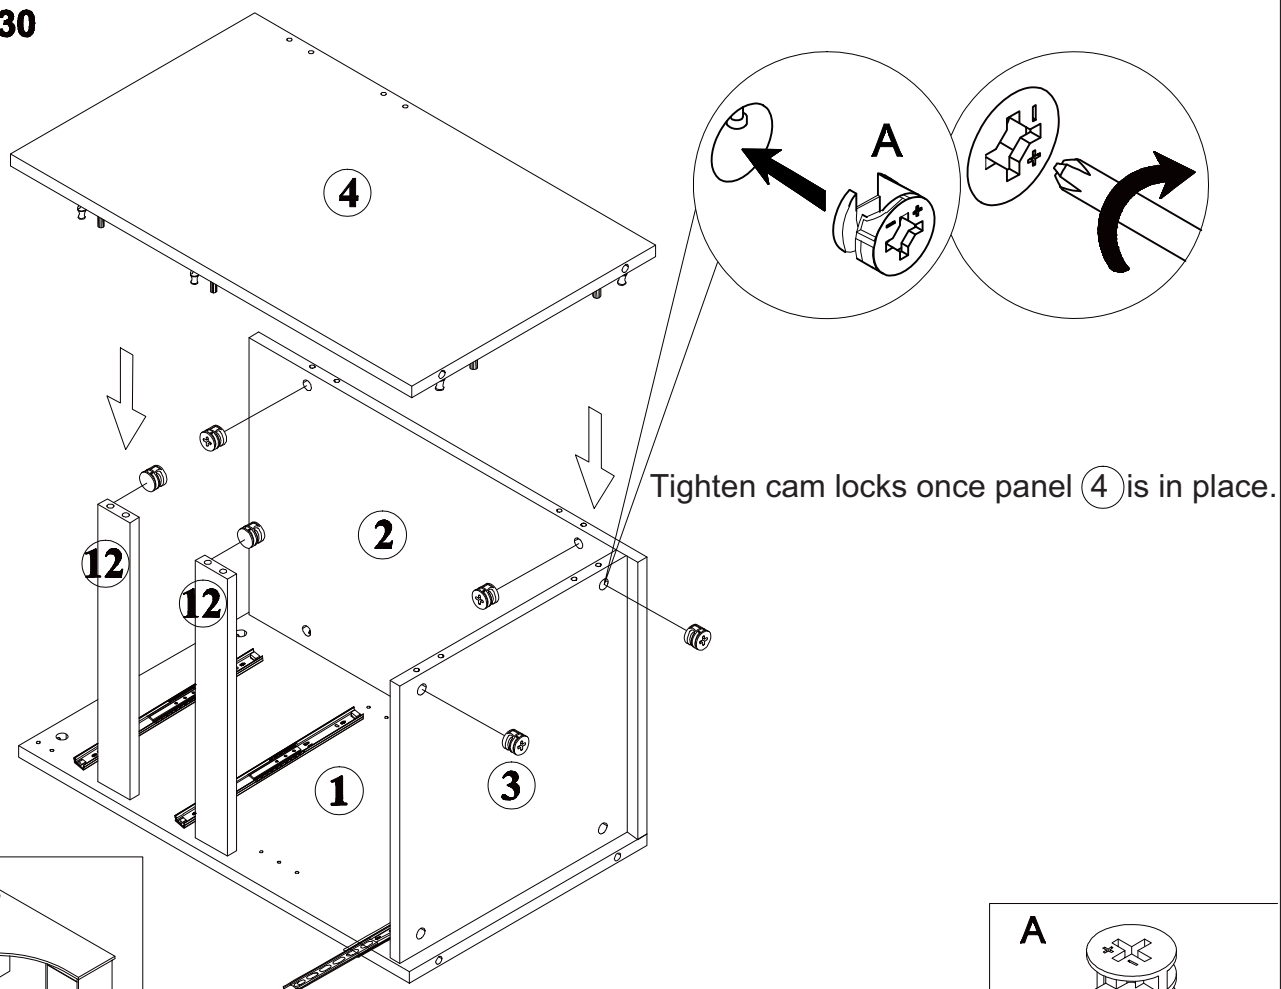


A

 


6pcs

 
Step 31

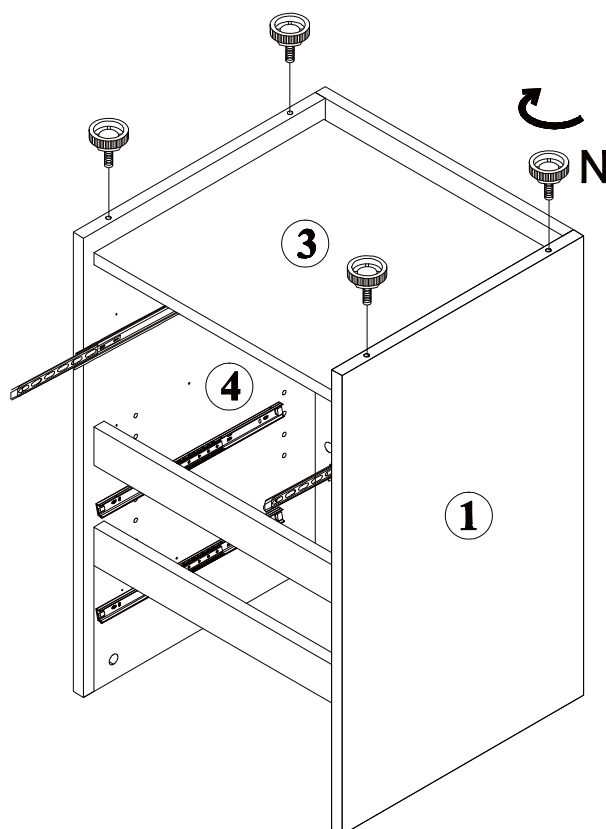

N


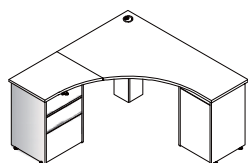 


N

 

4pcs

  Step 32

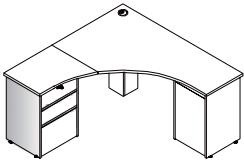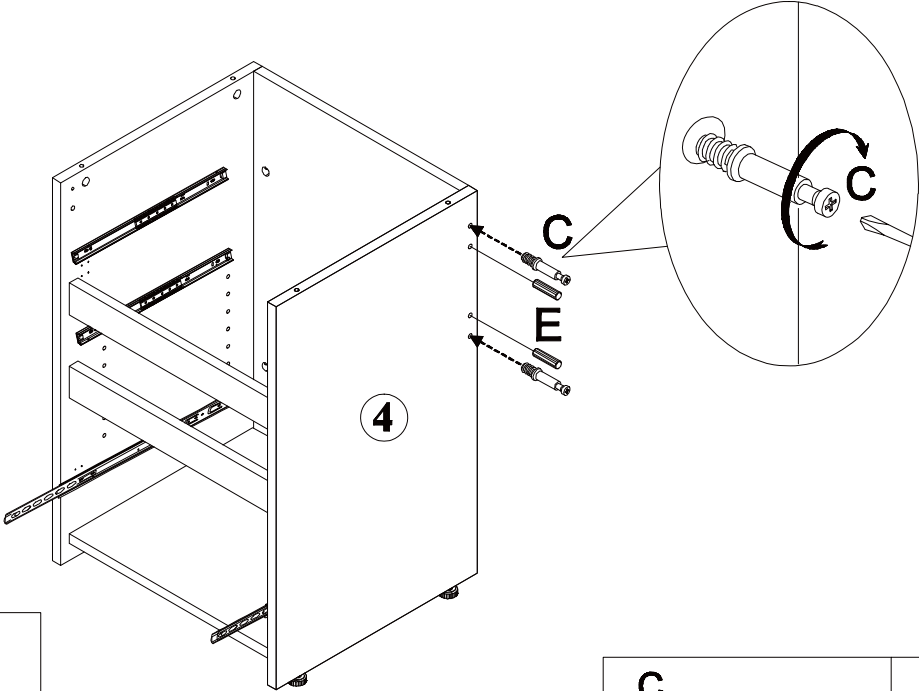

C



 
 
2pcs

E



2pcs

Step 33

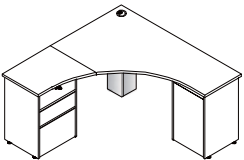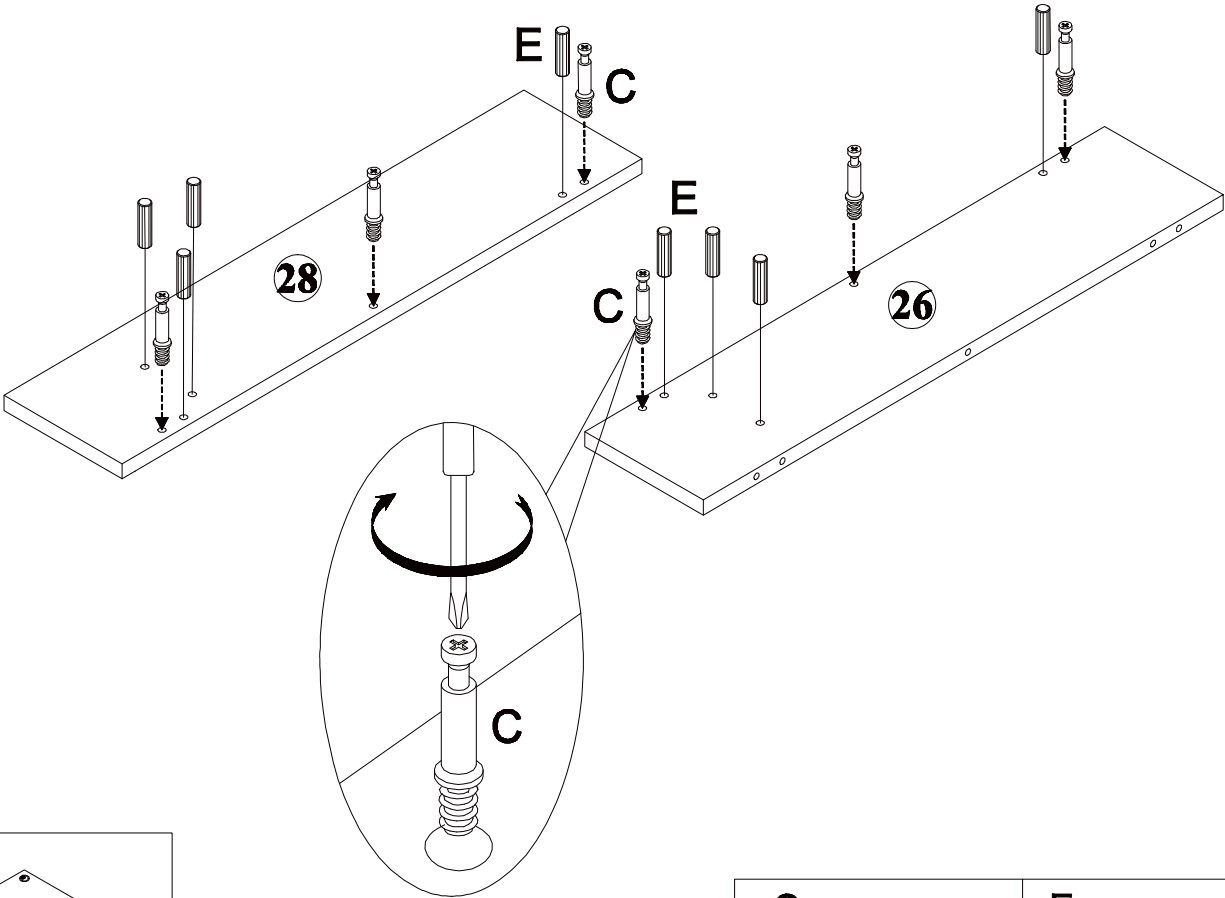

C



 
6pcs

E




8pcs


Step 34

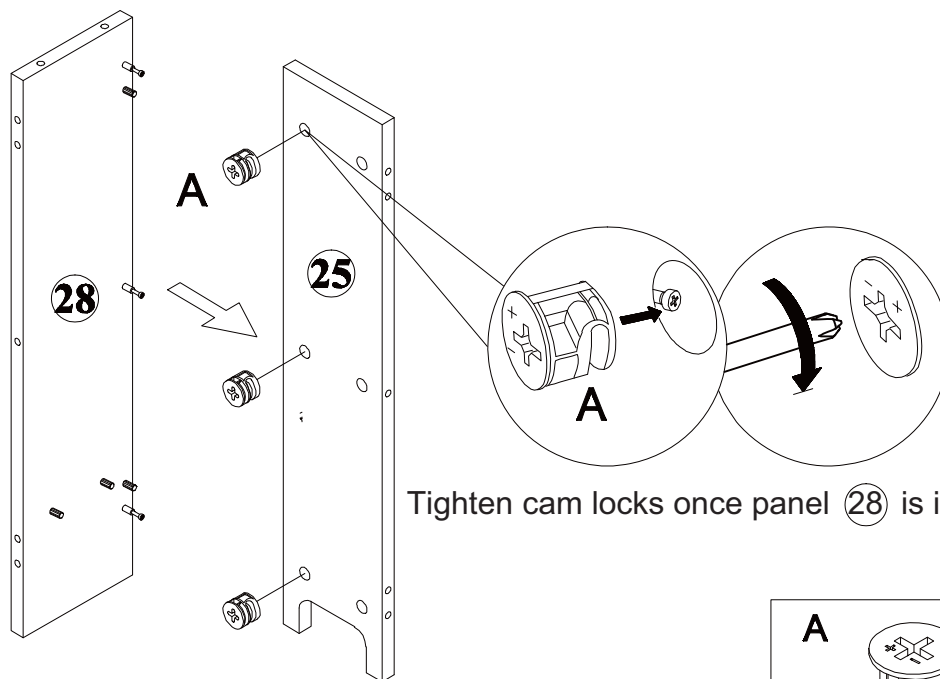

 Tighten cam locks once panel 28 is in place.

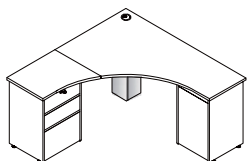


A

 


3pcs

 
Step 35

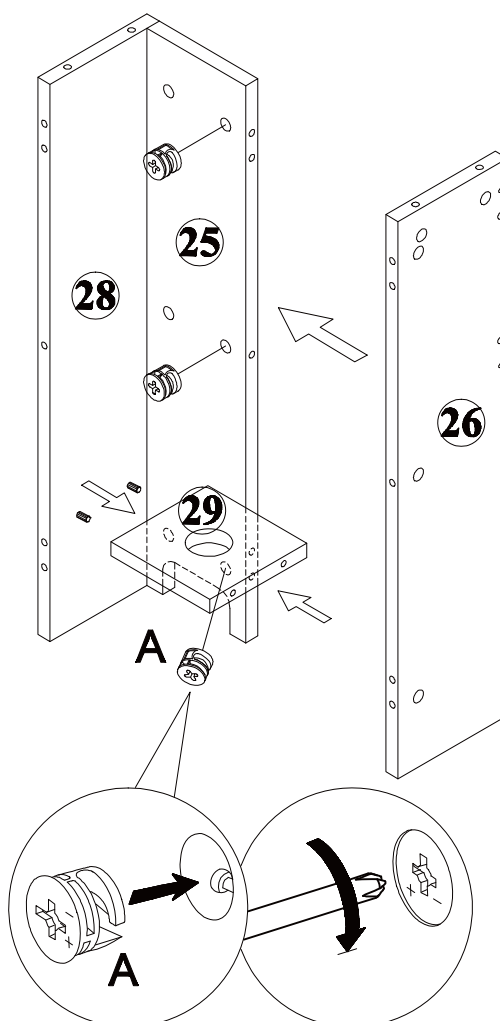

 Tighten cam locks once panel 26 is in place.


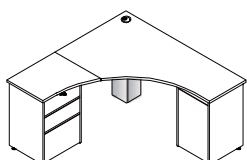


A

 

3pcs

  Step 36

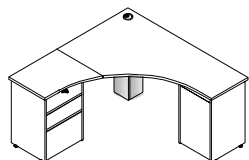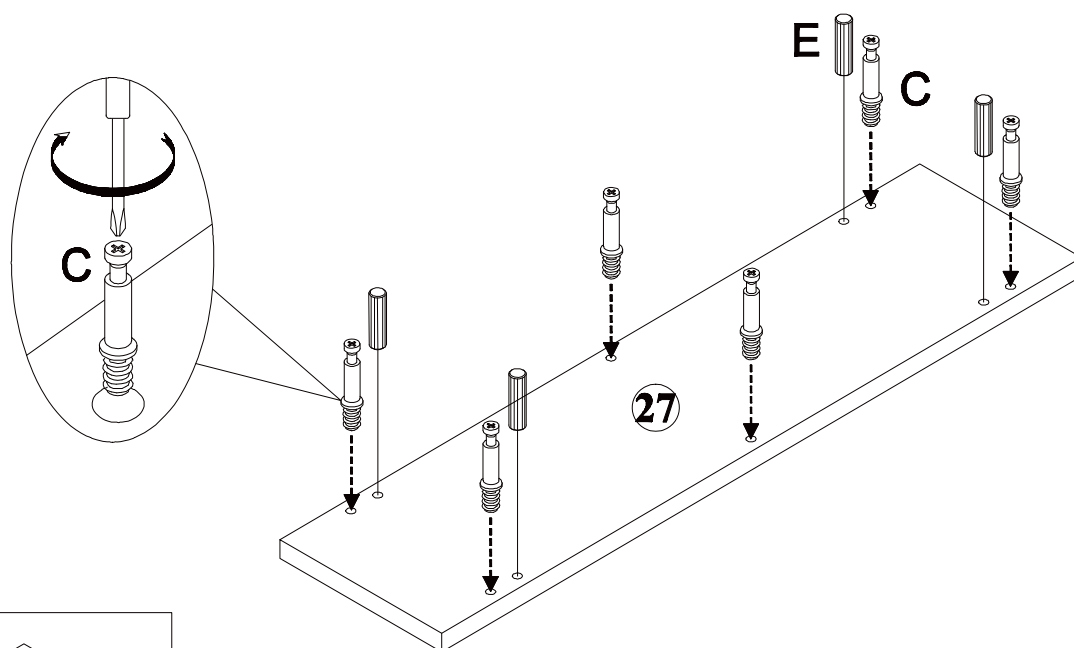

C



 
 
6pcs

E




4pcs


Step 37

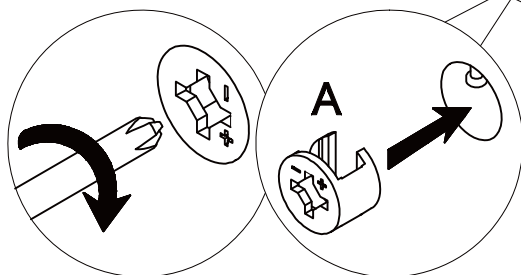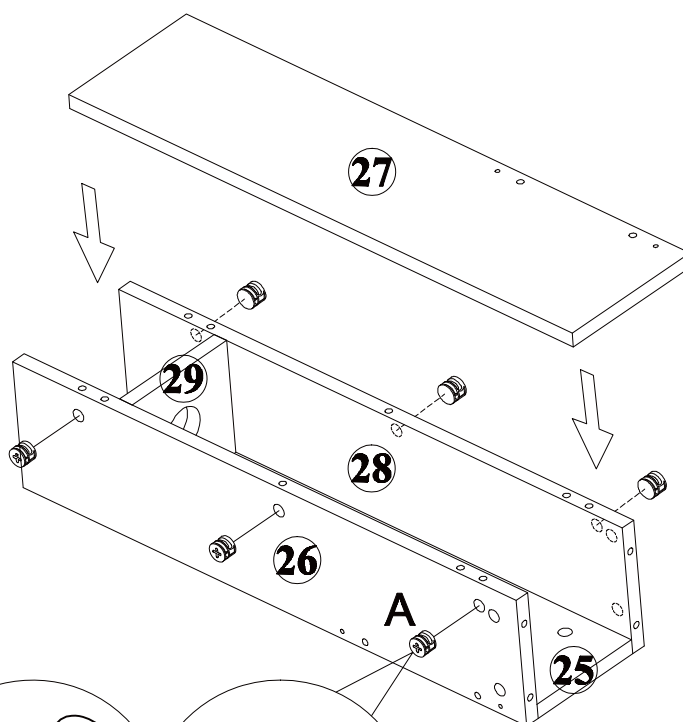

 Tighten cam locks once panel 27 is in place.




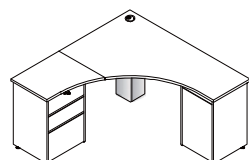


A



 


6pcs

    
Step 38

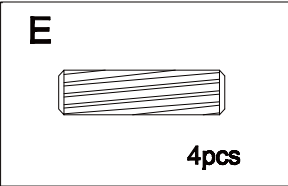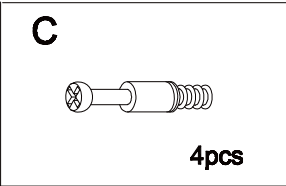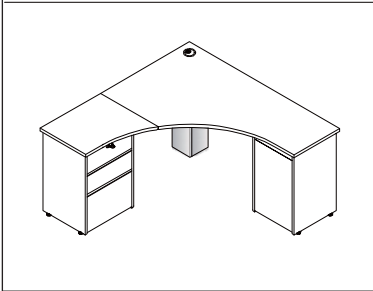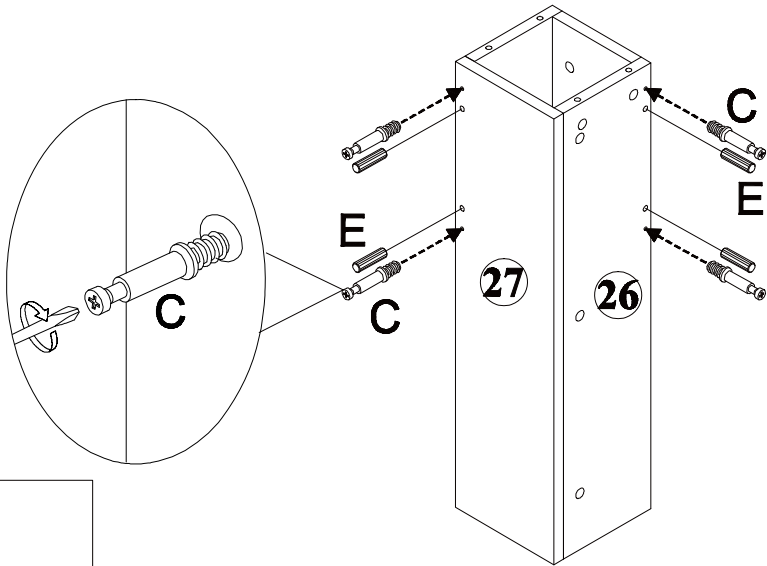

   
Step 39

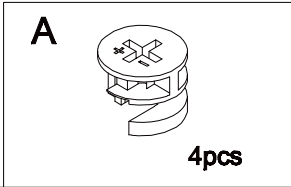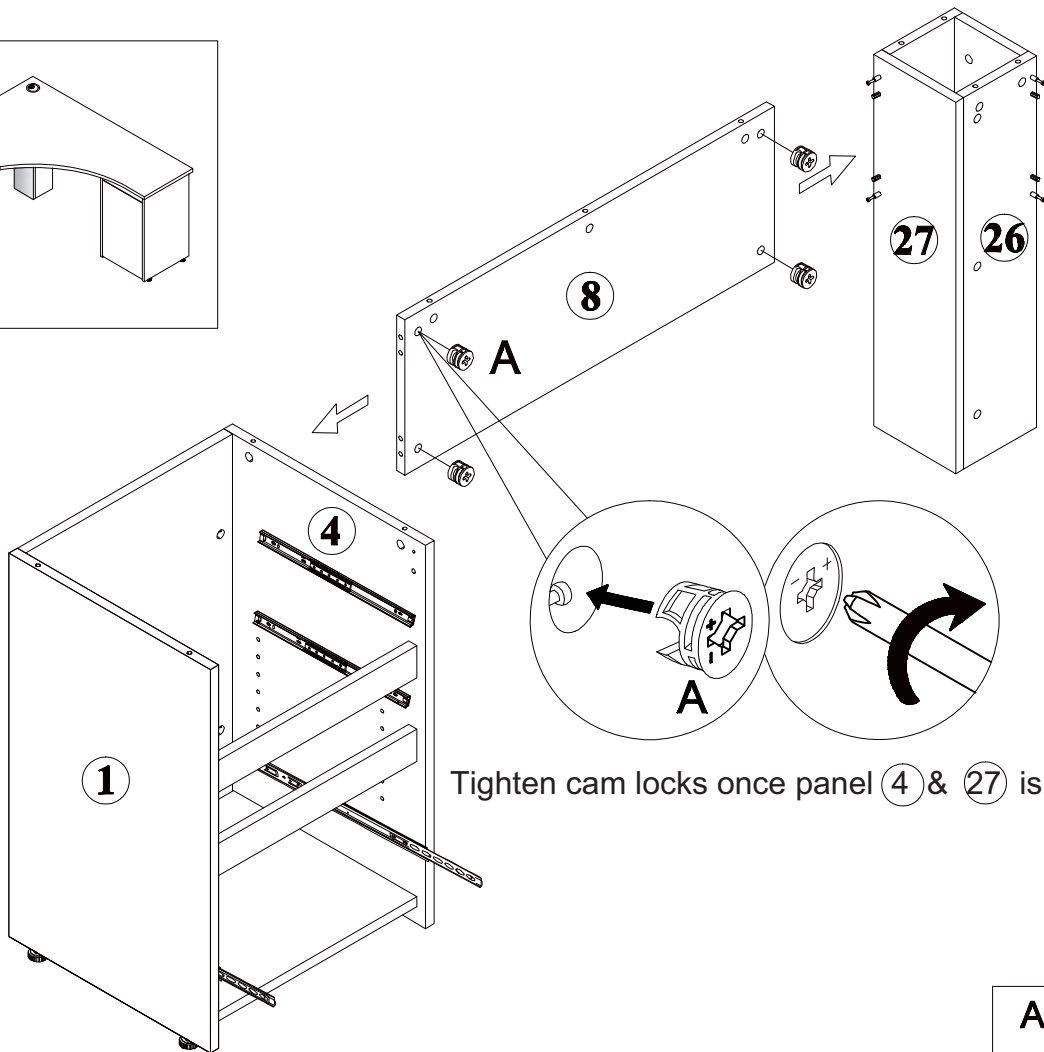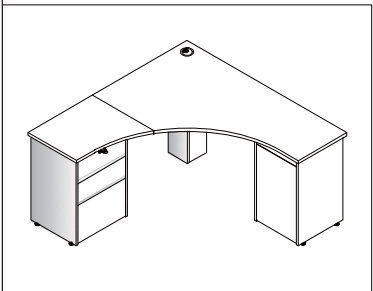

 
Step 40

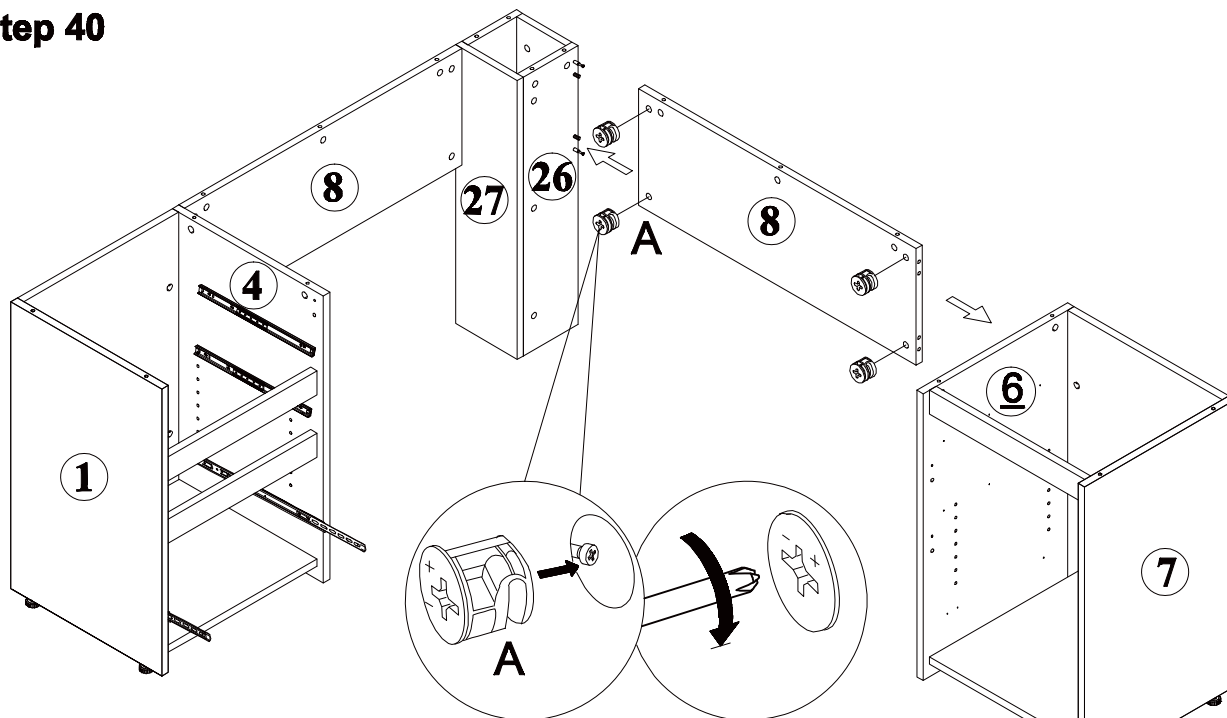

 Tighten cam locks once panel ⑥ & ②⑥ is in place.


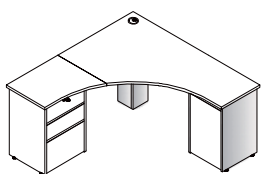


A

 


4pcs

  Step 41

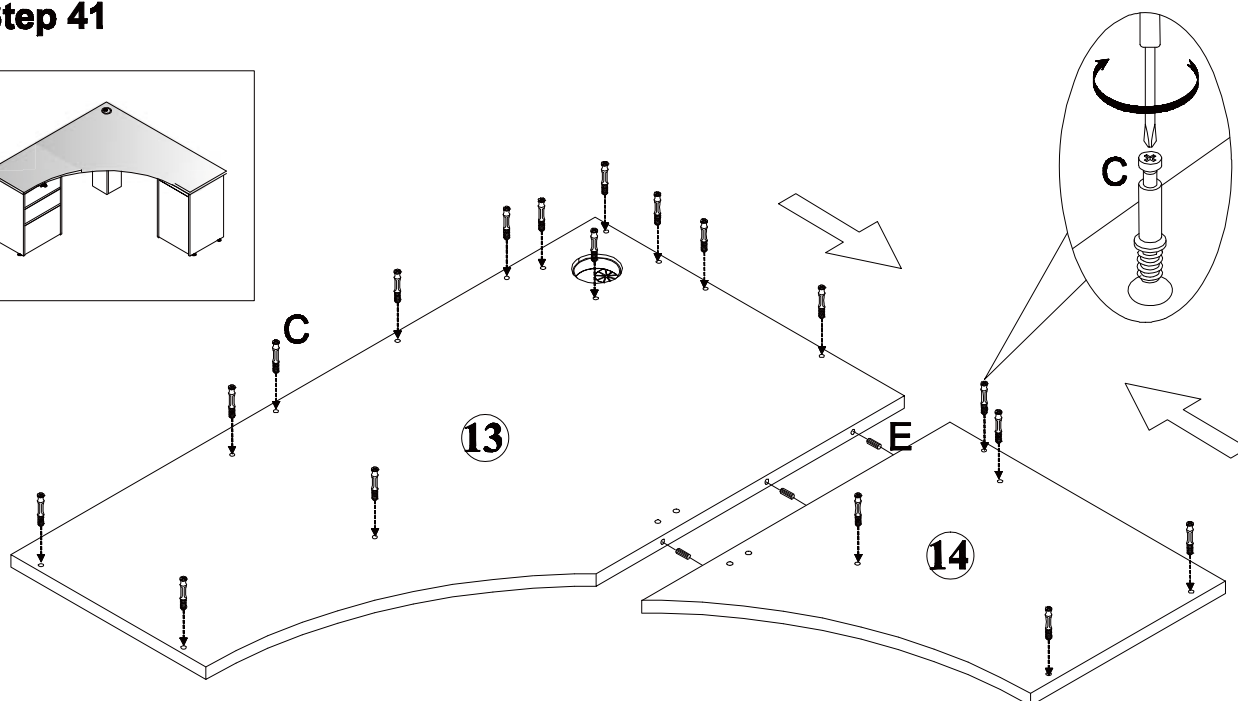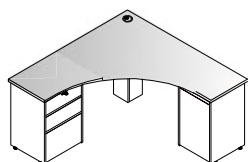

C

 



18pcs

E




3pcs

  Step 42

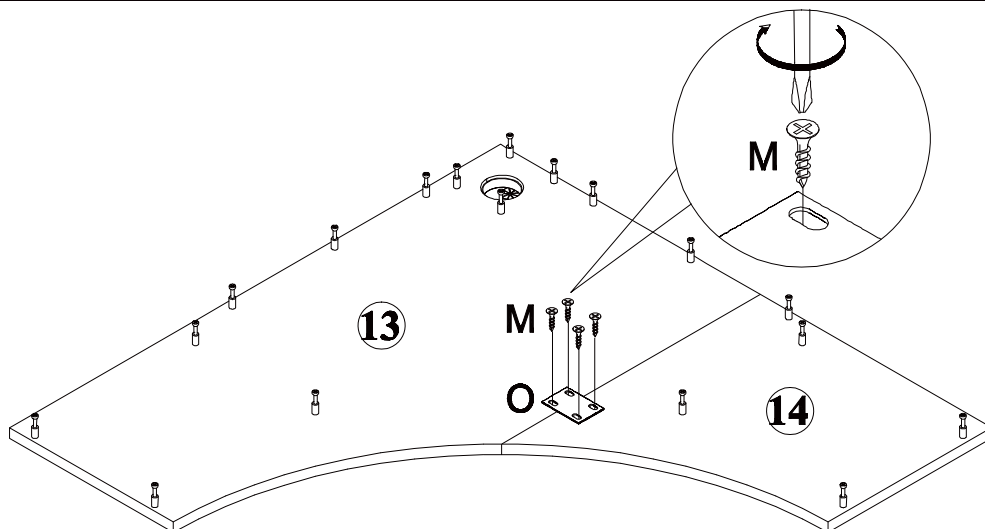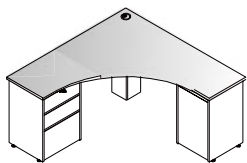

O

 


1pc

M




4pcs

 Step 43

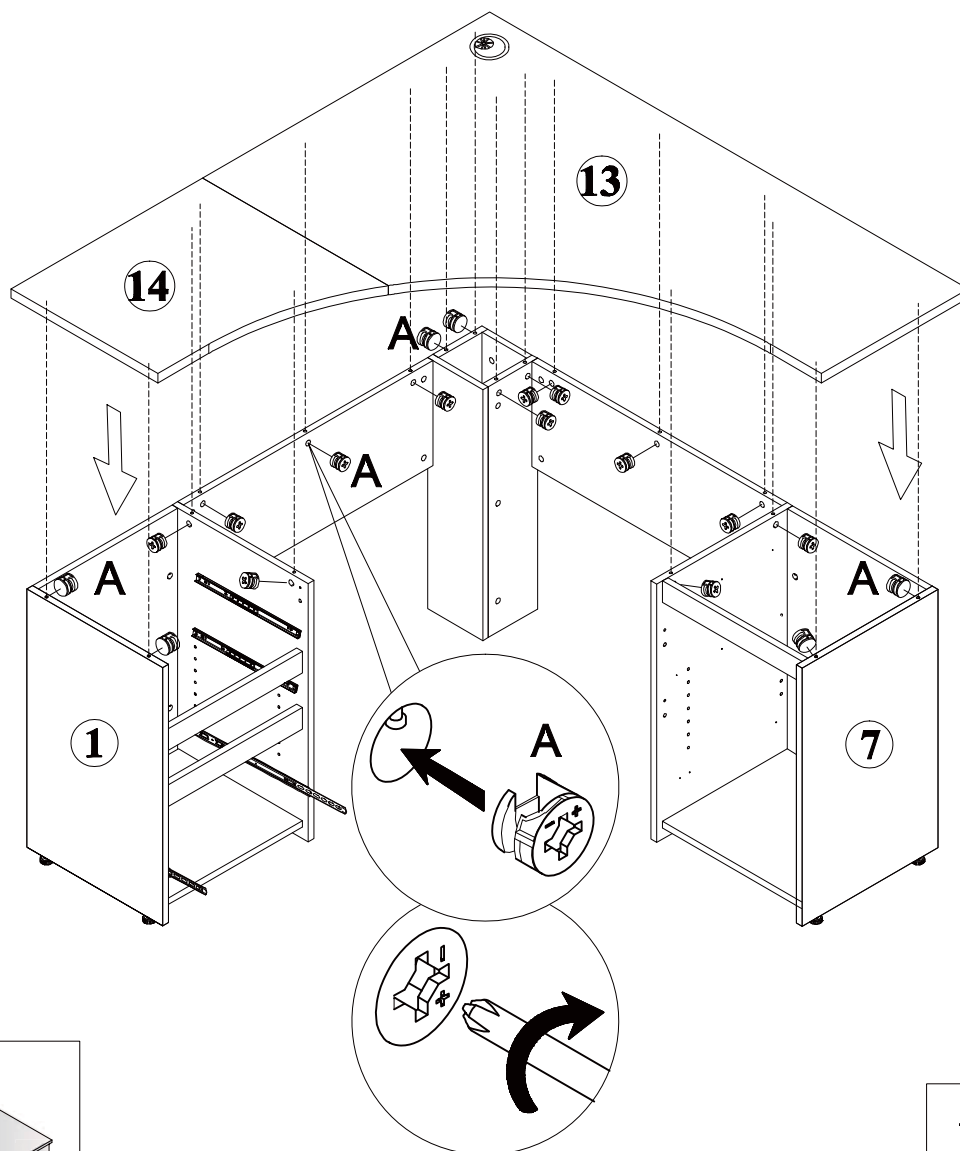


A



 


18pcs

 
Tighten cam locks once panel 13 & 14 is in place.

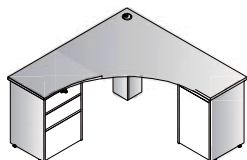

   
Step 44

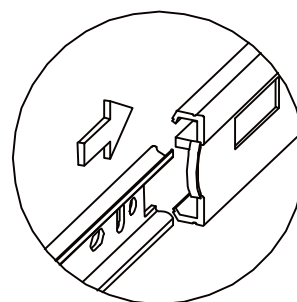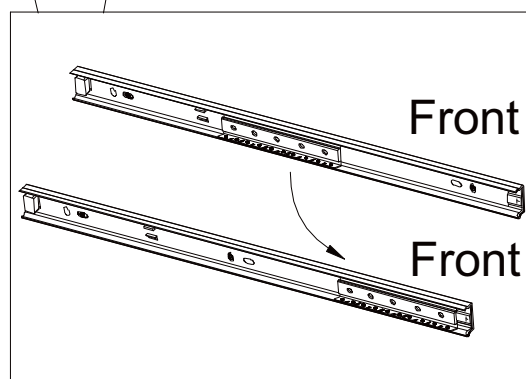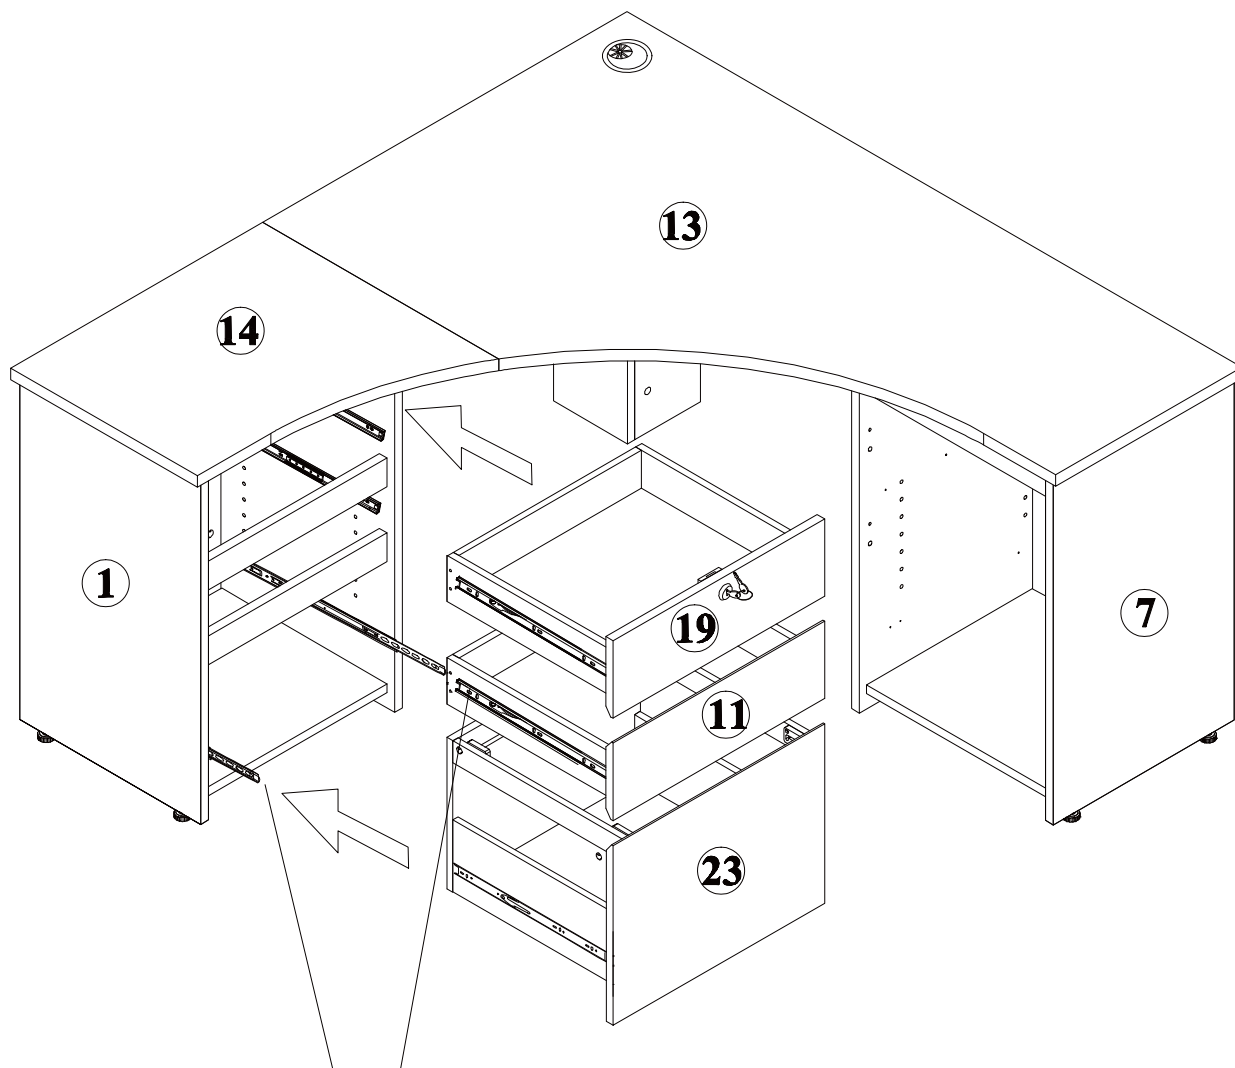

 Note: Move the sliding part as shown above to the front end on both sides before inserting the drawer. This will assist for easier assembly.

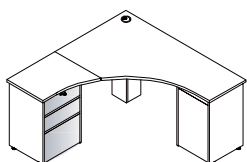

 Step 45

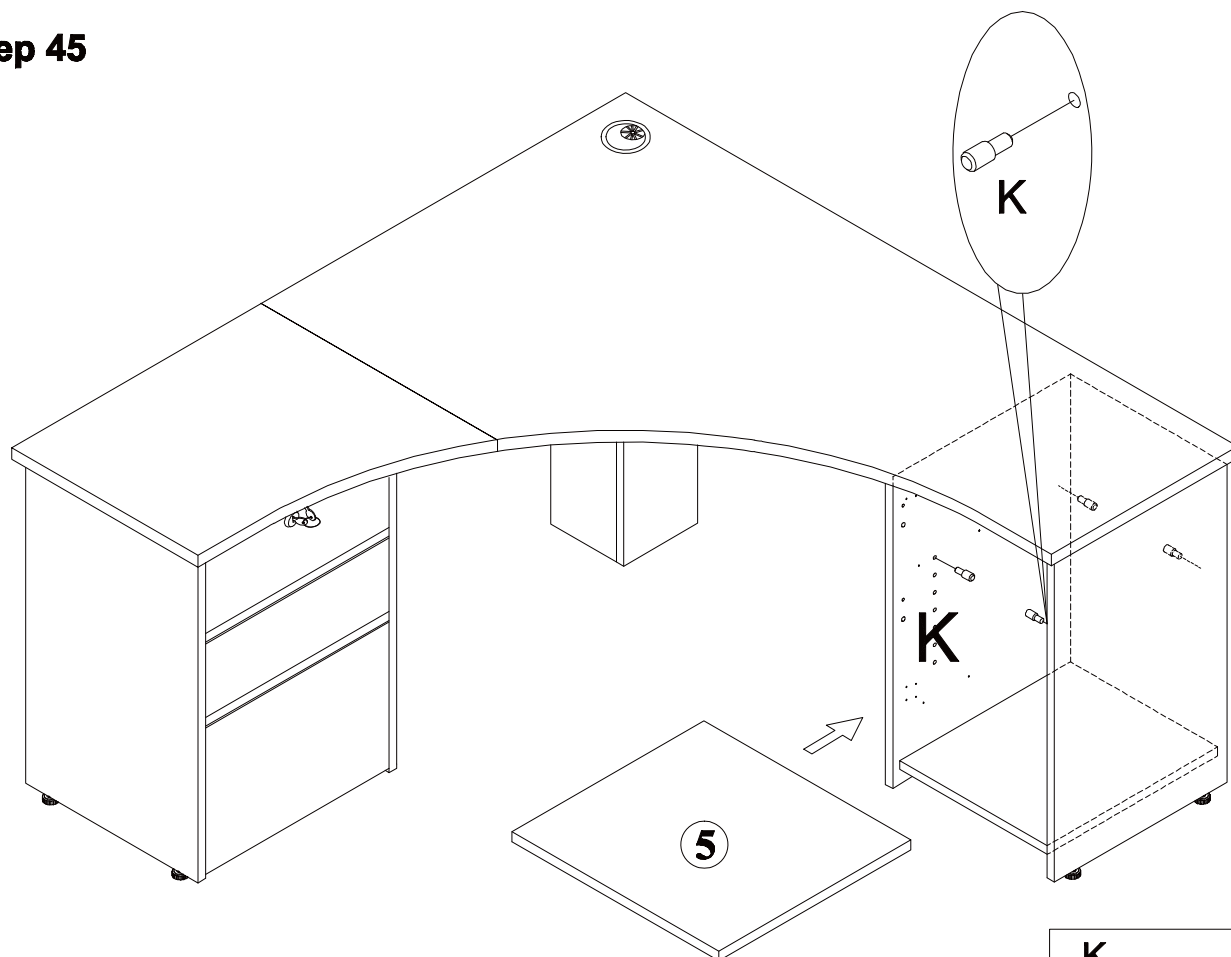


K




4pcs

 Step 46

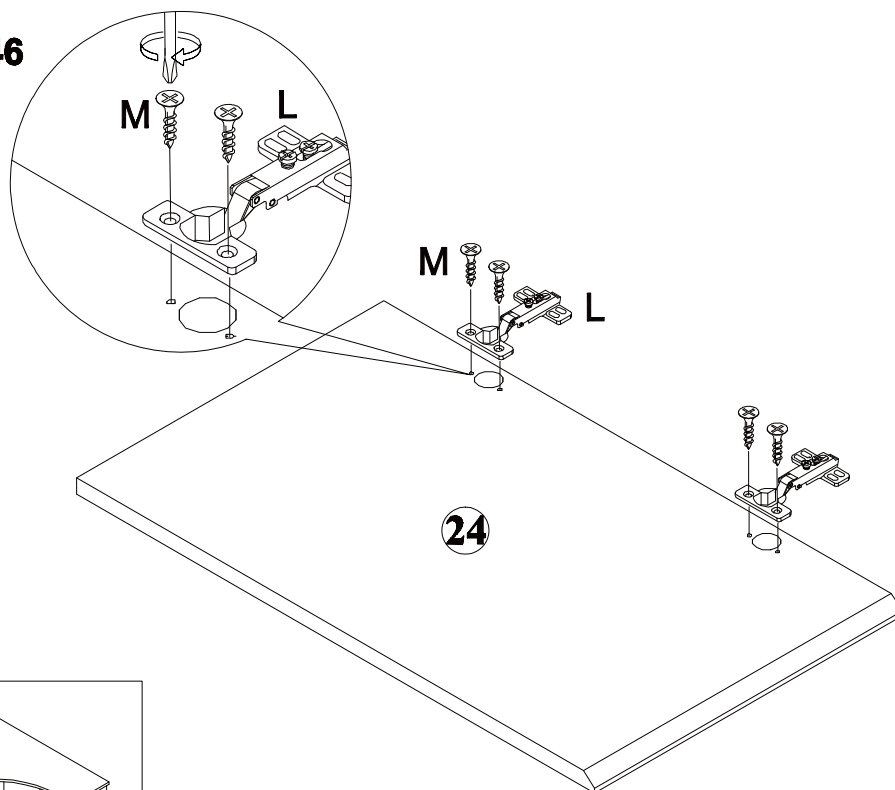

L

 


2pcs


M



 4pcs

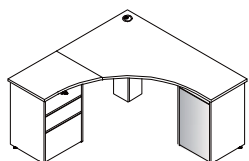

 Step 47

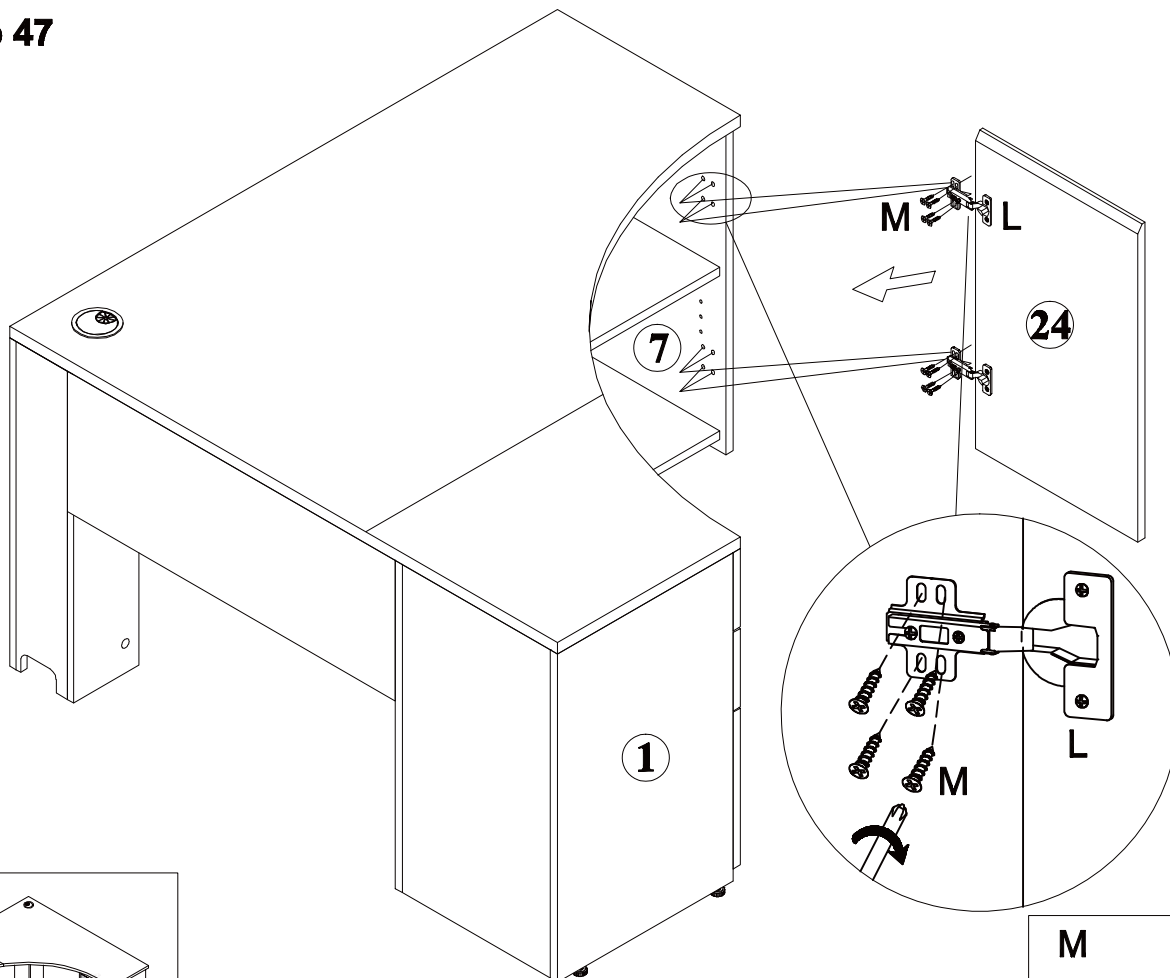


M



8pcs


Hinge adjustment

 If the doors do not appear square or aligned, loosen or tighten the appropriate screws on each case hinge as illustrated.

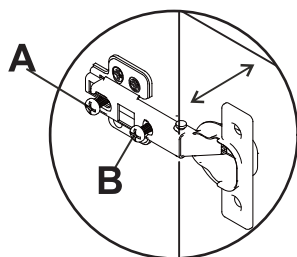


1) Side to side adjustment:

 Loosen screw **A**, adjust gap with screw **B** and re-tighten screw **A**.

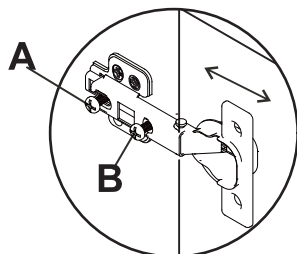

2) Depth adjustment:

 
Loosen screw **A**, push hinge arm forwards or backwards, re-tighten screw **A** and secure screw **B** with a 1/4 turn clockwise.

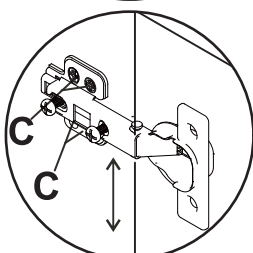

3) Height adjustment:

Loosen screw **C**, adjust door height and re-tighten screw **C**.

 Step 48

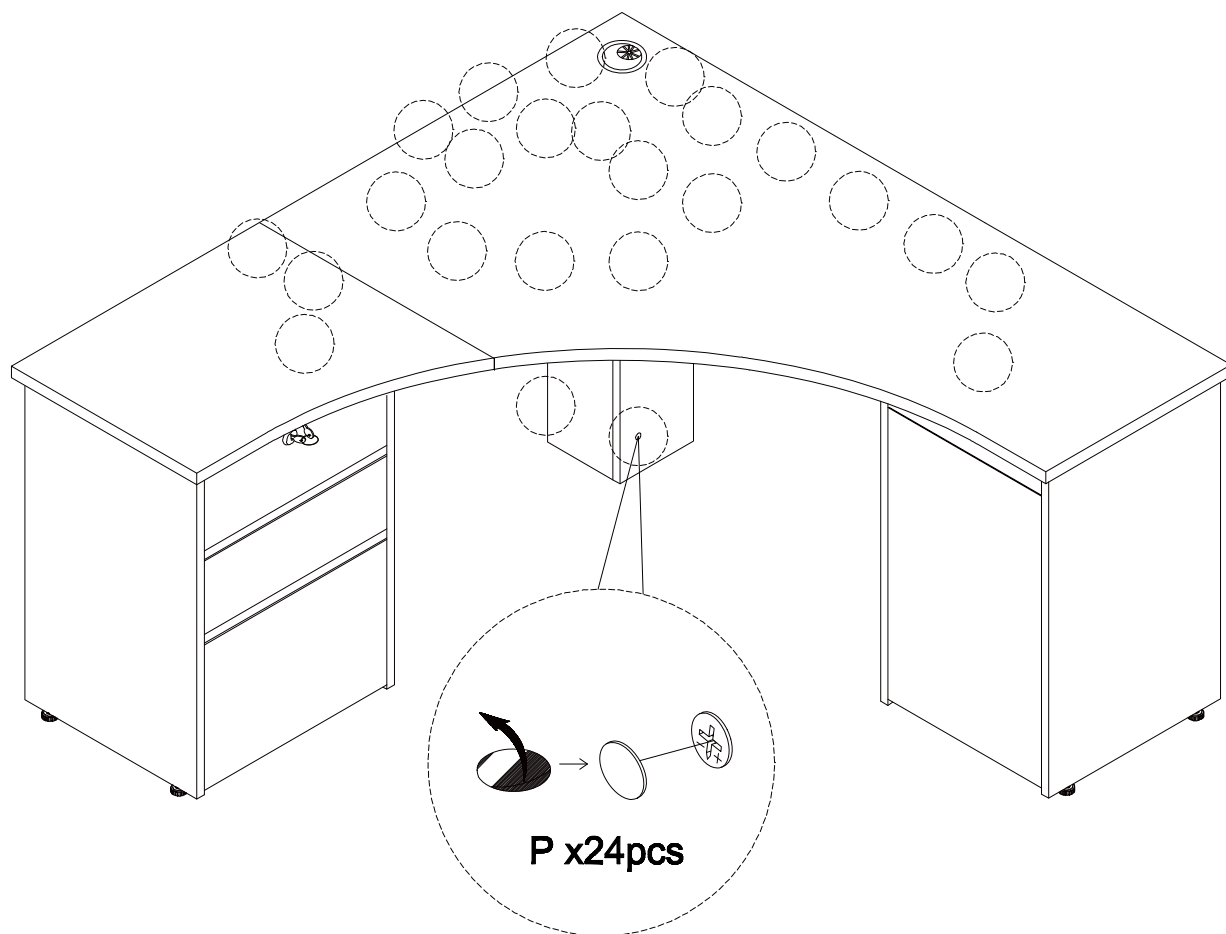

P



24pcs

 
Maximum Load Capacity:

Desk Top-55kg

Stationery Drawer-5kg

Filing Drawer-12kg

Shelf-10kg

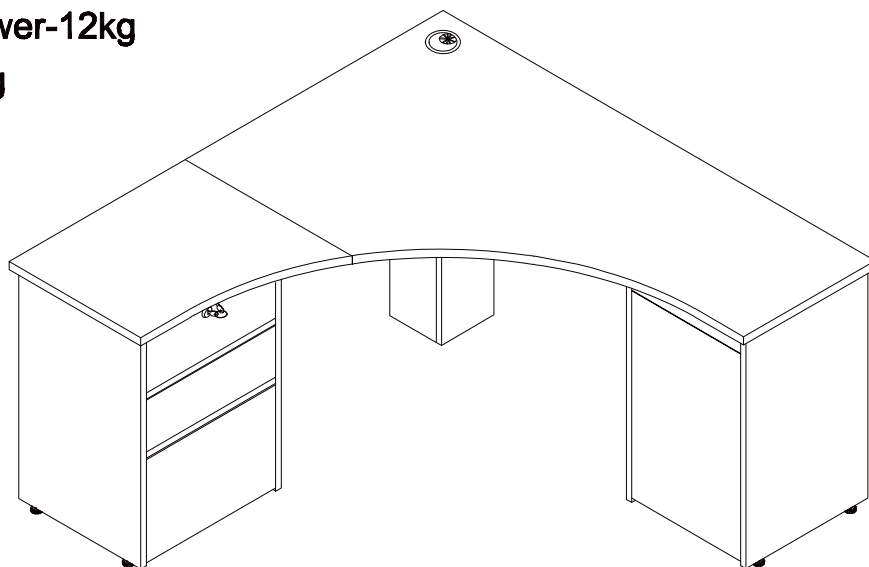

**Your WASHINGTON 1500 x 1500MM CORNER WORKSTATION OPTION1
is now complete and ready for use!**

Care Advice

Care Instructions - PVC/ Melamine Finish Desk

- Keep away and protect from direct sunlight and heat.
- Do not place sharp materials(knife, fork, etc) directly onto your furniture as sharp material may scrape and damage the finish.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbant cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.
- Clean, check and tighten all parts regularly.

Safety Warning

- **WARNING** – Put locking devices on all drawers to prevent children opening them and using them as steps.
- **CAUTION** – This product is intended to hold the maximum weight indicated. Exceeding the maximum weight will result in instability and may cause injury.

Warranty 8 years

Product Warranty – valid for Australian customers only

Officeworks Ltd warrants that this product will be free from defects and work as intended for 8 years from the date of purchase by the original customer.

If the product has any defects or does not work as intended during the Warranty Period, Officeworks will, at its election and at its expense, repair or replace the product.

This warranty does not apply:

- to cosmetic damage;
- to damage caused by consumables used in connection with the product (such as cleaning products);
- where the product has not been used in accordance with all provided instructions;
- to damage arising from fair wear and tear;
- where the product has not been subject to reasonable use;
- where the product has been intentionally or negligently damaged; and/or
- if the customer has attempted to repair the product.

To make a claim under this warranty, please return your product with your receipt or proof of purchase to your nearest Officeworks store or contact 1300 633 423.

This warranty is provided in addition to any rights you may be entitled to under the Competitions & Consumer Act 2010.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Thank you for your purchase. Please retain your receipt to validate warranty.
If you would like to know more about our furniture products, please visit www.officeworks.com.au