 


User Manual

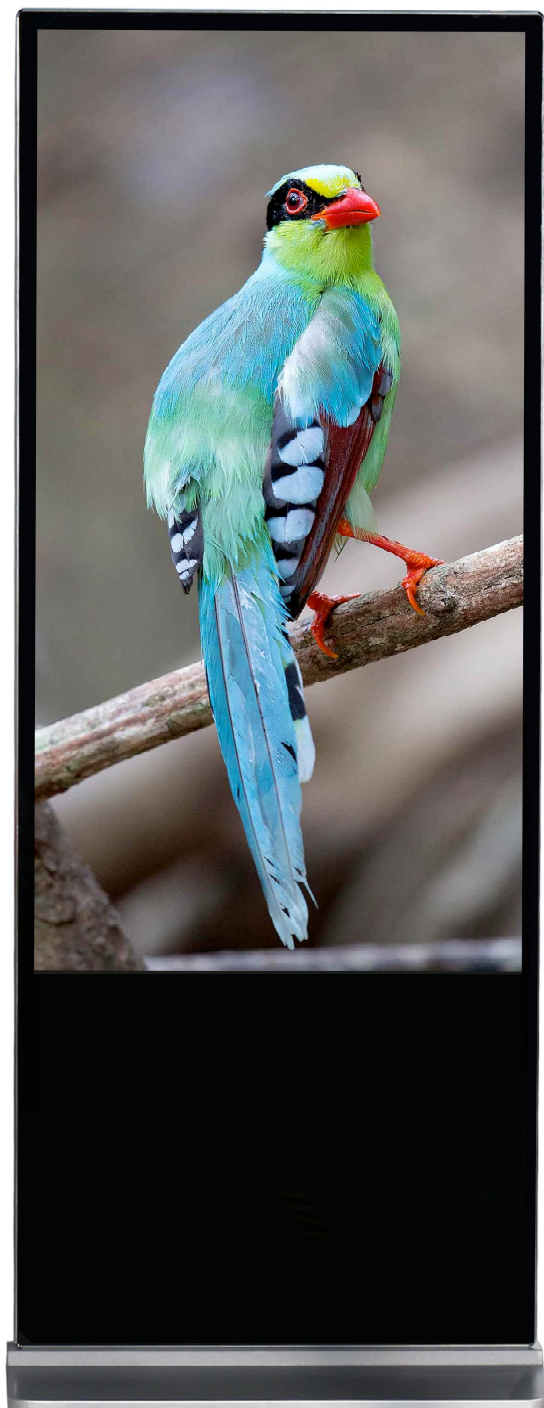

JVL055KAN001BLK
JVL055KAT001BLK
JVL065KAN001BLK
JVL065KAT001BLK



Contents

- Caution and Safety Information.....1**
- 1. Remote Control.....2**
- 2. Home Page.....3**
 - 2.1 Information Publish.....3
 - 2.2. File Manager.....4
 - 2.3 Time Switch.....5
 - 2.4 Network Settings.....5
 - 2.5 Browser.....6
 - 2.6 Application List.....6
 - 2.6.1 Settings.....7
 - 2.6.2 App Manager.....7
 - 2.6.3 System Settings.....8
 - 2.6.4 Cybercast.....13
- Specifications.....14**

Caution and Safety Information



This set should be used indoor.

The set with Infrared could be operated by touch or remote control.



This symbol alerts to the presence of un-insulated dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of serious injury or electric shock.

This symbol indicates an important note regarding operation is described here.



Correct Disposal of this Product

Waste Electrical Electronic Equipment (WEEE)

Your product is designed and manufactured with high quality materials and components which can be recycled and reused. This symbol means that electrical and electronic equipment, at their end-of-life should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/recycling center. Please help to conserve the environment we live in.



To ensure reliable and safe operation of this equipment, please read carefully all the instructions in this user guide, especially the safety information below.



Electrical safety

To prevent overload, don't share the same mains supply socket with too many other items of equipment.

- Do not place any connecting wires where they may be stepped on or tripped over.
- Do not place heavy items on the leads, which may damage them.
- Hold the Mains plug, not the wires, when removing from a socket.
- During a thunderstorm or while leaving the Kiosk for long periods, disconnect the mains power.
- The PCB of the Kiosk is conformal coated to prolong electrical function
- Do not allow water or moisture to enter the kiosk do not use in wet or moist areas such as bathrooms, kitchens or near swimming pools.

Pull the plug out immediately, and seek professional help if:

- the mains plug or cable is damaged.
- liquid is spilt onto the set, or if it is accidentally exposed to water or moisture.
- anything accidentally penetrates the ventilation slots.
- the set does not work normally.

Do not remove the safety covers. There are no user serviceable parts inside. You may invalidate the warranty. Qualified personnel only are permitted to service this apparatus.

To avoid battery leakage, remove exhausted batteries from the remote control handset, or when not using for along period.

Do not break open or throw exhausted batteries on a fire.




Physical safety

Do not block ventilation slots in the back cover. You may place the Kiosk in a cabinet, but ensure at least 5cm (2") clearance all around the unit.

Do not tap or shake the screen, you may damage the internal circuitry. Take good care of the remote control, do not drop it or allow it to come into contact with liquids.

To clean the TV use a soft dry cloth. Do not use solvents or petrol based fluids. For stubborn stains, you may use a damp soft cloth with diluted detergent.

1. Remote Control

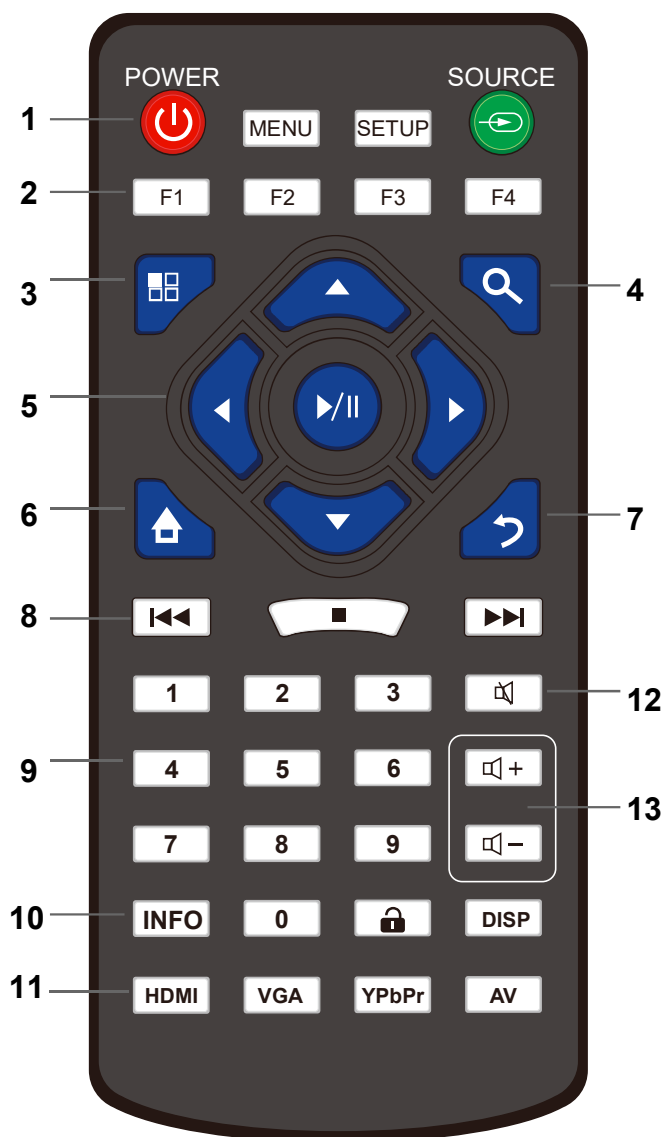


- 1. **POWER:** Turn the TV on/standby.
MENU: System setup menu.
SETUP: No Function.
SOURCE: Press to display the input source.
- 2. **F1:** Picture status.
F2: Sound status.
F3: Display mode status.
F4: No Function.
- 3. No Function.
- 4. No Function.
- 5. **Arrow Keys:** Allows you to navigate the on-screen menus and adjust the system settings to your preference.
- 6. **Home Page Button:** System setup menu.
- 7. **Back Up Button:** Exit the OSD menu.
- 8. **Back & Forward Buttons:** No Function.
- 9. **Number Buttons:** Press 0-9 to select the number.
- 10. **INFO:** Press to display the current mode information.
LOCK & DISP: No function.
- 11. **HDMI:** Press to go to the HDMI input directly.
VGA/YPbPr/AV: No function.
- 12. **Mute Button:** Press to mute the sound, press again to unmute.
- 13. **Vol+/-:** Adjust the volume.

2. Home Page

The Home Page has six sections:

- Information Publish
- File Manager
- Time Switch
- Network Settings
- Browser
- Application List

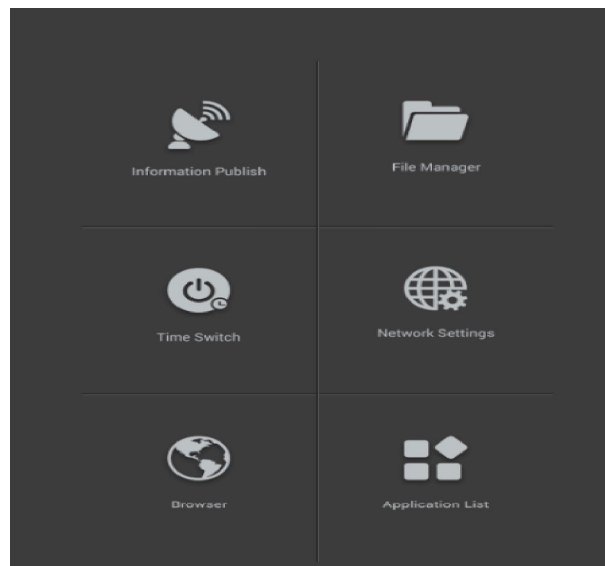


2.1 Information Publish

This function is not available on the 55" and 65" Kiosks.


2.2 File Manager

 Use this to view the files stored in the memory or on external USB drives.

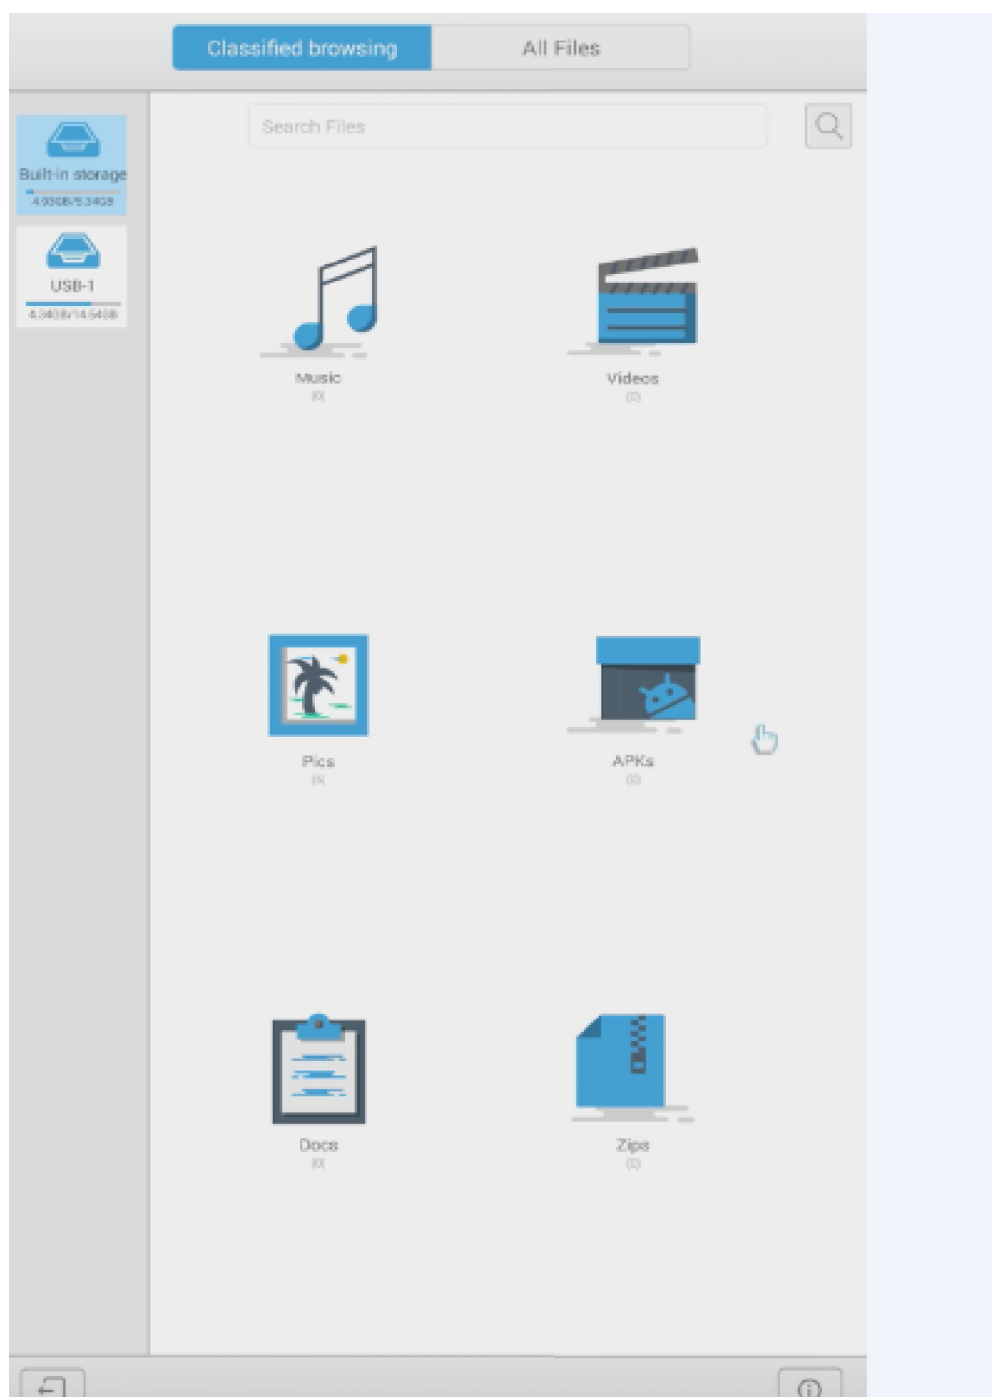

2.3 Time Switch

Use this to Set Auto Bootup and Shutdown Time settings for up to four time periods.

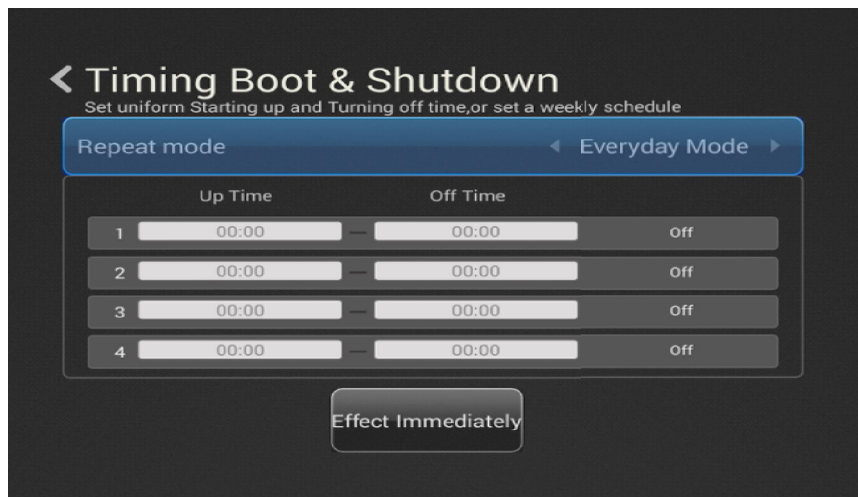


The screenshot shows the 'Timing Boot & Shutdown' settings screen. At the top, there is a title bar with a back arrow and the title 'Timing Boot & Shutdown'. Below the title bar, a subtitle reads 'Set uniform Starting up and Turning off time, or set a weekly schedule'. A 'Repeat mode' button is set to 'Everyday Mode'. Below this, there is a table with four rows, each representing a time period. Each row has columns for 'Up Time', 'Off Time', and a status. All times are currently set to '00:00' and all statuses are 'Off'. At the bottom of the screen, there is a button labeled 'Effect Immediately'.

	Up Time	Off Time	Status
1	00:00	00:00	Off
2	00:00	00:00	Off
3	00:00	00:00	Off
4	00:00	00:00	Off

2.4 Network Settings

 Use this to setup and connect to Wired Networks (LAN) and Wireless Networks (Wi-Fi).

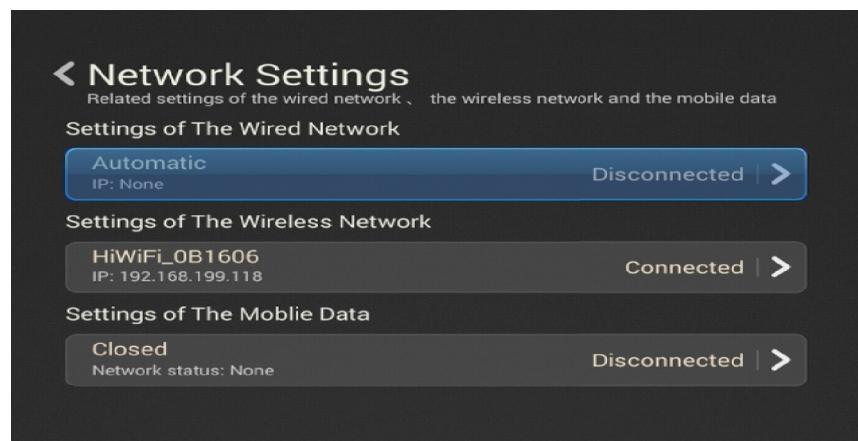


The screenshot shows the 'Network Settings' screen. At the top, there is a title bar with a back arrow and the title 'Network Settings'. Below the title bar, a subtitle reads 'Related settings of the wired network, the wireless network and the mobile data'. The screen is divided into three sections: 'Settings of The Wired Network', 'Settings of The Wireless Network', and 'Settings of The Mobile Data'. Each section has a button with a status indicator and a right arrow. The 'Wired Network' button is labeled 'Automatic' and 'IP: None', with a status of 'Disconnected'. The 'Wireless Network' button is labeled 'HiWiFi_0B1606' and 'IP: 192.168.199.118', with a status of 'Connected'. The 'Mobile Data' button is labeled 'Closed' and 'Network status: None', with a status of 'Disconnected'.

Network Type	Setting	IP Address	Status
Wired Network	Automatic	IP: None	Disconnected
Wireless Network	HiWiFi_0B1606	IP: 192.168.199.118	Connected
Mobile Data	Closed	Network status: None	Disconnected


2.5 Browser

Use this to browse the internet.

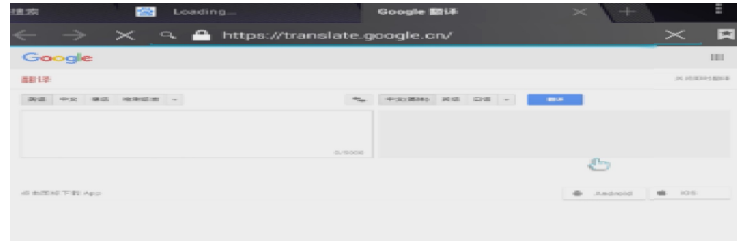


2.6 Application List

Use this to view all of the apps that are installed on the system.

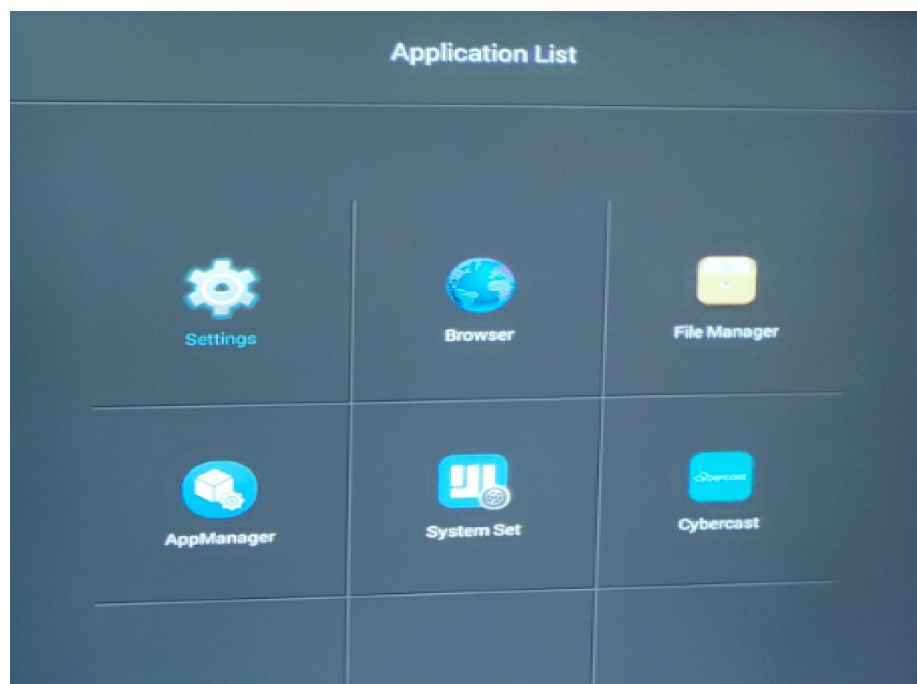


2.6.1 Settings

 Use this to select a Wi-Fi network, check the internal storage information, and restore the default Settings.

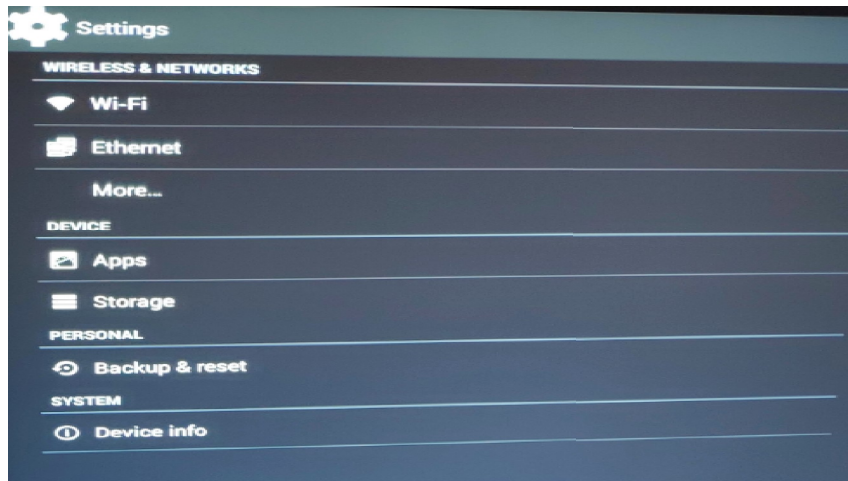


2.6.2 App Manager

 Use this to view the Installed Apps, Uninstall Apps, and to Clear Cache.

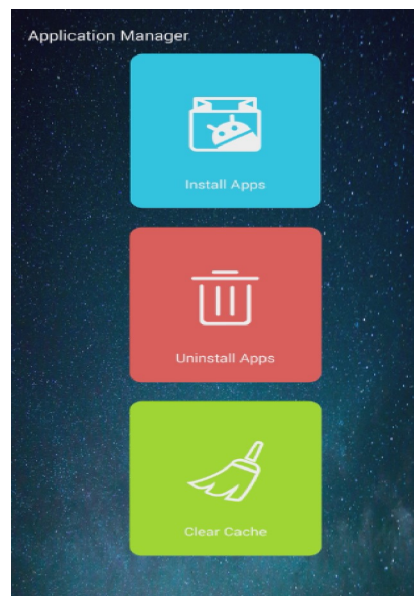


2.6.3 System Settings

 The following System Settings can be selected:

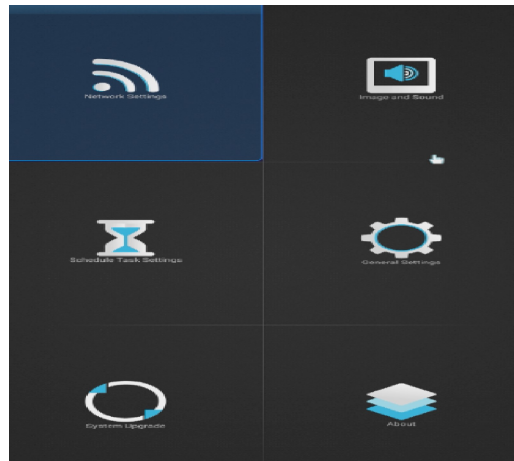


2.6.3-1 Network Settings

 Use this to setup and connect to Wired Networks (LAN) and Wireless Networks (Wi-Fi).

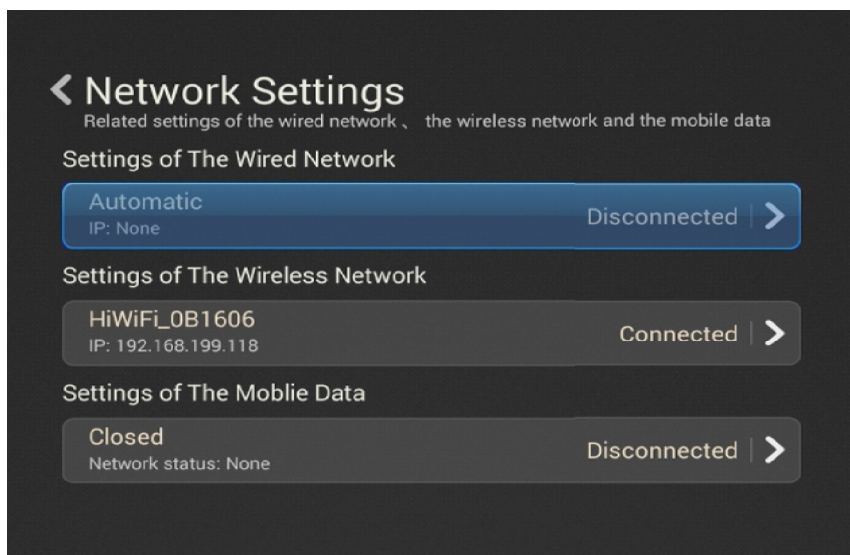


2.6.3-2 Image and Sound

 Use this to select the Image Settings and the Sound Settings.

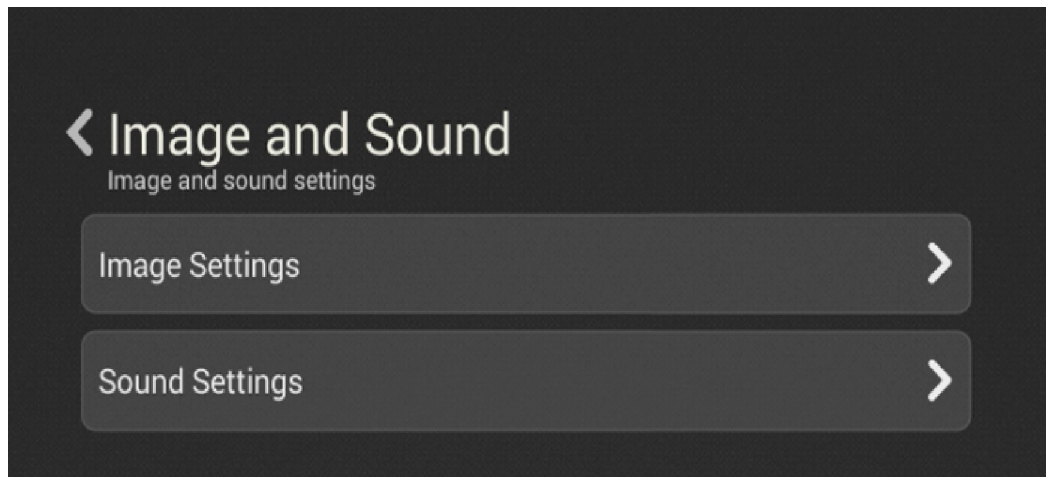


2.6.3-3 Schedule Task Settings

Use this to select Schedule Tasks for Timing Boot & Shutdown, Changing Volume, and Switch Port.

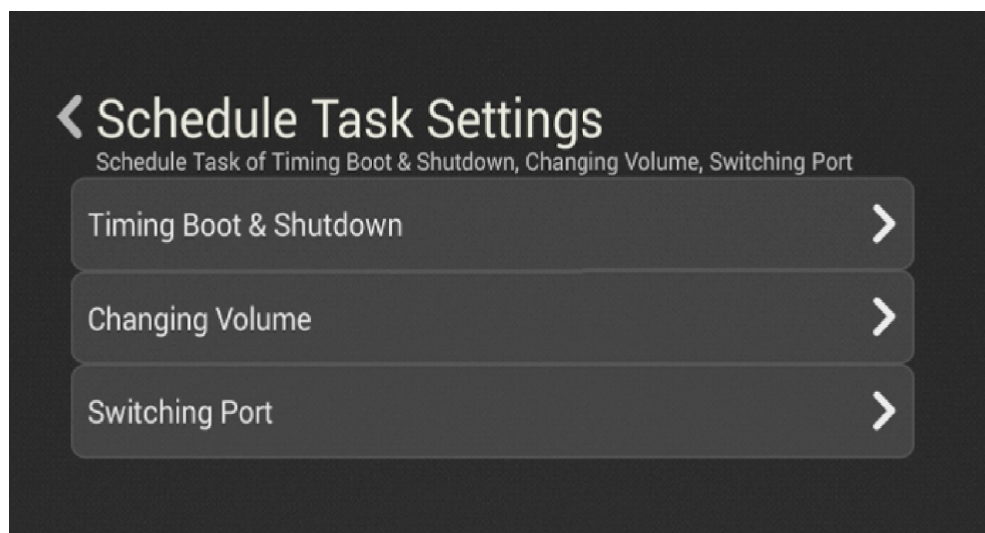

2.6.3-3-1 Timing Boot & Shutdown

Use this to set Auto Bootup and Shutdown Time settings for up to four time periods.

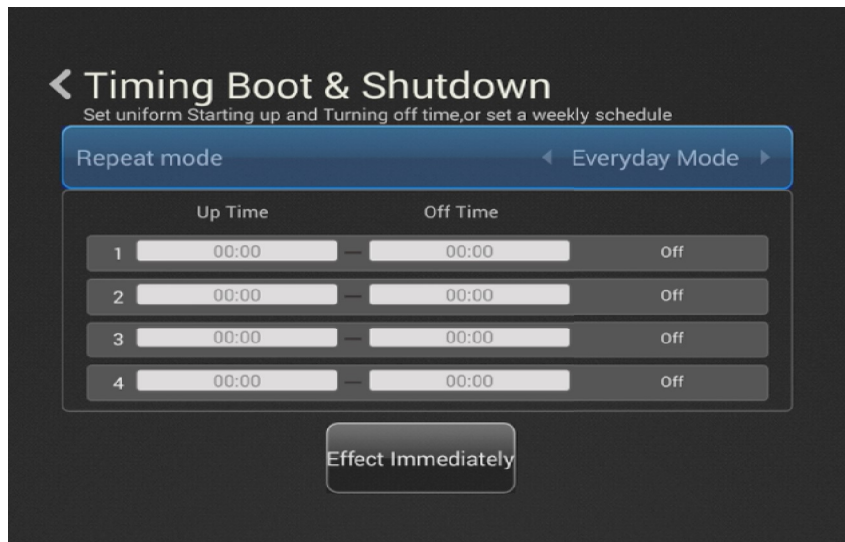


The screenshot shows the 'Timing Boot & Shutdown' settings screen. At the top, there is a back arrow and the title 'Timing Boot & Shutdown' with a subtitle 'Set uniform Starting up and Turning off time, or set a weekly schedule'. Below this is a 'Repeat mode' section with a blue bar containing 'Repeat mode' and 'Everyday Mode' with left and right arrows. The main area is a table with columns 'Up Time' and 'Off Time'. It contains four rows, each with a number (1-4), a time input field (00:00), a separator (—), another time input field (00:00), and a status (Off). At the bottom is a button labeled 'Effect Immediately'.

	Up Time	Off Time	
1	00:00	00:00	Off
2	00:00	00:00	Off
3	00:00	00:00	Off
4	00:00	00:00	Off

Effect Immediately

2.6.3-3-2 Changing Volume

Use this to set the Volume level settings for up to four time periods.

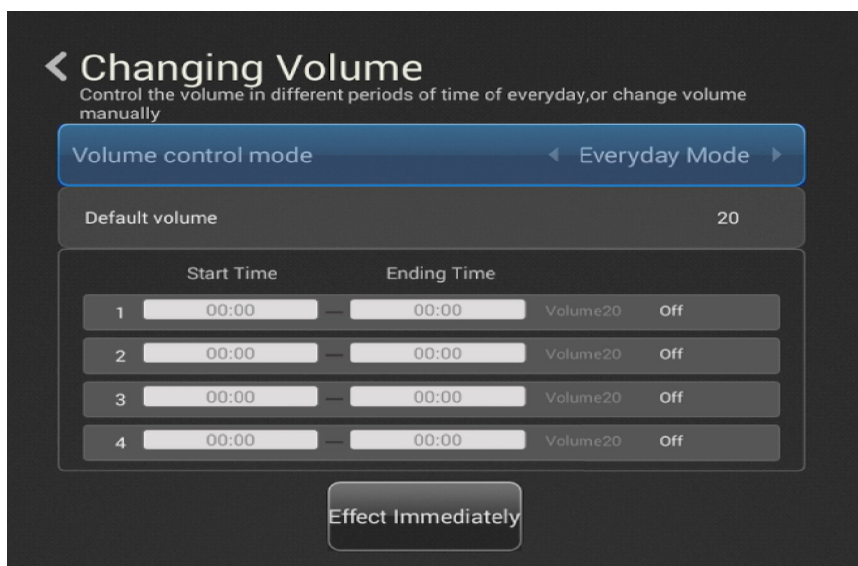


The screenshot shows the 'Changing Volume' settings screen. At the top, there is a back arrow and the title 'Changing Volume' with a subtitle 'Control the volume in different periods of time of everyday, or change volume manually'. Below this is a 'Volume control mode' section with a blue bar containing 'Volume control mode' and 'Everyday Mode' with left and right arrows. The main area is a table with columns 'Start Time' and 'Ending Time'. It contains four rows, each with a number (1-4), a time input field (00:00), a separator (—), another time input field (00:00), a volume level (Volume20), and a status (Off). At the bottom is a button labeled 'Effect Immediately'.

	Start Time	Ending Time		
1	00:00	00:00	Volume20	Off
2	00:00	00:00	Volume20	Off
3	00:00	00:00	Volume20	Off
4	00:00	00:00	Volume20	Off

Effect Immediately


2.6.3-3-3 Switching Port

 Use this to set the Switching Port for up to four time periods.

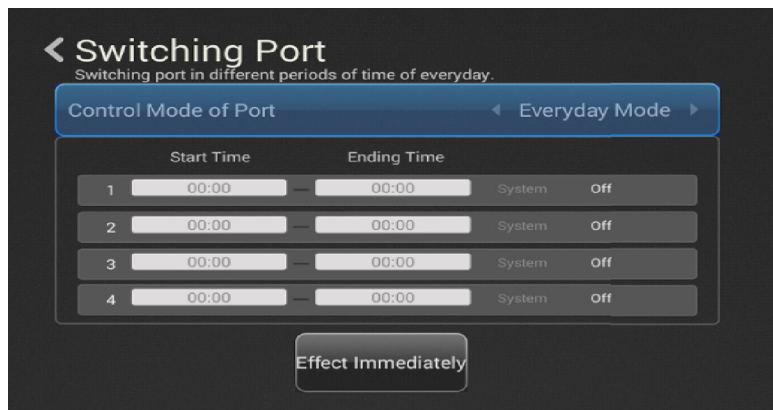


2.6.3-4 General Settings

 Use this to access the different General Settings on the System.

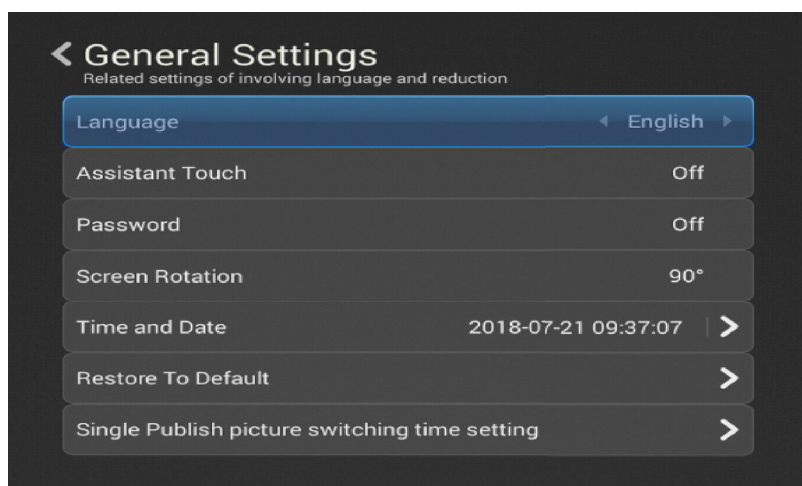


2.6.3-5 System Upgrade

Use this to perform a System Upgrade (only if required).

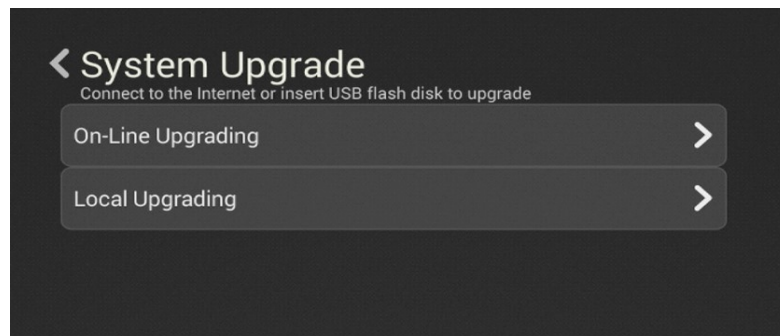

2.6.3-6 About

 Use this to check the software version details.

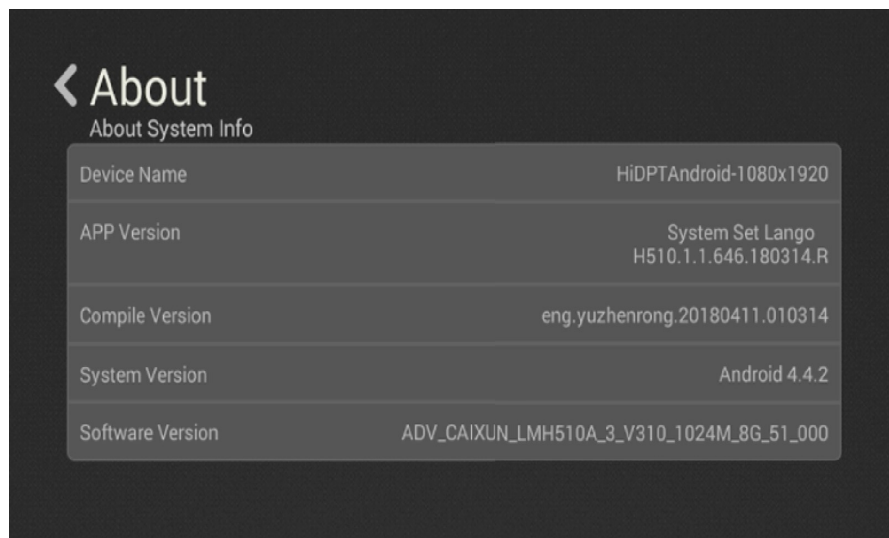

2.6.4 Cybercast

To use the Cybercast cloud content management system, select the Cybercast app from the Application List and then enter your Cybercast username and password.



Specifications

	55"	65"
Screen Size (diagonal):	55"(1387.8mm)	65"(1639mm)
Resolution (max):	3840x2160	3840x2160
Aspect Ratio:	16:9	16:9
Brightness (cd/m²):	300cd/m ²	300cd/m ²
Contrast Ratio:	1200:1	1200:1
Main Power :	AC 110-240V	AC 110-240V
Power consumption (max):	110W	140W
Power consumption (standby):	<0.5W	<0.5W
Operating Temp:	0-40°C	0-40°C
Audio Output:	2x5W	2x5W



Advanced Electronic
Resources Pty Ltd
1300 91 151 1

www.jvl.net.au