 




ASSEMBLY INSTRUCTIONS

NIXIE ELECTRIC HEIGHT ADJUSTABLE DESK KANIXIEWE

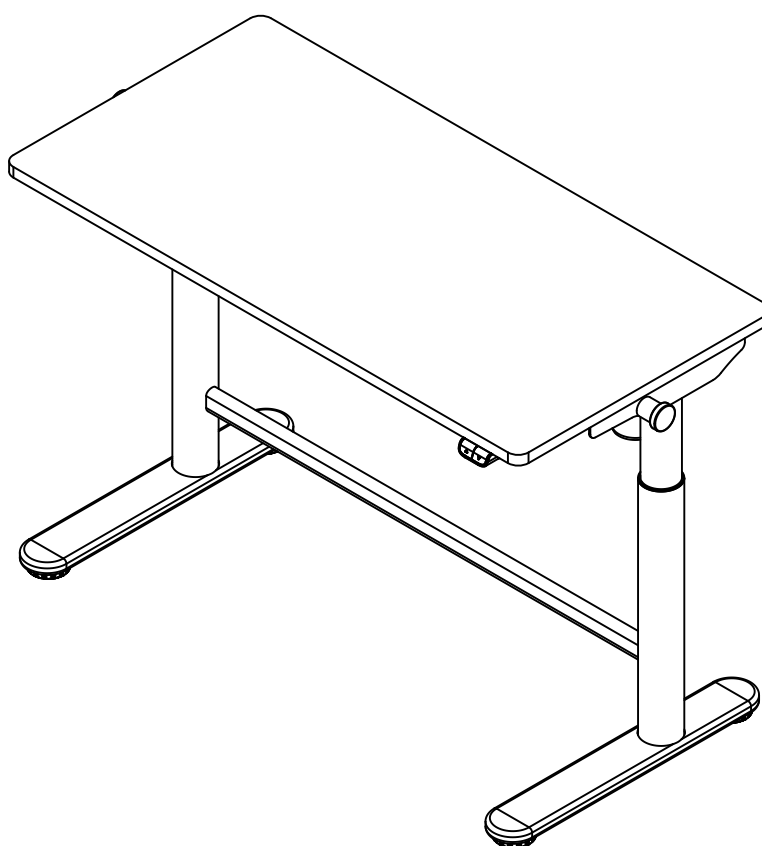

This design and instruction booklet is subject to copyright.
www.officeworks.com.au



1 Carton

For spare parts or hardware call 1300 OFFICE (1300 633 423).

Estimated Assembly Time: 20 minutes

Assembly Video

- To view an assembly video, go to <https://www.officeworks.com.au/>
- Search the product by item code or name:

A blue search bar with the Officeworks logo on the left, which includes a red pushpin icon and the tagline "make bigger things happen". The search bar contains the placeholder text "item code or name" and a magnifying glass icon on the right.

- Click on the icon to watch the video.



Customer Service Contact Details



General Advice

Spare Parts & Hardware

 
1300 OFFICE (1300 633 423)



People Required



Tools Required



CAUTION: Do not use tools other than those required, as this can damage your new item.

NOTE

- Please check you have all hardware before assembling.
- If you are missing any hardware, please contact 1300 OFFICE (1300 633 423).
- Please ensure you have the name of the item, required hardware part and quantity.
- Please retain your receipt as proof of purchase to validate your warranty.

CAUTION

- Do not tighten screws before all screws are in the right place.
- Do not use this product unless all bolts and screws are firmly secured.
- Check that all bolts and screws are securely tightened at least every 4 months.

WARNING

- If parts are missing, broken, damaged or worn, stop using the product until all repairs are made using manufacturer authorised parts.
- Failure to follow these warnings could result in serious injury.

DANGER

- CHILDREN MUST BE SUPERVISED.

Safety and Warnings

- This table complies with the prescribed safety regulations. Inappropriate use may cause damage to persons and table.
- Please read the operation manual prior to start using the table. It provides you with important information about safety, use, installation and maintenance of the table, and thus protecting you and your children and avoiding damage on the table.
- Please guard this operation manual and pass it on to any future owner!
- Do not place any objects above 55 cm underneath the table.
- The appliance is only to be used with the unit provided (Power supply).

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

The appliance is only to be used with the power supply unit provided with the appliance.

If the supply cord and supply unit is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Operation time: Max.2min on/18 min off

Max Speed: 15mm/s

Desktop Size: Length 1000mm, Width 500mm, Thickness 18mm

Lowest Position: 550mm

Function Description: Schoolbag hook can hang schoolbags or heavy objects weighing less than 10KG

Input Voltage: 100-240V

Stroke: 340mm

Highest Position: 890mm

Usage

The electromotive, height-adjustable tables are designed for workstations in dry work environments only. The table height is infinitely adjustable, so that it can be set to the most ergonomically suitable working level.

 
 
 
 
 
 
 
 
They have not been designed for other purpose than those included in this manual,e.g., they are not to be used in ares of high humidity or dampness, not for lifting people. Any other use is at one's own risk!

Do not crawl, lie or move around under the table frame,and do not sit or stand on the table frame.





Liability: The manufacturer accepts under no circumstances warranty claims or liability claims for damage sarising from improper use or handling of the table frame other than that described in this operation manual.



Parts List

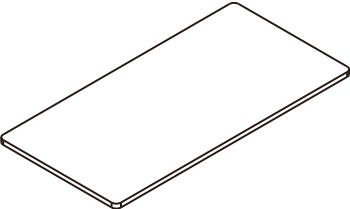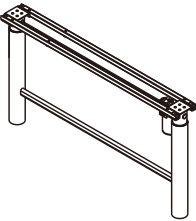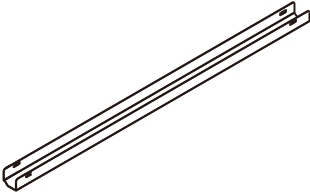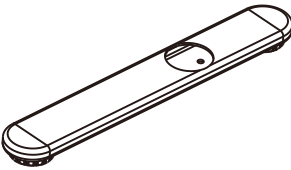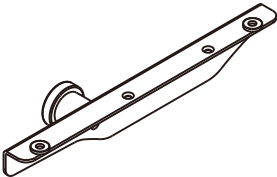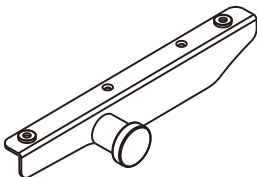
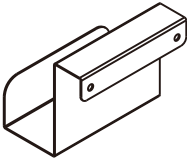
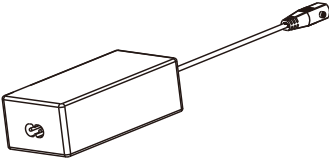


	
① x1	② x1
	
③ x1	④ x2
	
⑤ x1	⑥ x1
	
⑦ x1	⑧ x1

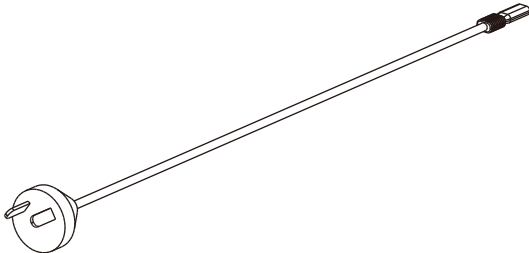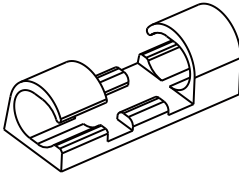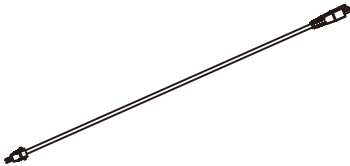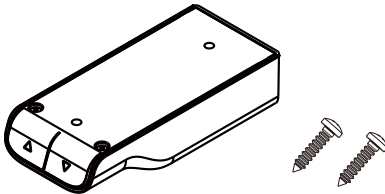    Parts List


	
⑨ x1	⑩ x4
	
⑪ x1	⑫ x1

   Hardware List


Hardware Spare Parts Number-HWKANIXIEH

				
M8x16mm	M5x8mm	M5x12mm	3x3	5x5
Ax4	Bx4	Cx8	Dx1	Ex1

 Spare Parts Number-HWPOWERCAB

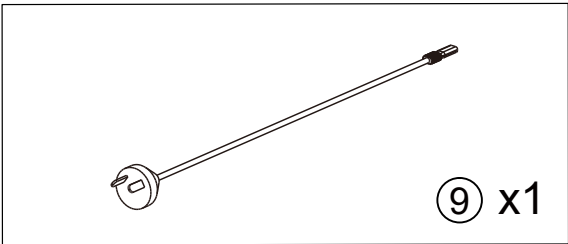


Spare Parts Number-HWKANIXIEC

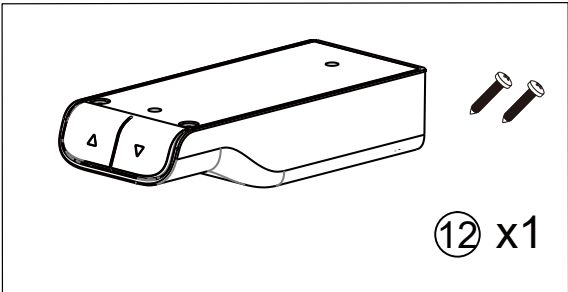 

Step 1

 Install the feet

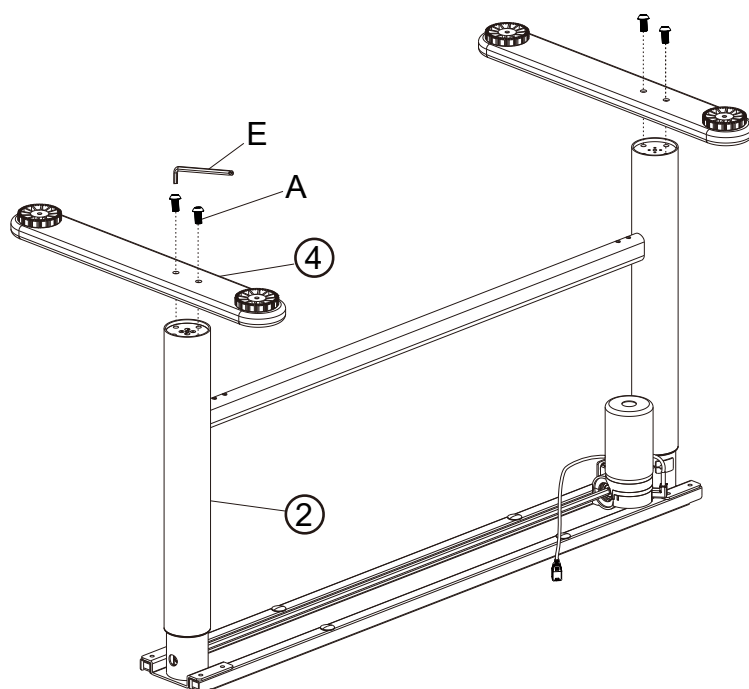


Ax4



E(5x5)

Step 2

 Install left and right support plates

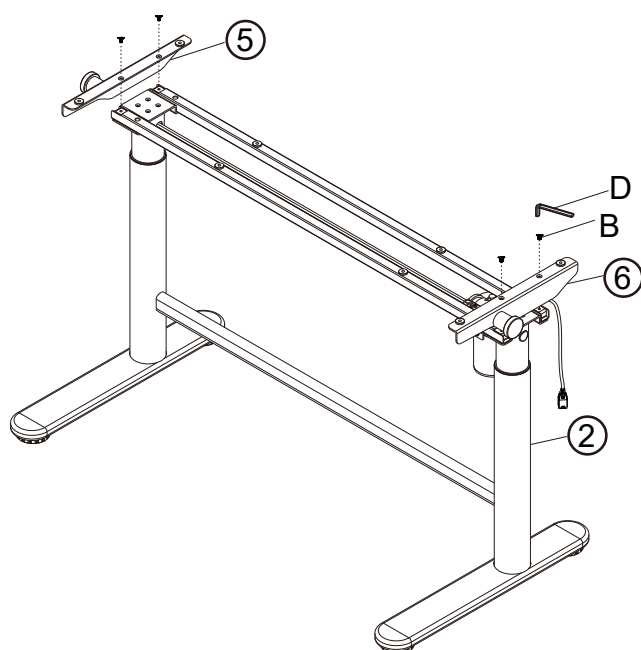


Bx4





D(3x3)

 Step 3

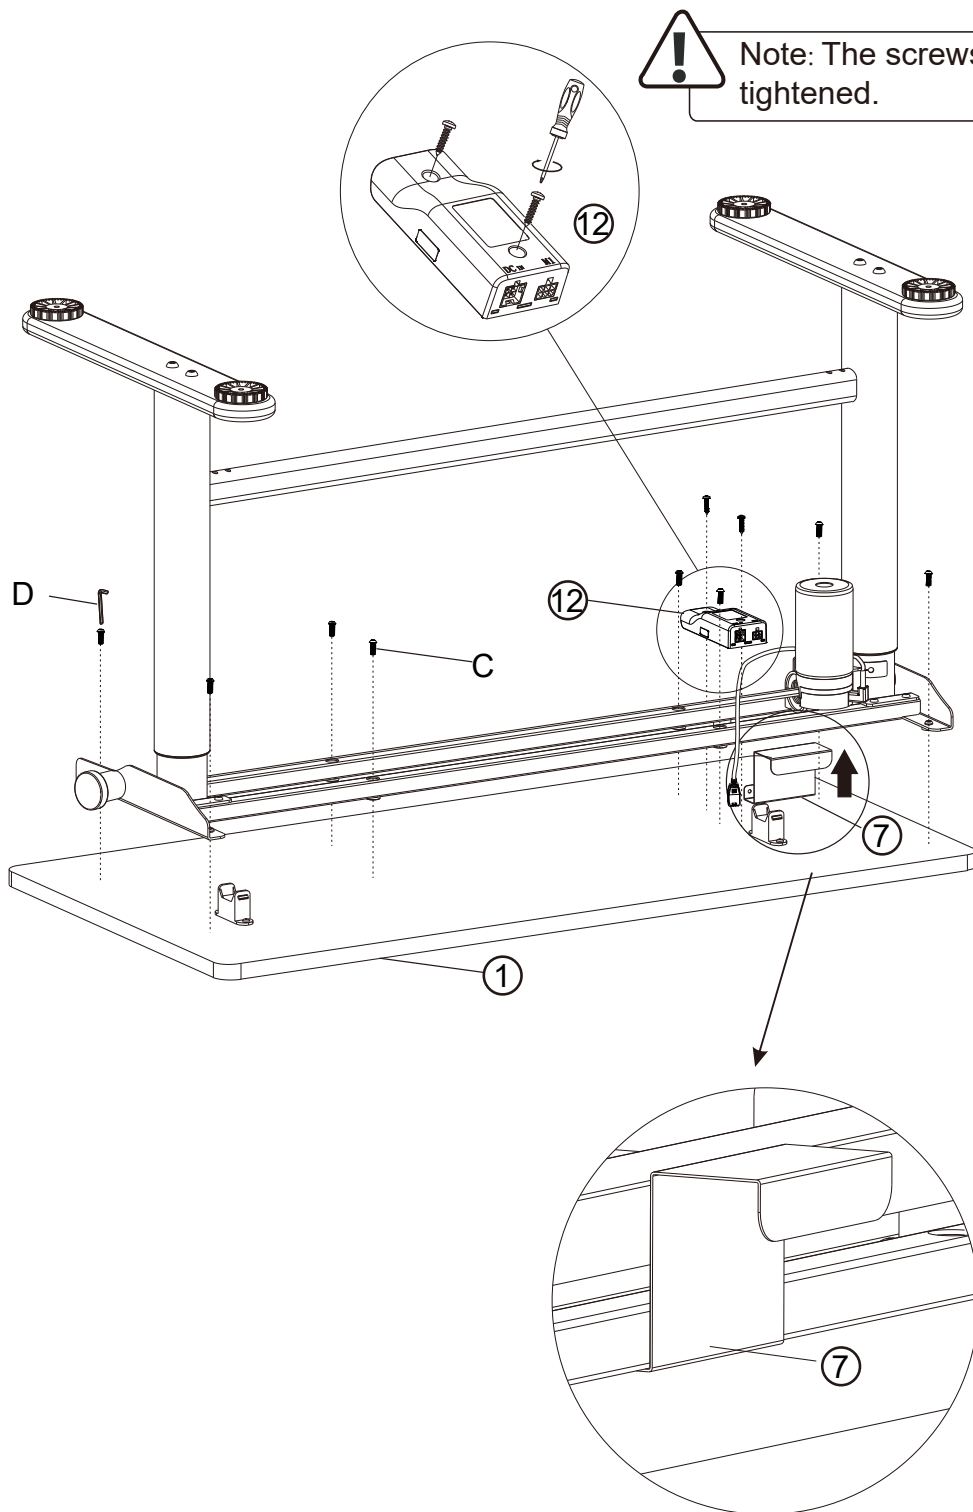Install desktop, control panel and adapter bracket




Ensure part ⑦ sits under the beam before assemble desktop

	
Cx8	3x3 Dx1



Step 4

Install the protective cover and lids

 Before

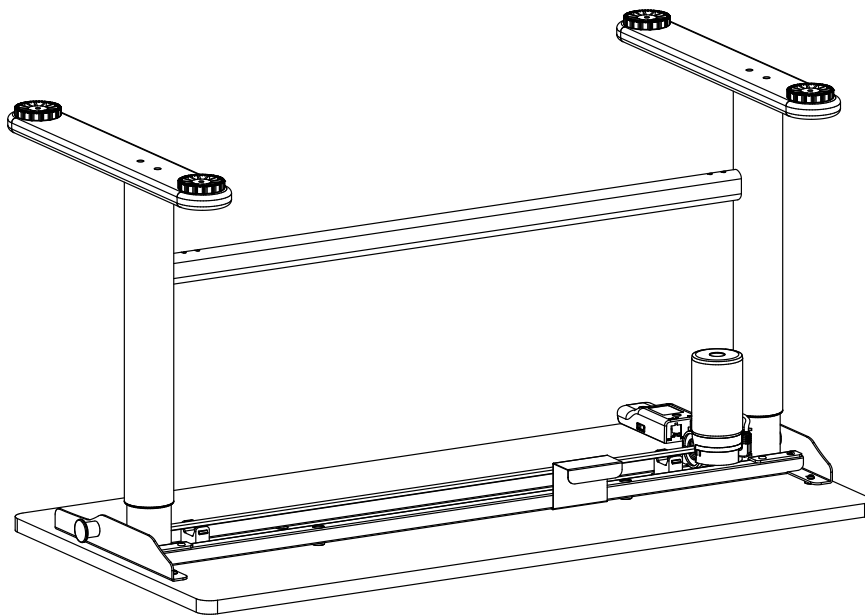


After

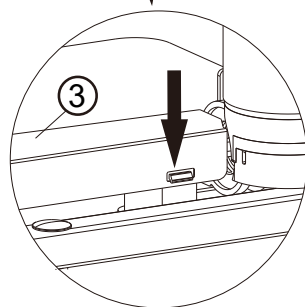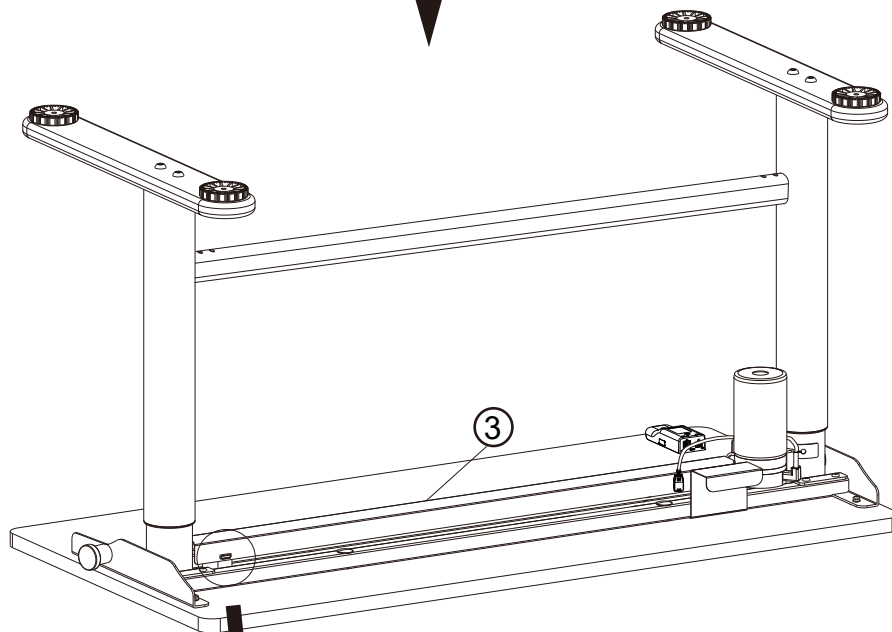  


Step 5

 Connect each cable to the adapter

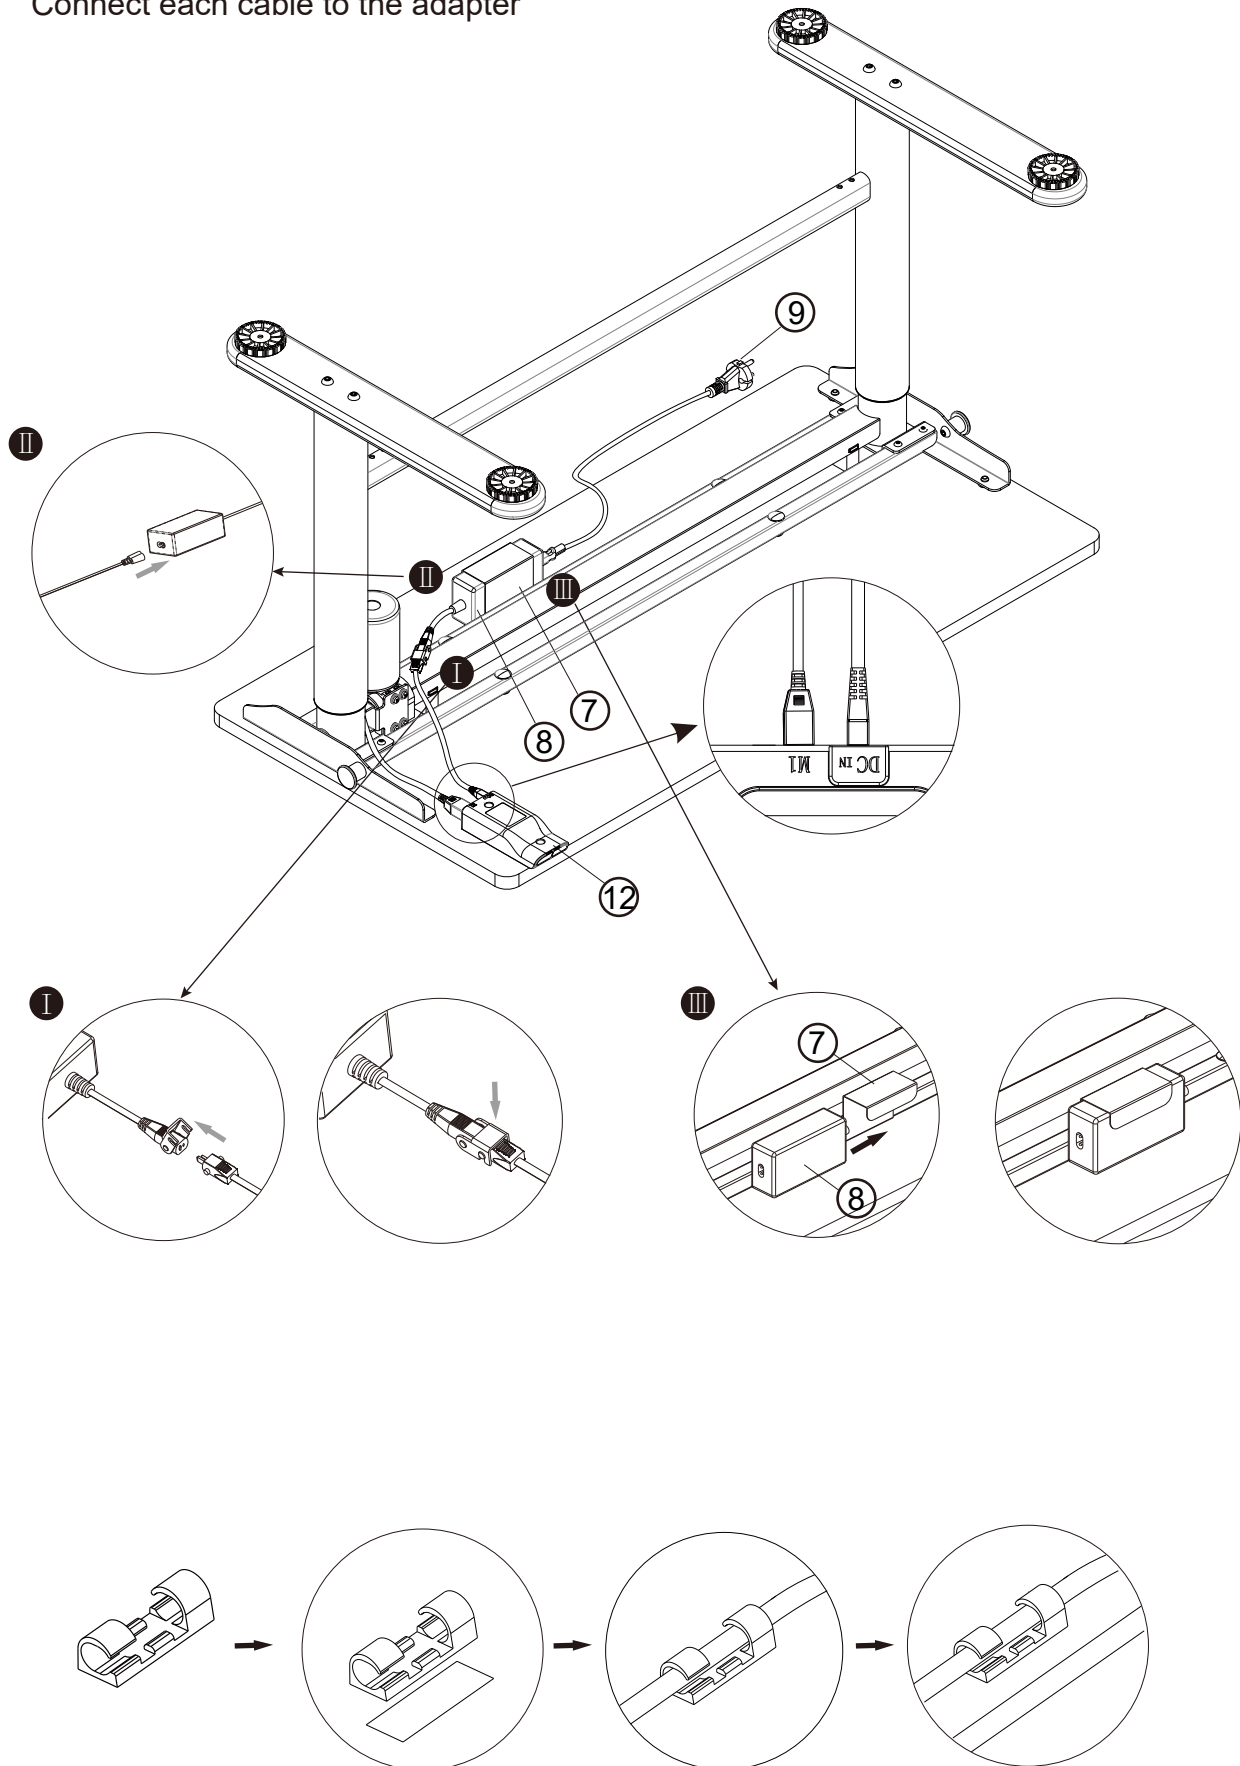

Step 6

 Finish

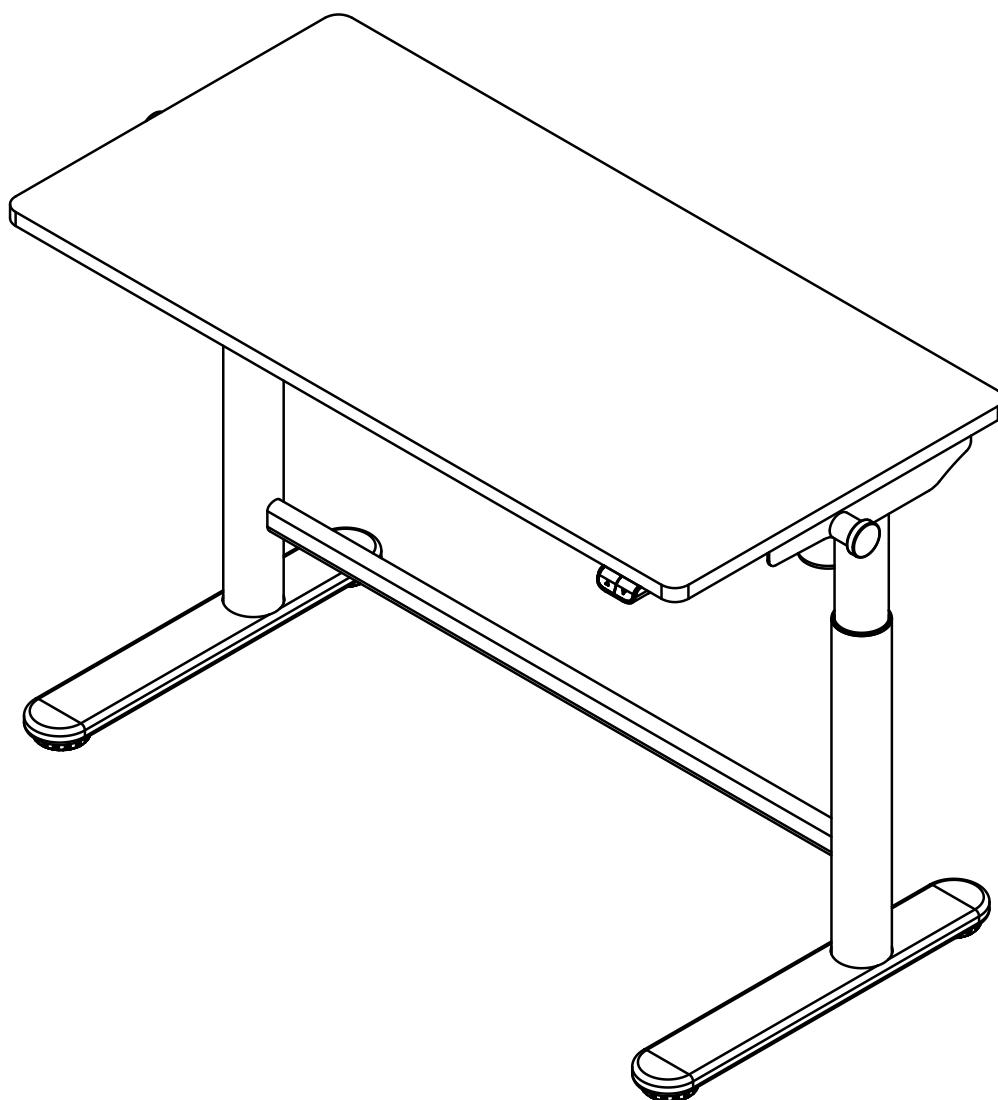

Maximum weight capacity



CAUTION: This product is intended to hold the maximum weight indicated. Exceeding the maximum weight will result in instability and may cause injury.

How to use control panel

●	“▲”	Adjust the desk upwards
●	“▼”	Adjust the desk downwards

Operation

- Button Lift Function

Press the “▲” or “▼” button to adjust the height of the desk.

 
- Reset Function

(1) When the lifting system fails, release the button, long press the “▼” button, the reset will be finished until the lift system rebound and stop after reaching the bottom.

- Anti-Collision Safety System

The situation that lifting system meets obstacles will trigger this function and then please follow step (1). Press and hold buttons “▲” and “▼” for more than 5s to turn on or turn off anti-collision safety system.

If the anti-collision system is too sensitive, please check if the control panel was tightened with the desktop.

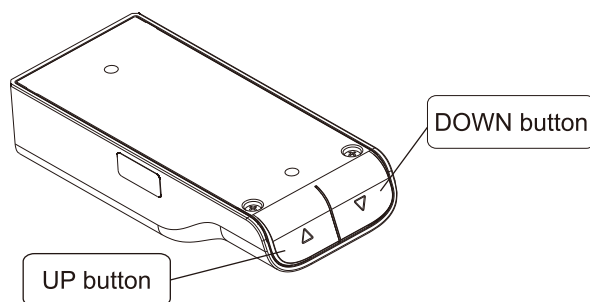

Common fault treatment

The following tips will help you detect and eliminate the common fault and error. If the fault you met is not listed below, please contact 1300 OFFICE (1300 633 423). Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

Error Code	Description	Method
E01	Overwork	Please retry 18 mins later
E02	Overtemperature	Please retry 18 mins later
E03/E04	Overloaded	Please reset
E05/E06/E10	The legs cannot move in the process of rising or going down	Please reset
E07/E08/E20/E21/E22//E23	All the cables be connected well	Please reset
E09	The weight distribution on two sides of table is severely unbalanced.	Please reset



Attention

- 1.Power supply:AC100V-240V,50/60HZ
- 2.Service Environment:0-40℃
- 3.Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.
- 4.The electric box contains electronic components, metals,plastics,wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste
- 5.Check carefully to ensure correct and complete assembly before using.
- 6.Be familiar with all functions and program settings of the product before first use.

- 7.Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on manufacturers.
- 8.Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.
- 9.Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
- 10.Please make sure there is no hazard sources in your operating environment.e.g. do not litter the tools around. Always be careful to treat the packaging, materials in order to avoid any possible danger,e.g. plastic bag may lead to choking hazard to children.
- 11.Keep the original package of the equipment if necessary in case of the future use in transportation.
- 12.If there appears damage of the power cord, please contact the manufacturer or a professional for replacement.

Warranty 3 years

Product Warranty – valid for Australian customers only

Officeworks Ltd warrants that this product will be free from defects and work as intended for 3 years from the date of purchase by the original customer.

If the product has any defects or does not work as intended during the Warranty Period, Officeworks will, at its election and at its expense, repair or replace the product.

This warranty does not apply:

- To cosmetic damage;
- To damage caused by consumables used in connection with the product (such as cleaning products);
- Where the product has not been used in accordance with all provided instructions;
- To damage arising from fair wear and tear;
- Where the product has not been subject to reasonable use;
- Where the product has been intentionally or negligently damaged; and/or if the customer has attempted to repair the product.

To make a claim under this warranty, please return your product with your receipt or proof of purchase to your nearest Officeworks store or contact 1300 633 423.

This warranty is provided in addition to any rights you may be entitled to under the Competitions & Consumer Act 2010.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Thank you for your purchase. Please retain your receipt to validate warranty. If you would like to know more about our furniture products, please visit www.officeworks.com.au