 


# Kadink

 







## Assembly Instructions

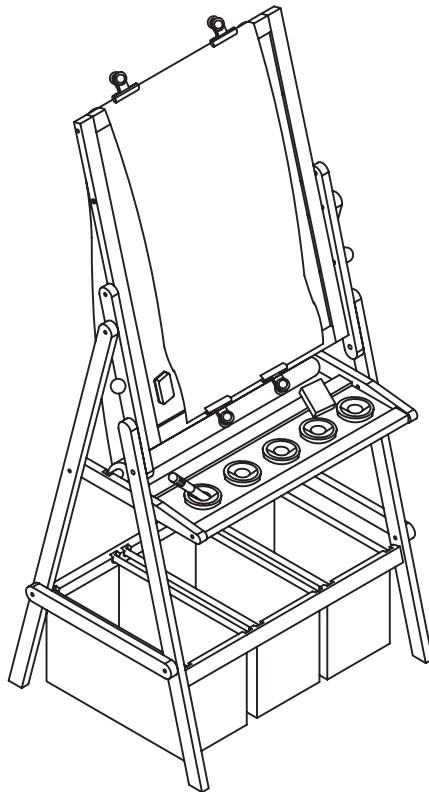





### KDHJ122

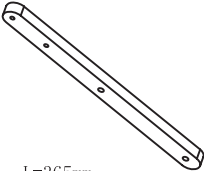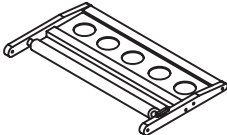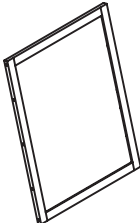   





 
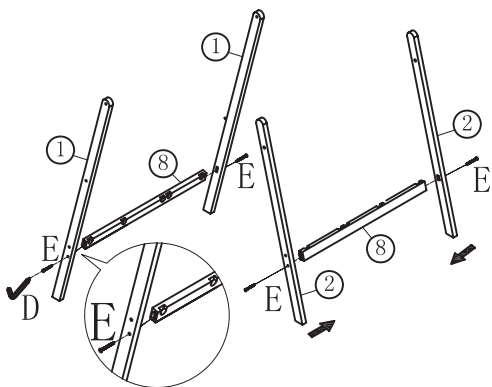 
**Important**

**Age: 3 years +**

 
Components			
 <p>L=878mm ① 2pcs</p>	 <p>L=694mm ② 2pcs</p>	 <p>L=345mm ③ 2pcs</p>	 <p>L=365mm ④ 2pcs</p>
 <p>Tray&amp;Paper roll ⑤ 1pc</p>	 <p>Black&amp;White Board ⑥ 1pc</p>	 <p>L=338mm ⑦ 6pcs</p>	 <p>L=530mm ⑧ 2pcs</p>

Accessories					
 <p>Eraser*1pc</p>	 <p>Cup*5pcs</p>	 <p>White Marker *4pcs</p>	 <p>Chalk*1pc</p>	 <p>Fabric bag*3pcs</p>	 <p>Clip*4pcs</p>


Hardware				
 <p>M 6*25mm A*14pcs</p>	 <p>B*2pcs</p>	 <p>C*4pcs</p>	 <p>D*1pc</p>	 <p>E*4pcs</p>




Step1

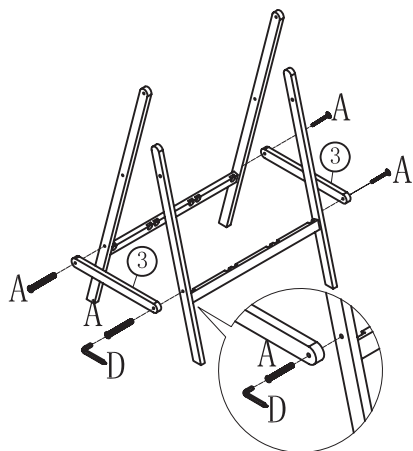

 
Step2

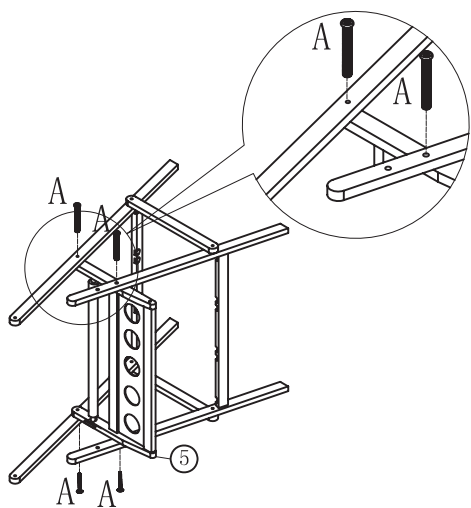

 
Step3

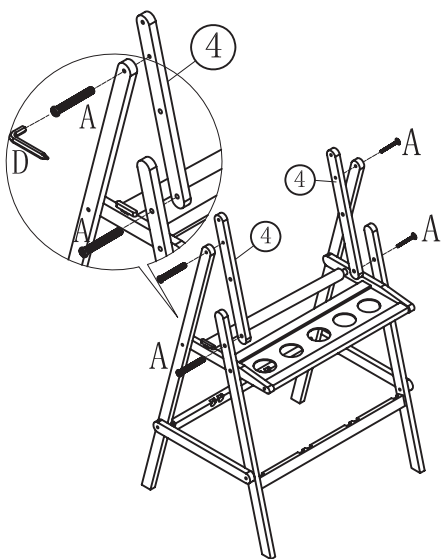

 
Step4

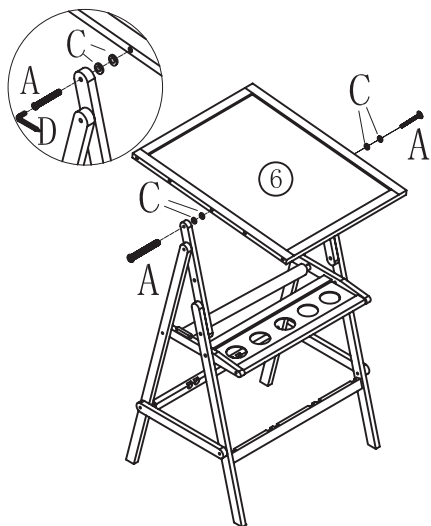

 
Step5

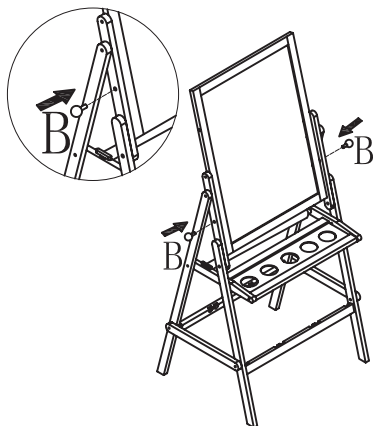

 Step6

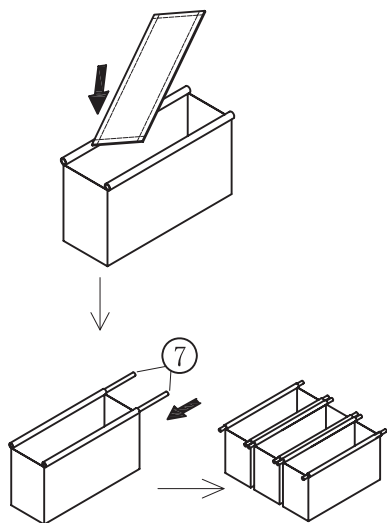


Step7


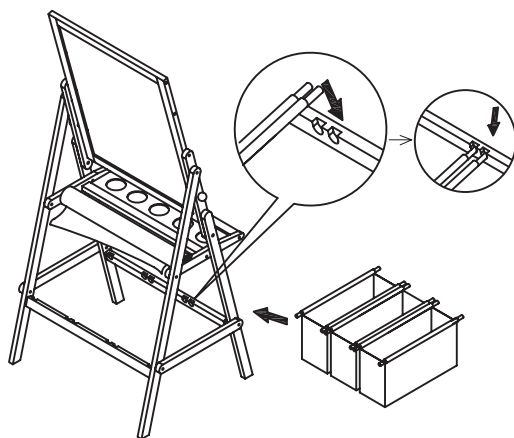


Step8

Put all accessories into the related places.  
Ensure all hardware are correctly and tightly assembled  
Assembly is now complete.

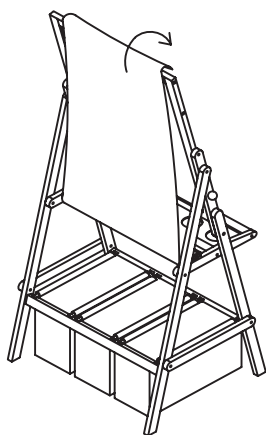

Step9

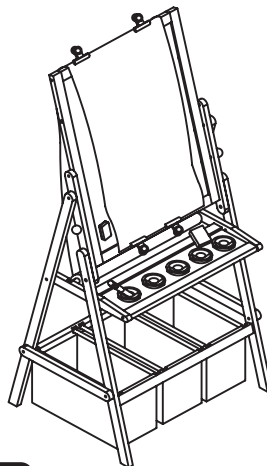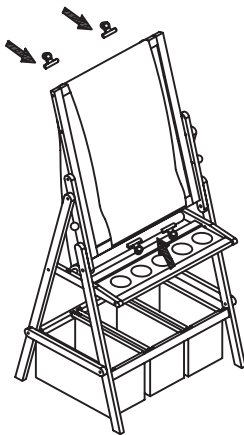

Step10

### Important – Please read these instructions fully before assembly or use

These instructions contain important information which will help you get the best from your product and ensure safe and correct assembly, use and maintenance.



## Safety Information

### Important – Please read these instructions fully before assembly or use

- Adult assembly required. No tools required.
- Adult supervision advised when item is in use.
- This item must be used on flat surface. DO NOT use on an uneven surface.



**WARNING:** CHOKING HAZARD - Small parts. Not for children under 3 years

## Care and Maintenance

- The easel is intended for indoor use only.
- DO NOT use any Spray or Dry Erase cleaners on the boards, as this may cause damage.
- Treat the boards surface with care; DO NOT use sharp pointed objects on the writing surface. Scratching the surface will cause permanent damage.
- Eraser can be used for both magnetic dry-erase and chalkboard surfaces. If there is some hard-to-erase ink/chalk left on the magnetic dry-erase board or chalkboard surface, use a slightly damp sponge (or paper towel) and wipe the board clean. Any excessive water may damage the board.

### Dry-Erase Whiteboard

- Completely erase the dry-erase surface before storing it for an extended period of time.
- Do not use Washable Markers or Permanent Markers. For best results, use only Dry-Erase Markers.

### Chalkboard

- Completely erase the chalkboard before storing it for an extended period of time.
- Use only chalk, any other **makers** will damage the surface.
- Use duster to remove chalk or slightly damp sponge (or paper towel).



**Not suitable for children under 3 years  
due to small parts, chocking hazard.**