

LED remote controller instructions



Button	Meaning	Description
	ON/OFF	To turn on/off the LED controller
	Brightness+/-	On Monochrome mode, press the button to adjust the brightness of the color to brighter/darker.
	Speed+/-	On Flash or Strobe mode, press the button to adjust the corresponding flash speed faster/slower.
	16 kinds Monochrome mode	Press the button, the corresponding color can be selected.
	Flash	Press the button, seven-color jump& flash.
	Strobe	Press the button, monochrome strobes, monochrome respire.
	Fade	Press the button, seven-color gradient, three-color flash.
	Smooth	Press the button, three-color jump, seven-color change.

The remote controller battery is prepared by the customer themselves. (7# two sections)