
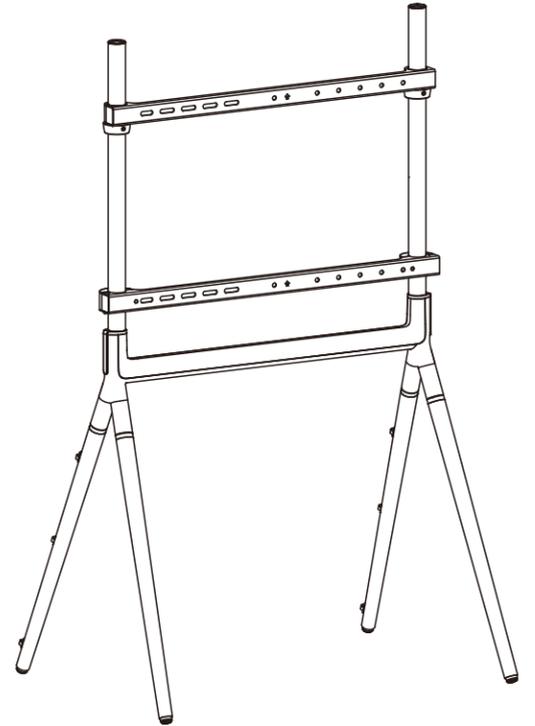


# EASEL STUDIO TV FLOOR STAND

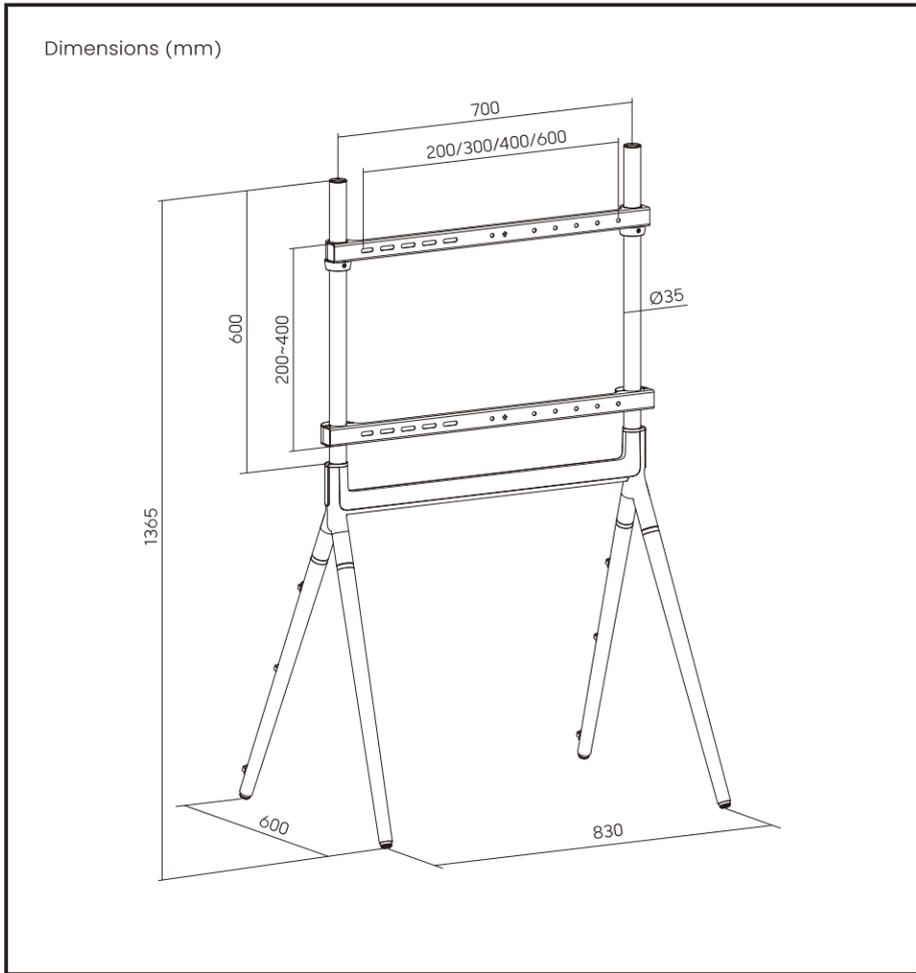

**WARNING**

**CHILDREN HAVE DIED FROM FURNITURE TOPPLING OVER.**  
Always secure your television with an anchor device. Never allow children to stand, climb, or hang on drawers, doors, or shelves.

**LUFS3046F**

VESA Compatible  
200x200 300x200  
300x300 400x200  
400x300 400x400  
600x400

**70" MAX**

**40kg (88lbs) RATED**

OFFICEWORKS LTD

EN Read the entire instruction manual before you start installation and assembly. If you have any questions regarding any of the instructions or warnings, please contact your local distributor for assistance.

**CAUTION:** Use with products heavier than the rated weights indicated may result in instability causing possible injury. Please closely follow the assembly instructions. Improper installation may result in damage or serious personal injury.

- Safety gear and proper tools must be used. This product should only be installed by professionals.
- This product is designed to be installed on solid concrete walls, masonry walls or wood stud walls.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- Use the mounting screws provided and DO NOT OVER TIGHTEN mounting screws.
- This product contains small items that could be a choking hazard if swallowed. Keep these items away from children.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

**IMPORTANT:** Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, contact your place of purchase for a replacement.

**MAINTENANCE:** Check that the product is secure and safe to use at regular intervals (at least every three months).

**7 To avoid TV falling, anti-fall wire rope should be installed.**

