

## UNIVERSAL TV REMOTE CONTROL

Thank you for choosing our product. Please read this user manual carefully before use and keep it for future reference. This remote control comes with a factory preset. Once the batteries are inserted, most devices can be controlled without any additional setup. For other brands, please use one of the methods described below.

### Remote Control Setup Guide

#### A. CODE ENTRY


Turn on the TV. Check your TV code from the provided code list, starting with the first code. Repeat the following four steps until you find the correct code for your TV.

**1** Check the code of your TV from the provided code list. For example, if your TV is **SONY**, the first code is **346**. Start from the first code.


##### CODE LIST

SONY	346, 347
TCL	193-146
TELEFUNKEN	708-761

**2** Press "**POWER**" and "**OK**" buttons until the indicator light is on.

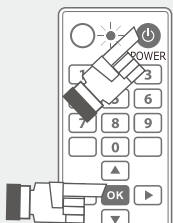

**3** Key in the 3-digit code, (e.g. **346**). The indicator light should turn off.

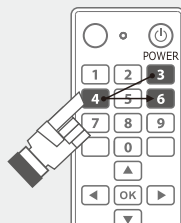


**4** Check the function of the other buttons. If they do not work properly, repeat steps 1 to 4.




#### B. MANUAL SEARCHING


**1** Press "**POWER**" and "**OK**" buttons until the indicator light is on, release both buttons.

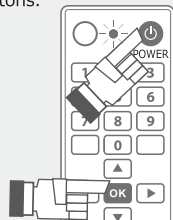


**2** Turn on the TV and point the remote control to the TV, press the "**Vol +**" key repeatedly.

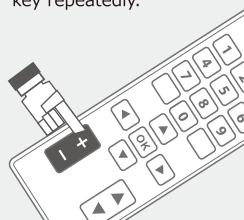

**3** When the volume control icon shows on the TV, press the "**POWER**" key and the indicator light should turn off.

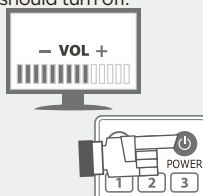

**4** Check the function of the other buttons. If they do not work properly, repeat steps 1 to 4.

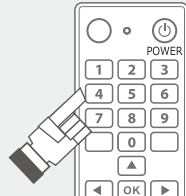


#### C. Fast Searching (suitable for brands shown on the brand list below)

**1** Find the corresponding button of your TV from the below table, for example if your TV is **SONY**, the corresponding button is "**2**". Then turn on your TV and point the remote control at it.

**2** Press and hold the corresponding button "**2**" for about 6 seconds, the indicator light will flash. Pay attention to your TV and check if a volume icon appears.

**3** When the volume icon shows on the TV, release the "**2**" button. The indicator light will stop flashing.

**4** Check the function of other buttons. If they do not work properly, repeat steps 1 to 4.

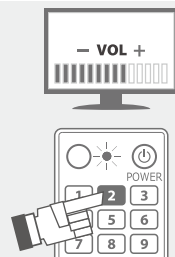

##### Preset Brand Table

1 SHARP	2 SONY	3 PANASONIC	4 SANYO	5 HITACHI	6 TOSHIBA
7 PHILIPS	8 LG	9 SAMSUNG	0 SKYWORTH	--/-- HISENSE	Ⓢ CHANGHONG
⏪ DAEWOO	▶/   PHILIPS 2	▶▶ KONKA	ASPECT THOMSON	⏪ TCL	■ JVC
● HAIER	▶▶ TOSHIBA 2	RED VIVAX	GREEN VOX/TELEFUNKEN	i+ OTHER BRANDS	


#### D. Auto Searching

**1** Turn on the TV and aim the remote to the receiver of the TV.

**2** Press and hold the "**POWER**" button for about 6 seconds and the indicator light will start flashing.

**3** When the volume icon shows on the TV, release the "**POWER**" key. The indicator light will stop flashing.

**4** Check the function of other buttons. If they do not work properly, repeat steps 1 to 4.

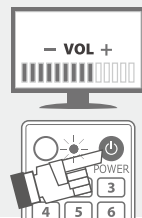

#### ※ If you want to know the currently set code, please follow the below steps

**1.** Press both "**POWER**" key and number key "**1**", the indicator light will flash. If it flashes **two** times, it means number **2** in the hundreds digit. Two flashes for two and no flash for 0.

**2.** Press both "**POWER**" key and number key "**2**", the indicator light will flash. If it flashes **seven** times, it means number **7** in the ten digit. Seven flashes for seven and no flash for 0.

**3.** Press both "**POWER**" key and number key "**3**", the indicator light will flash. If it flashes **four** times, it means number **4** in the single digit. Four flashes for four and no flash for 0.

**After completing all the above steps, the code currently set in the remote is 274.**

#### ※ Child Lock

**Enable:** Press and hold both "**POWER**" and "**8**" buttons until the indicator light flashes two times. Release both buttons. Child Lock is enabled now.

**Disable:** Press and hold both "**POWER**" and "**8**" buttons until the indicator light flashes two times. Child Lock is disabled now.

**NOTE:** You cannot set up the remote control when it is under the Child Lock Mode.

### Reset to Factory Setting

Press both "**POWER**" and number "**0**" key until the indicator light flashes 3 times, the remote is now reset to factory mode.

#### Reminder

The remote control only works with TVs that have a receiver. If you enter the wrong code during setup, you can re-enter the correct 3-digit code as long as the indicator light is still on. If the indicator light turns off, you will need to repeat the programming process. Improper use may cause the remote to malfunction. If this happens, remove the batteries for at least 20 seconds, then reinstall them properly and reset the remote control. The normal working distance of the remote is 8 meters, depending on the TV.

※ The design and specification are subject to change without prior notice for product improvement.

※ All the product images (TV and remote control) shown in this manual are for reference only.

# Code List

Brand	Code
ACER	368.
ADLER	493-495.
AMTRAN	377.
AOC	363,367.
APPLE	376.
AXXION	379.
AZ-YJ01	382.
BENQ	365,366.
BLAUPUNKT	354,708-711
CHANGHONG	072-080,383-402.
CHIMEI	364.
CT1265	550.
CX-507	380.
DAEWOO	046-049,357.
DELL	372.
FOX	500.
GRUNDIG	362.
HAIER	152-161,476-492.
HISENSE	096-105,447-465.
HITACHI	120-122,350.
HKC	373.
JVC	043-045,360,516,522,523.
KONKA	053-072,437-446.
LG	112-113,354,355,503-506.
MITSUBISHI	374.
OLEVIA	369.
OLEVIA	378.
PANASONIC	126,127,348,513-515.
PARKER	381.
PHILIPS	114-117,352,353,530-532,534-538.
PRIMA	359.
RMT-02	370.
SAMSUNG	109-111,356,499,510-512.
SANYO	123-125,349,403-411.
SHARP	129-132,345.
SKYWORTH	084-093,412-436,507-509.
SONY	128,346,347,519-521.
TCL	133-151,466-475,607-611
TELEFUNKEN	708-761.
THOMSON	050-052,361.
THTF	375
TOSHIBA	118,119,351,517,524-529
VIVAX	544-548,552.
VOX	493-495,500,501,540-543,550
XIAHUA	371.
2204-ED00AL	501.
OTHER	000-005,263,267,285-286,290-291,358,496-498,502,518,533,539,549,551.

Original Remote Control Model	Code
ACONTIC	289
AFTRON	020
AK52-TC14	279
AK57	277
AKAI	027
AKAI HID688	332
AKAILEA-19V025(BERICOM008)	331
AKI AK61	278
AKI LCD AK66	276
AOC(CH-6580)	202
AOC(CH-8345)	201
AOC(CH-3813)	199
AOC(CH-8354)	200
AOC(HOB482)	198
AOC(HOB526)	198
AOC(HOB741)	197
APEX	012
APEX2	011
APEX 3	010
ASANO	015
ASANO 2	014
ASANO3	013
B39EO	006
BBK	244
BBK EN-316038	243
BGH EN2H278	196
BGH ER-33911BN	195
CHANGHONG GHK-4421A	083
COSTAR CTR-004 DATA	009
DANTAX4113	344
DAYYEK MSW	028
ECOSTAR CTR-004	009
ECOSTAR CTR-005 DATA	008
EN-30303D	108
ER-22645W	040
EUPOSTAR EUROLINE 504232	032
EUPOSTAR LCD	017
FGCCO(CH-5888)	193
FGCCO(CH-6319)	192
FLEDS	282
FREMIER TV-4805LED	180
FRISMAPRO	284
FUNAI	288
FUSION RC7B	208
FUSION_RC1W,FUSION_RC2W, FUSION_RC3W,FUSION_RC6W, FUSION_RC23W,FUSION_RC11, FUSION_RC12,PC70B	208
FUSION_RC21DB	206
GENERAL LCD-831	234
GENERAL LCD831,GENERAL LCD831	209
GENERAL LCD-832	233
HEIR 2	159
HID589-VIDEOCON	251
HID600-V-LP	250
HID601-V-UTCR	249
HID609-S-LP	250
HID638-RC115-F	262
HID646-DISHTV	275

Original Remote Control Model	Code
HID655-VIDEOCON V-MT22	248
HID656-VIDEOCON S-MT22	248
HID657-VIDEOCON V-TFT NEW	247
HID658-MICROMAX	268
HISENSE-EN33927A	194
HOB 1084-HALER HTR	152
HOB 158 BBLT1504	242
HOB1022-SHIVAKI YX-CY309E(STV-24LED15)	215
HOB1063-AKAIHOF08J001	325
HOB1082-US HAIR	153
HOB1094-1-800-877-503	162
HOB1104-FUSION HY-079	212
HOB1161-SANKEY	177
HOB1162-SANKEY	176
HOB1163-SANKEY	175
HOB117-AKIRA TC1860F1	319
HOB1221-BRAVS SSD2000+T2	211
HOB1245-MYSTERYMTV-3227LT2	223
HOB1258-SUPRA STV-LC32T880WL	210
HOB1271-AKAI_LEA-39J29P	324
HOB1272-AKAI_WL52JC002	323
HOB1286-ECOSTAR	314
HOB1303-SHIVAKI	214
HOB1306-AKAI LEA-32B49P	322
HOB1345-MYSTERY HOF50D12(MTV-3205W)	222
HOB1364-AKAI_LES-65BA7M	321
HOB1385-AKAI 2200-EDRWAKAI	320
HOB168-SHIVAKI BTO451C	218
HOB189-AKAILCT-19V825T-125	331
HOB198-FUNAI48KEY	236
HOB227-ORION	220
HOB231-SHIVAKI 02	217
HOB252-OPENBOX-1253	221
HOB279-AKIRA LCT-15CHST	318
HOB281-MYSTERY5195	226
HOB282-MYSTERY8151	226
HOB301-MYSTERY KT6957 6857	225
HOB302-HYUNDAI 1587 RCF1B	232
HOB322-BBK CAMERON	241
HOB331-AKAI A4001032	330
HOB354-ELENBERG	237
HOB376-H-LCD2202(GCOVA10285J)	231
HOB380-RC2455	240
HOB390-CH-2145	230
HOB4 AKAI CX-507	329
HOB403-ISTAR	172
HOB452-RC13B	213
HOB489-MYSTERY MTV-3224LT2	224
HOB506-AKILEA-19V07P	328
HOB513-ONIDA LCD TV	261
HOB525-BBK EN-31907	239
HOB530-AKAI A3001011	327
HOB564-US HALER	155
HOB575-SHIVAKI K77	216
HOB576-SHIVAKI K78	216
HOB606-HYUNDAI24V5	229
HOB613-AKIRA TC1860F1-RS	136
HOB664-RM-SLT2142	173
HOB736-EN-22652A	097
HOB782-SUPRA RC21B	204
HOB811-AKIRA	317
HOB845-MARSHALME-3230	170
HOB846-MARSHALME-2409	169
HOB848-SPL51175	168
HOB8490-POLAR HTR-D18A	158
HOB8493-HAIER	157
HOB8566-AKAI SLP-006P	326
HOB8698-SKYTECH MERTER33186	163
HOB904-FUSION RC25B	203
HOB925-MARSHALME-5110	167
HOB926-HISENSE EN-32963HS	096
HOB941-ME-4716	166
HOB942-ME-4228	165
HOB943-ME-3216	164
HOB991-US HAIR	154
HOD202	245
HOD440-FOR ANALOG	253
HOD442-FOR SMART	252
HSR131-GJ210	156
HSR598-ISTAR-KOREA	171
HTC051-TCL20B10F50	134
HTC057-RC3000N11	174
HTC067-TCL LCD RC260JML1	133
HTK054-RC-2040(RC-2140)	342
HTK067-2040	341
HUH008-KONKA-KK-Y354	053
HVD209-RC1529	240
HVD282-BBK RC-LEM101	238
HVD284-BBK RC-LED100	238
HY1	302
HY10	294
HY12	293
HY13	292
HY2	301
HY3	300
HY4	299
HY5	298
HY6	297
HY8	296
HY9	295
HYUNDAI_H-LED24V16	206
INTEX LCD-1602	270
INTEX LED TV-1902	269
INTEX LED-3210	273
INT-X LED3107	272
IR1628-FUNAI(PC221)	235
IRT(CH1500+)	189
IZUMI_0152	227

Original Remote Control Model	Code
IZUMITLI 19H405B	228
JVC	283
LRIPL UN96	271
MASTER G(CH-1623)	188
MASTER G(CH-2500)	187
MASTER G(CH-2900)	186
MASTER G(CH-4350)	185
MASTER G(CH-8885)	184
MISTSONIC	266
MITSUN	264
MITSUN	265
NEO LCD	016
NEX(CH-2020)	183
NIKAI	024
NISATO(HOD234)	182
ON62	257
ON98(LX298)	256
OND LCD ON87	255
OND V-160	254
ONIDA	258
ONIDA 01	260
ONIDA-LCD2(1)	259
PARKER(HOB665)	181
PARS	019
PROVISION	280
RC1050-VES32905(1204)	335
RCA(CH-2012)	179
RCA(CH-4911)	178
RECONNECT	246
ROLSNER-31607R	219
SANSUIER 26418A	034
SCAMANT	018
SEG9 965	344
SONAR	281
STAR SAT LED LCD	021
STAR TRACK	023
STARLIFE	029
STARLIFE	030
STARLIFE SL 2214	026
STARLIFE STAR XEUROSTR	022
STAR-X	031
SUPER GENRAL	035
SUPER GENRAL LCD TV	034
SUPRALCD LED	025
SUPRA_R4W, SUPRA_RC10B, SUPRA_RC10W	205
SUPRA_RC1DB	208
SUPRA_RC3DB	206
SUPRA_RC3W, SUPRA_RC6DW, SUPRA_RC21DW	206
SUPRA_RC4B	205
SUPRA_RC5DB	207
SUPRA_RC6W,FUSION_RC9B, FUSION_RC10DB,FUSION_RC15B, FUSION_RC17B,FUSION_RC4DB, FUSION_RC5W,FUSION_RC8B, FUSION_RC18B,FUSION_R18W, FUSION_RC19B,FUSION_RC23W,	208
VESTEL 11800	344
VESTEL 22884,32884	338
VESTEL 31268	343
VESTEL 31271	343
VESTEL 4072	344
VESTEL AFTRON NIKAI	033
VESTEL HO8858-RC31277	339
VESTEL HTK037-RC-1241	340
VESTEL HTX126-VESTEL LG-LCD	333
VESTEL PC-5011(1993)	342
VESTEL RC3920(V22-LE990HD)	337
VESTEL RC3920(V22-LE990HD)(10264)	343
VESTEL RC-5010-11(1844)	342
VESTEL SF-130	336
VESTEL SF-130(10262)	342
VESTEL VES32905(1204)	342
VESTEL VST-22880	334
VICTOR	007
WALTON	036
WALTON	037
WANSA EUROSTAR	026
14201	344
2488	343
31269	343
31272	343
31274	343
31275	343
4558	343
576	191
578	190
9777	313
9778	306
9779	304
9780	312
9781	313
9782	313
9783	313
9784	312
9785	313
9787	042
9788	311
9790	039
9791	038
9852	041
9853	313
9854	310
9855	309
9897	308
9898	307
9900	305
9901	303