


Technical drawing of the TV stand showing dimensions in mm. The stand features a swivel base with casters, a central height-adjustable column, and a tilting TV mount. Key dimensions include a base width of 880 mm, a base depth of 665 mm, and a main column height of 1290, 1370, or 1450 mm. The TV mounting arm is 680 mm wide and 440 mm high, with a tilting range of $\pm 10^\circ$. The mounting plate is 298 mm wide and 228 mm high, with a distance of 293 mm from the base to the mounting arm. The base plate is 485 mm wide. The distance from the base to the mounting arm is 1643, 1723, or 1803 mm. The distance from the base to the mounting arm is 1290, 1370, or 1450 mm. The distance from the base to the mounting arm is 680 mm. The distance from the base to the mounting arm is 440 mm. The distance from the base to the mounting arm is 298 mm. The distance from the base to the mounting arm is 228 mm. The distance from the base to the mounting arm is min 200-max 600 mm. The distance from the base to the mounting arm is min 75-max 404 mm. The distance from the base to the mounting arm is 485 mm. The distance from the base to the mounting arm is 293 mm. The distance from the base to the mounting arm is 880 mm. The distance from the base to the mounting arm is 665 mm. The distance from the base to the mounting arm is 1290 or 1370 or 1450 mm. The distance from the base to the mounting arm is max 1643 or max 1723 or max 1803 mm. The distance from the base to the mounting arm is $\pm 10^\circ$.

EN  Read the entire instruction manual before you start installation and assembly. If you have any questions regarding any of the instructions or warnings, please contact your local distributor for assistance.


CAUTION: Use with products heavier than the rated weights indicated may result in instability causing possible injury.

- Please closely follow the assembly instructions. Improper installation may result in damage or serious personal injury.
- Safety gear and proper tools must be used. This product should only be installed by professional installers.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- Use the mounting screws provided and DO NOT OVER TIGHTEN mounting screws.
- This product contains small items that could be a choking hazard if swallowed. Keep these items away from children.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, contact your place of purchase for a replacement.

MAINTENANCE: Check that the product is secure and safe to use at regular intervals (at least every three months).

A warning label with a black background. At the top left is a white triangle with a black exclamation mark. To its right, the word "WARNING" is written in large, bold, white capital letters. Below this, there is a white circle containing a black silhouette of a child climbing on a piece of furniture that is tipping over. At the bottom, the text "CHILDREN HAVE DIED FROM FURNITURE TOPPLING OVER." is written in bold, white capital letters. Below this text, in smaller white font, is the instruction: "Always secure your television with an anchor device. Never allow children to stand, climb, or hang on drawers, doors, or shelves."

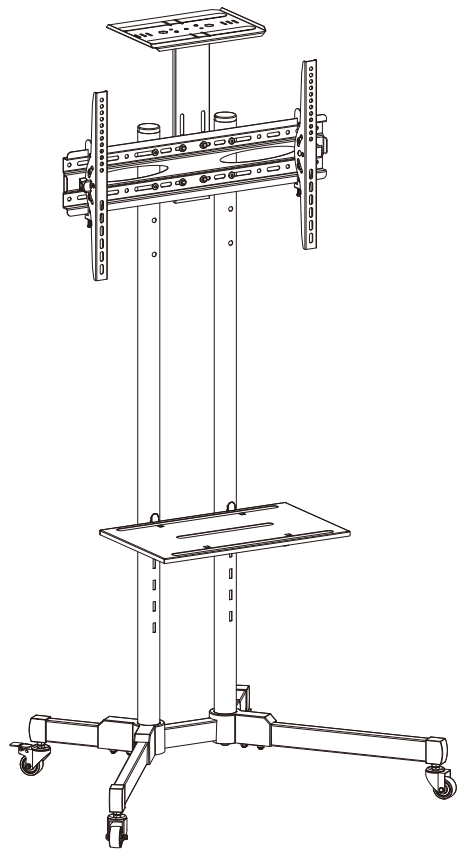

VESA Compatible
200x200 300x300
400x200 400x400
600x400



50kg/110lb



6

Diagram 6 illustrates the step of attaching the monitor to the stand. The main illustration shows the monitor's mounting bracket being aligned with the stand's bracket. A circular inset provides a close-up of a screw being tightened with a screwdriver to secure the connection. A small icon in the top right corner shows two people holding a large screen, indicating the monitor is being positioned.

