 




ASSEMBLY INSTRUCTIONS

LARSSON 2 DRAWER DESK 1500MM

ITEM CODE: OTLAR150OA

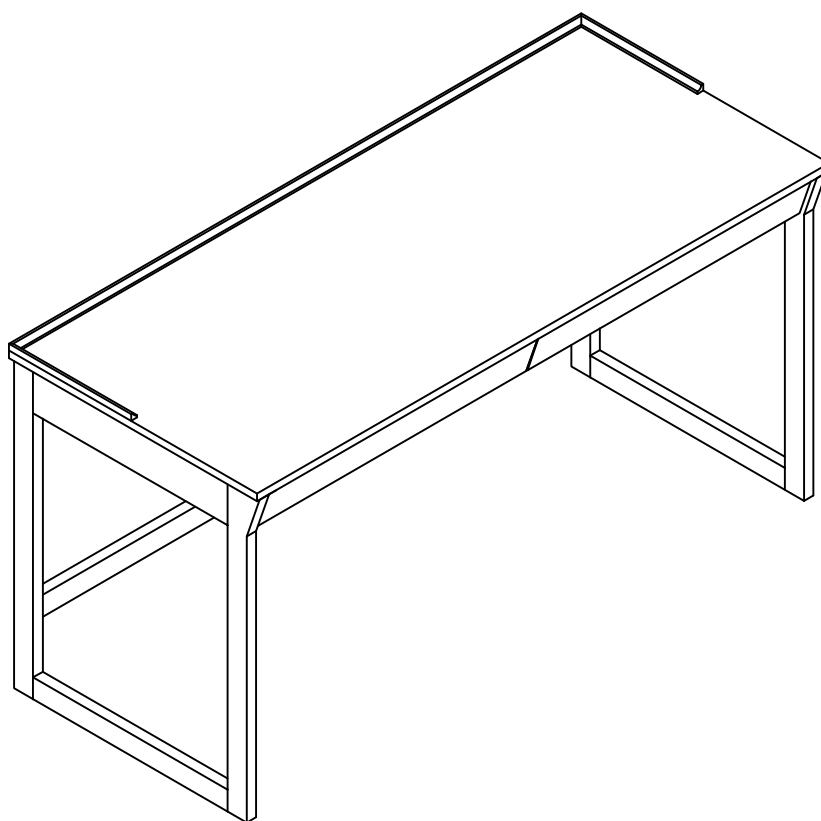

This design and instruction booklet is subject to copyright
www.officeworks.com.au

1 Carton

For spare parts or hardware email hardware@kyvas.com.au

Important

Estimated Assemble Time: 30min

Assembly Video

- To view an assembly video, go to <https://www.officeworks.com.au/>
- Search the product by item code or name:



- Click on the icon to watch the video.



NOTE

- Please check you have all hardware before assembling.
- Missing hardware, please contact Kyvas on 0456 456 547 or hardware@kyvas.com.au
- Please ensure you have the item name, batch number, required part and quantity.
- Please retain your receipt as proof of purchase to validate your warranty.

CAUTION

- Do not tighten screws before all screws are in the right place.
- Do not use this product unless all bolts, screws and knobs are firmly secured.
- Check that all bolts, screws and knobs are securely tightened at least every 4 months.

 
WARNING

- If parts are missing, broken, damaged or worn stop using the product until all repairs are made using manufacturer authorised parts.
- Keep children and animals away from the assembly area. This furniture contains small parts that could cause choking if swallowed.
- Keep all plastic wrapping materials away from babies and children to avoid danger of suffocation.
- This item is not for outdoor use – unless stated otherwise.
- Failure to follow these warnings could result in serious injury.

DANGER

 
- CHILDREN MUST BE SUPERVISED.

Part Overview

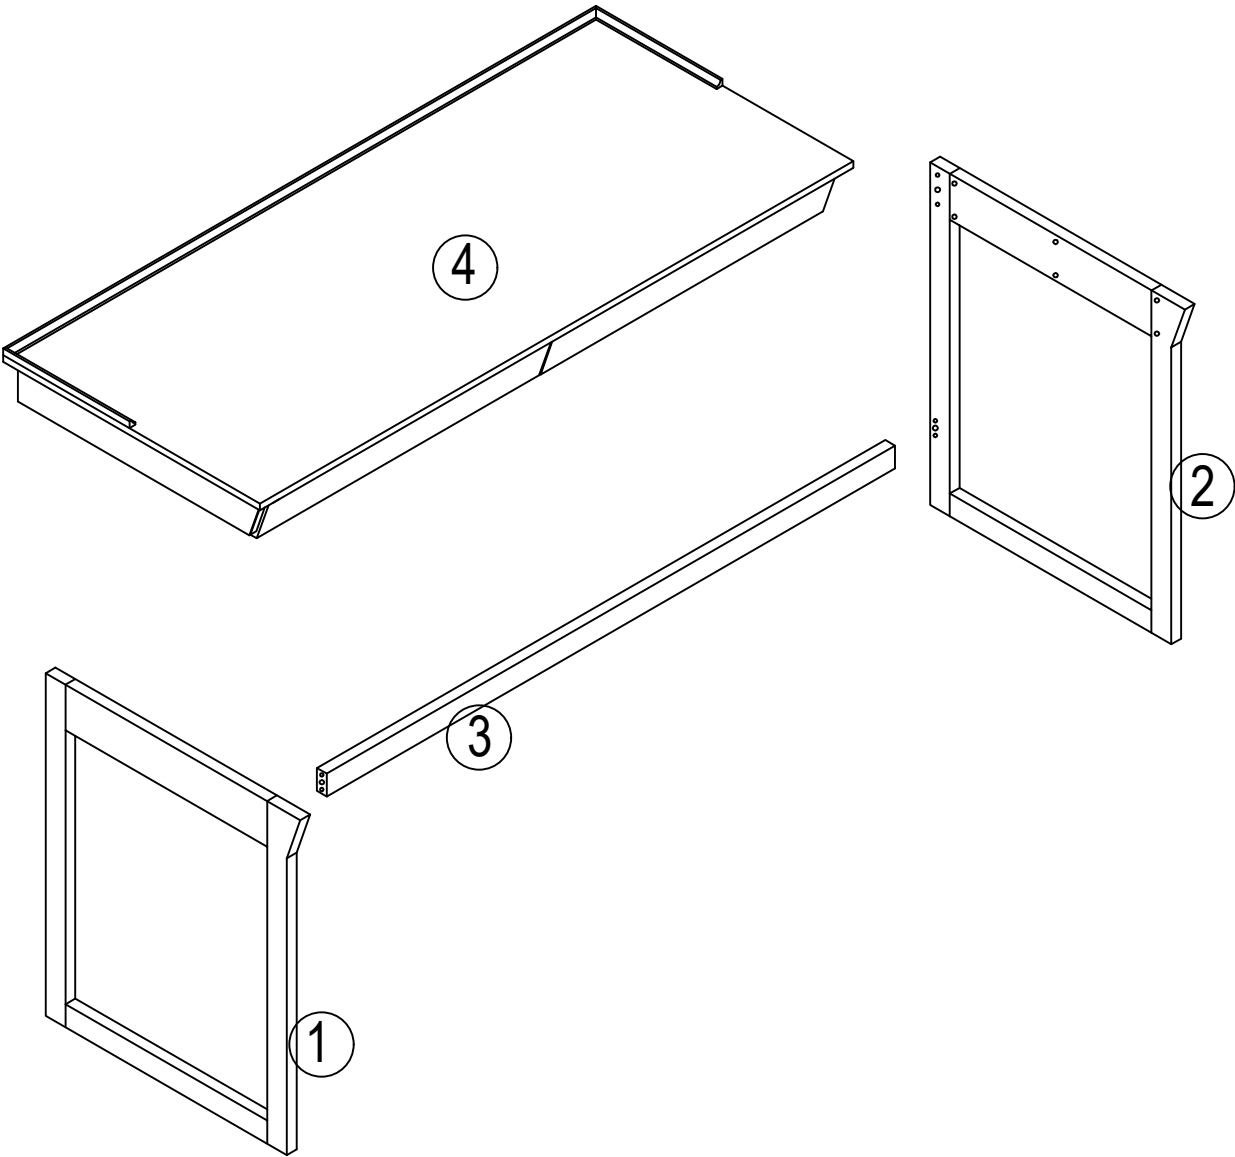



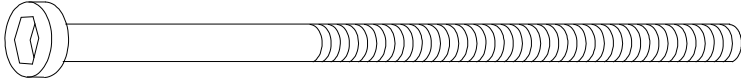



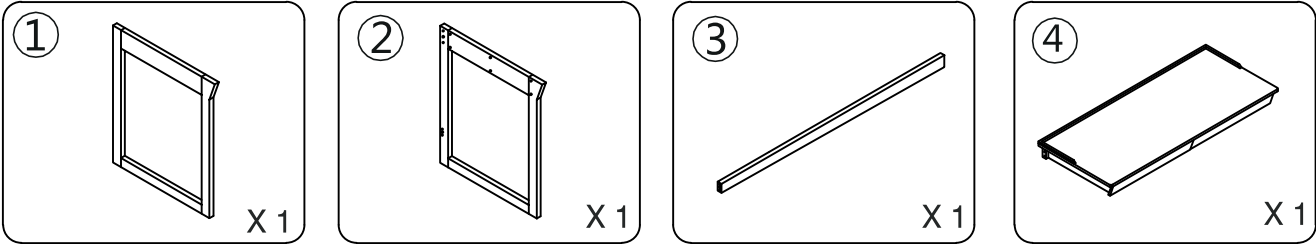



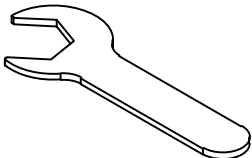

Part List

Parts located in Carton - OTLAR150OA

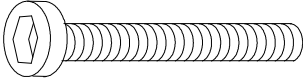

Hardware List

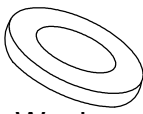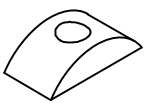 
Hardware Pack located in Carton - OTLAR150OA

<div>A</div> <div></div> <div>(M6 x 32mm) X 13pcs (Extra 1pc)</div>	<div>B</div> <div></div> <div>(M8 x 70mm) X 4pcs</div>	
<div>C</div> <div></div> <div>(M6 x 90mm) X 4pcs</div>	<div>D</div> <div></div> <div>(Ø7.8 x 30mm) X 8pcs</div>	
<div>E</div> <div></div> <div>Washer X 13pcs (Extra 1pc)</div>	<div>F</div> <div></div> <div>Washer X 13pcs (Extra 1pc)</div>	<div>G</div> <div></div> <div>Nut X 4pcs</div>
<div>H</div> <div></div> <div>Washer X 4pcs</div>	<div>I</div> <div></div> <div>Nut X 4pcs</div>	<div>J</div> <div></div> <div>Allen Key M6-size X 1 pc</div>
<div>K</div> <div></div> <div>Wrench X 1 pc</div>	<div>L</div> <div></div> <div>Sticker Cover X 2pcs</div>	


If you are missing hardware, please contact Kyvas at hardware@kyvas.com.au

Assembly

Step 1

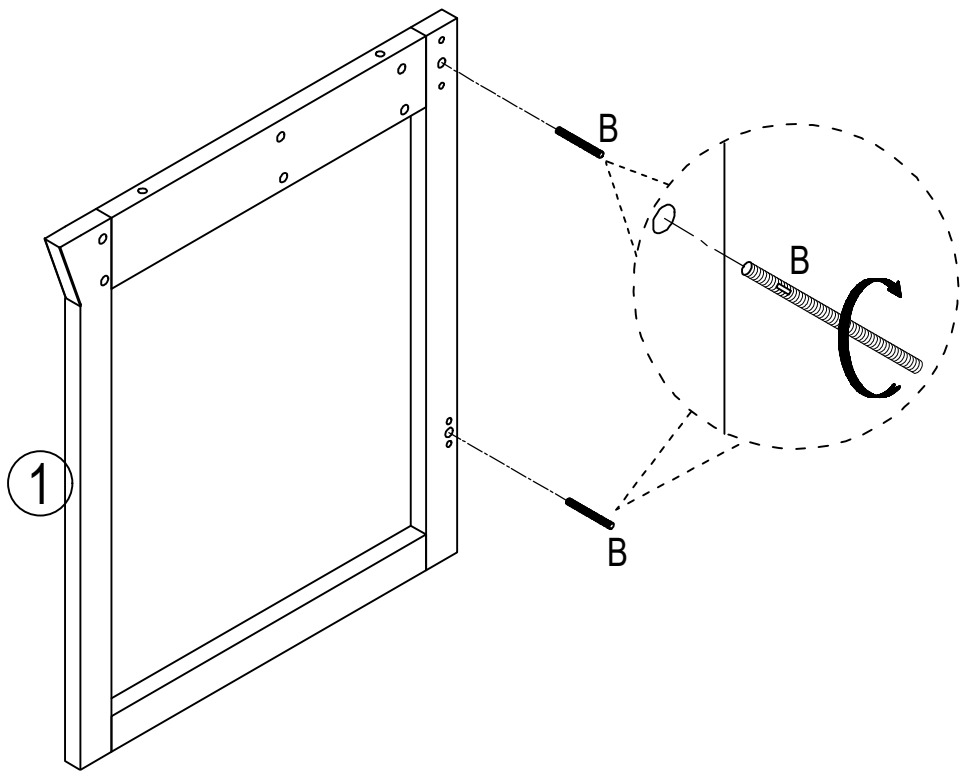 


B




X 2pcs

Step 2

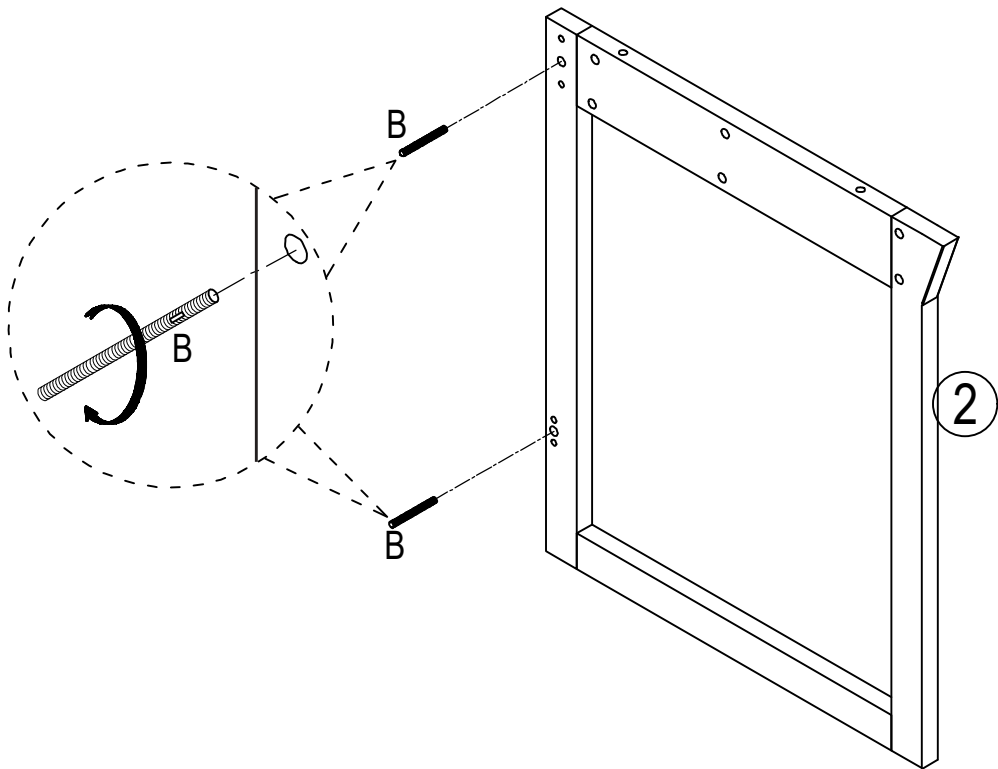

B

 


X 2pcs

 
Step 3


*Note: Remove the two drawer sections.
Simultaneously press black levers on both sides as indicated
and pull drawer outward.

This procedure can be viewed in the assembly video.
Video details on page 2 of this booklet.

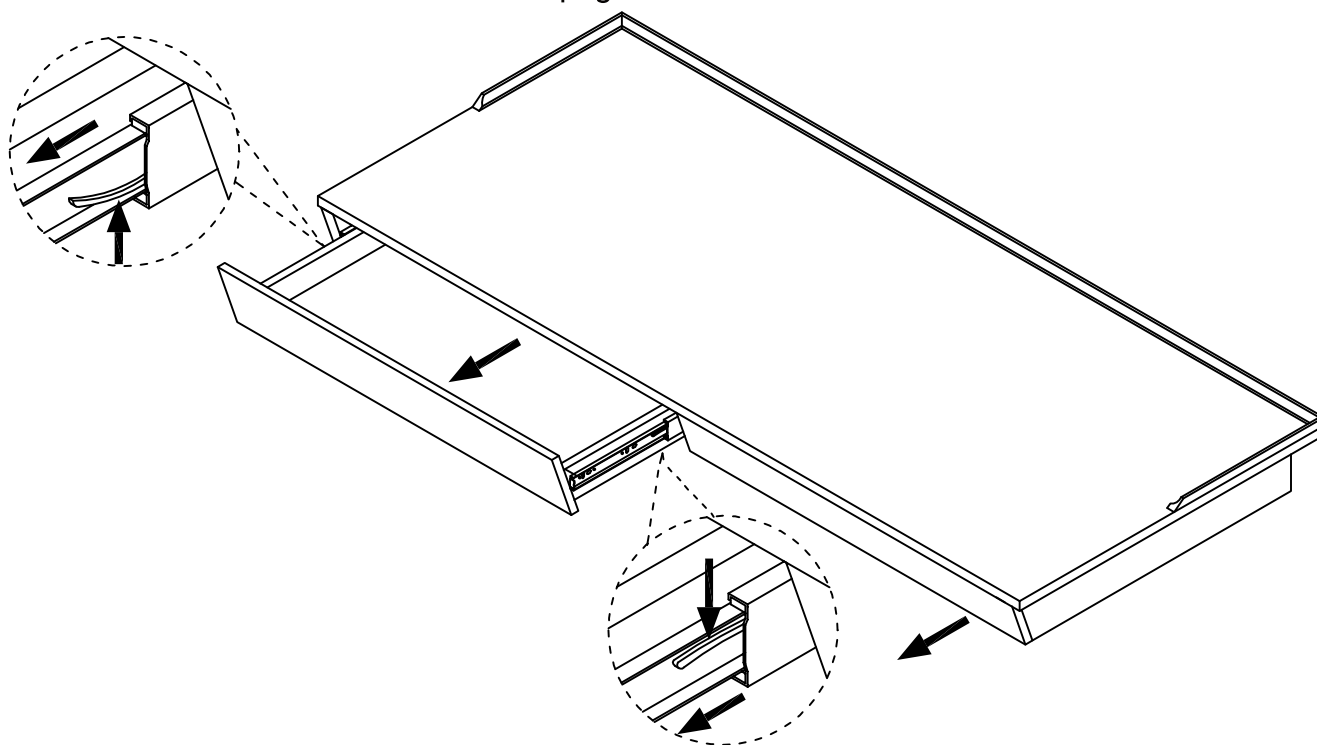 


Step 4

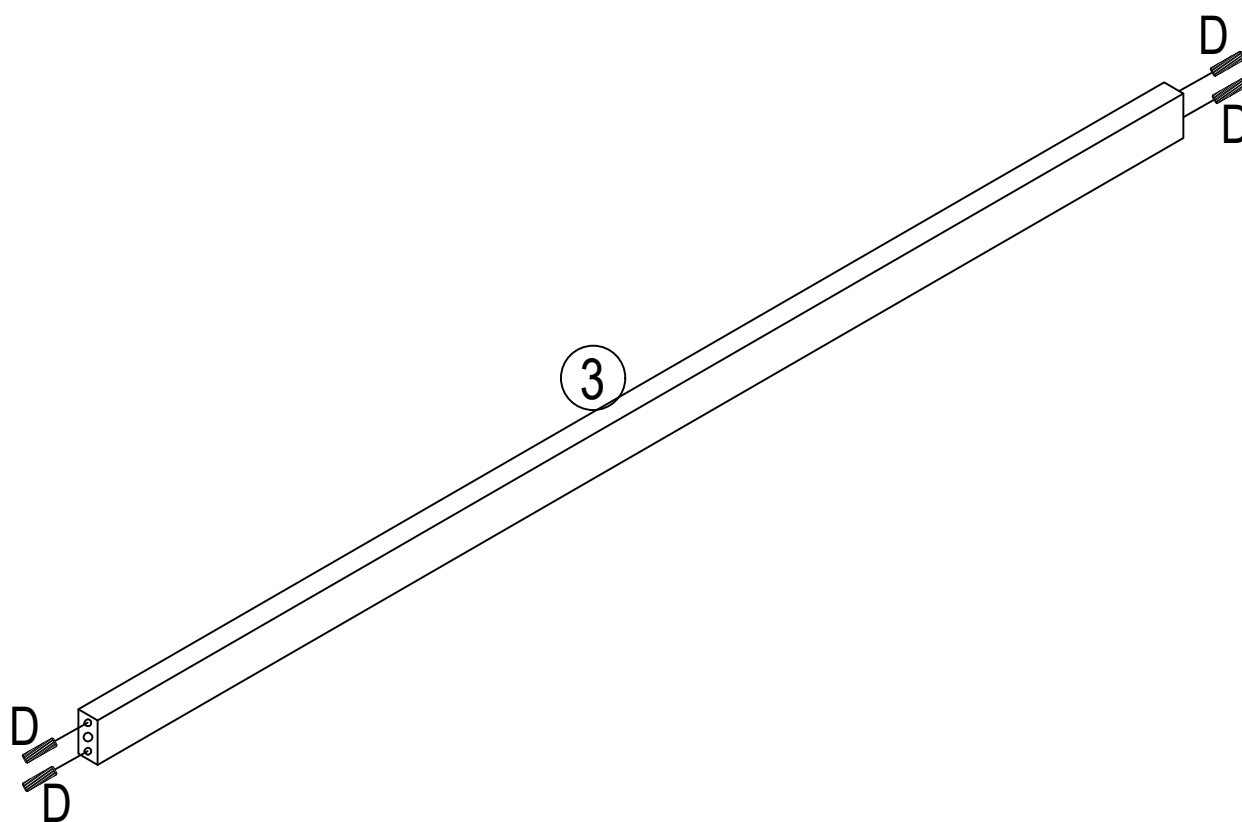

 
D

X 4pcs

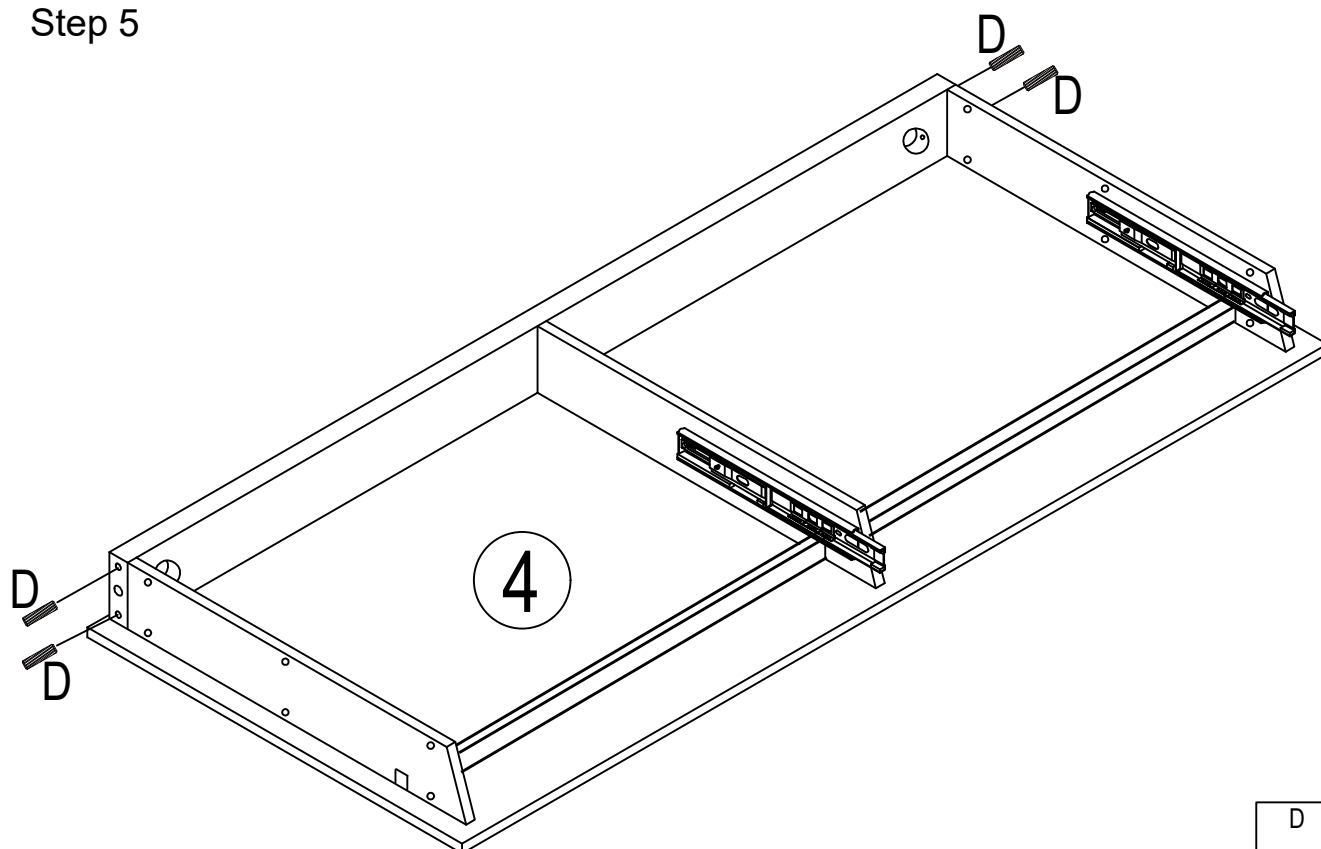Step 5



D
X 4pcs

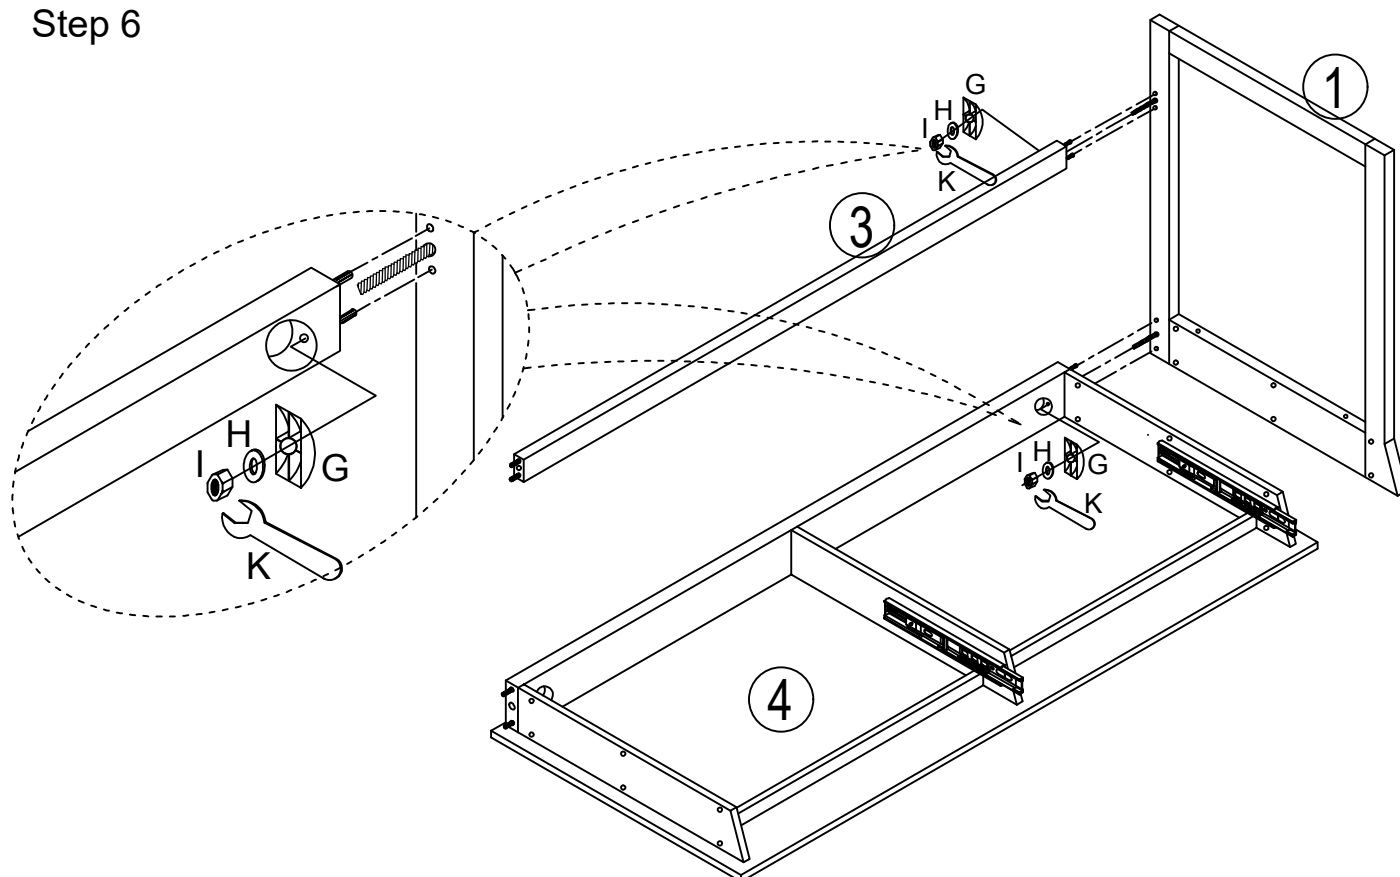Step 6



 
G
X 2pcs





H
X 2pcs

I
X 2pcs

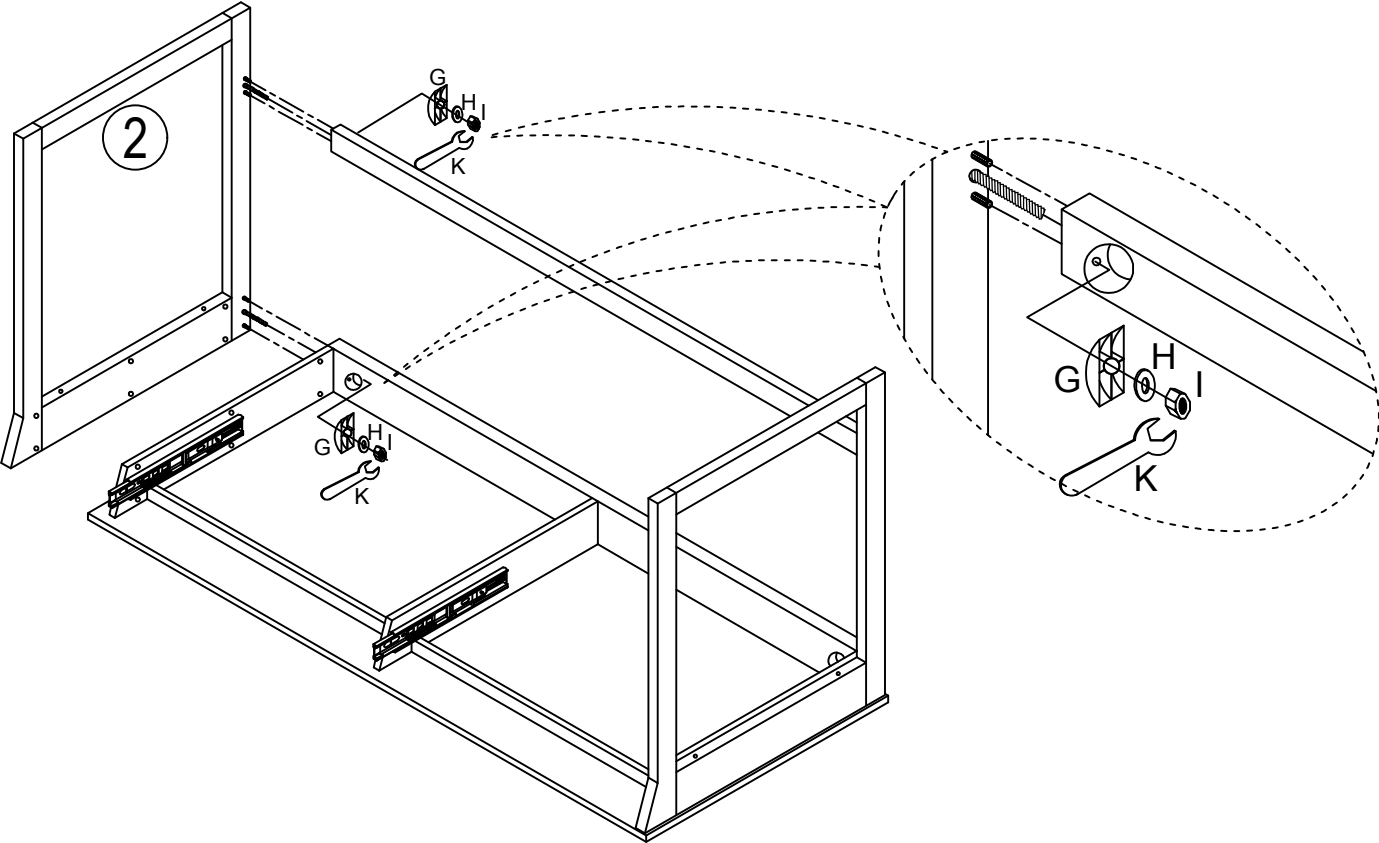 
K
X 1 pc



Step 7



 
G	H	I	K
			
X 2pcs	X 2pcs	X 2pcs	X 1 pc

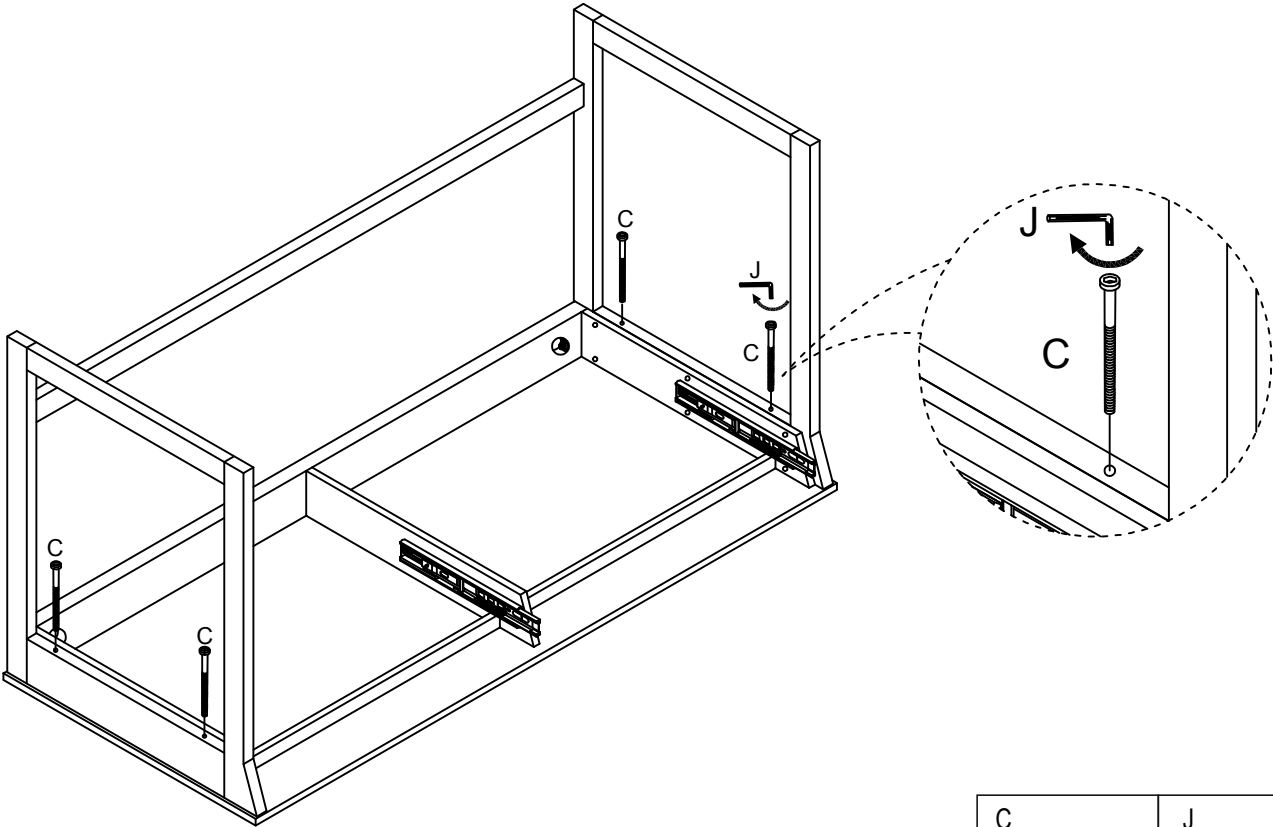Step 8

 


C	J
	
X 4 pcs	X 1 pc

 
Step 9

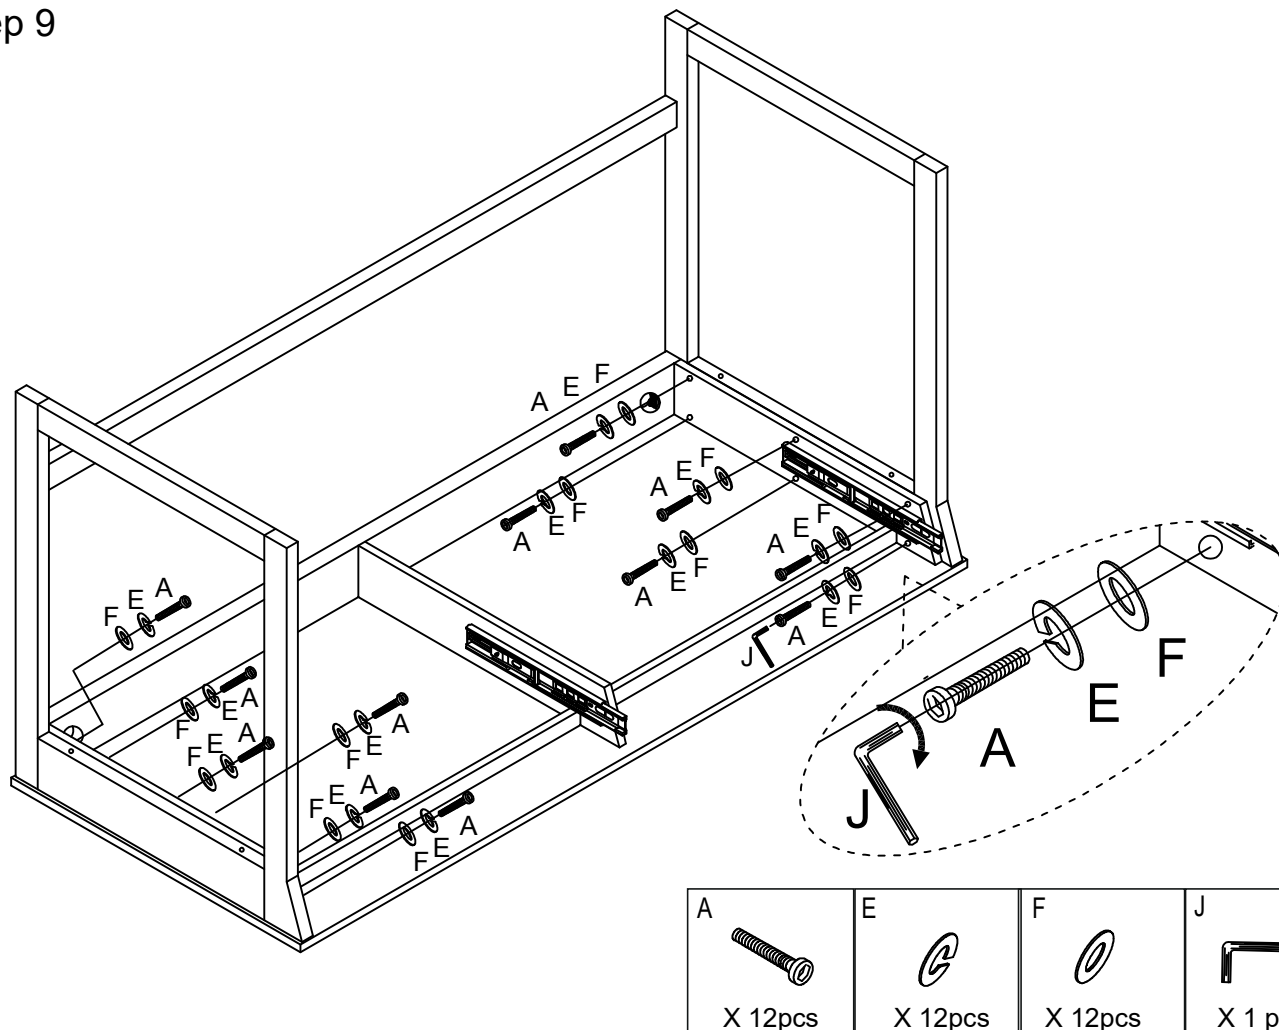

 
Step 10

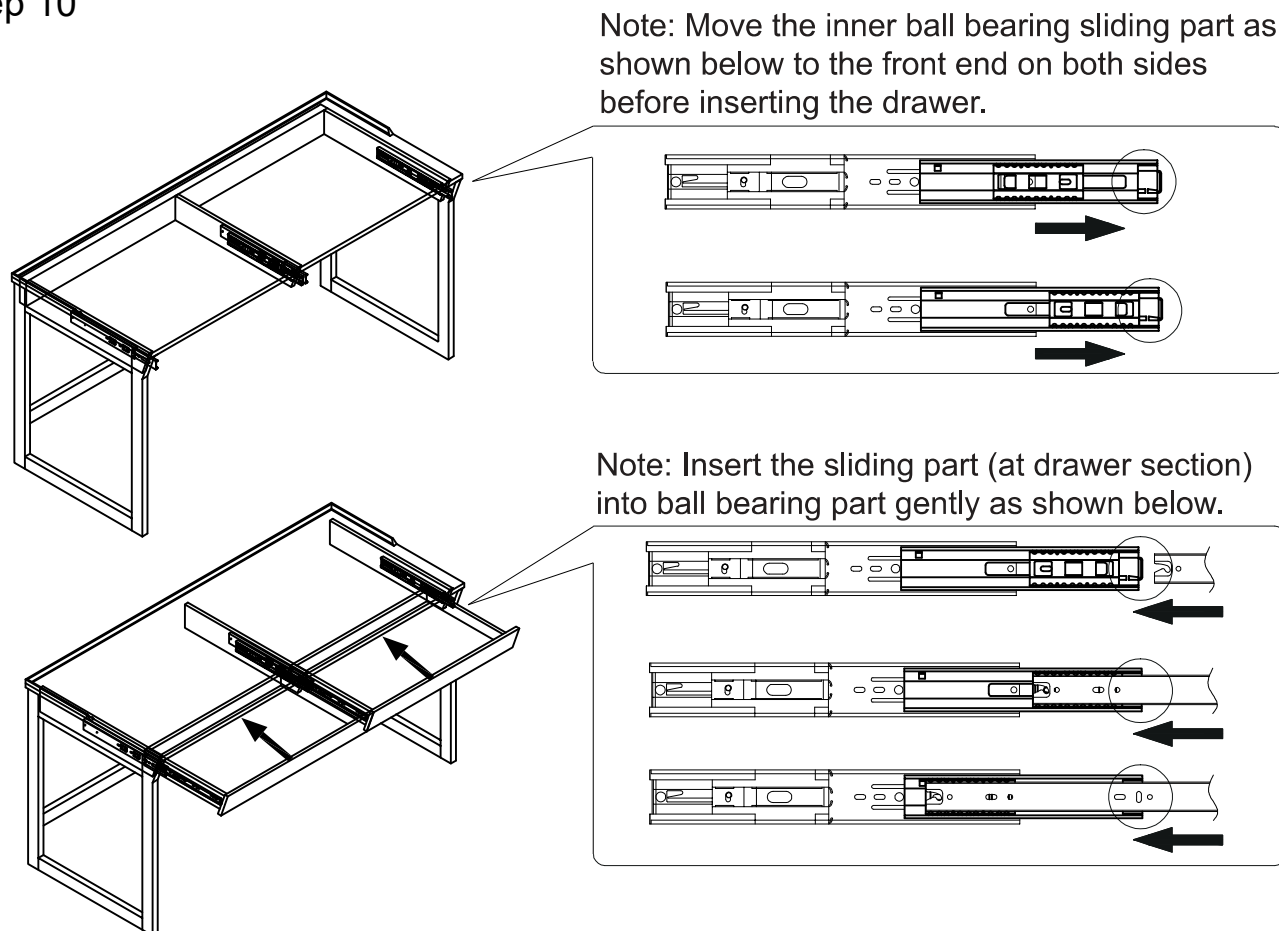

Step 11

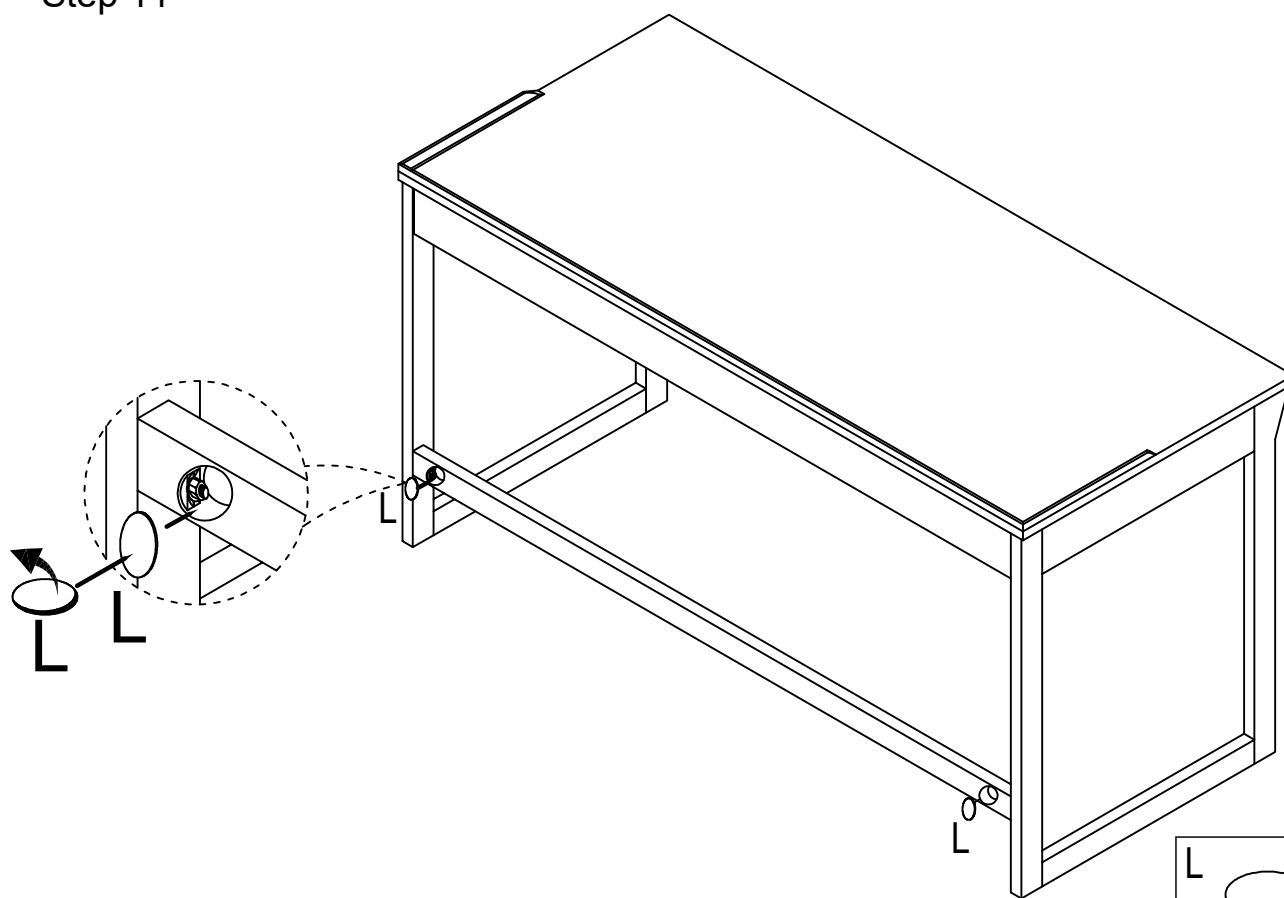

Maximum Load Capacity:
Desk Top - 40 kg
Drawer - 5 kg

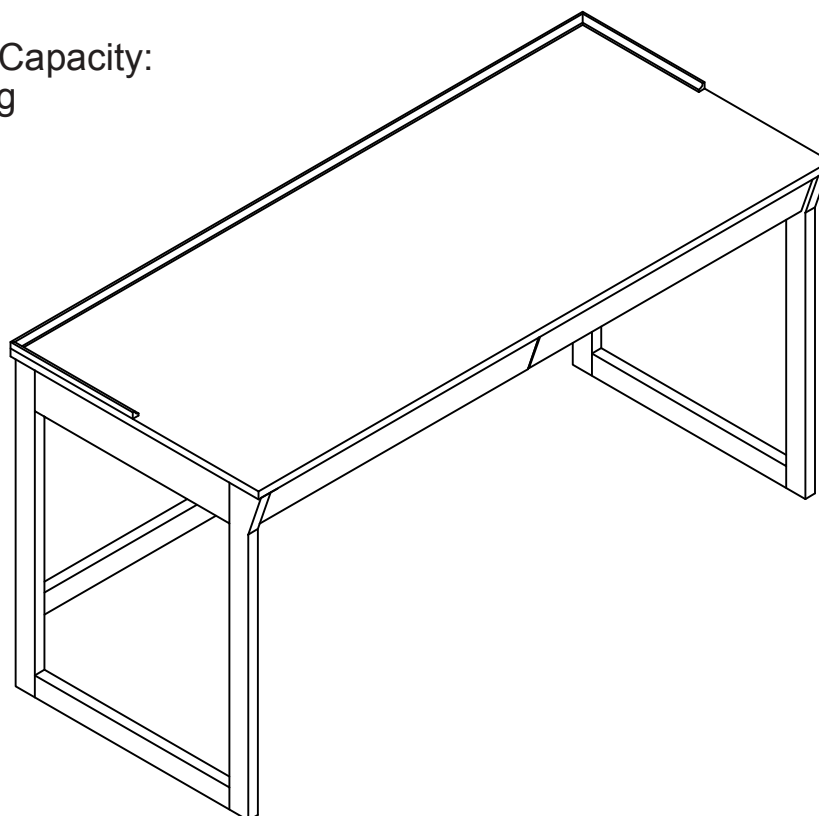

Your **LARSSON 2 DRAWER DESK 1500MM** is now complete and ready for use!

Care Advice

Care Instructions - Timber Furniture

As timber and timber veneer are natural products, it should be expected that there will be colour and grain variations, as well as natural imperfections, this is not considered a fault with the product, but what makes each piece unique.

- Avoid placing wooden furniture in direct sunlight.
- Keep away from heat sources such as radiators, vents, fireplaces etc.
- Do not place sharp materials (knife, fork, etc) directly onto your furniture as sharp material may scrape and damage the finish.
- Lift and place items to reduce any sliding friction across furniture surfaces.
- Use coasters, placemats and tablecloths to protect furniture during use.
- Rotate accessories on the furniture to avoid any permanent marks forming on the wood.
- Dust your furniture regularly to prevent scratches.
- Clean furniture regularly with a soft damp lint free cloth.
- Do not use any detergent as they may contain ingredients that may react and damage the finish.
- If using cleaning products use cleaners specifically for wooden surfaces. Use only as directed by the manufacturer to avoid damaging the surface.
- Avoid using corrosive or abrasive cleaners that may damage the surface. This includes disinfectant wipes.
- Treat spills immediately with an absorbent dry cloth. Not treating spills immediately may cause damage.
- Clean, check and tighten all parts regularly.

Safety Warning

- **WARNING** – Put locking devices on all drawers to prevent children opening them and using them as steps.
- **CAUTION** – This product is intended to hold the maximum weight indicated. Exceeding the maximum weight will result in instability and may cause injury.

Warranty 3 years

Product Warranty – valid for Australian customers only

Officeworks Ltd warrants that this product will be free from defects and work as intended for 3 years from the date of purchase by the original customer.

If the product has any defects or does not work as intended during the Warranty Period, Officeworks will, at its election and at its expense, repair or replace the product.

This warranty does not apply:

- As timber and timber veneer are natural products, it should be expected that there will be colour and grain variations, as well as natural imperfections, this is not considered a fault with the product, but what makes each piece unique.
- to cosmetic damage;
- to damage caused by consumables used in connection with the product (such as cleaning products);
- where the product has not been used in accordance with all provided instructions;
- to damage arising from fair wear and tear;
- where the product has not been subject to reasonable use;
- where the product has been intentionally or negligently damaged; and/or
- if the customer has attempted to repair the product.

To make a claim under this warranty, please return your product with your receipt or proof of purchase to your nearest Officeworks store or contact 1300 633 423.

This warranty is provided in addition to any rights you may be entitled to under the Competitions & Consumer Act 2010.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Thank you for your purchase. Please retain your receipt to validate warranty.
If you would like to know more about our furniture products, please visit www.officeworks.com.au