




## ASSEMBLY INSTRUCTIONS

OTHEL120WB/OTHEL140WB/OTHEL1400A/OTHEL1200A

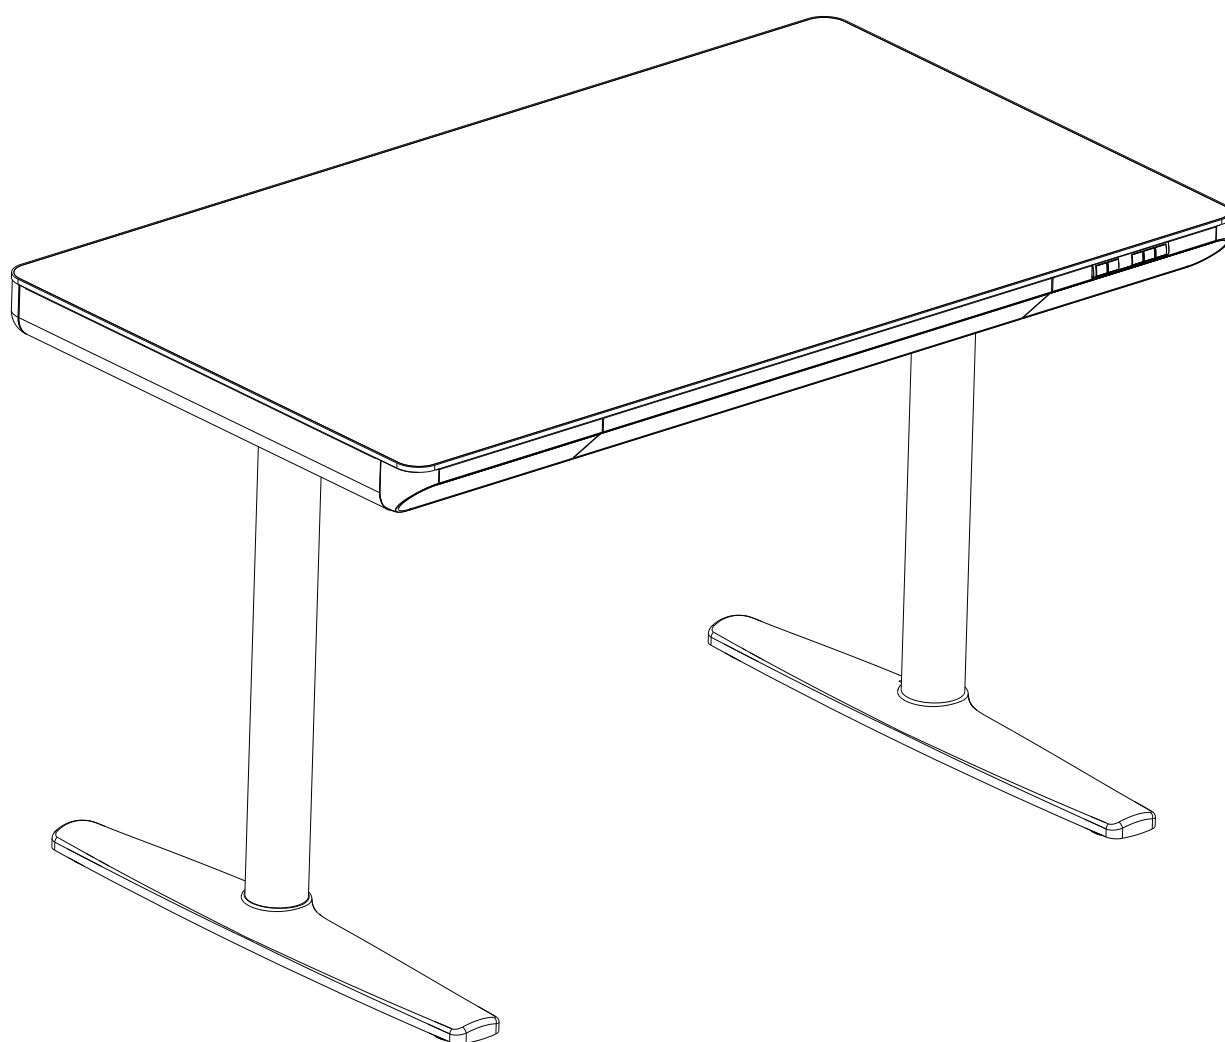

This design and instruction booklet is subject to copyright.  
[www.officeworks.com.au](http://www.officeworks.com.au)



2 Carton s

For spare parts or hardware call 1300 OFFICE(1300 633 423).

Estimated Assembly Time: 40 minutes

### Assembly Video

- To view an assembly video, go to <https://www.officeworks.com.au/>
- Search the product by item code or name:



- Click on the icon to watch the video.



### Customer Service Contact Details



Spare Parts & Hardware

1300 OFFICE (1300 633 423)

### People Required



### General Advice



### Tools Required



**CAUTION:** Do not use tools other than those required, as this can damage your new item.

### NOTE

- Please check you have all hardware before assembling.
- If you are missing any hardware, please contact 1300 OFFICE (1300 633 423).
- Please ensure you have the name of the item, required hardware part and quantity.
- Please retain your receipt as proof of purchase to validate your warranty.

### CAUTION

- Do not tighten screws before all screws are in the right place.
- Do not use this product unless all bolts and screws are firmly secured.
- Check that all bolts and screws are securely tightened at least every 4 months.

### WARNING

- If parts are missing, broken, damaged or worn, stop using the product until all repairs are made using manufacturer authorised parts.
- Failure to follow these warnings could result in serious injury.

### DANGER

- CHILDREN MUST BE SUPERVISED.

# Safety and Warnings

- This table complies with the prescribed safety regulations. Inappropriate use may cause damage to persons and table.
- Please read the operation manual prior to start using the table. It provides you with important information about safety, use, installation and maintenance of the table, and thus protecting you and your children and avoiding damage on the table.
- Please guard this operation manual and pass it on to any future owner!
- Do not place any objects above 65.5 cm underneath the table.
- The appliance is only to be used with the unit provided (Power supply).

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord and supply unit is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Operation time: Max.2 min on/18 min off

Max Speed: 25mm/s

Desktop Size: Length 1200mm/1400mm, Width 700mm, Thickness 18mm

Lowest Position: 730mm

Input Voltage: 100-240V

Stroke: 450mm

Highest Position: 1180mm

## Usage

The electromotive, height-adjustable tables are designed for workstations in dry work environments only. The table height is infinitely adjustable, so that it can be set to the most ergonomically suitable working level.





They have not been designed for other purpose than those included in this manual, e.g., they are not to be used in areas of high humidity or dampness, not for lifting people. Any other use is at one's own risk!

Do not crawl, lie or move around under the table frame, and do not sit or stand on the table frame.



Liability: The manufacturer accepts under no circumstances warranty claims or liability claims for damage arising from improper use or handling of the table frame other than that described in this operation manual.

# Parts List

## Parts Located in Carton - OTHELFRMWB/OTHEL12002

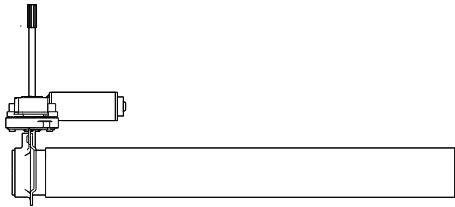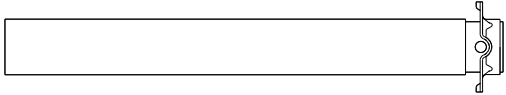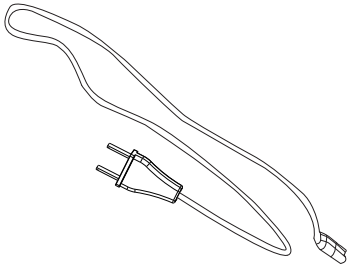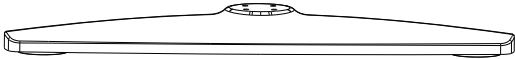


	
① x1	② x1
	
③ x1	④ x2
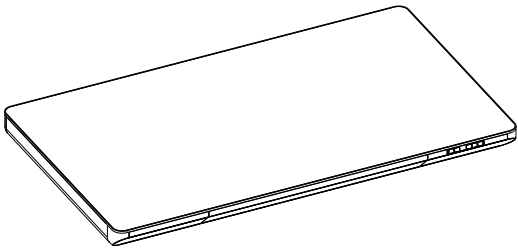
## Parts Located in Carton - OTHELDT12B/OTHELDT14B/ OTHELDT14W/OTHL12001


	 <p>This part attached under desktop</p>
⑤ x1	⑥ x1

Hardware List


Hardware Located in Carton - OTHELFRMWB/OTHEL12002  
Spare Parts Number-HWPACKHEL

 M8*15mm	 M6*15mm	 5x5
Ax8	Bx 10	Cx1

Spare Parts Number-HWPWRCDHEL

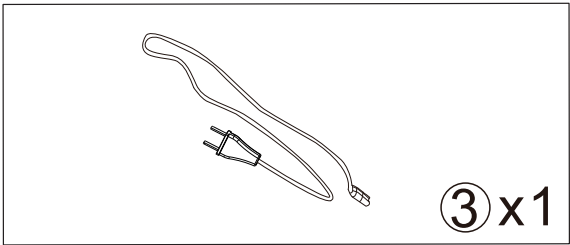

Spare Parts Number-HWHELPWRAT

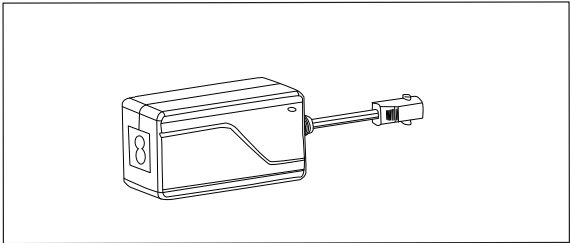


# Step 1



Install Legs



Bx2

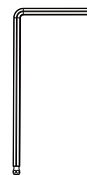


Cx1

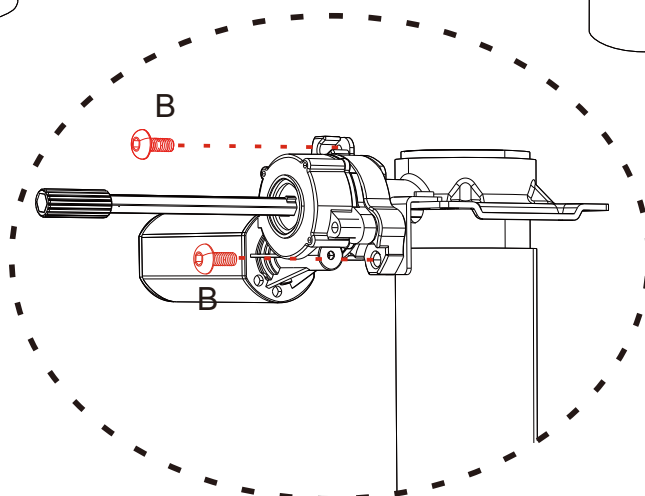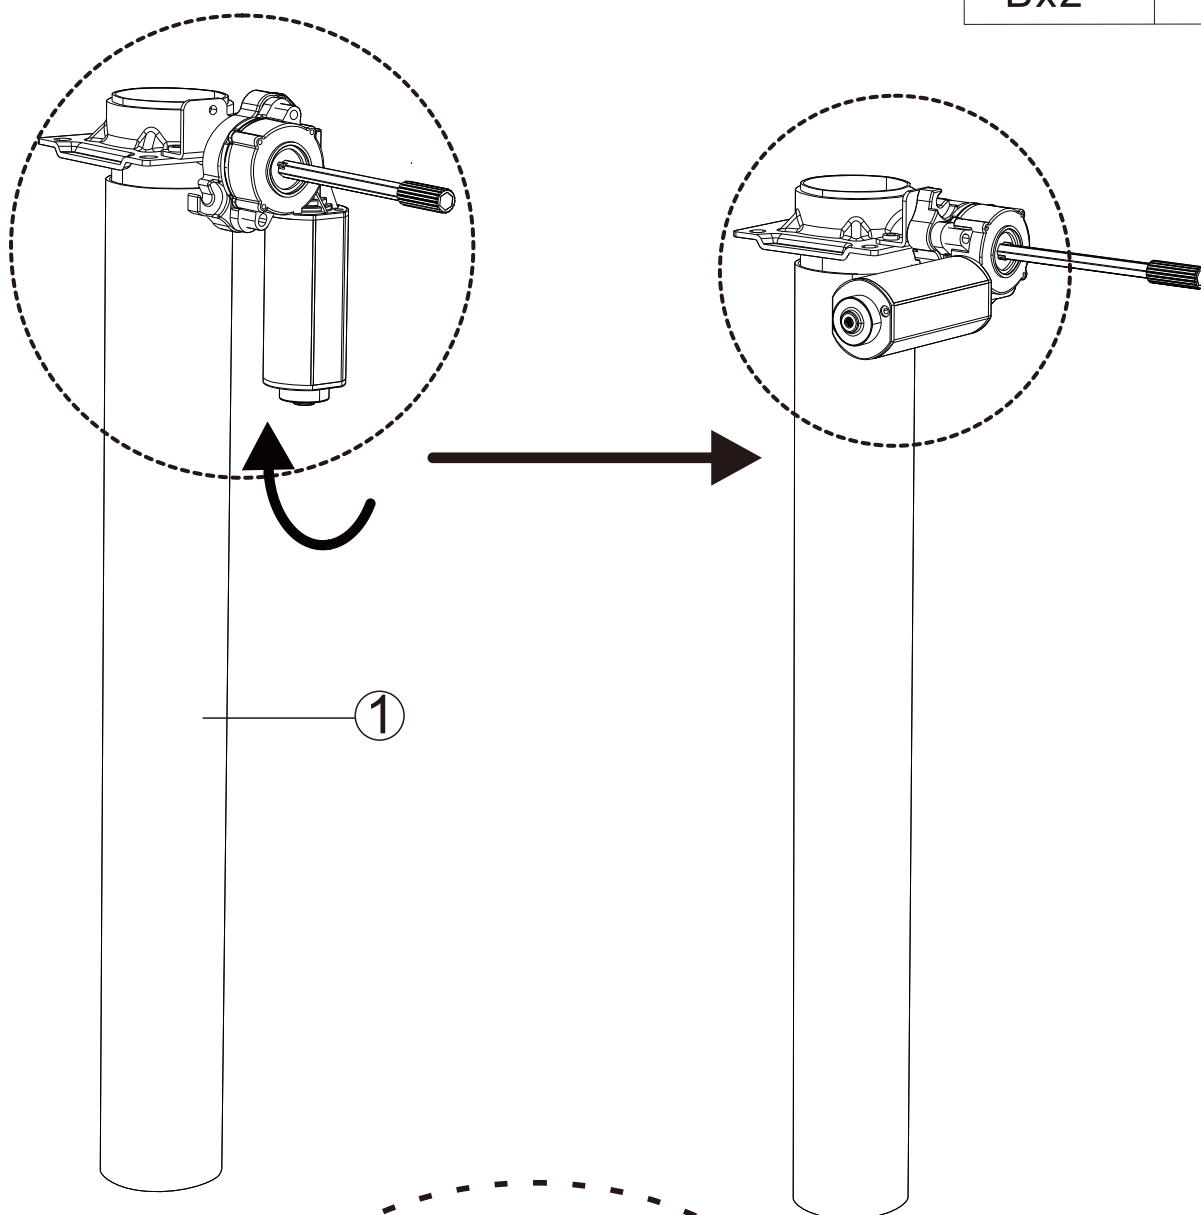


# Step 2



Install Legs

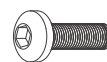

Ax8

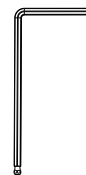


Cx1


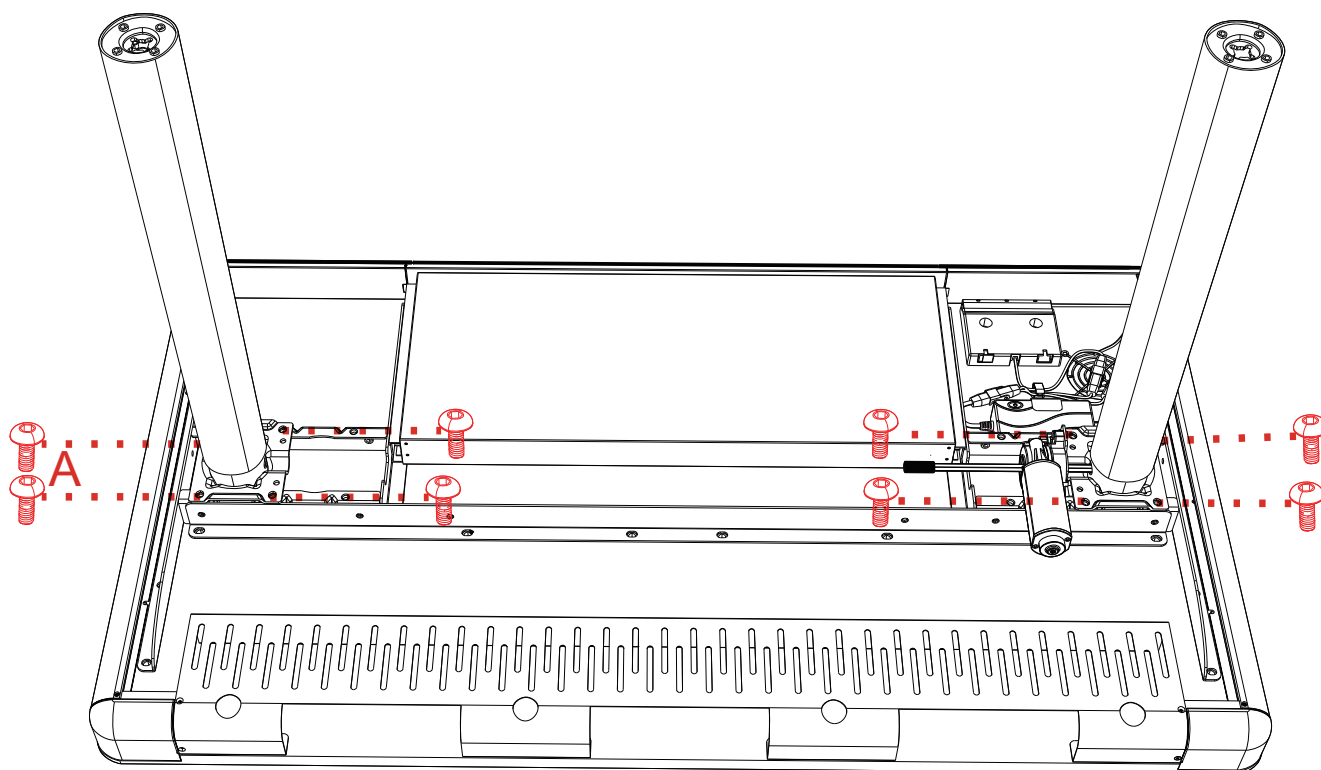
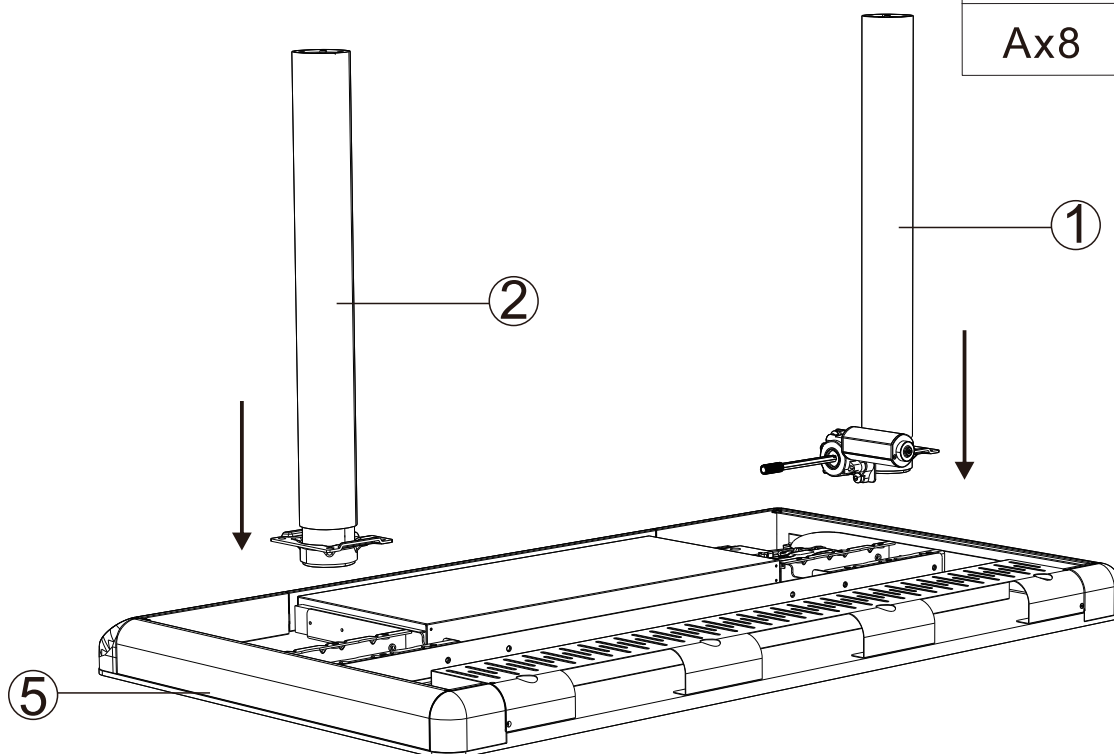


# Step 3

Install Hexagon Bar

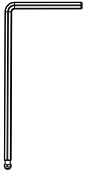

Cx1

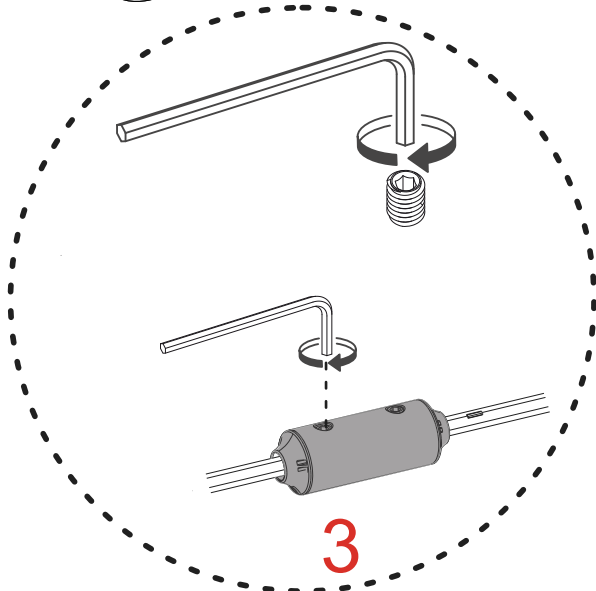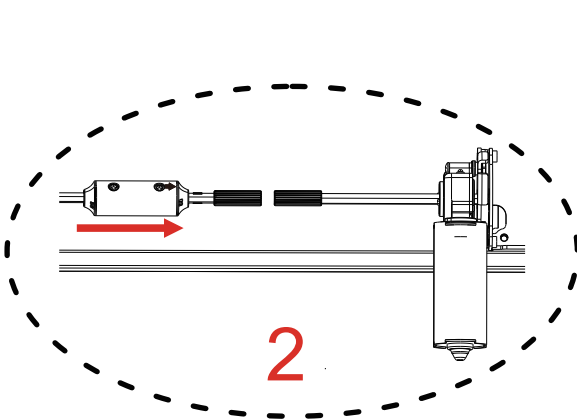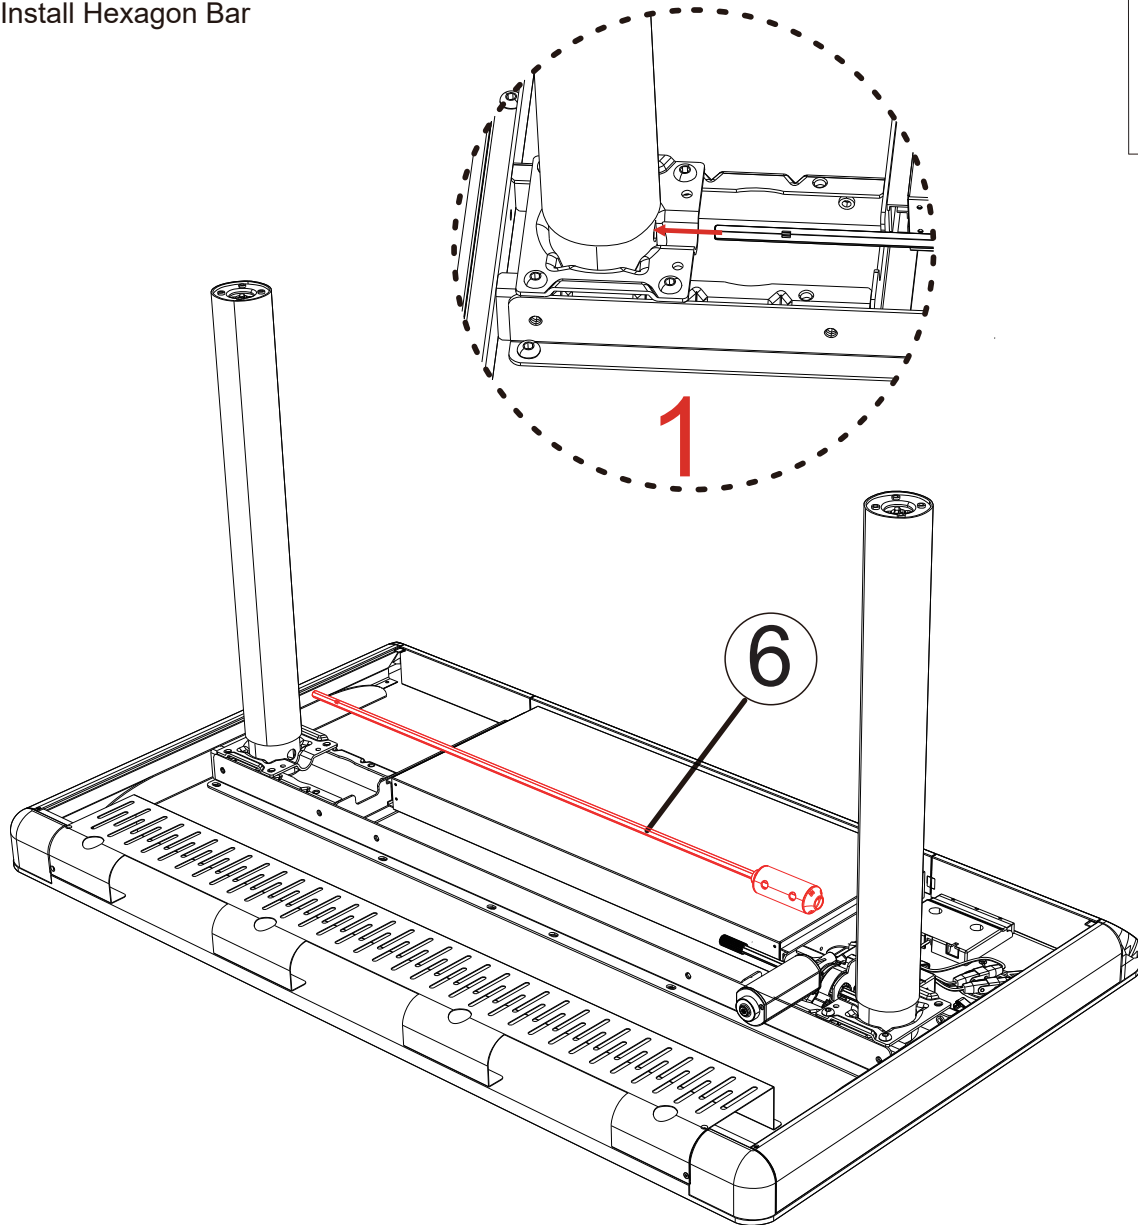


# Step 4


Install Feet



Bx8





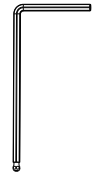


Cx1

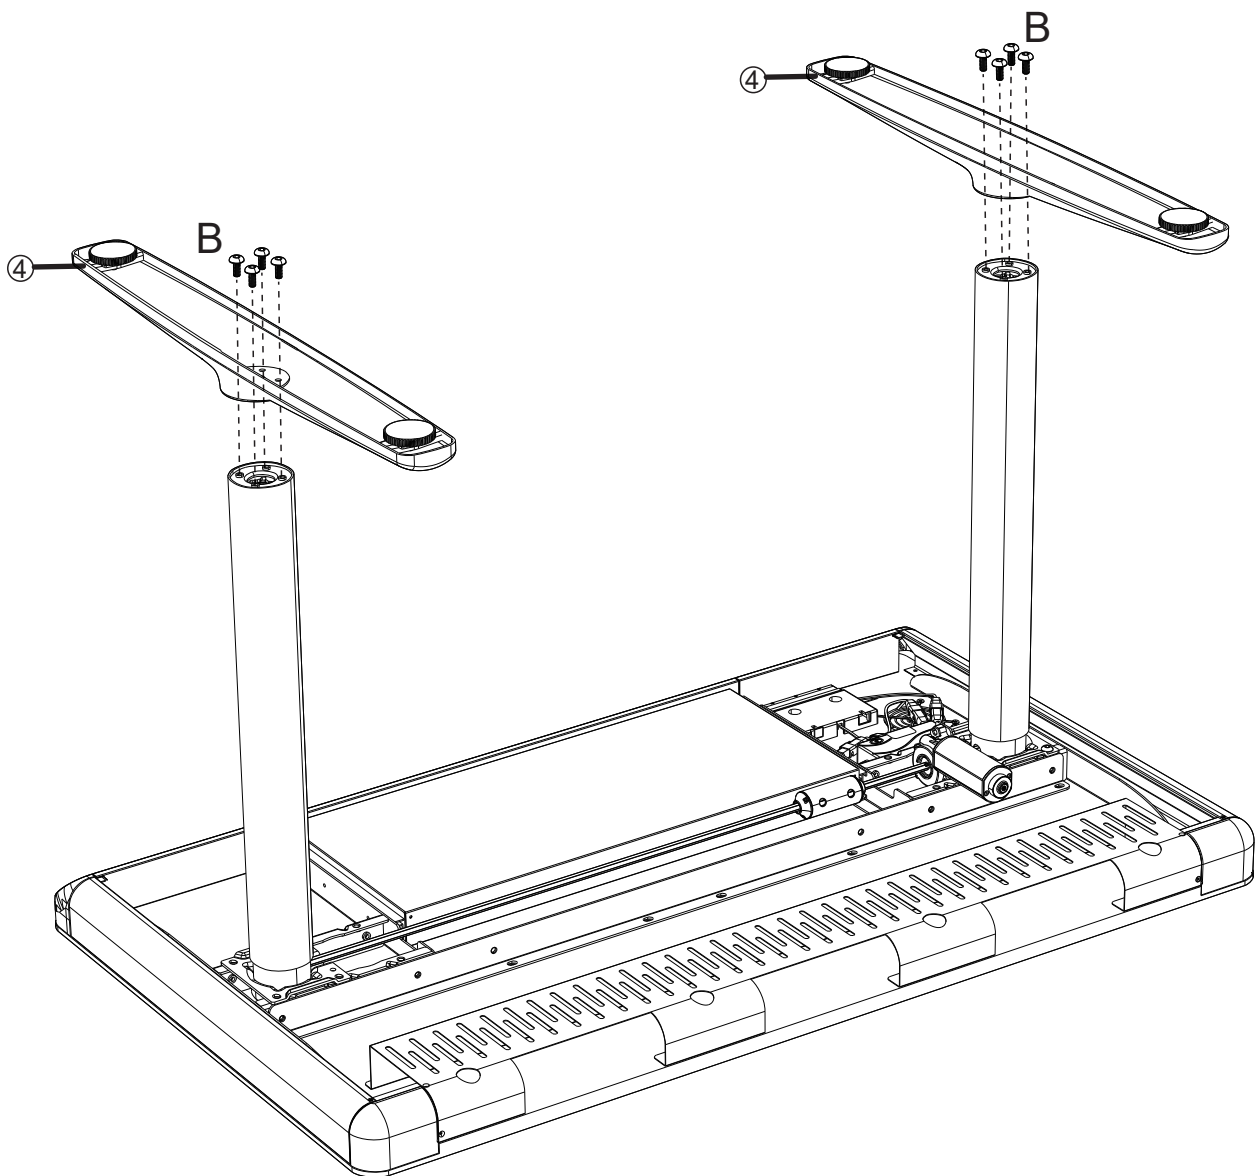


# Step 5

Finished

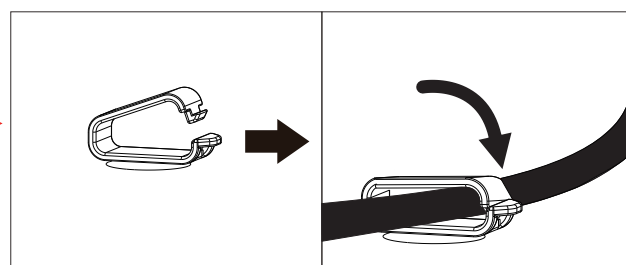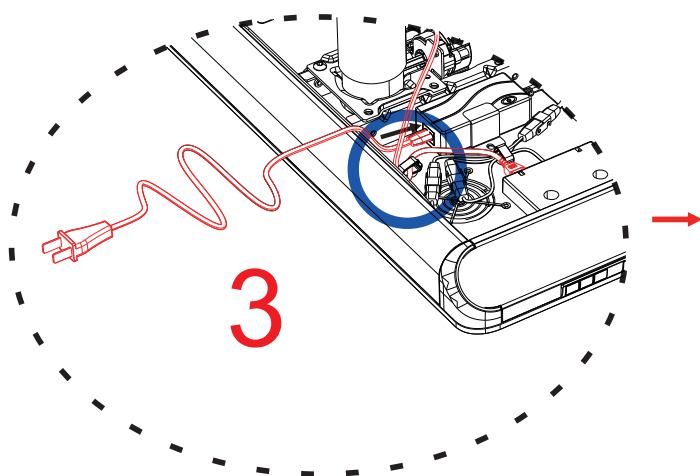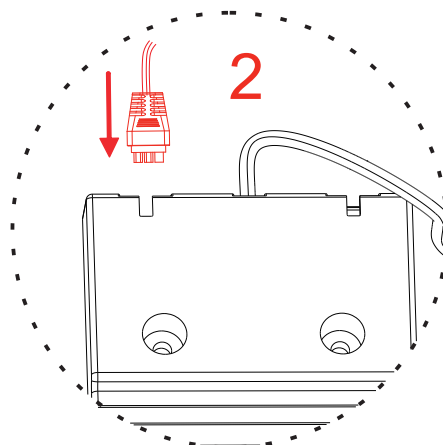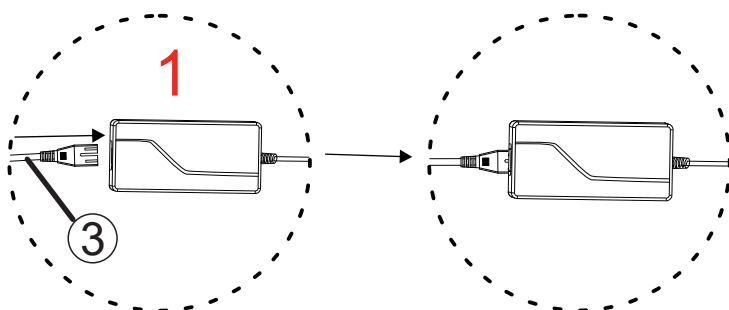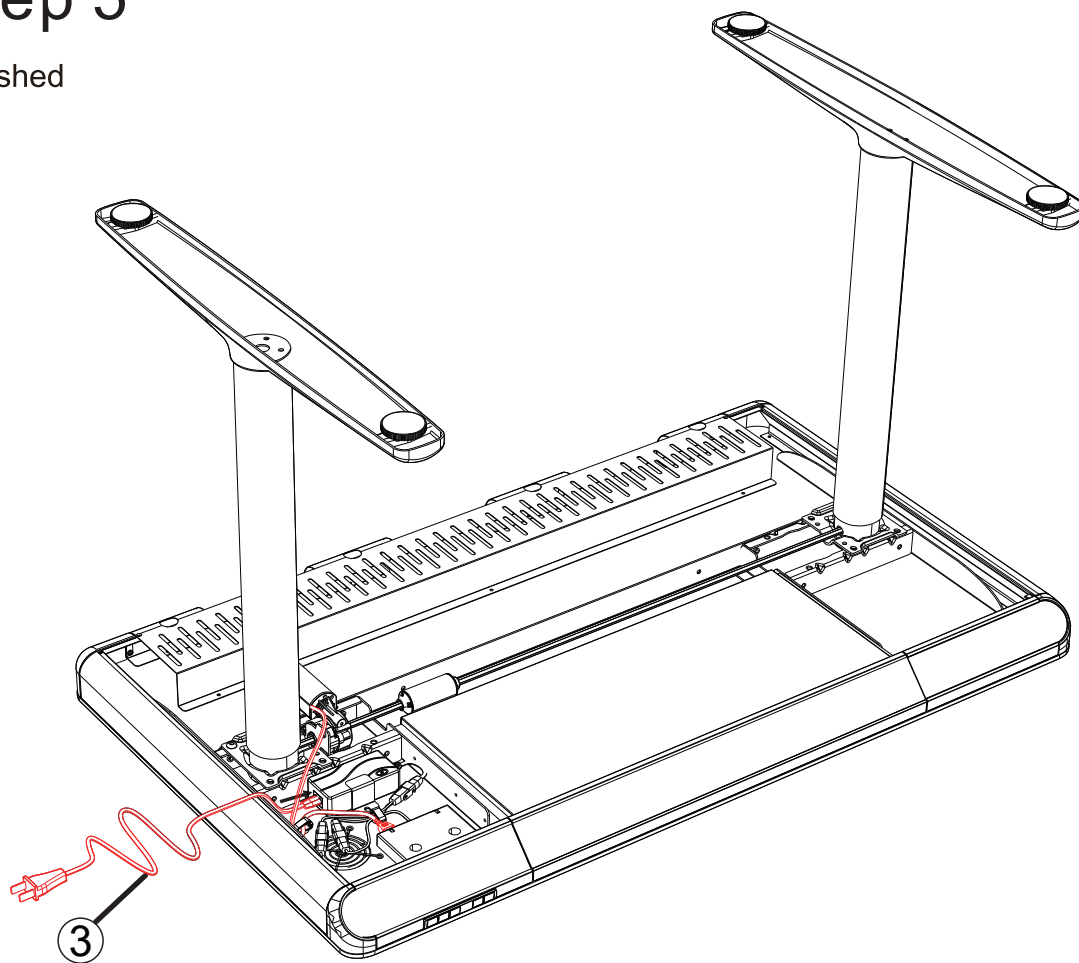

# Step 6

Finished

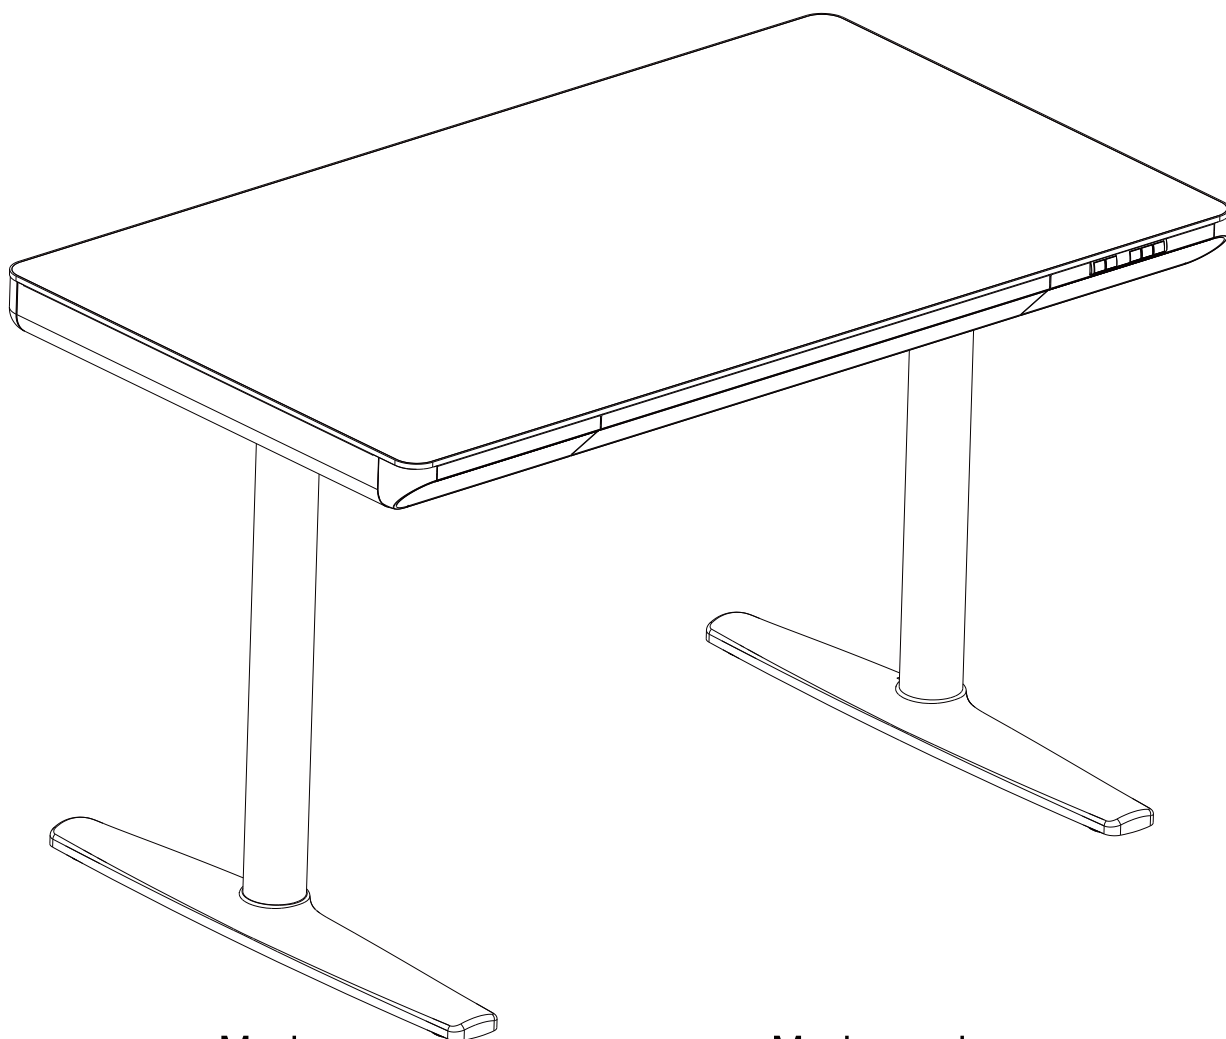


Maximum  
weight capacity  
80KG

Maximum drawer  
weight capacity  
10KG



**CAUTION:** This product is intended to hold the maximum weight indicated. Exceeding the maximum weight will result in instability and may cause injury.

# User guide

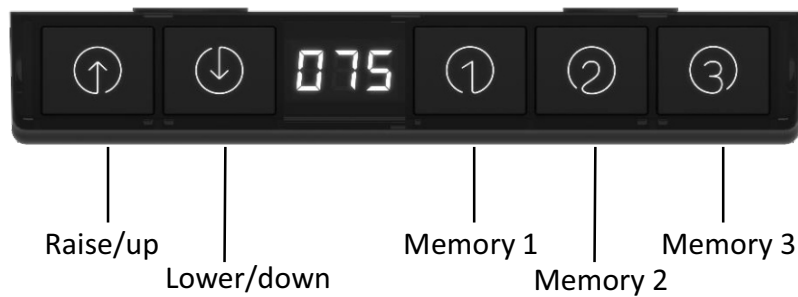



## Notice

While raising or lowering the table, please make sure objects are secure on the table, and nothing prevents the table from raising or lowering through its desired range of adjustment.



## Table Height Adjustment

Press up  or down  to raise or lower the table to the preferred table height.



## Use of Memory Keys

In stationary state:

If you briefly press button ① and release it, the height-adjustable desk will move from the current height to the memory position 1.

If you briefly press button ② and release it, the height-adjustable desk will move from the current height to the memory position 2.

If you briefly press button ③ and release it, the height-adjustable desk will move from the current height to the memory position 3.


## Memory Presets


In stationary state:

If you press and hold button ① for more than three seconds, the current height will be set as memory position 1.

If you press and hold button ② for more than three seconds, the current height will be set as memory position 2.

If you press and hold button ③ for more than three seconds, the current height will be set as memory position 3.

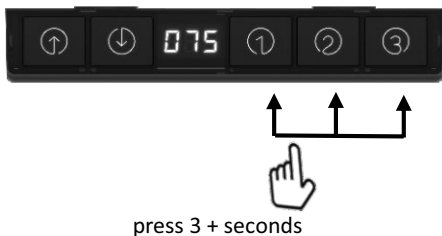

 Pressing any key during the process of moving to a memory position will stop the system.

## Abnormal reset protection

### Phenomenon

After controller error occurs, the screen displays "rES" and none of the keys function.

### Operation

After pressing ⏴ for 5 seconds, the height adjustable desk will start moving down until it reaches the bottom and then bounce back to a certain height. The reset is complete.



## Protection and Alarm

**Anti-interference :** message/alarm “E02” appears when the desktop vibrates, is interfered with, or tilts during an adjustment. Stop adjustment immediately and reverse movement; after a certain adjustment the alarm will disappear.

**Overheating protection :** message/alarm “Hot” appears when continuous adjustment time exceeds 2 minutes, the overheating protection will be triggered. Stop adjustment immediately; wait for 18 minutes after which the alarm will disappear .

**Motor malfunction protection :** message/alarm “E10” appears. Power should be disconnected, re-check and ensure that the motor connected to the controller is secure, connect to power source, then press and hold the ⏴ to reset.

**Overload protection :** message/alarm “E20” appears when the table is raised while overloaded. Remove weight, heavy objects from the table before adjustments. If overload occurs when lowering the table, please press the ⏴ for 5+ seconds to reset.

**Height inconsistency protection :** message/alarm “E60” appears when the table is raised while the height between two columns is inconsistent. Power should be disconnected, re-check and ensure that the motor connected to the controller is secure, connect to power source, then press the ⏴ for 5+ seconds to reset.

## Warranty 5 years

Product Warranty – valid for Australian customers only

Officeworks Ltd warrants that this product will be free from defects and work as intended for 5 years from the date of purchase by the original customer.

If the product has any defects or does not work as intended during the Warranty Period, Officeworks will, at its election and at its expense, repair or replace the product.

This warranty does not apply:

- To cosmetic damage;
- To damage caused by consumables used in connection with the product (such as cleaning products);
- Where the product has not been used in accordance with all provided instructions;
- To damage arising from fair wear and tear;
- Where the product has not been subject to reasonable use;
- Where the product has been intentionally or negligently damaged; and/or if the customer has attempted to repair the product.

To make a claim under this warranty, please return your product with your receipt or proof of purchase to your nearest Officeworks store or contact 1300 633 423.

This warranty is provided in addition to any rights you may be entitled to under the Competitions & Consumer Act 2010.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Thank you for your purchase. Please retain your receipt to validate warranty. If you would like to know more about our furniture products, please visit [www.officeworks.com.au](http://www.officeworks.com.au)