OTTO

KIDS WIRELESS HEADPHONES INSTRUCTION MANUAL

Model: QDKIDSBEGN/QDKIDSPKPE




The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG,Inc. and any use of such marks by Officeworks Ltd. is under license.





Functions

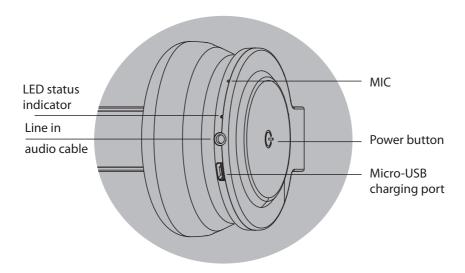


Pack Contents

- 1. Bluetooth kids Headphones 2. Instruction manual 3. USB charging cable
- 4. Audio cable


Note: When an audio cable is plugged in, the Bluetooth wireless function will disconnect.

Power On

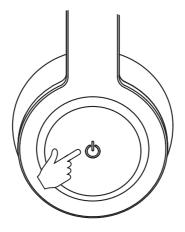


Press and hold 3 sec with tone


Power Off

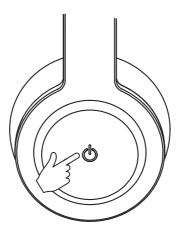

Press and hold 3 sec with tone

Bluetooth Pairing

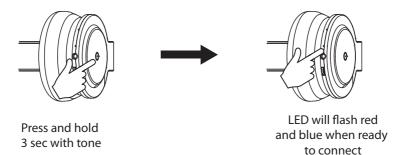

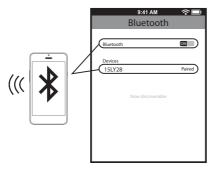


In your device's Bluetooth settings activate bluetooth and select "15LY28" enter the PIN '0000' if needed





The blue LED light will be on and flash to indicate the headphone is connected

Calling Mode

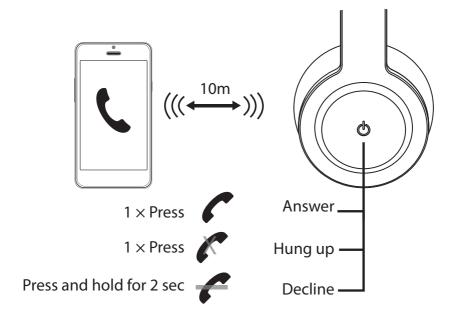


5 Charging

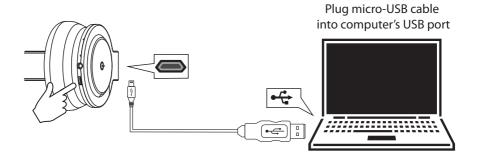

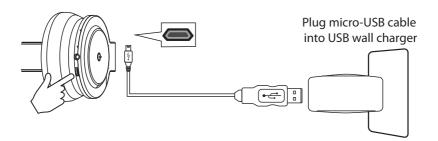

5 Charging

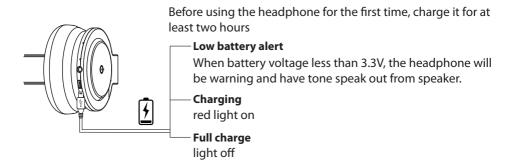

Product Specifications

Charging voltage: Micro USB 5V
Bluetooth working range: 10 metres

3. Working time: About 12 hours

Charging time: 3 hours

4. Standby time: Up to 70 hours

Trouble Shooting

Do not expose the device to water or attempt to disassemble the device

■ Headphones will not turn on

Ensure headphones are fully charged before turning it on.

My mobile device is unable to find the Bluetooth headphones

- Check that the headphones is in pairing mode (blue/red indicator lights flashing).
- Remove 15LY28" from Bluetooth settings list and setup again.
- If still no search result, please restart the headset and phone, and try again.

After successfully pairing, headphones disconnect Check the battery level and recharge if low.

- Ensure headphones are within 10m of mobile device and free of destructions.
- The connection may be affected by obstructions such as walls or other electronic devices. Try moving closer to the device you are connected to.

■ When answering a call, I cannot hear anything

- Ensure the mobile device is connected to headphones and not on speakerphone mode.
- Increase the volume on your mobile device.

■ There is no sound when listening to music

- Increase the volume on your mobile device.
- Reconnect the headphones to your mobile device.
- Check if the app has paused or stopped playback.

■ Headphones will not charge

- Check whether the charging cable is functional.
- Ensure the micro-USB charging cable is fully seated in the headphones and wall charger ports.
- Ensure the charging cable and wall charger are functional.

Officework address: Officeworks Ltd. 1 South Drive, 236-262 East Boundary Road, East Bentleigh, VIC 3165