


OTTO

INSTRUCTION MANUAL


OTTO LCD DESK CLOCK BAMBOO
OTBMLCDCK

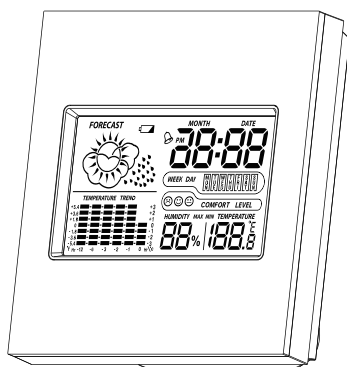

- 1 -

BUTTON FUNCTION

- 1. MODE:** Short press to switch between time, date and alarm displays. Long press to enter the settings mode for the current display.
- 2. UP:** Short press to turn the alarm on or off. Long press (under the time display) for 3 seconds to toggle between 12-hour and 24-hour formats.
- 3. DOWN:** Short press to switch between Celsius and Fahrenheit for temperature display.
- 4. SNZ:** Snooze mode.
- 5. MAX/MIN:** Short press to view the maximum and minimum values for the past day.
- 6. RESET:** Reset function.

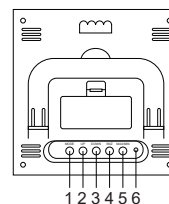

FEATURES

- Measuring temperature range: 0°C (32.0°F) ~ +60.0°C (+140.0°F)
- Measuring humidity range: 20%-95%
- Resolution: 1°C
- Display: Maximum/minimum temperature and humidity records
- Calendar: 2001-2099
- Requires 2x AAA batteries (not included)
- Using the alarm clock:
Insert 2x AAA batteries into the battery compartment at the back of the clock. Ensure the batteries are correctly placed according to their positive (+) and negative (-) terminals.

PACKAGING CONTENTS

- LCD clock
- User manual

OPERATION

- Press MODE once to view the calendar
- Press MODE twice to view the alarm

- 2 -

1. Time setting

- Press and hold MODE for 3 seconds to enter the time setting mode.
- The hour digits will start blinking. Use the UP or DOWN buttons to adjust the hour, then press MODE to proceed.
- Once the minute digits are blinking, use the UP or DOWN buttons to set the minute. Press MODE to confirm and exit.

2. Alarm setting

- Press MODE to view the alarm time.
- Press and hold MODE for 3 seconds to enter the alarm setting mode.
- The hour digits will start blinking. Use the UP or DOWN buttons to adjust the hour, then press MODE to proceed.
- Once the minute digits are blinking, use UP or DOWN to set the desired minute. Press MODE to confirm and exit.

3. Calendar setting

- Press MODE to view the calendar.
- Press and hold MODE for 3 seconds to enter the calendar setting mode.
- The year digits will start blinking. Use UP or DOWN to set the desired year, then press MODE to move to the next step.
- The month digits will blink next. Use UP or DOWN to adjust the month, then press MODE to proceed.
- Finally, the day digits will blink. Use UP or DOWN to set the day, then press MODE to confirm and exit.

4. Alarm ON/OFF

- Press UP to turn the alarm on/off.

5. Maximum/minimum temperature and humidity

- Press MAX/MIN to view the maximum temperature and humidity records.
- Press MAX/MIN to view the minimum temperature and humidity records.

6. 12/24 hour format

- Press and hold UP button for 3 seconds to switch between 12-hour and 24-hour time display.

7. Temperature format

- Press DOWN to switch between Celsius and Fahrenheit display formats.

8. SNOOZE

- When the alarm is ringing, press SNZ to enter into snooze mode.

- 3 -

PRODUCT WARRANTY— VALID FOR AUSTRALIAN CUSTOMERS ONLY

Officeworks Ltd warrants that this product will be free from defects and work as intended for 1 year from the date of purchase by the original customer. If the product has any defects or does not work as specified during the Warranty Period, Officeworks will, at its discretion and at its expense, repair or replace the product.

This warranty does not apply:

- to cosmetic damage;
- to damage caused by consumables used in connection with the product (such as batteries);
- where the product has not been used in accordance with all provided instructions;
- to damage arising from fair wear and tear;
- where the product has not been subject to reasonable use;
- where the product has not been intentionally or negligently damaged and/or;
- if the customer has attempted to repair the product.

To make a claim under this warranty, return your product with your receipt or proof of purchase to your nearest Officeworks store or contact 1300 633 423.

This warranty is provided in addition to any rights you may be entitled to under the Competition and Consumer Act 2010. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA
OFFICEWORKS LTD.

- 4 -