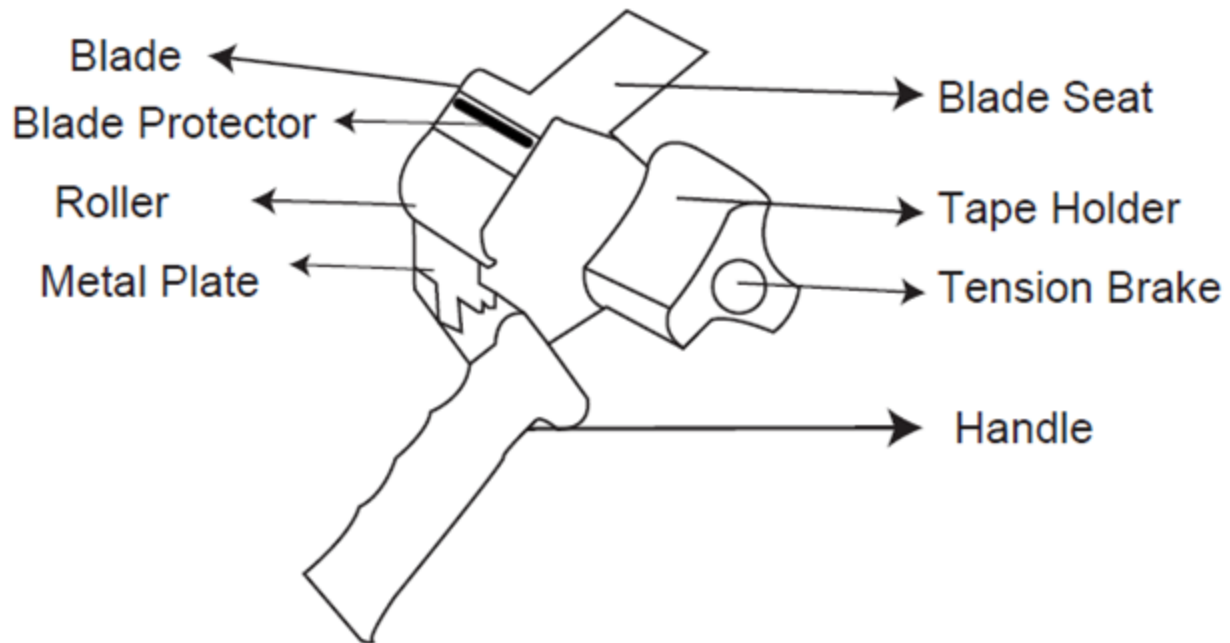


Know Your Product


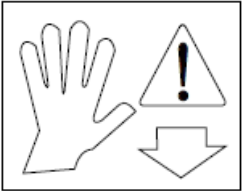


Maintenance

Please re-install the protector on cutter when not in using.
Wipe clean with dry or slightly damp cloth.


Compatible Tape Size

The tape gun is suitable for tape with a 76mm core, $\leq 48\text{mm}$ width and $\leq 65\text{mm}$ length

 WARNING	
	Product contains a functional sharp edge, keep away from children. keep your fingers away from blade.

Loading the Tape Gun

1. Place on to a flat surface. Push the tape on to the tape holder. Position so that the tape will unwind with the adhesive side facing down.
2. Remove the blade protector
3. Pull out the tape and thread between the roller and the metal plate
4. Adjust the tension brake if required
5. Pull the tape over the blade and the gun is ready for use

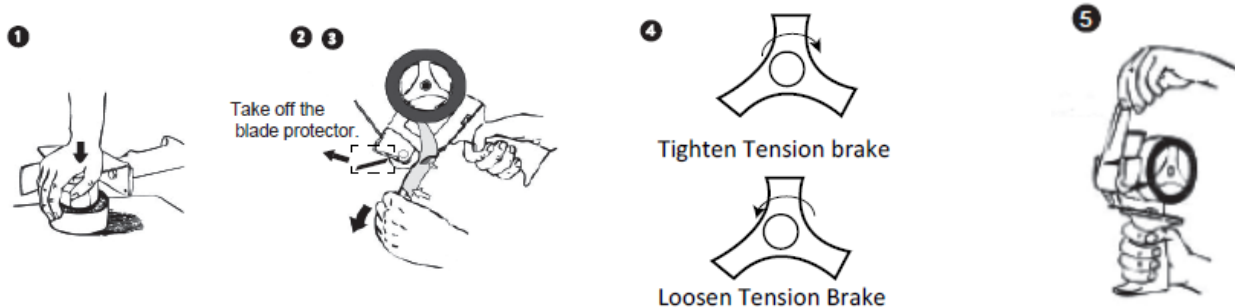

How to Use

- A) Press tape firmly on to the side of the box
- B) Glide tape gun along the top of the box and continue down to the opposite side
- C) Tilt the Tape Gun forwards to cut the tape

